


GA3PR/FL




KammBar

Instructions


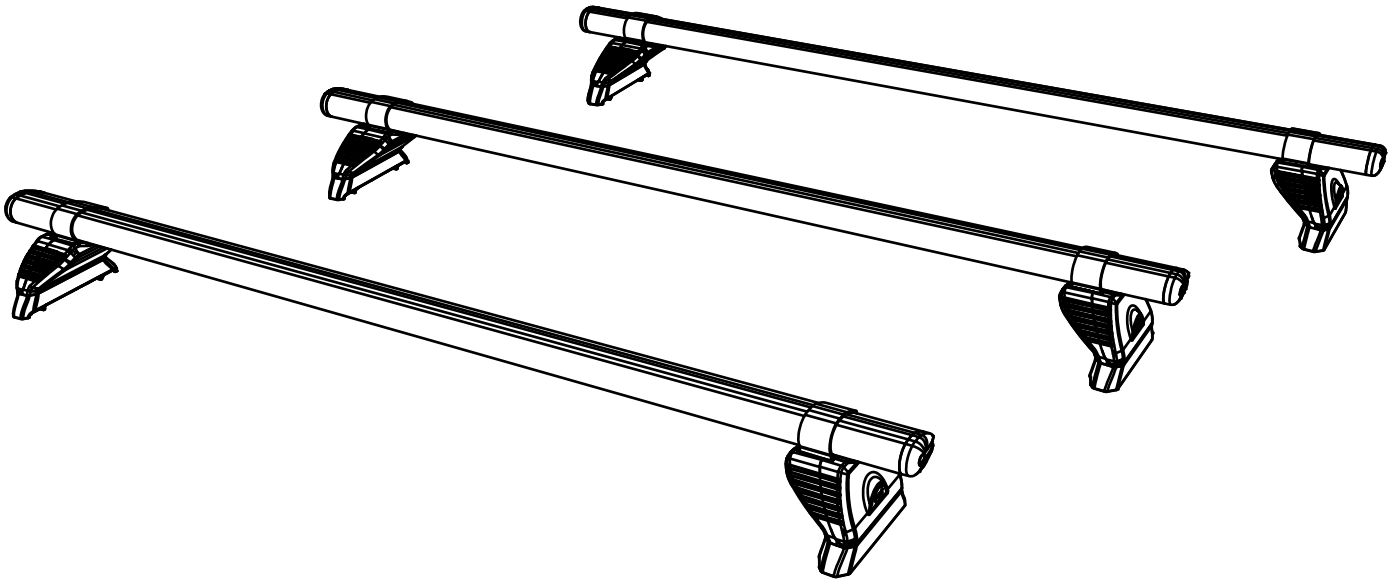


CITY CRASH (✓)



According to ISO/ PAS 11154:2006

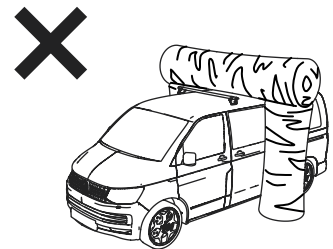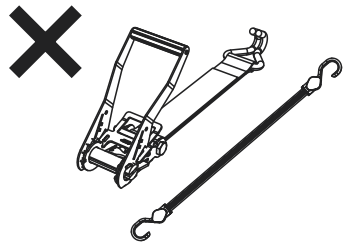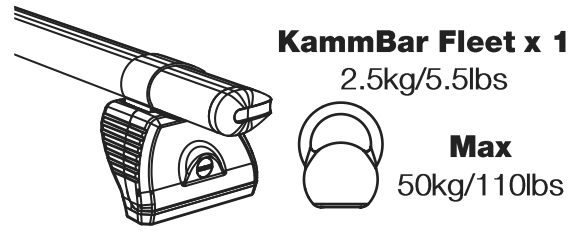





KammBar Pro

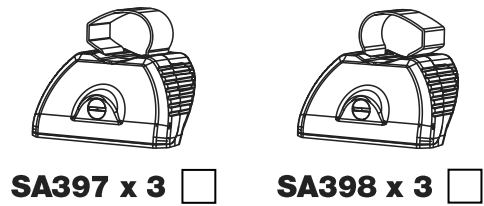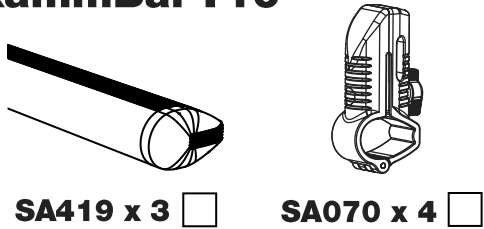

KammBar Fleet

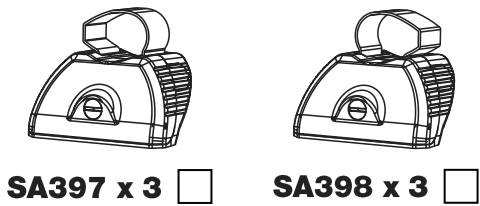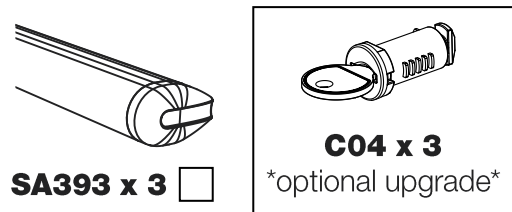

Fitting Kit

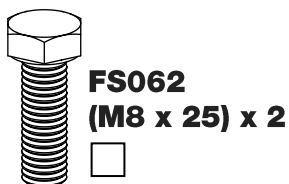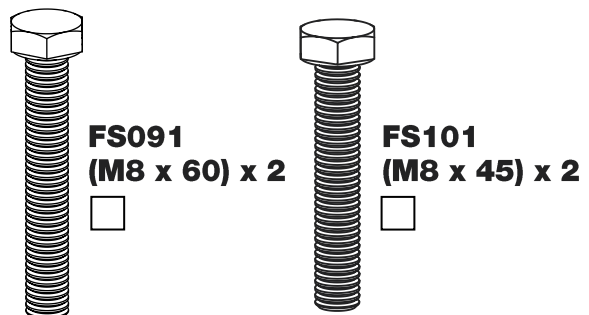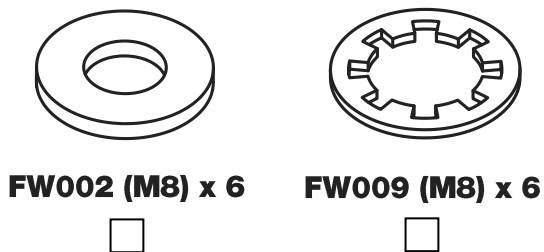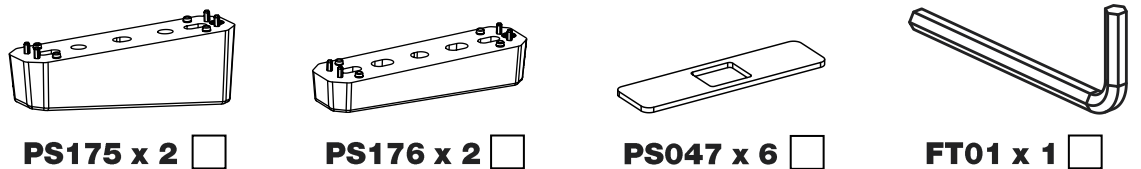

1.



2.



3.



SA397
PS176

SA398
PS176





SA397

SA398




SA397
PS175


SA398
PS175





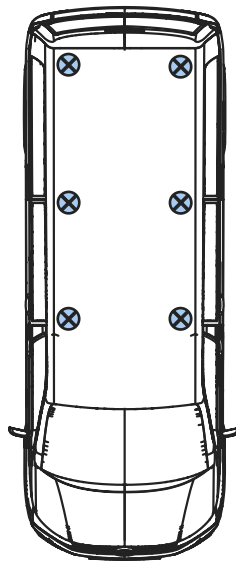



4.

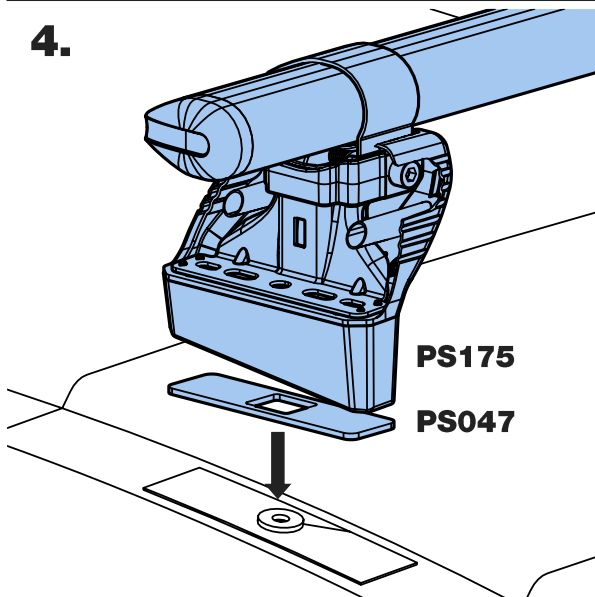


5.

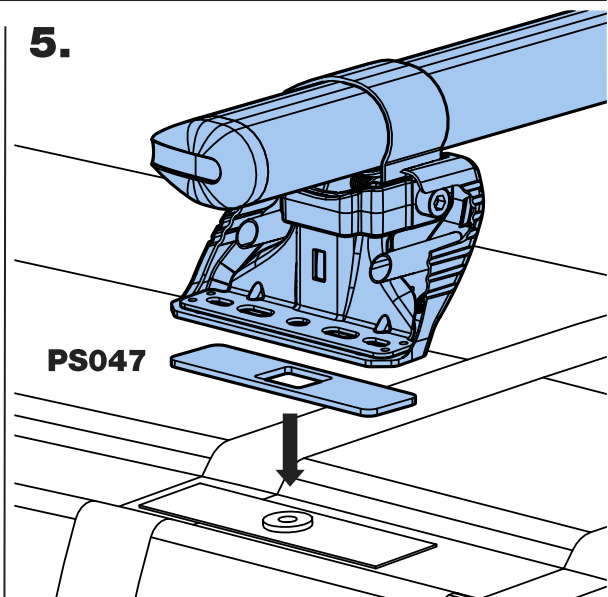


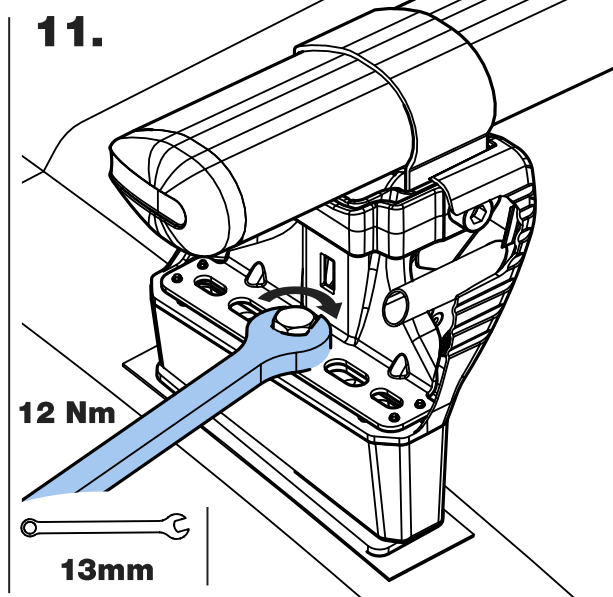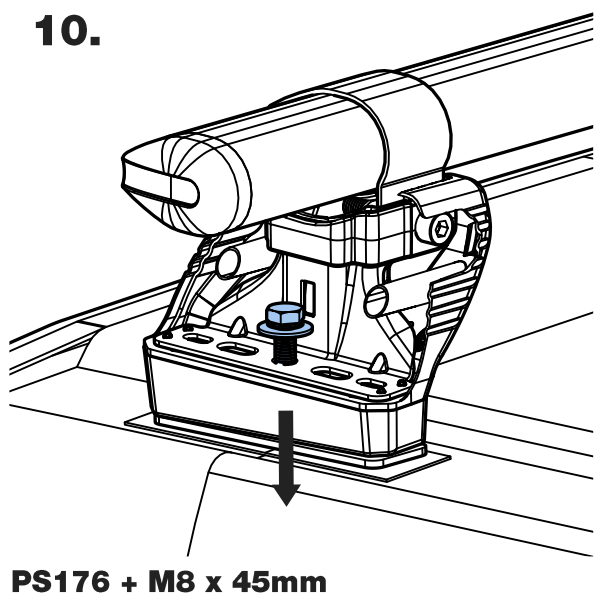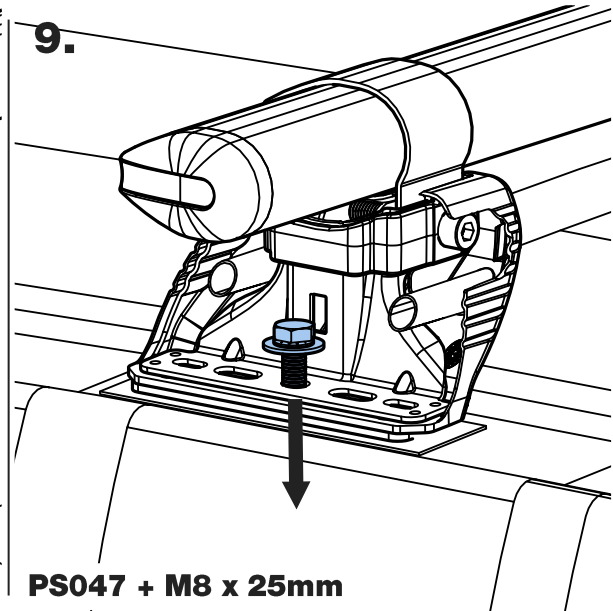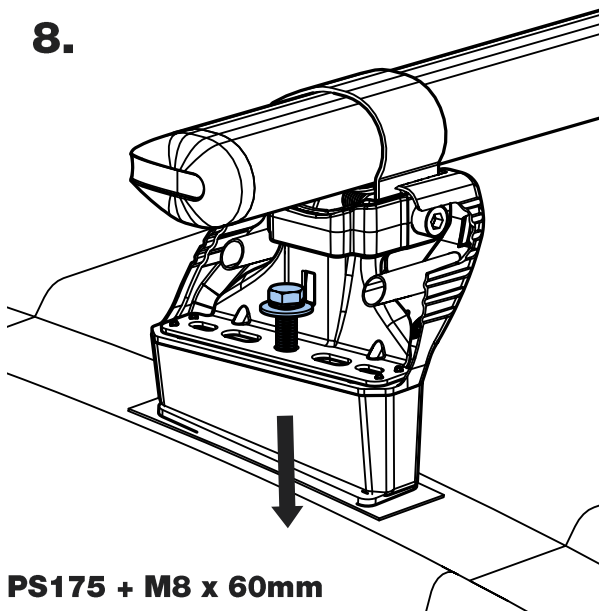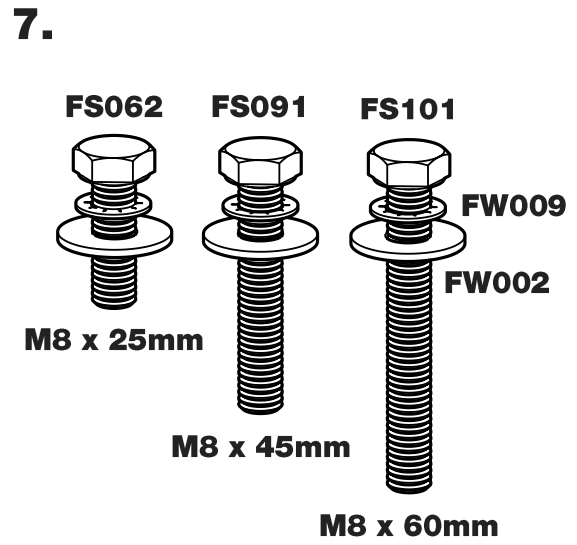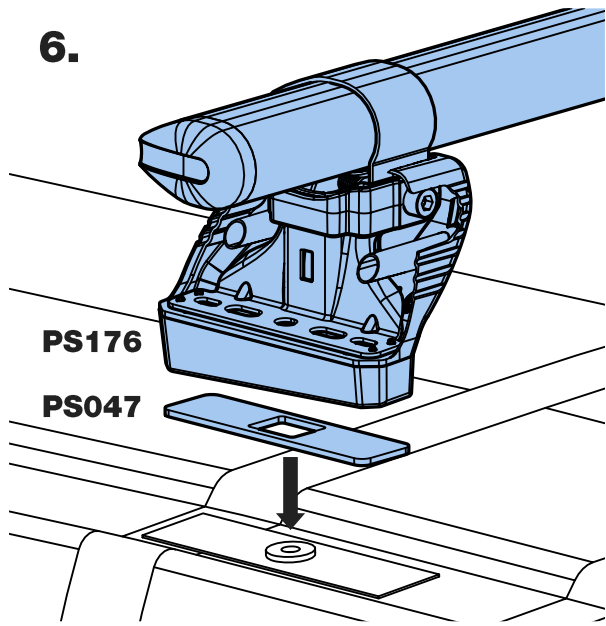


12.

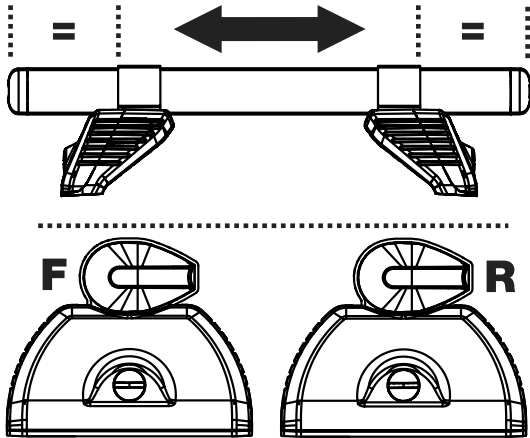

13.

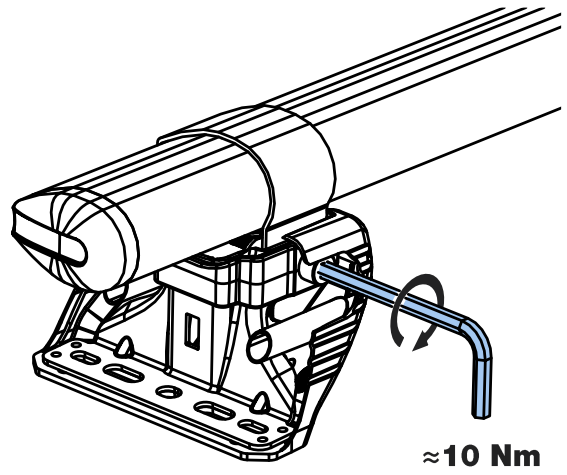

14.

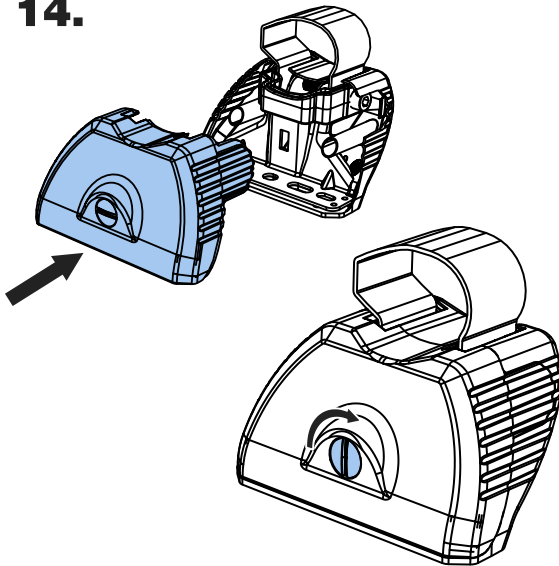

15.

