



Issue:	Drawn By:	Checked By:	CRF No.:	Date:	Description:
a	SJ	KB	3609	21/10/25	First Issue
b					
c					
d					

JC3KE


KammEdge.

Instructions

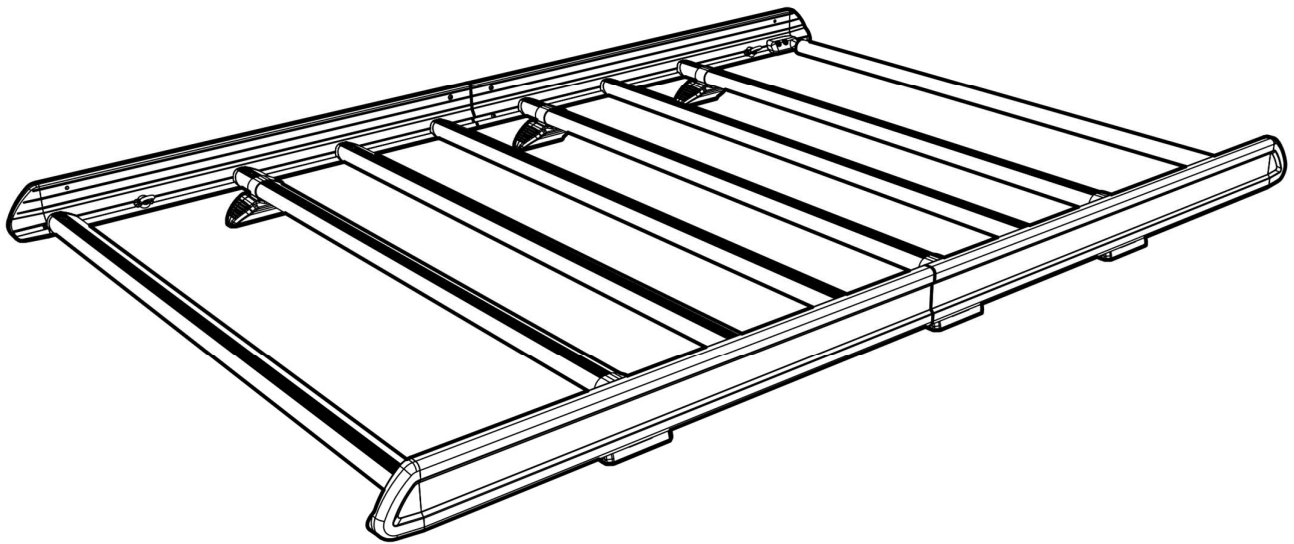


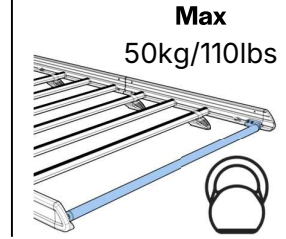

KammEdge.

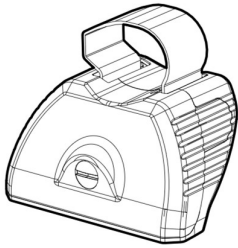

SA397U x 3

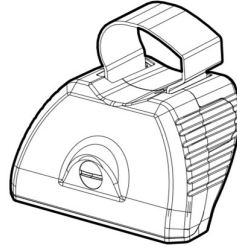


SA398U x 3




SA429/SA467 x 7




SA437 x 1

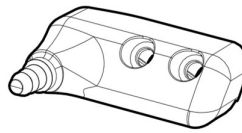

PS519 x 1

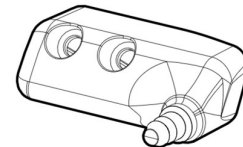


PS520 x 1

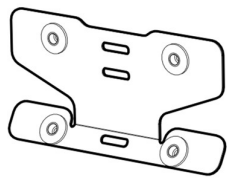


SA610 x 2




PS635 x 2

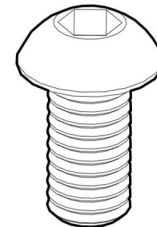

**FS323
(M6 x 16) x 8**

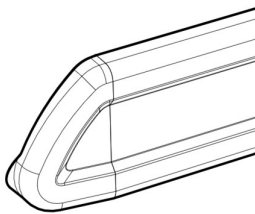

LSF (L) x 2

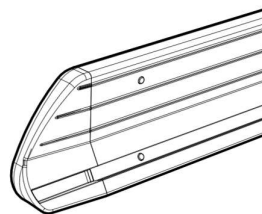


LSF (R) x 2




C04 x 6
optional upgrade


Fitting Kit



PS210 x 6




PS252 x 4




PS253 x 2




FN020 (M6) x 6

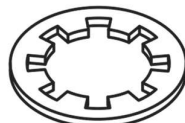

FW008 (M6) x 6

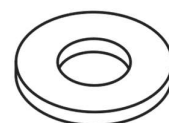


FW001 (M6) x 6

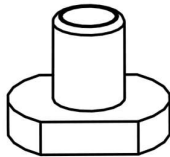

FN085 x 18



TP153 x 4



TP154 x 2



**FS040
(M6 x 35) x 4**



**FS039
(M6 x 30) x 2**



**FS059
(M8 x 25) x 18**



FT01 x 1




FT05 x 1




1.



2.

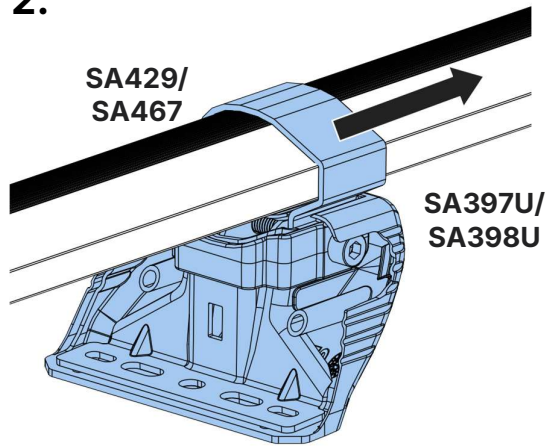


3.

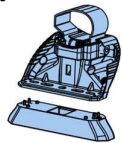

SA397U
PS252




SA397U
PS253

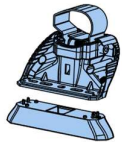


SA397U
PS252

R

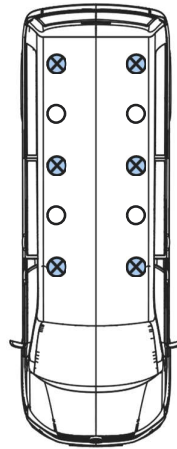


F


SA398U
PS252

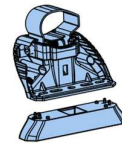


SA398U
PS253

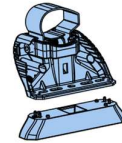


SA398U
PS252






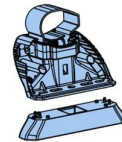


4.

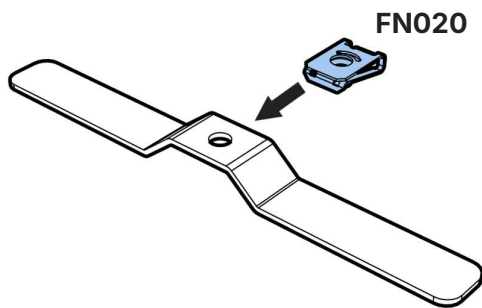


5.


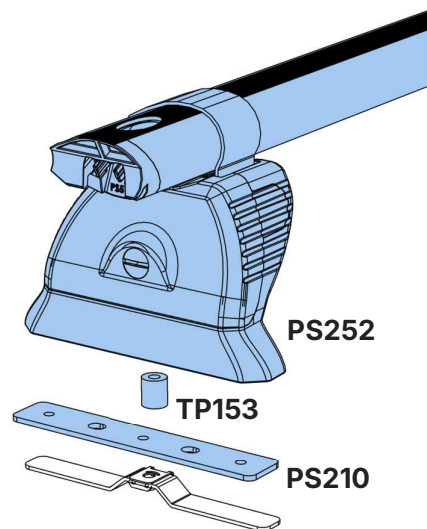


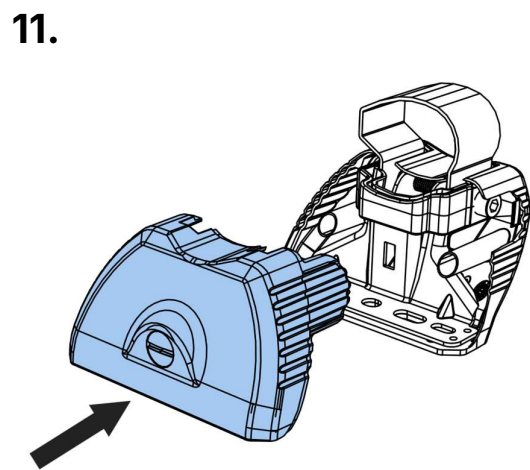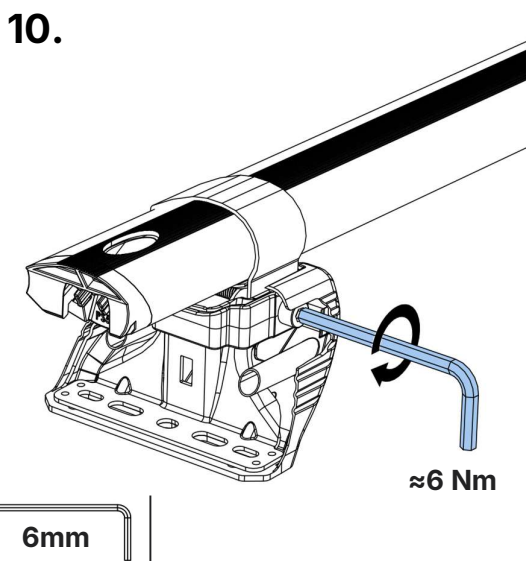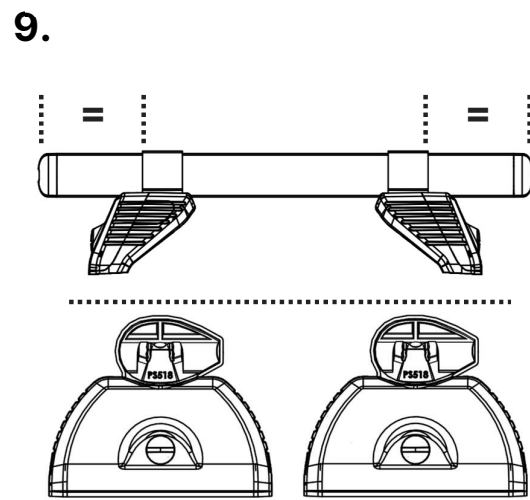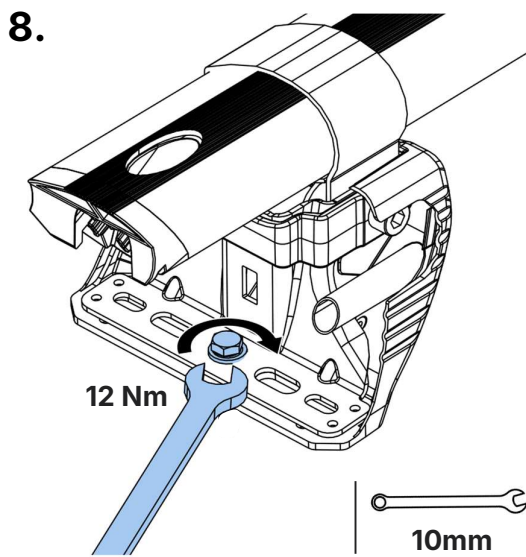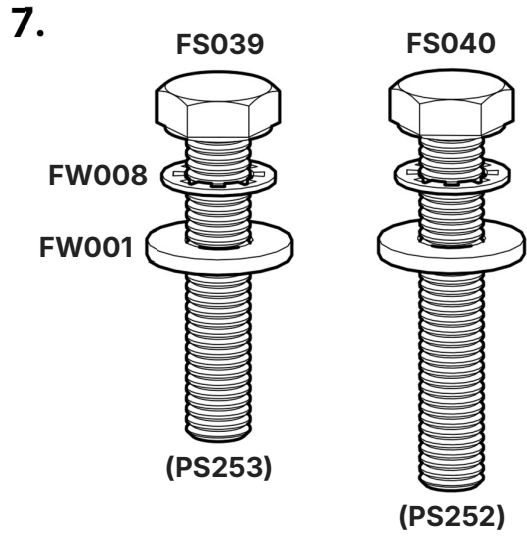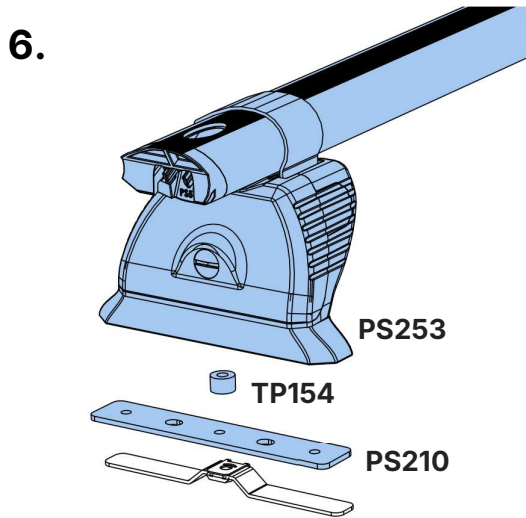

12.

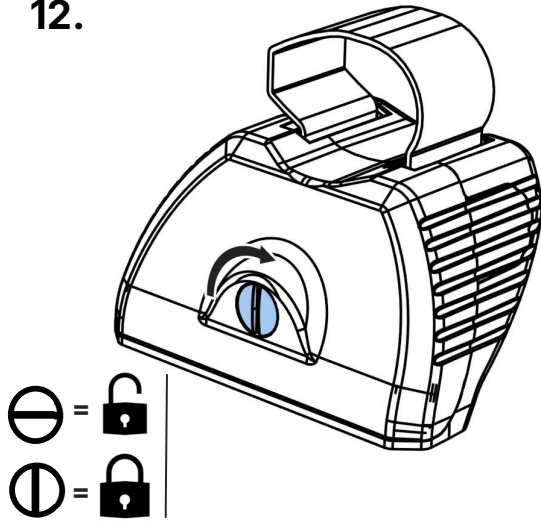

13.

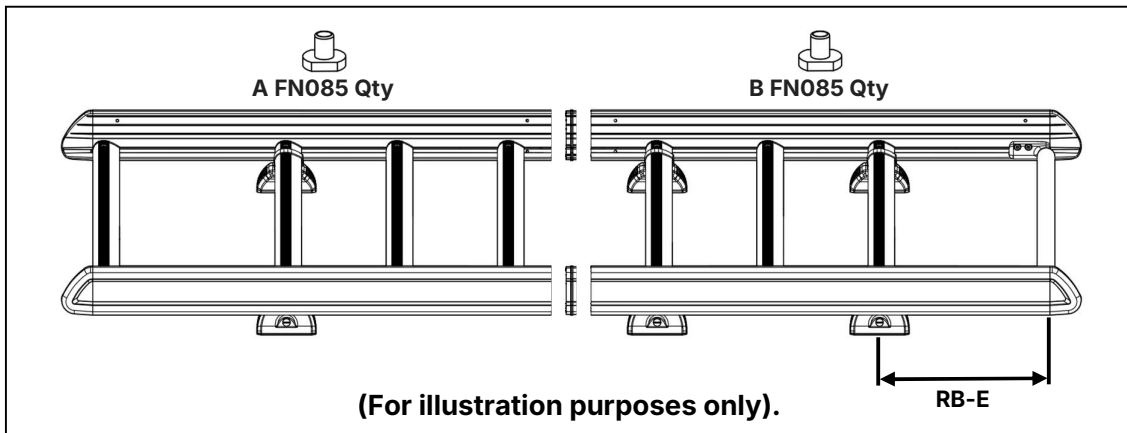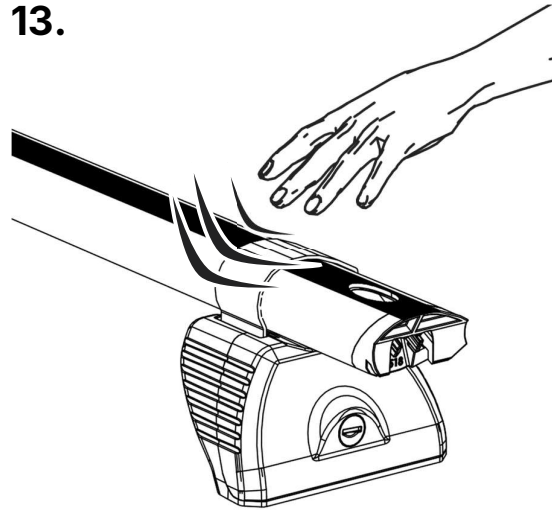
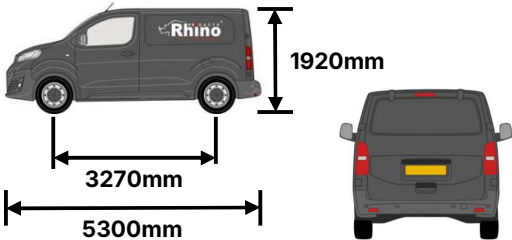


L662/LB662- Jumpy/Dispatch/Proace/Expert 2016-, Opel/Vauxhall Vivaro 2019- (Tailgate)

<p>Max Load = 150kg/330lbs</p> <p>L662/LB662 = 26kg/57lbs</p>	
---	--


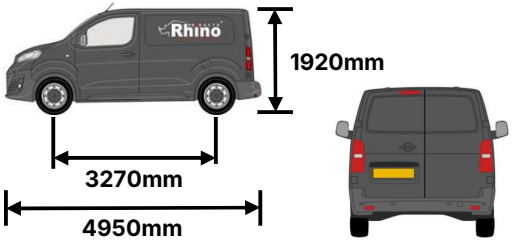
A FN085 Qty	B FN085 Qty	Rear Bar – End (mm)
4	5	155

**L664/LB664- Jumpy/Dispatch/Proace/Expert 2016-,
Opel/Vauxhall Vivaro 2019- (Tailgate)**

<p>Max Load = 150kg/330lbs</p>  <p>L664/LB664 = 27kg/60lbs</p>	
---	--



A FN085 Qty	B FN085 Qty	Rear Bar – End (mm)
4	5	130

**L661/LB661- Jumpy/Dispatch/Proace/Expert 2016-,
Opel/Vauxhall Vivaro 2019- (Twin)**

<p>Max Load = 150kg/330lbs</p>  <p>L661/LB661 = 26kg/57lbs</p>	
--	---


A FN085 Qty	B FN085 Qty	Rear Bar – End (mm)
4	5	355

**L663/LB663- Jumpy/Dispatch/Proace/Expert 2016-,
Opel/Vauxhall Vivaro 2019- (Twin)**

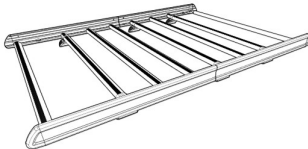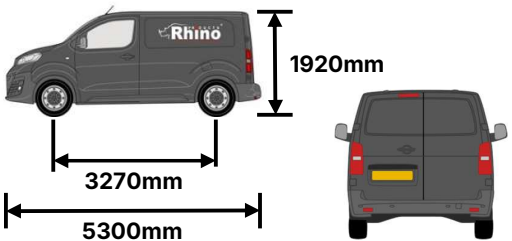
<p>Max Load = 150kg/330lbs</p>  <p>L663/LB663 = 27kg/60lbs</p>	
---	--

A FN085 Qty	B FN085 Qty	Rear Bar – End (mm)
4	5	330


20.

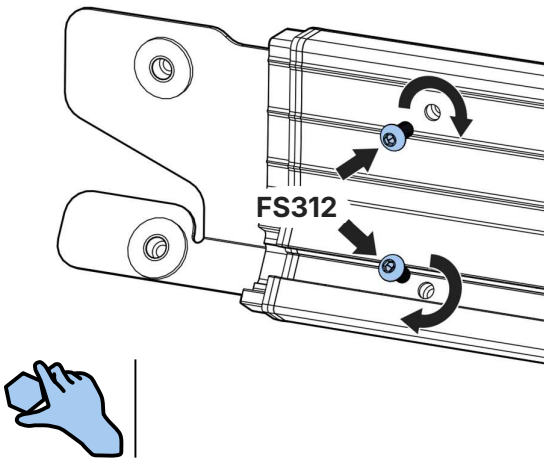


21.

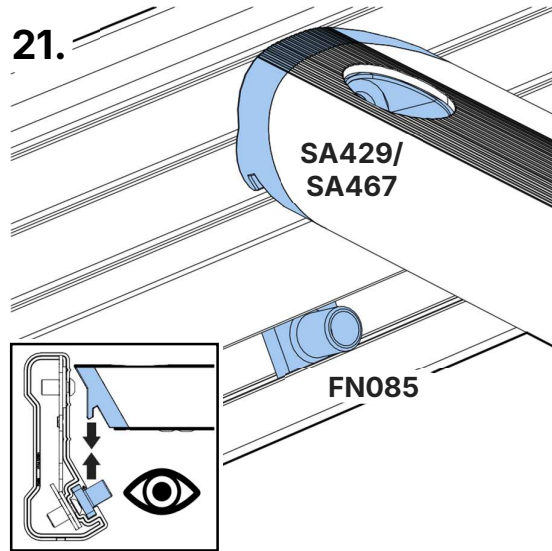


22.

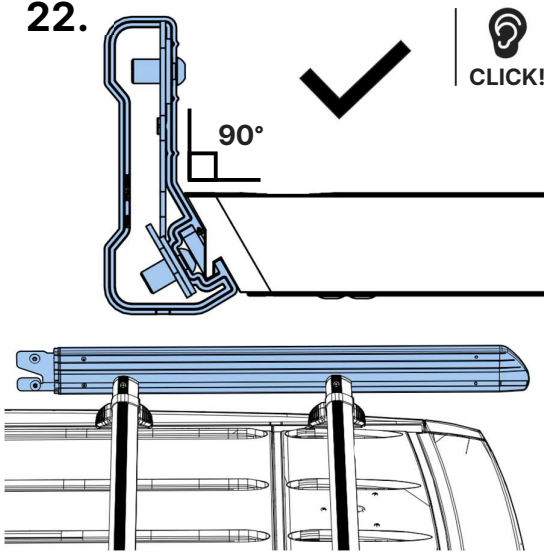

23.

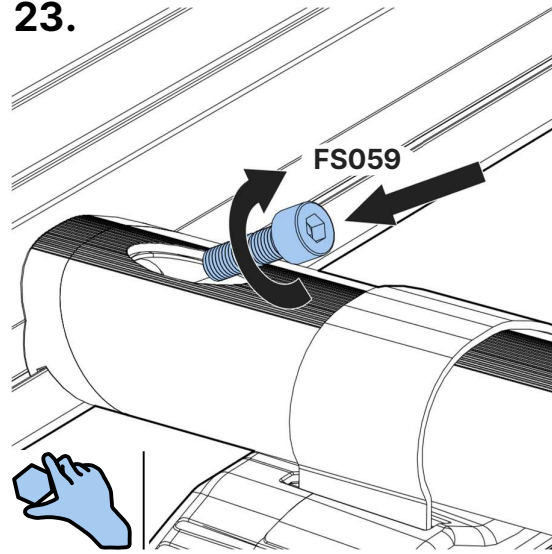

24.

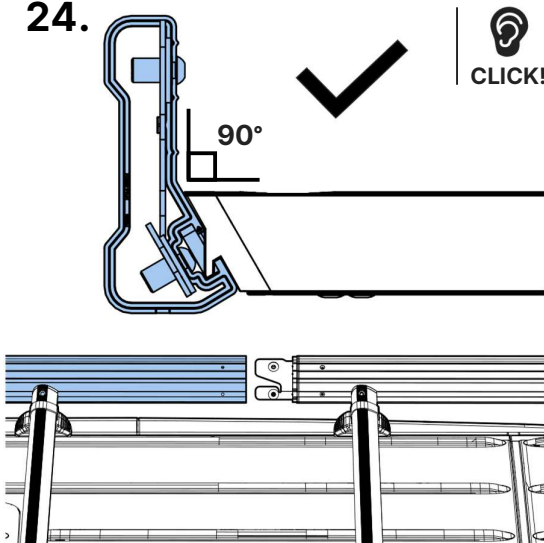

25.

