


# KB3PR/FL




# KammBar

## Instructions

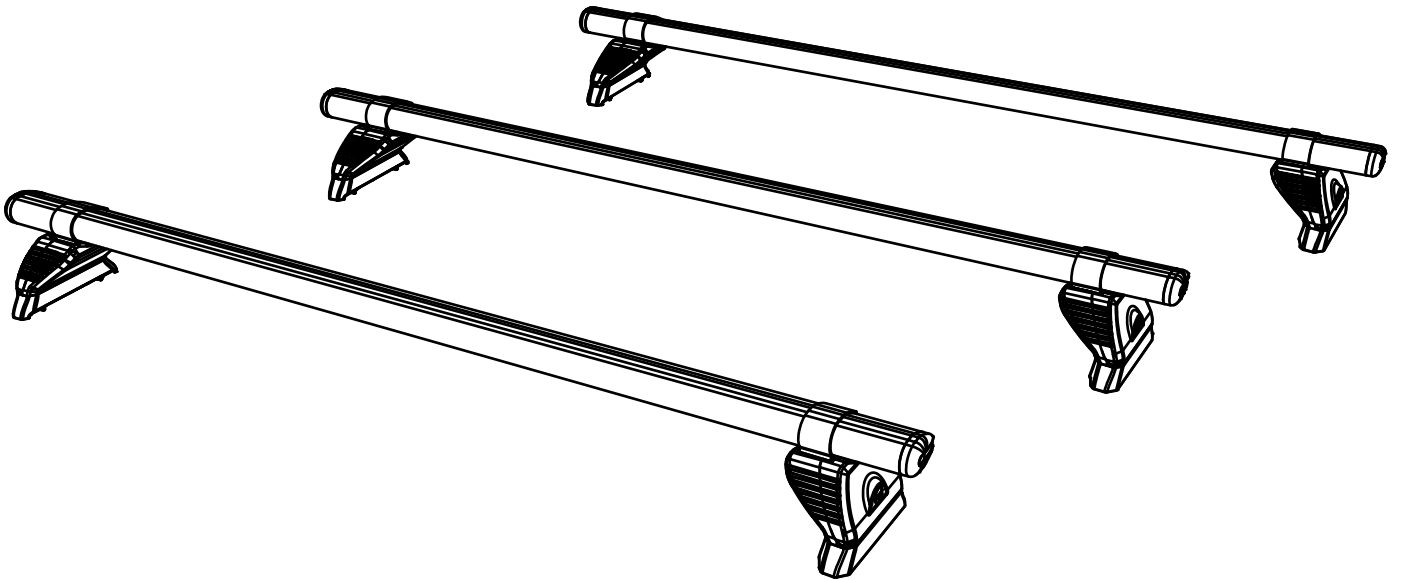


**CITY CRASH** (✓)


According to ISO/ PAS 11154:2006

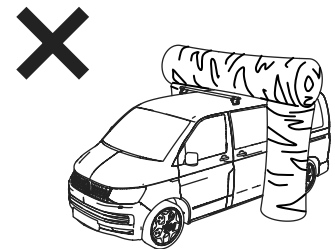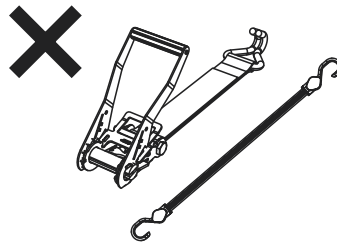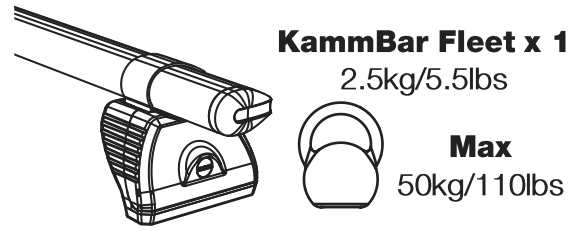


### KammBar Pro

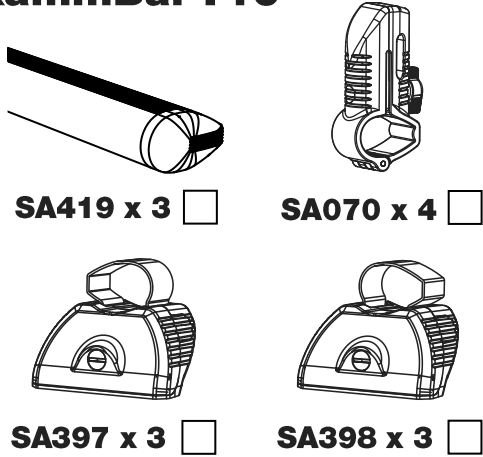


### KammBar Fleet

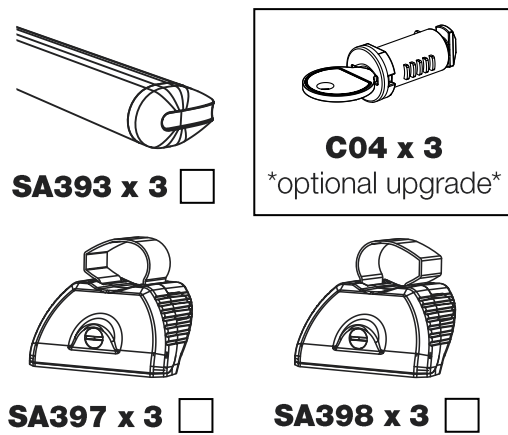


### Fitting Kit

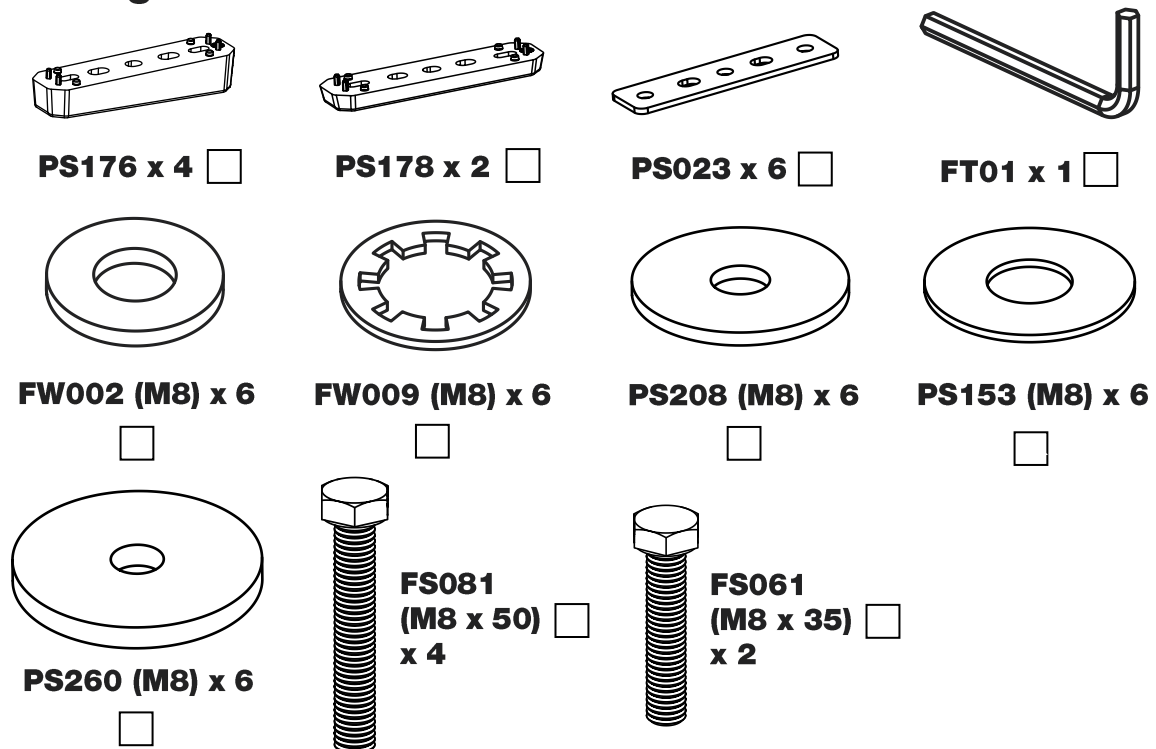


1.

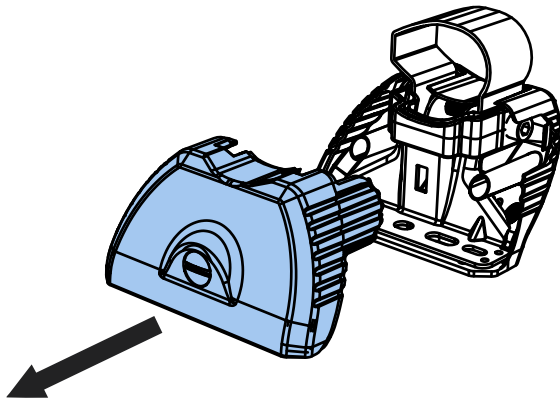

2.

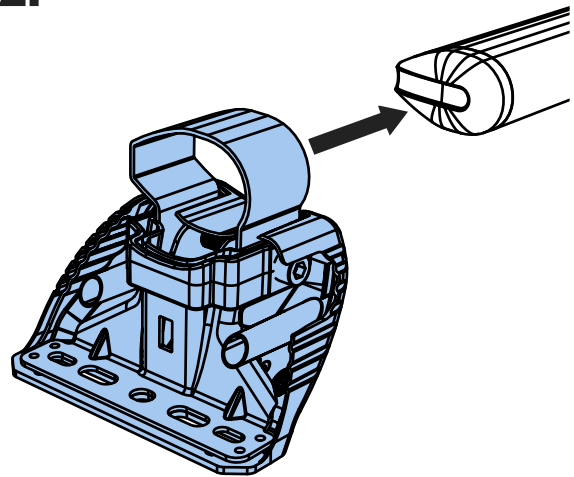


3.




SA397

PS176




SA397

PS178




SA397

PS176

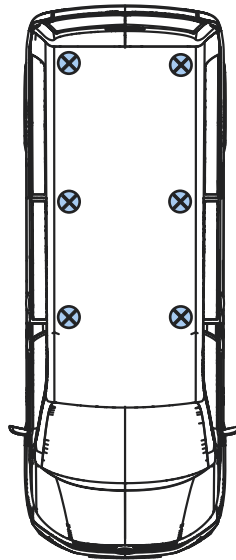


SA398




PS176

SA398



PS178

SA398










PS176

4.


MODEL	PS153	PS260
Kangoo	✓	✗
NV200	✗	✗
Citan	✓	✗
Caddy Maxi	✗	✓

5.

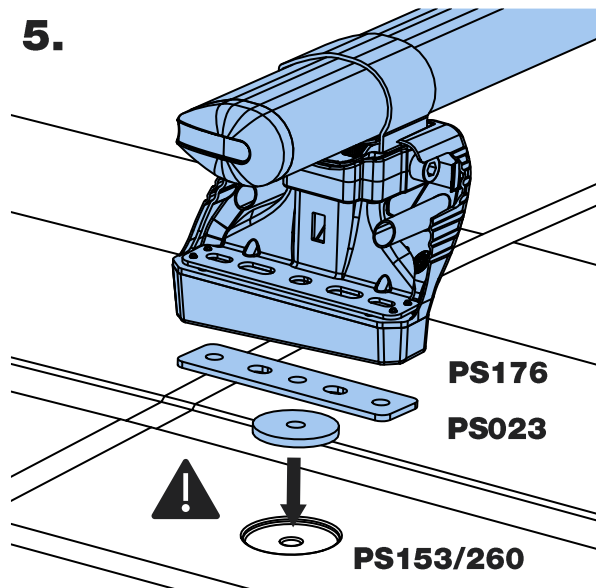


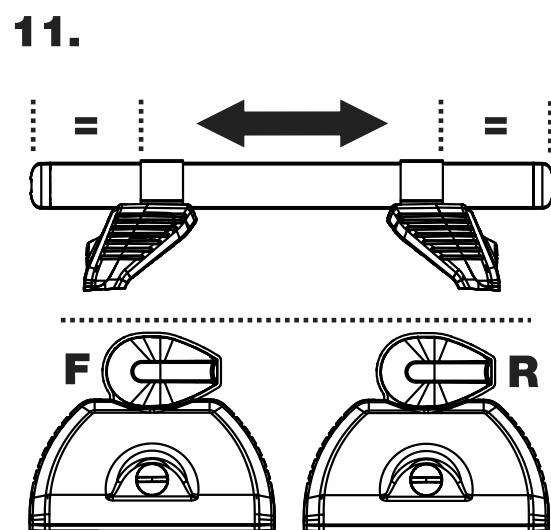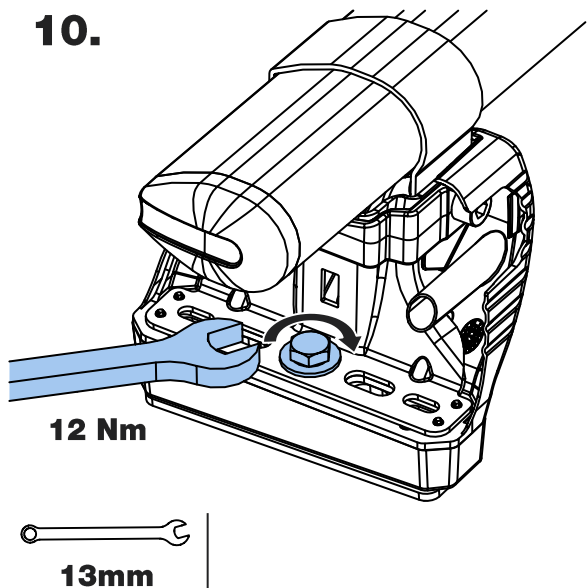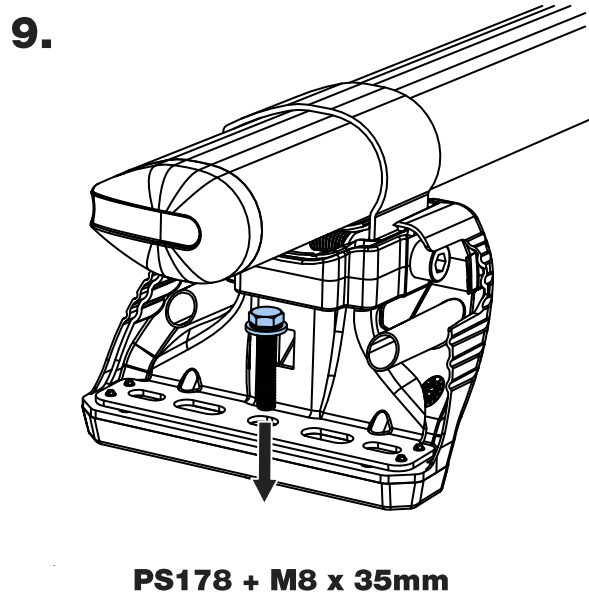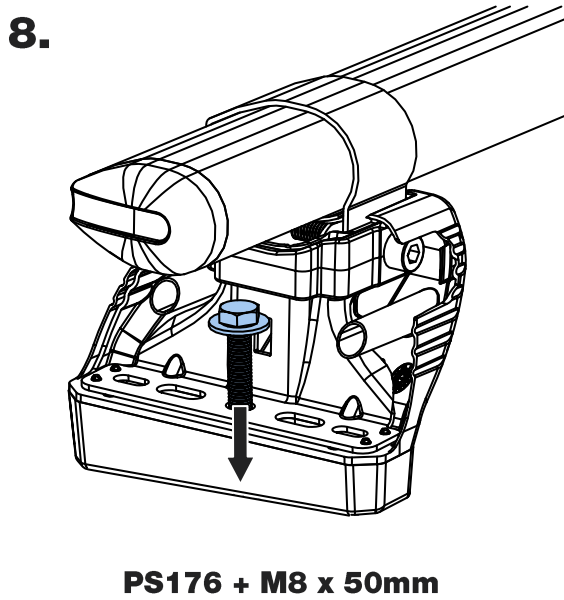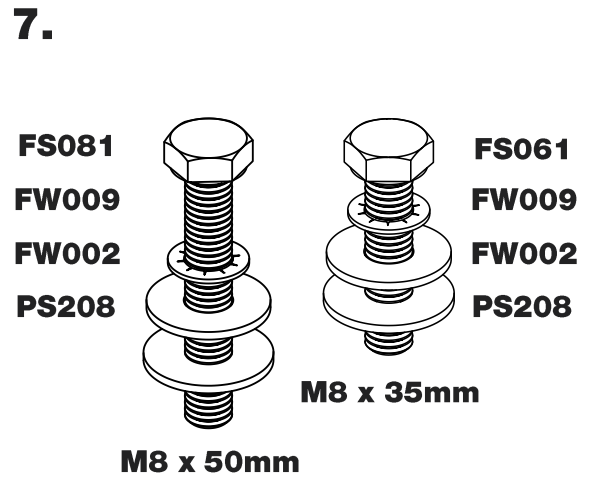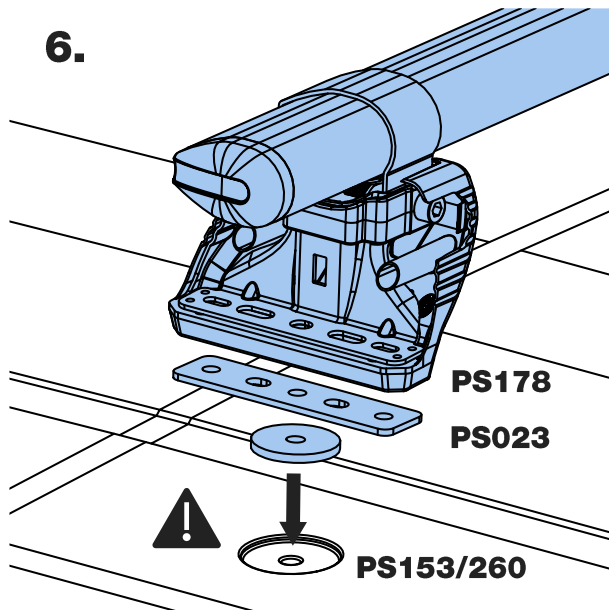


12.

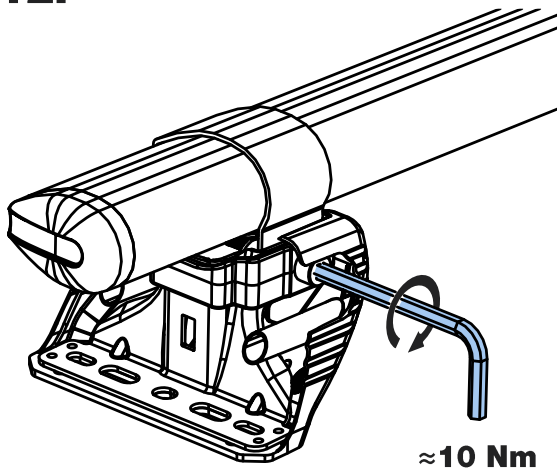

13.

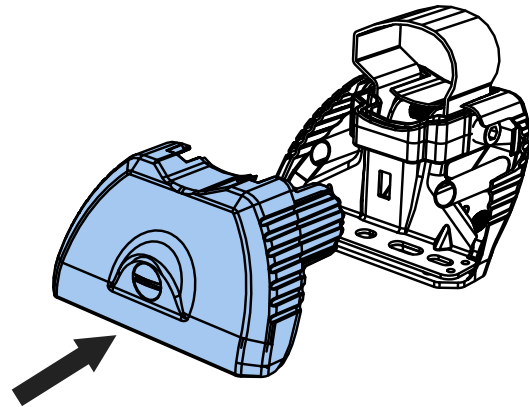

14.

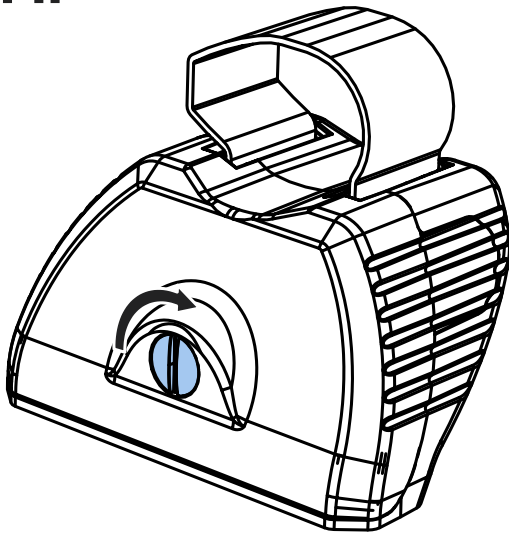

15.

