






LE2PR/FL KammBar

Instructions

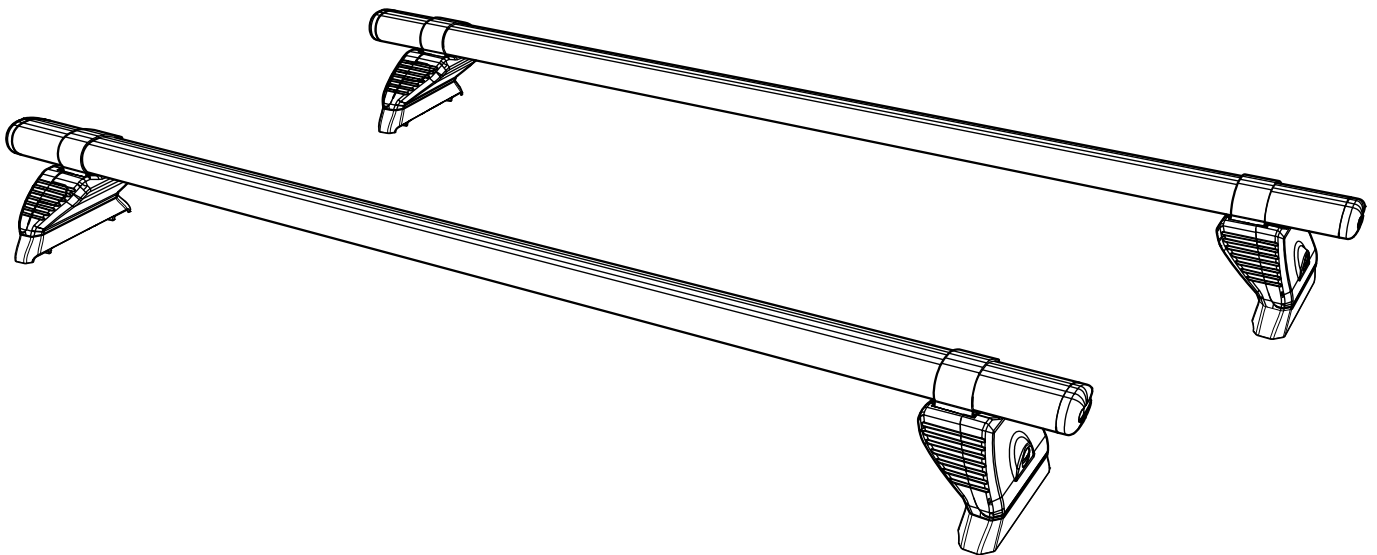


CITY CRASH (✓)


According to ISO/ PAS 11154:2006

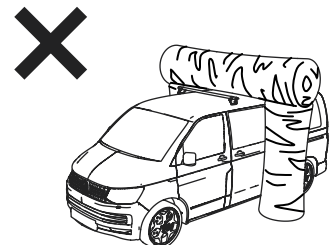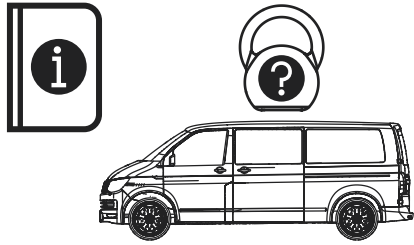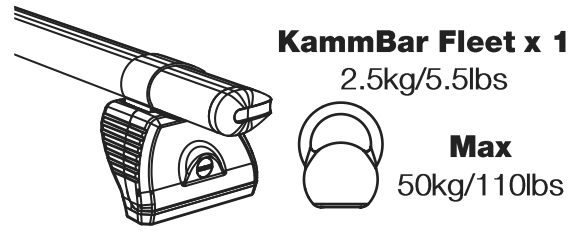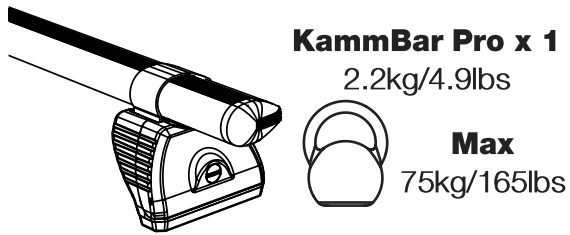


KammBar Pro

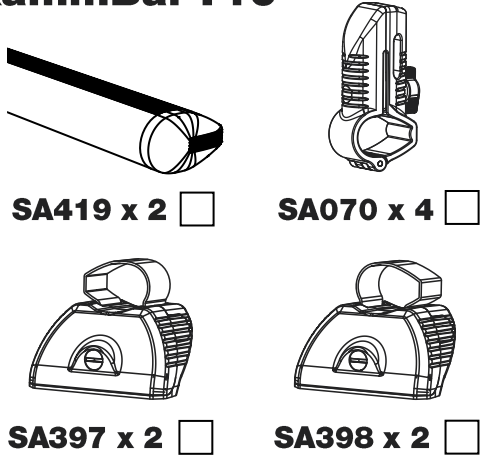

KammBar Fleet

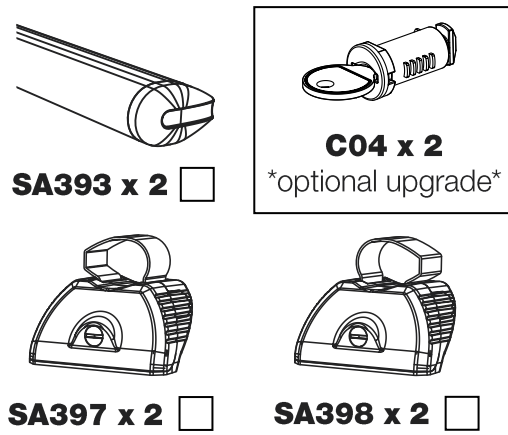


Fitting Kit

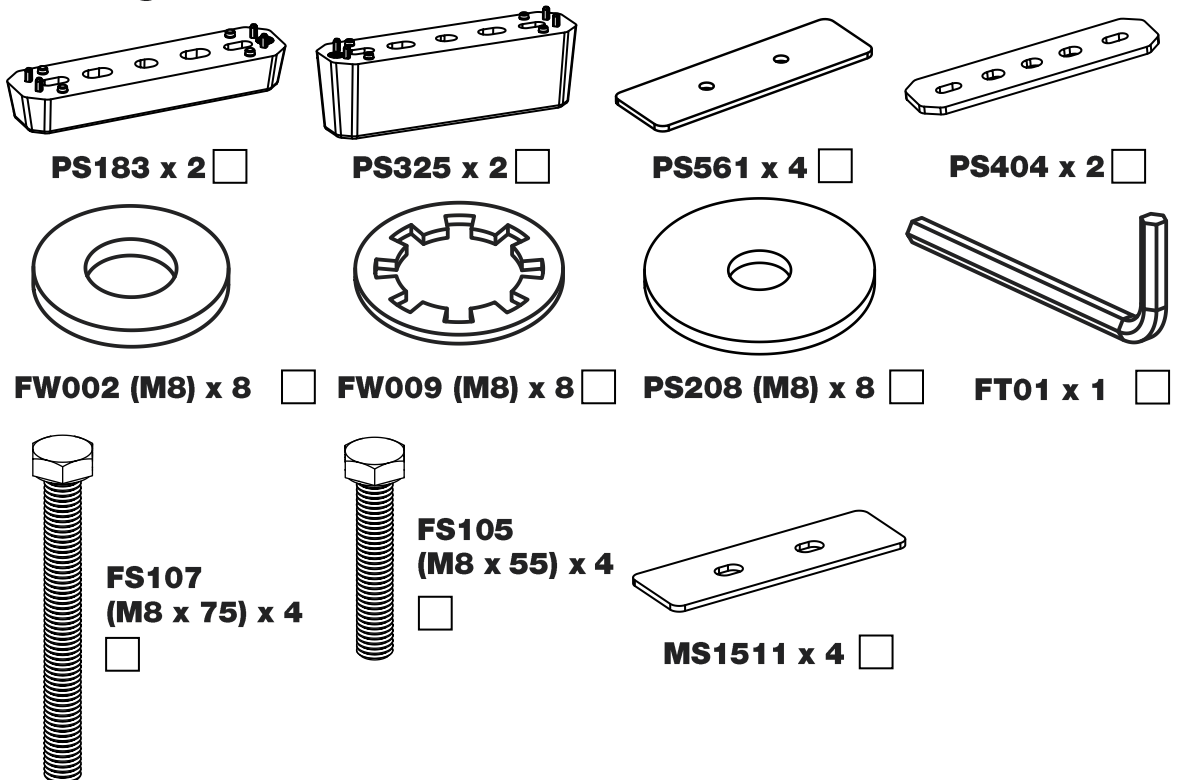


1.




2.

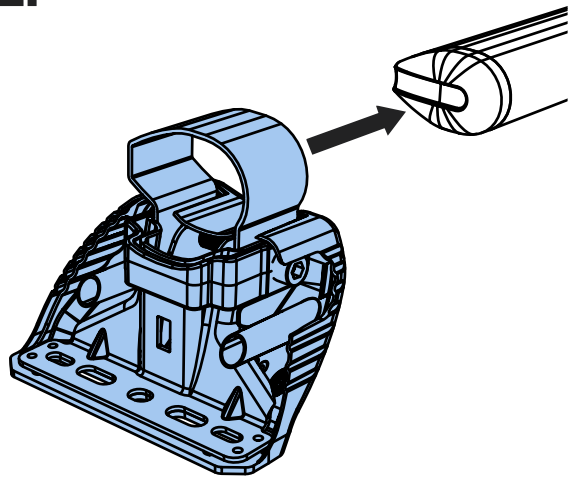



3.



SA397
PS183

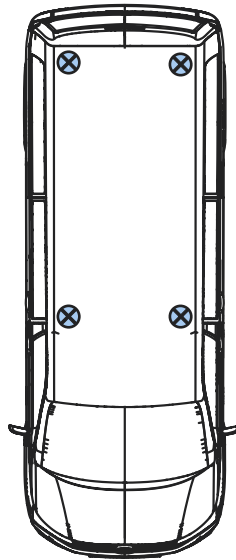


SA398
PS183




SA397
PS325

SA398
PS325




4.

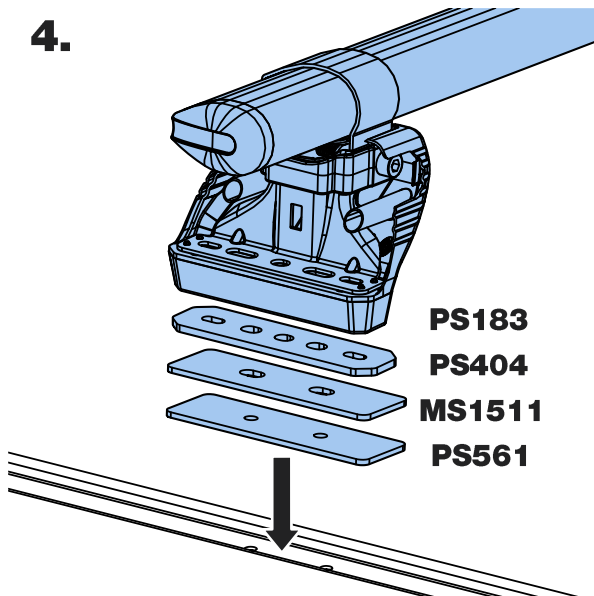


PS183
PS404
MS1511
PS561

5.

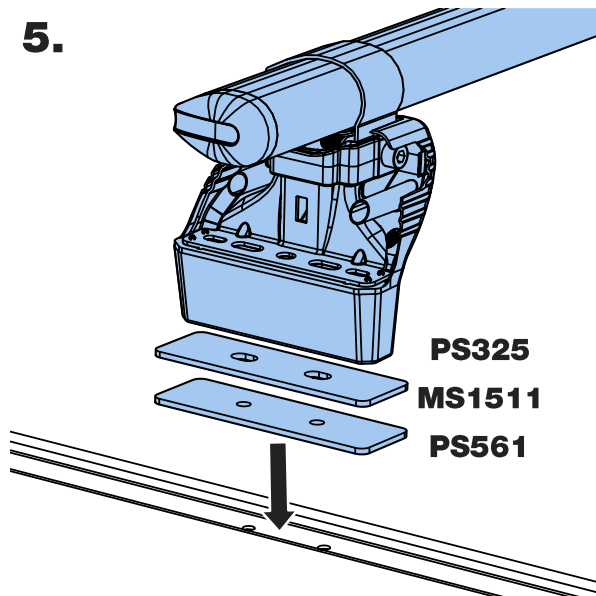


PS325
MS1511
PS561


6.

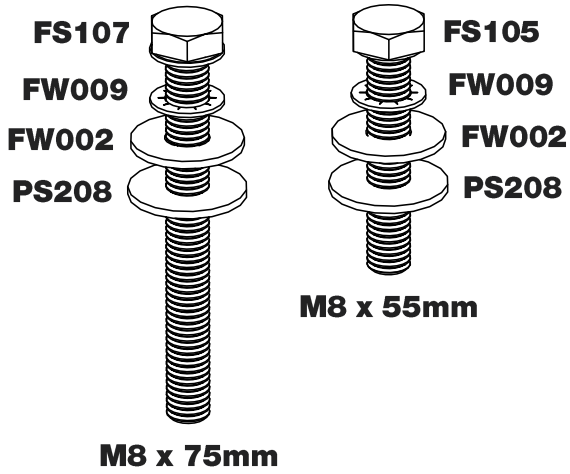


7.

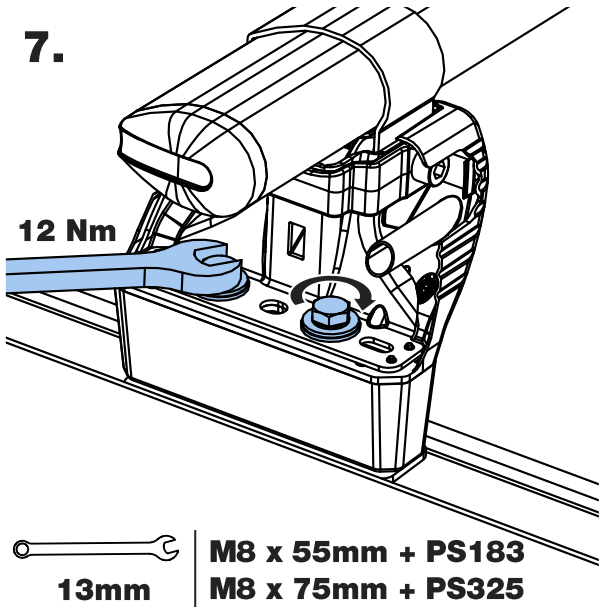


8.

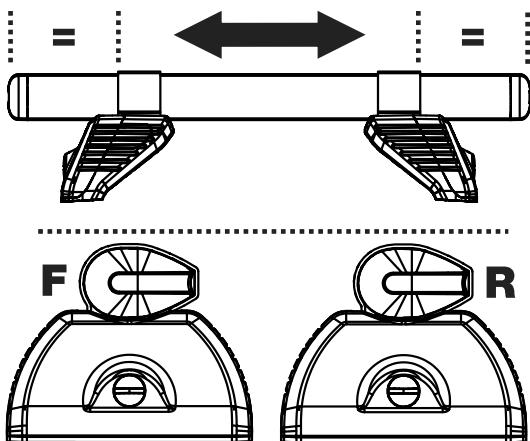

9.

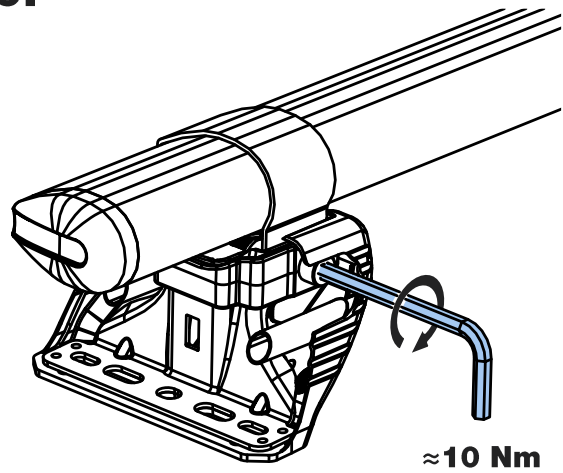

10.

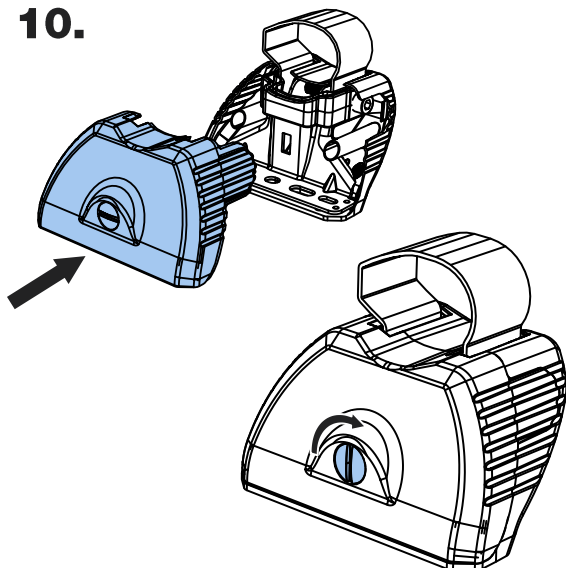

11.

