


LE3PR/FL




KammBar

Instructions

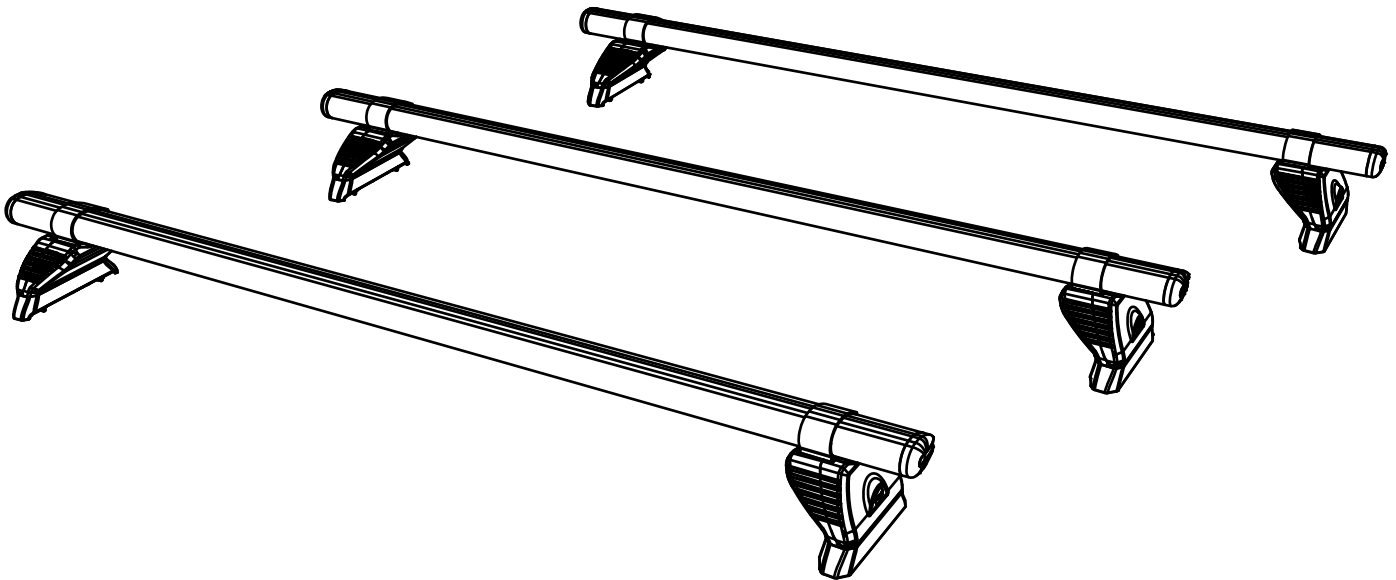


CITY CRASH (✓)


According to ISO/ PAS 11154:2006

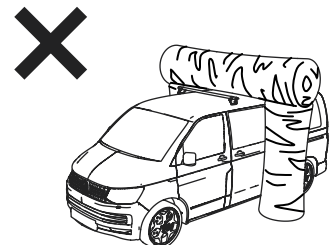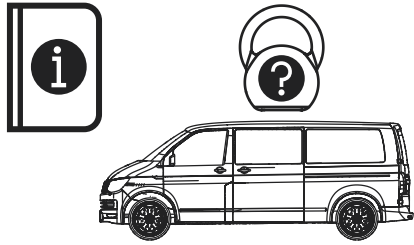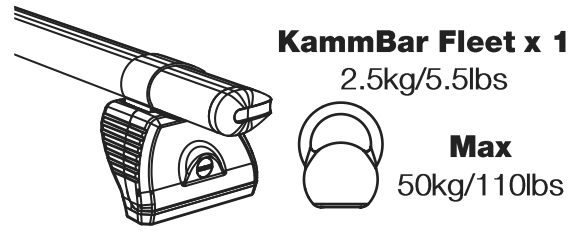


KammBar Pro

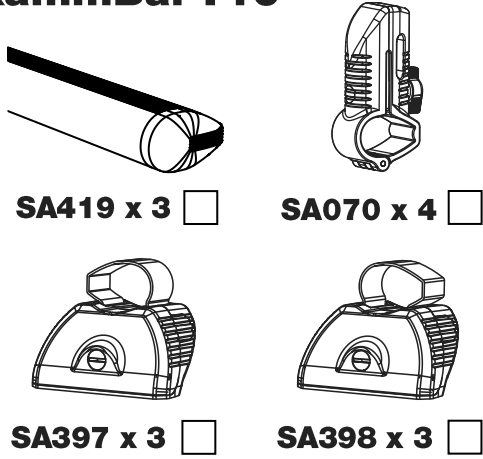


KammBar Fleet

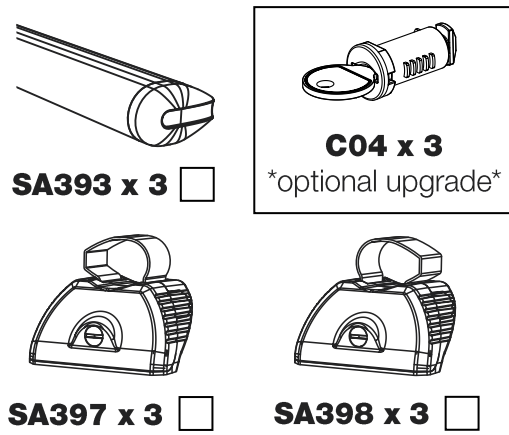


Fitting Kit

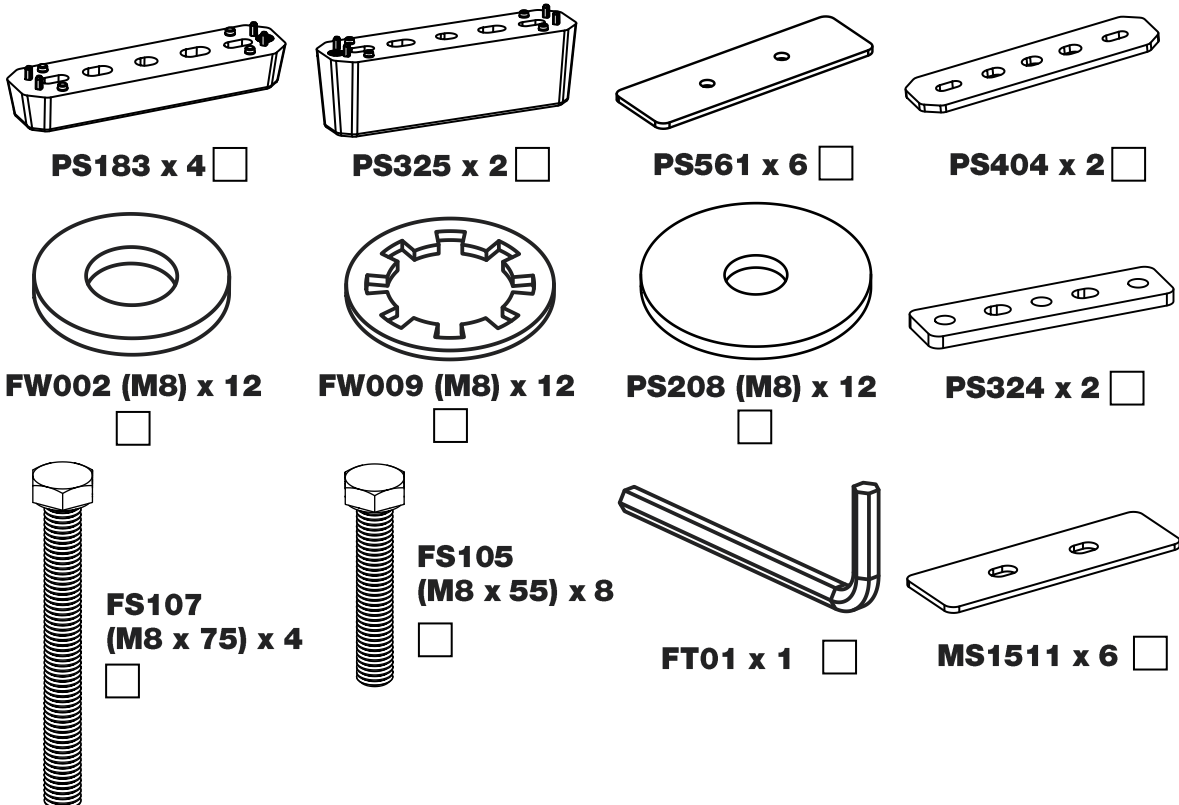


1.

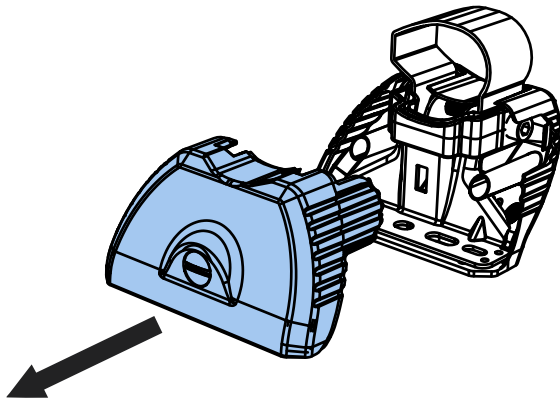


2.

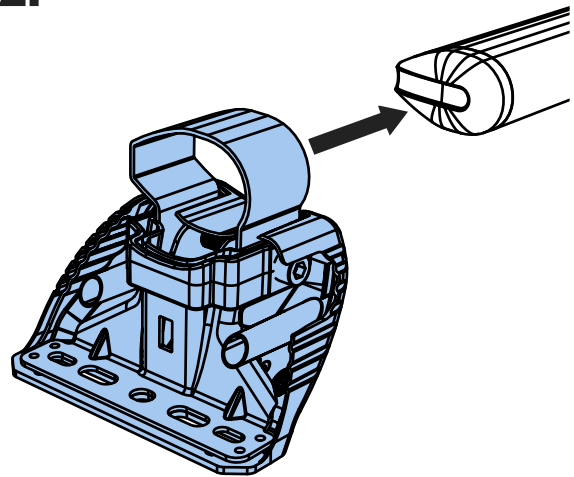


3.




SA397
PS183




SA397
PS183




SA397
PS325

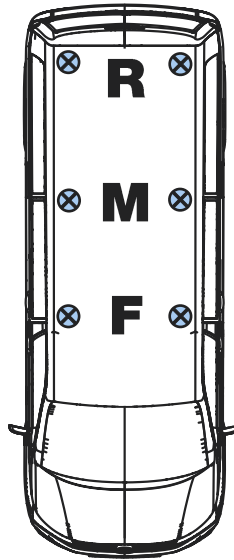


SA398
PS183




SA398
PS183




SA398
PS325









4.

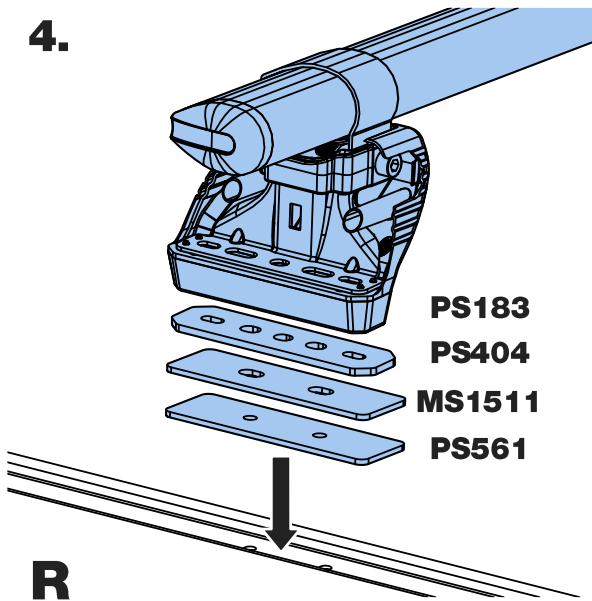


5.

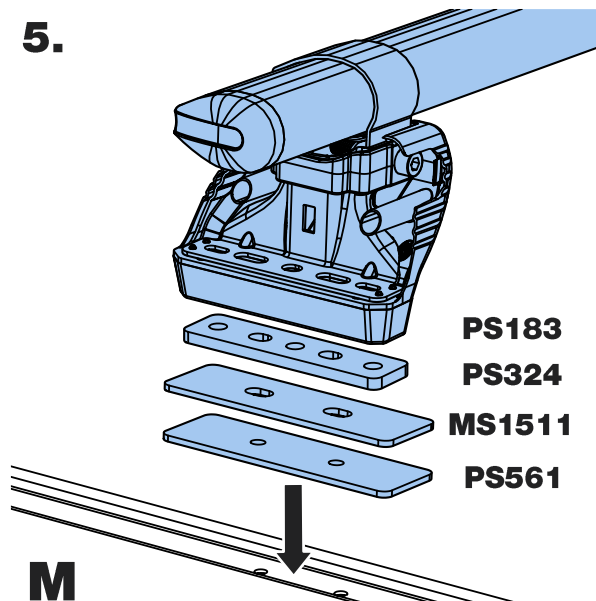

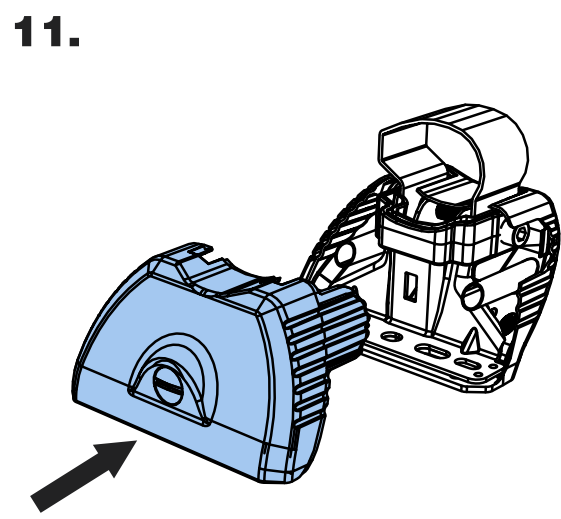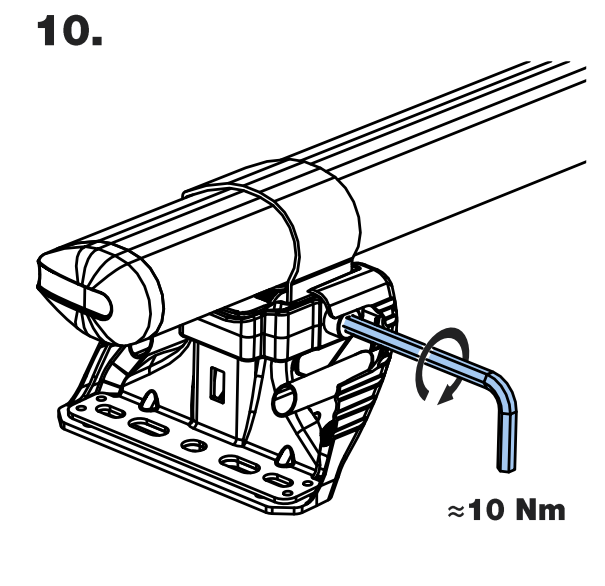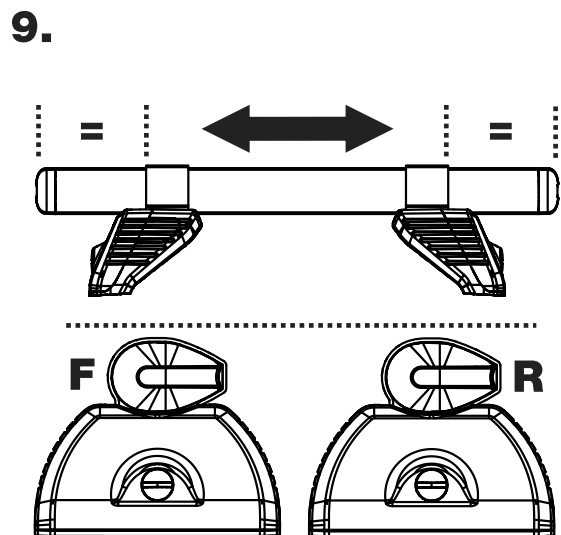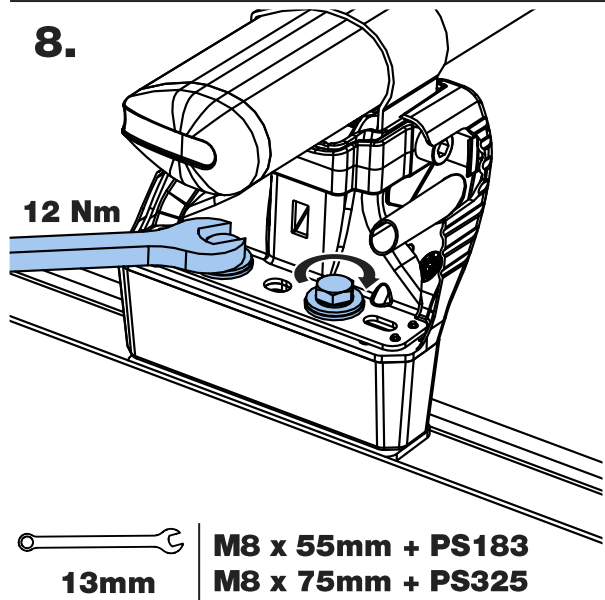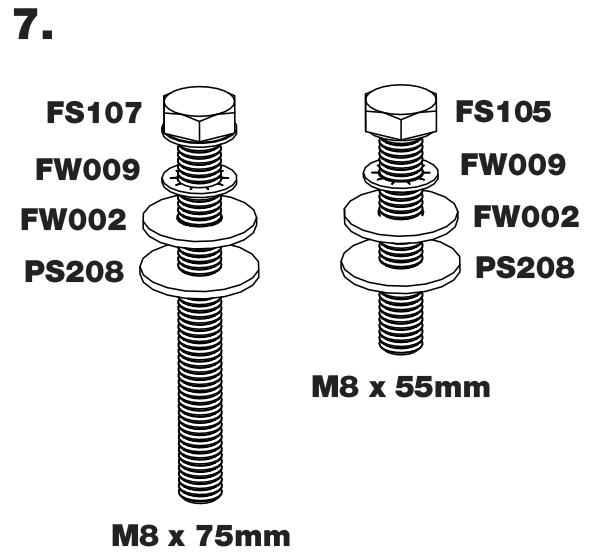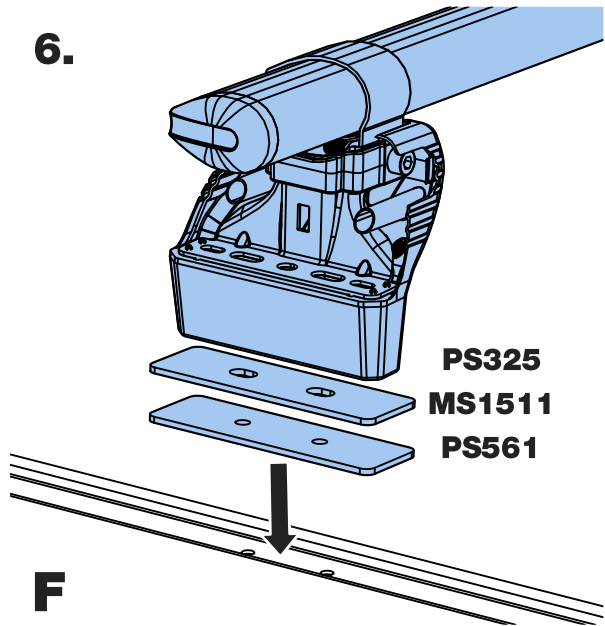

12.

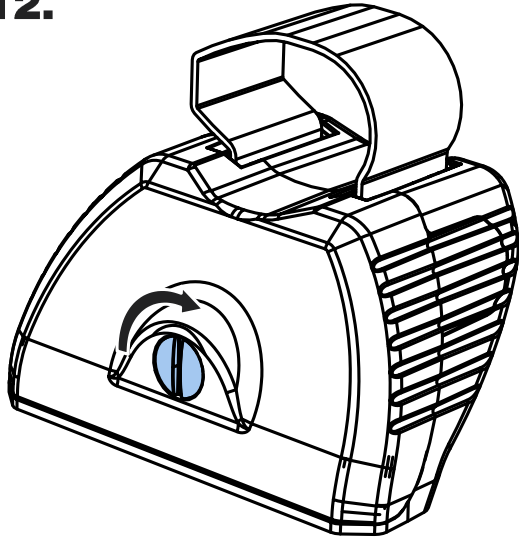

13.

