





<b>Issue:</b>	<b>Drawn By:</b>	<b>Checked By:</b>	<b>CRF No.:</b>	<b>Date:</b>	<b>Description:</b>
a	SJ	KB	3609	21/10/25	First Issue
b					
c					
d					

# MA4KE


# KammEdge.

## Instructions

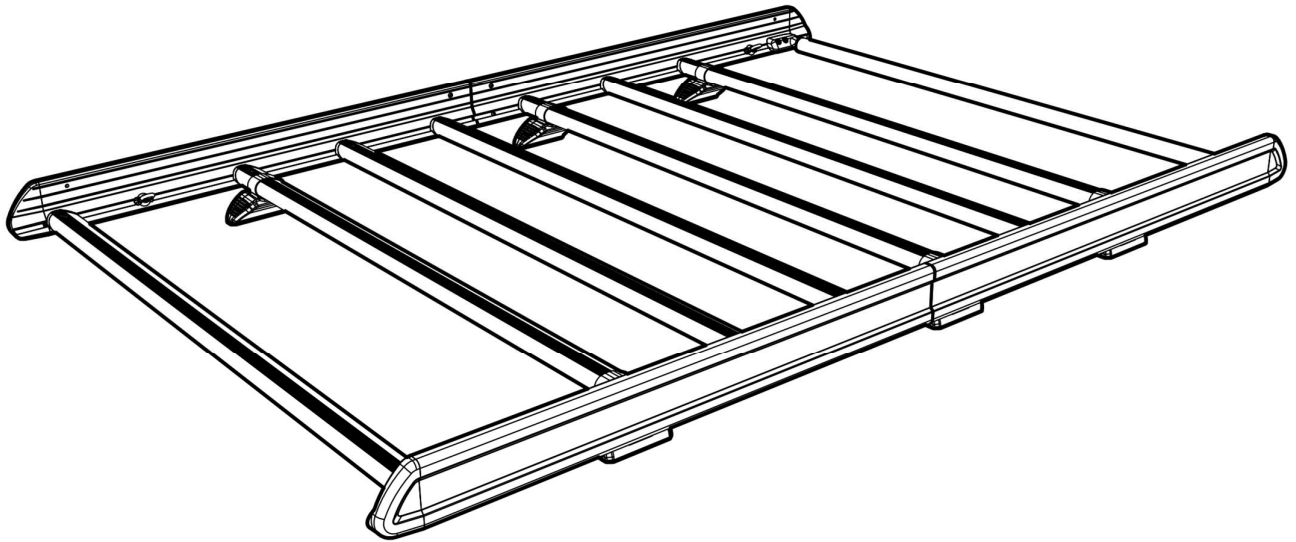


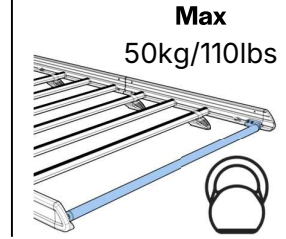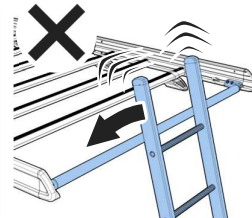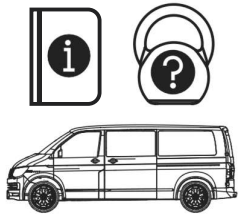

**KammEdge.**

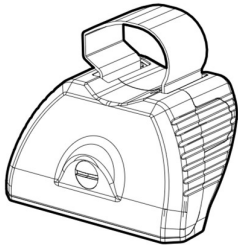


**SA397U x 4**

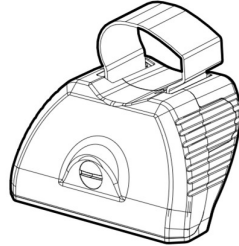


**SA398U x 4**




**SA429/SA467 x 7**

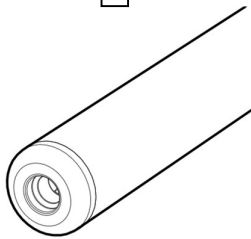


**SA437 x 1**

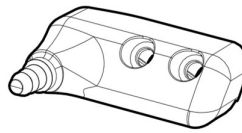

**PS519 x 1**

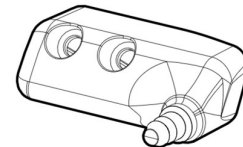


**PS520 x 1**

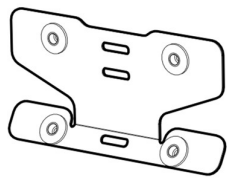


**SA610 x 2**




**PS635 x 2**

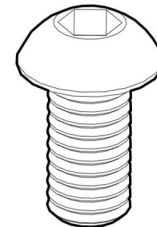

**FS323  
(M6 x 16) x 8**

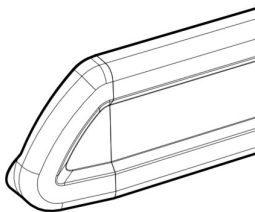

**LSF (L) x 2**

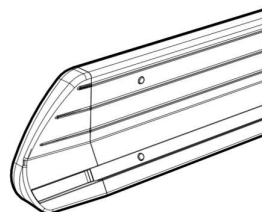

**LSF (R) x 2**




**C04 x 8  
\*optional upgrade\***

## Fitting Kit




**FN020 (M6) x 16**




**PS183 x 8**




**FS059  
(M8 x 25) x 18**

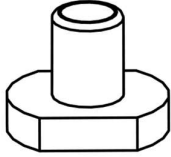

**FN085 x 18**

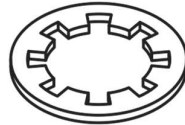


**FW008 (M6) x 16**

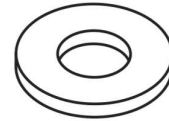

**FW001 (M6) x 16**




**FS042  
(M6 x 40) x 16**



**FT05 x 1**



**FT01 x 1**

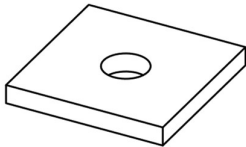


**PS024 x 16**




1.




2.

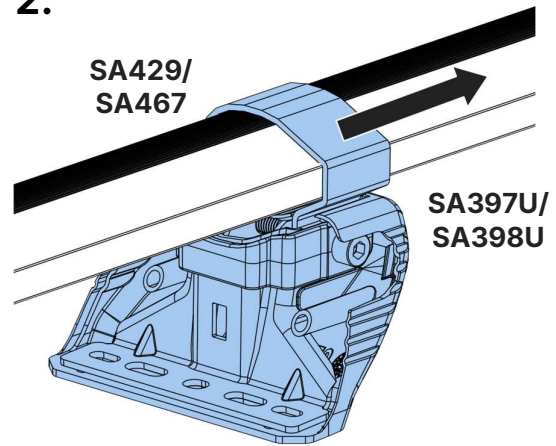


3.

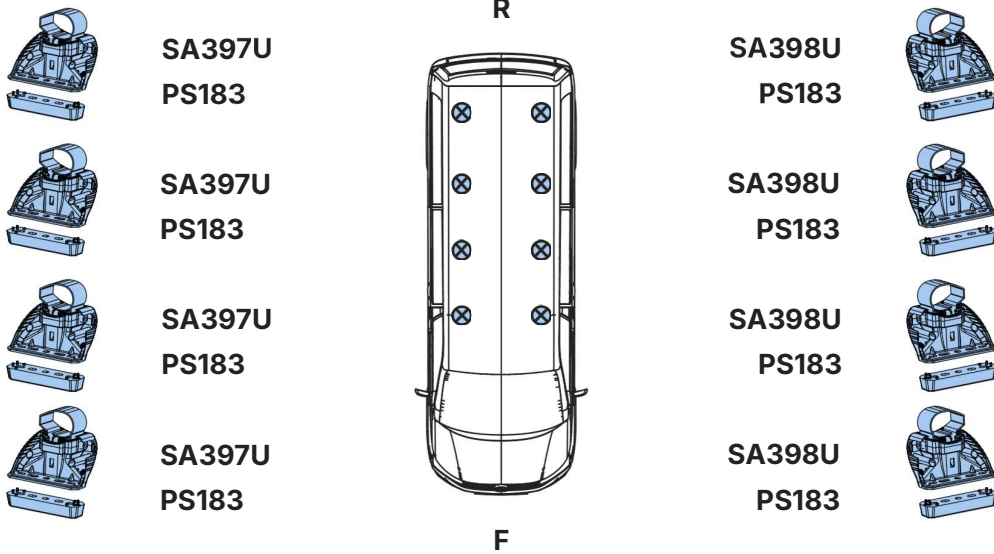


4.

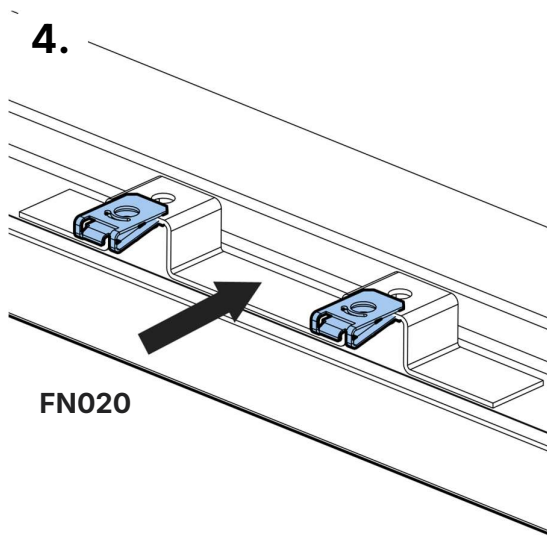


5.

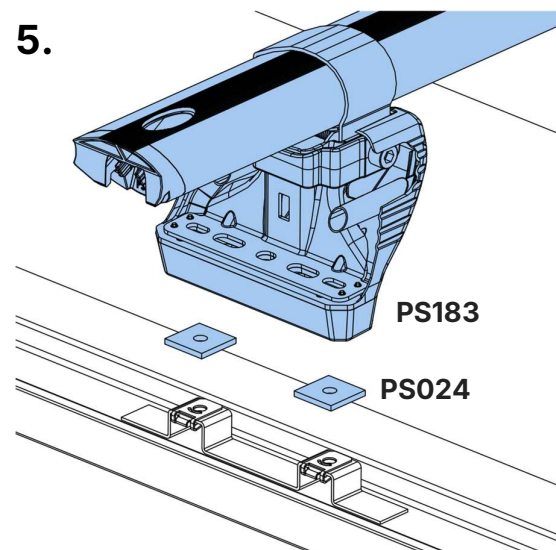


6.

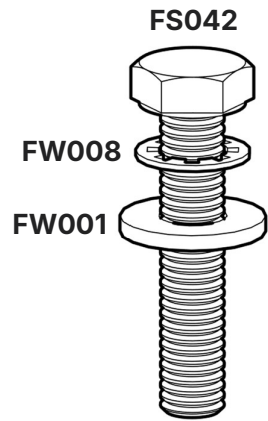


7.

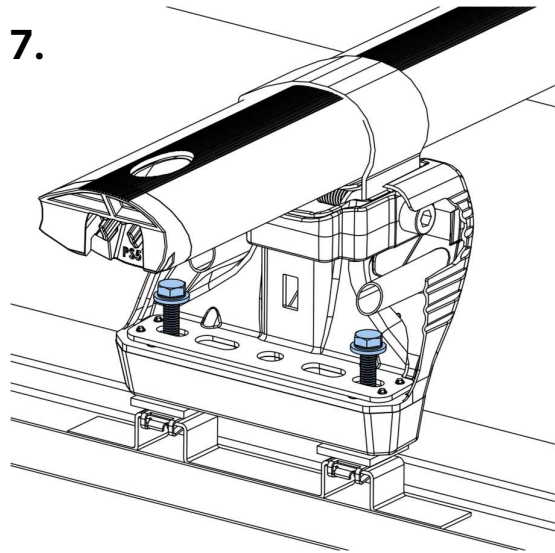


8.

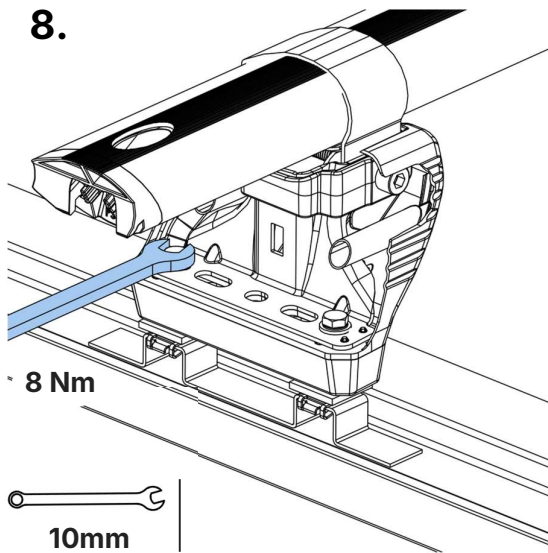


9.

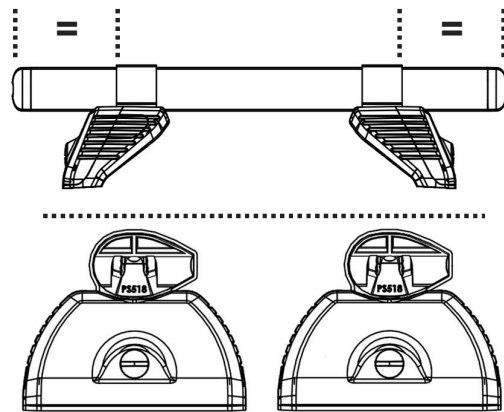


10.

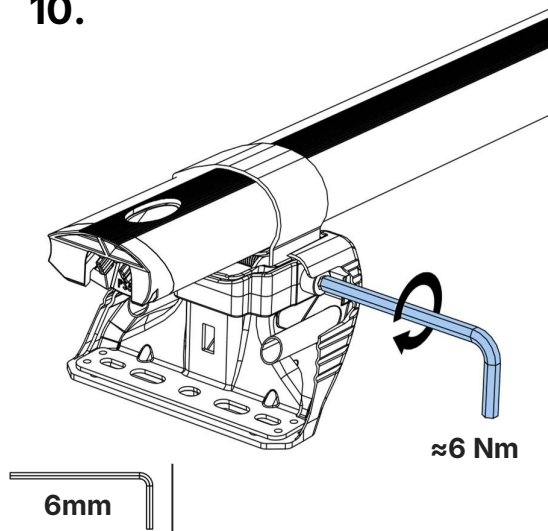



11.

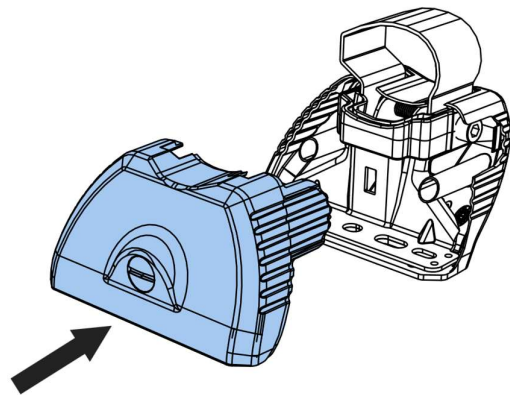

12.

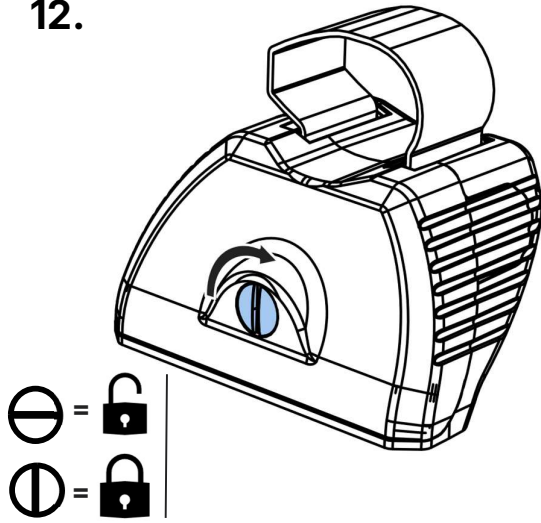

13.

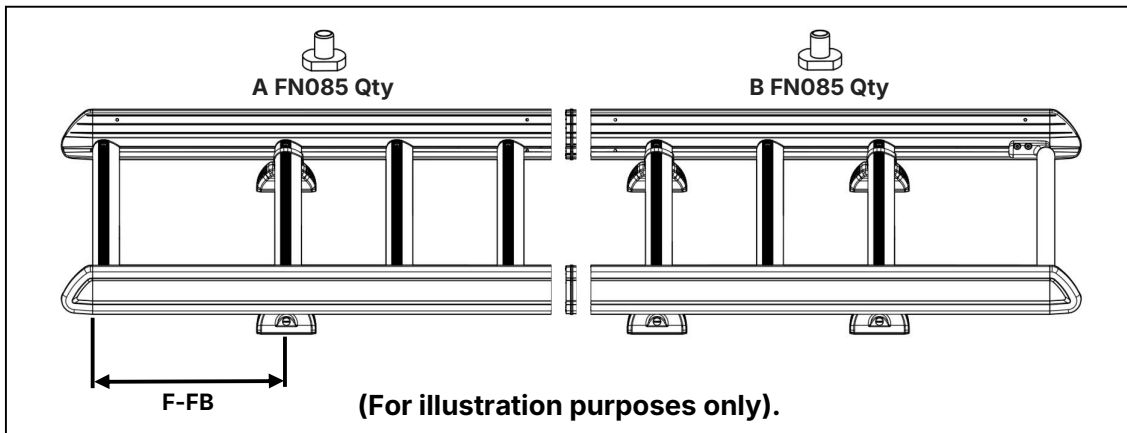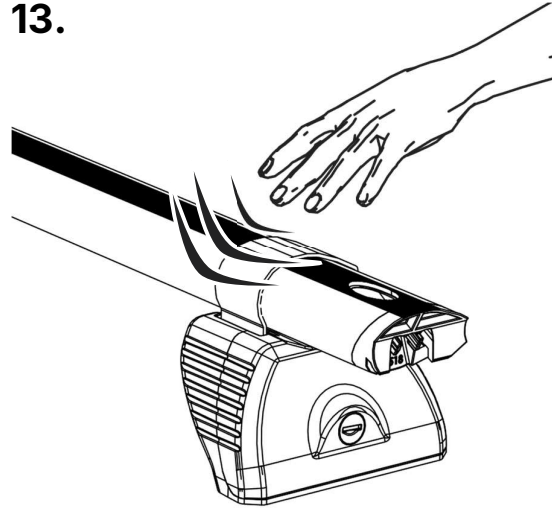


**L633/LB633- Vivaro 2014-2019, Trafic 2014-, Talento 2016-2020, L1-H2 (Twin)**

Max Load = 150kg/330lbs



L633/LB633 = 22kg/49lbs

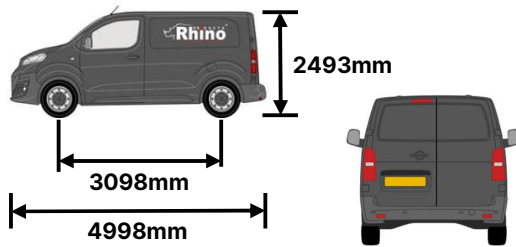


A FN085 Qty	B FN085 Qty	Front – Front Bar (mm)
3	6	280

**L634/LB634- Vivaro 2014-2019, Trafic 2014-, Talento 2016-2020, L2-H2 (Twin)**

Max Load = 150kg/330lbs




L634/LB634 = 27kg/60lbs

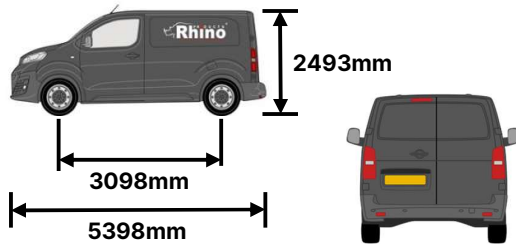


A FN085 Qty	B FN085 Qty	Front – Front Bar (mm)
4	5	280




20.

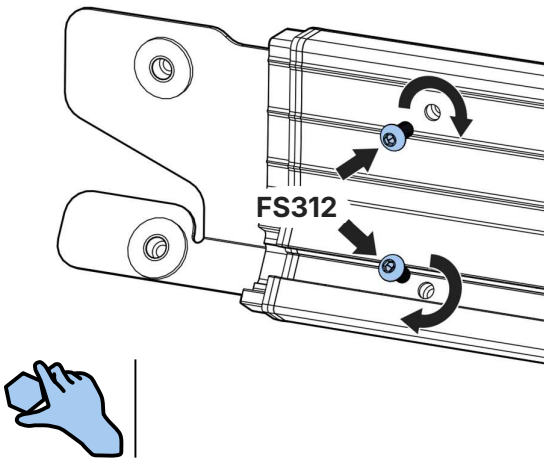


21.

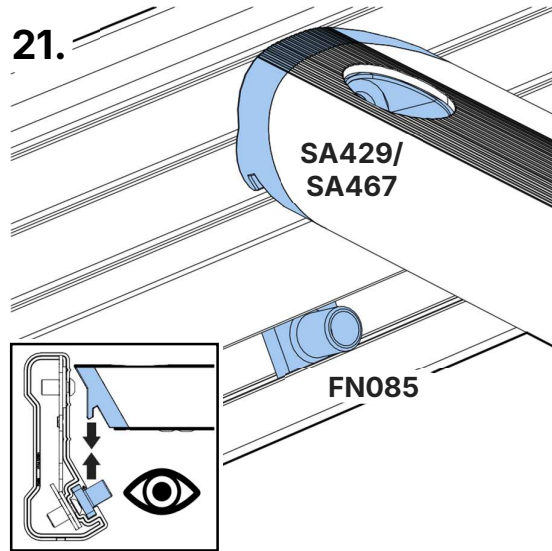


22.

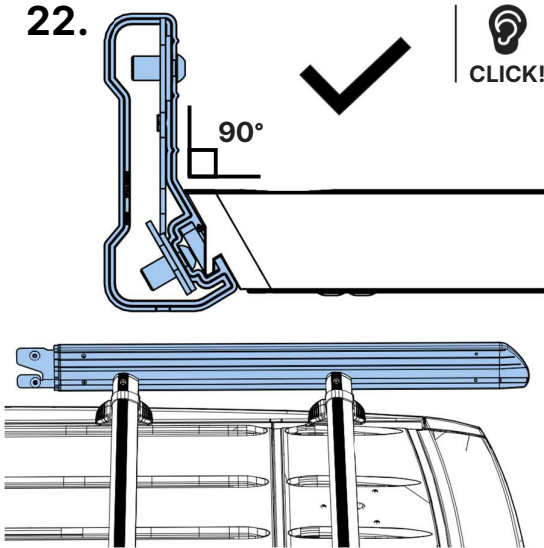

23.

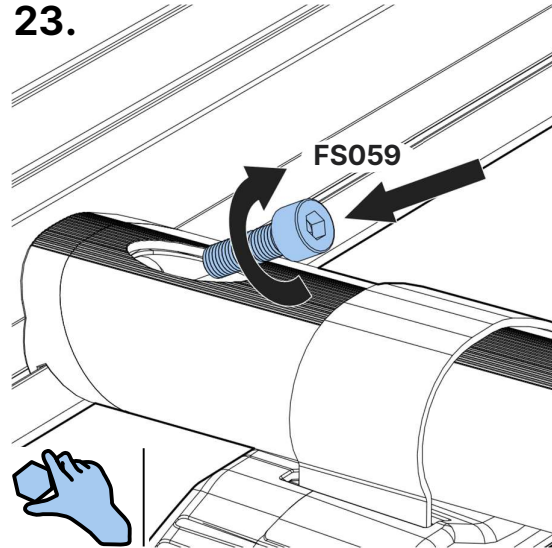

24.

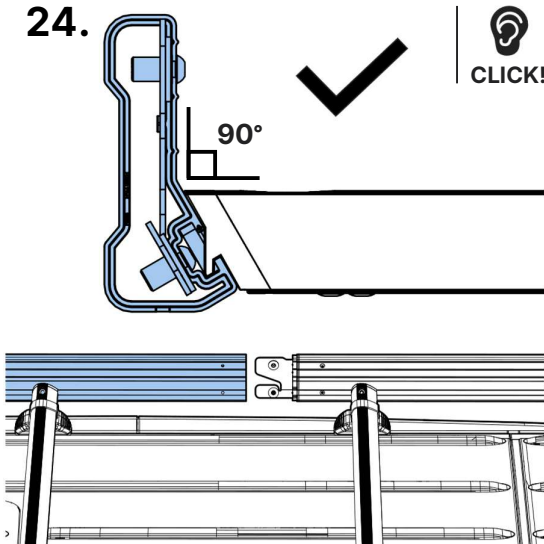

25.

