




Issue:	Drawn By:	Checked By:	CRF No.:	Date:	Description:
a	SJ	KB	3609	21/10/25	First Issue
b					
c					
d					

PB3KE


KammEdge.

Instructions

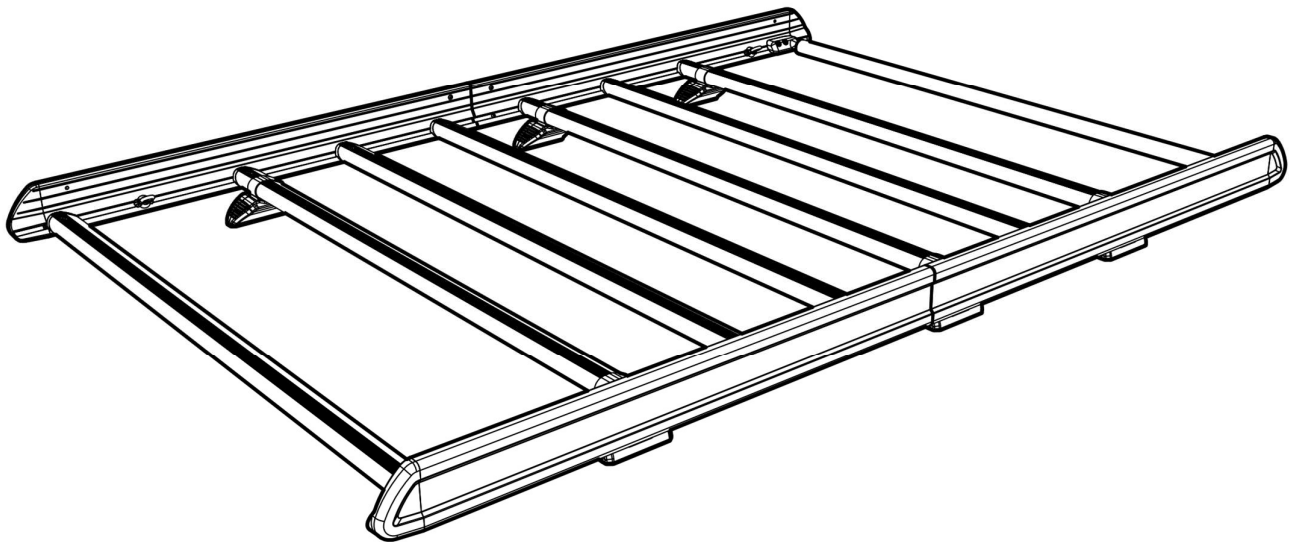


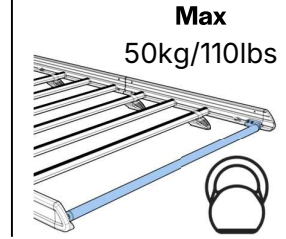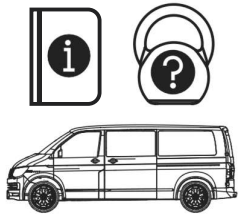


KammEdge.

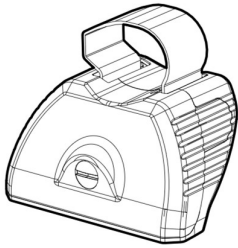

SA397U x 3

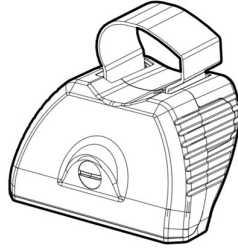


SA398U x 3

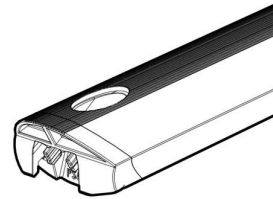


SA428/SA466 x 6




SA436 x 1

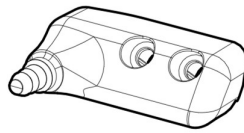


PS519 x 1

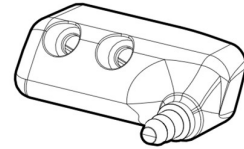


PS520 x 1

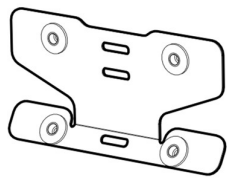


SA610 x 2




PS635 x 2

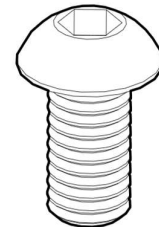

**FS323
(M6 x 16) x 8**

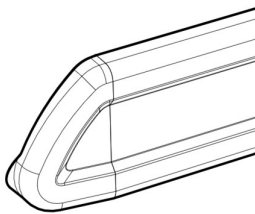

LSF (L) x 2

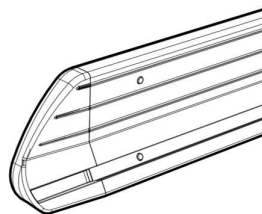


LSF (R) x 2




C04 x 6
optional upgrade

Fitting Kit

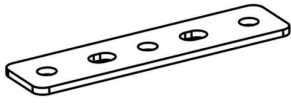


PS023 x 6




PS176 x 4




FS059
(M8 x 25) x 16

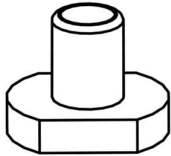


FN085 x 16

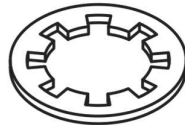


FW009 (M8) x 6

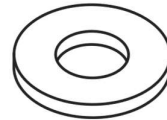


FW002 (M8) x 6

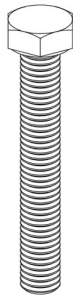

FS081
(M8 x 50) x 4

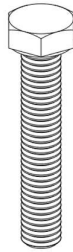


FB014
(M8 x 30) x 2

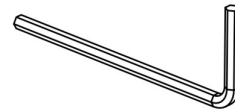

FT05 x 1



FT01 x 1

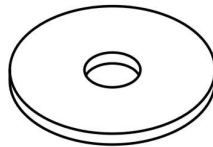


PS208 (M8) x 6




1.




2.

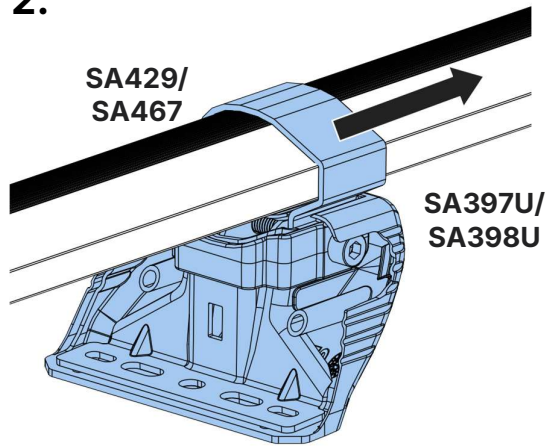


3.






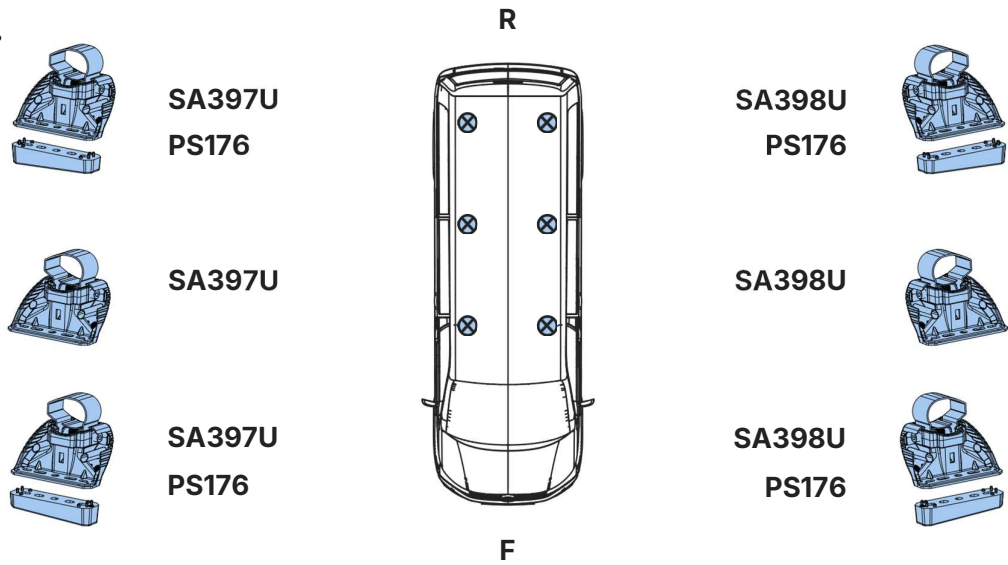





4.

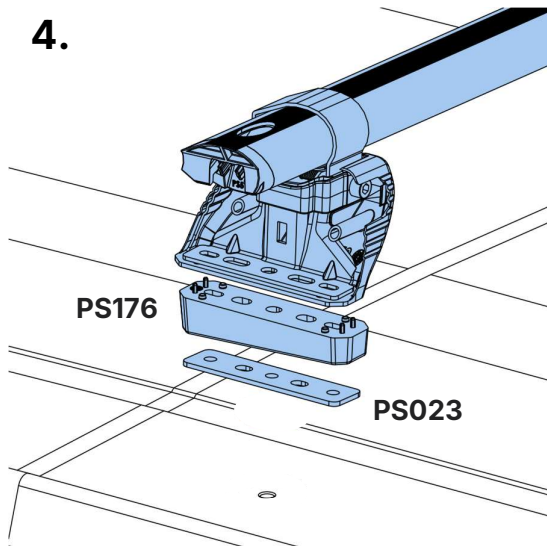
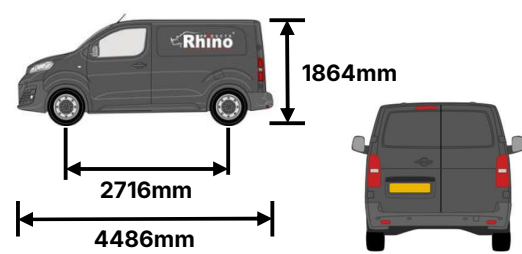


5.

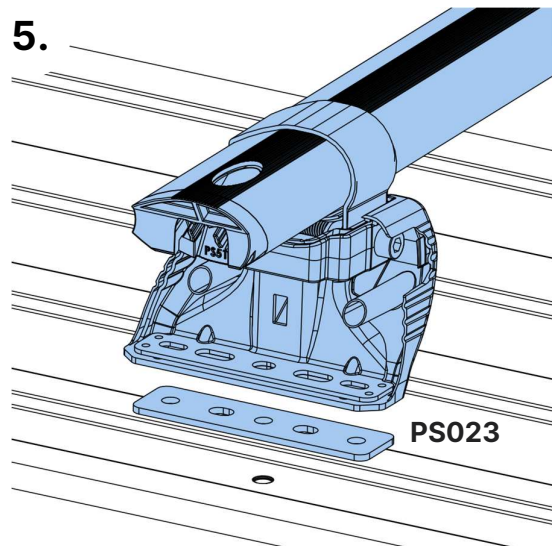

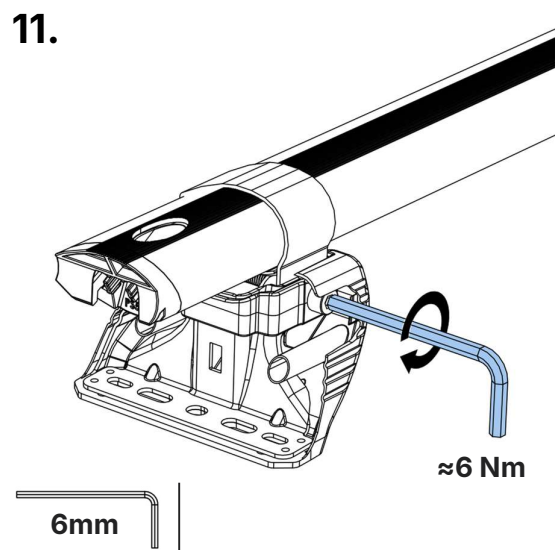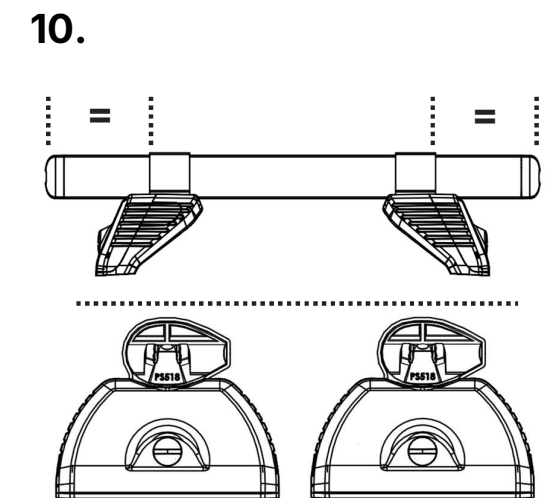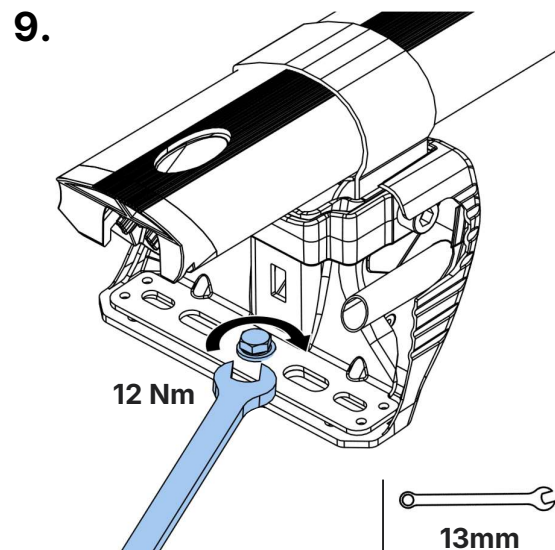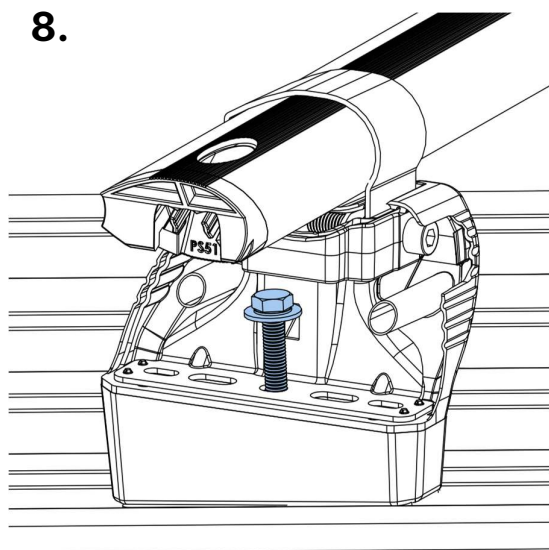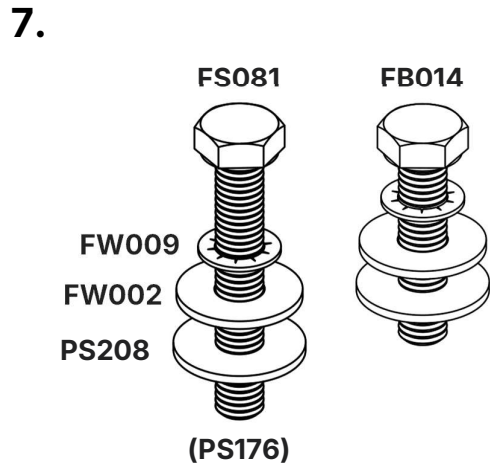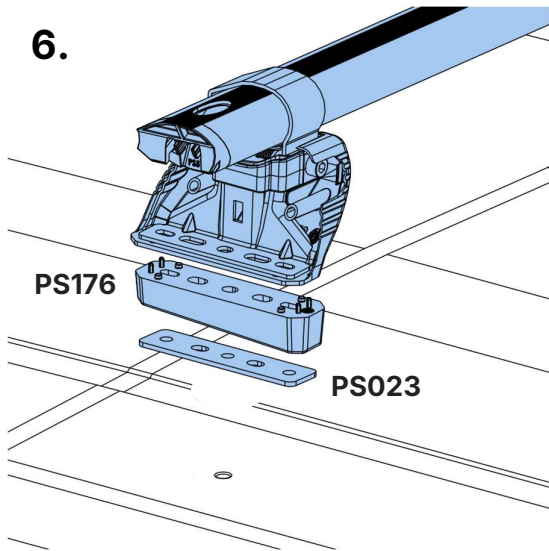


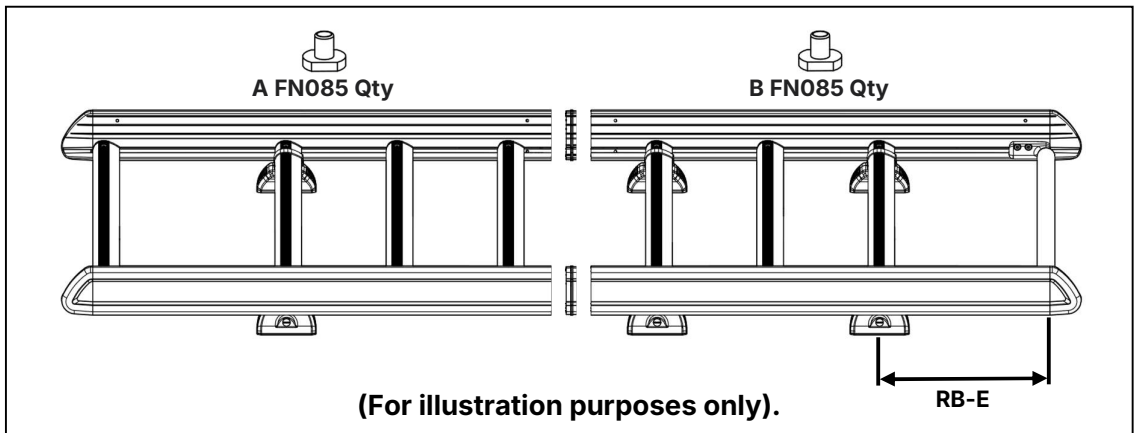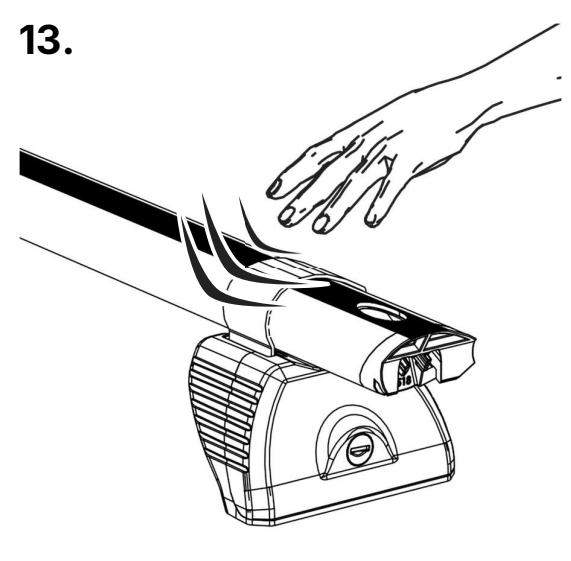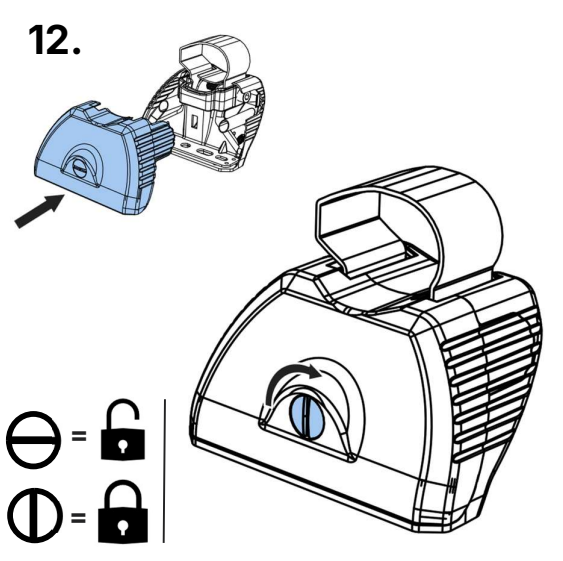


L687/LB687- Kangoo 3/Citan/Townstar 2021-, L1-H1 (Twin)		
<p>Max Load = 150kg/330lbs</p>  <p>L687/LB687 = 20kg/45lbs</p>		
A FN085 Qty	B FN085 Qty	Rear Bar – End (mm)
3	5	140

L690/LB690- Kangoo 3/Citan/Townstar 2021-, L2-H1 (Twin)

Max Load = 150kg/330lbs

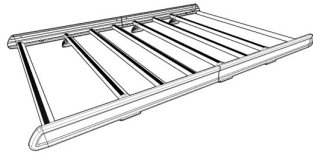


L690/LB690 = 22kg/48lbs

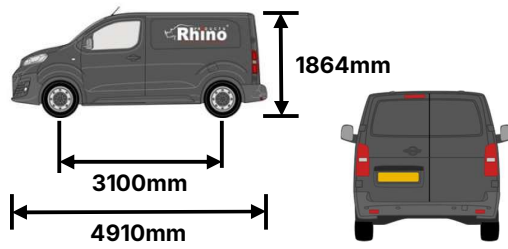


A FN085 Qty	B FN085 Qty	Rear Bar – End (mm)
3	5	140


20.

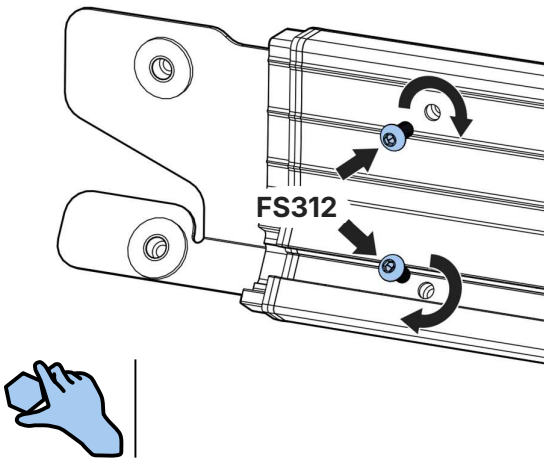


21.

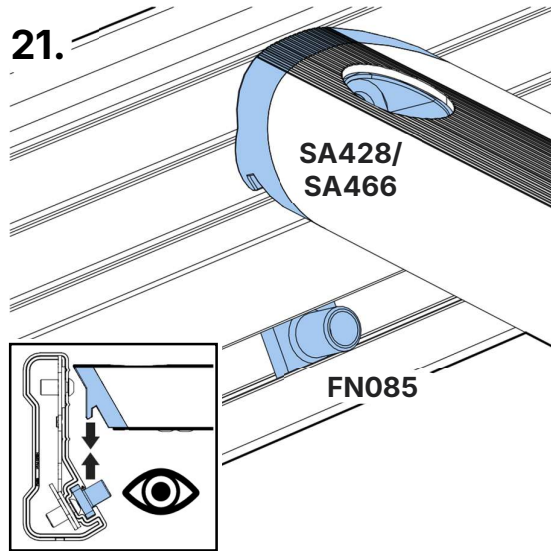


22.

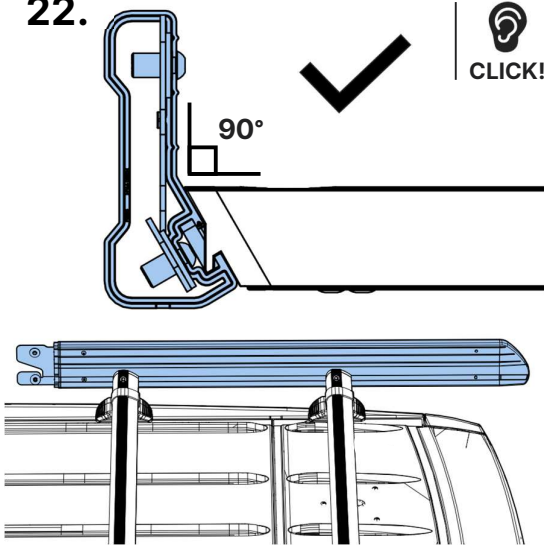

23.

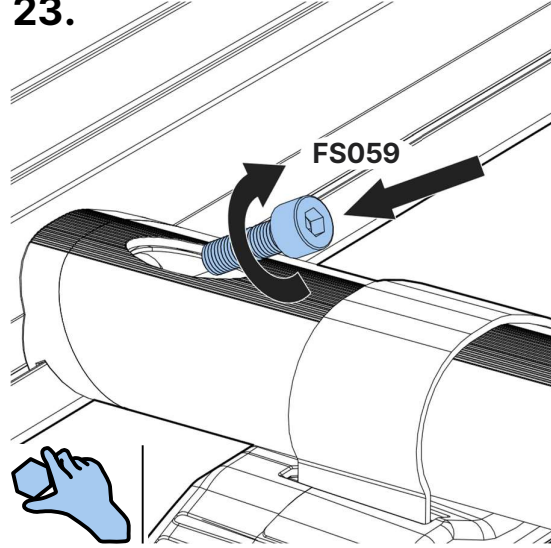

24.

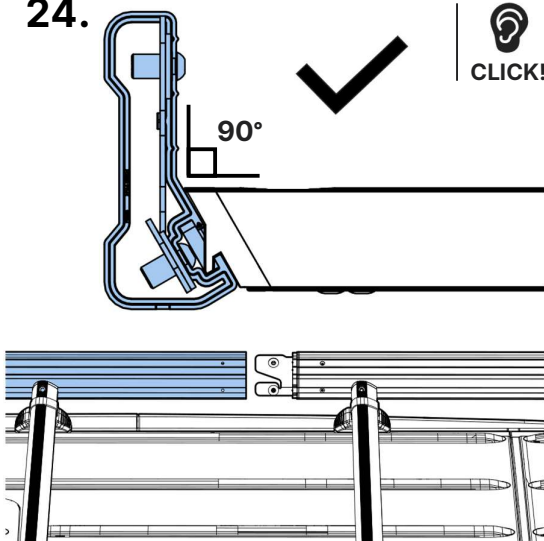

25.

