




Issue:	Drawn By:	Checked By:	CRF No.:	Date:	Description:
a	SJ	KB	3609	21/10/25	First Issue
b					
c					
d					

QA4KE


KammEdge.

Instructions

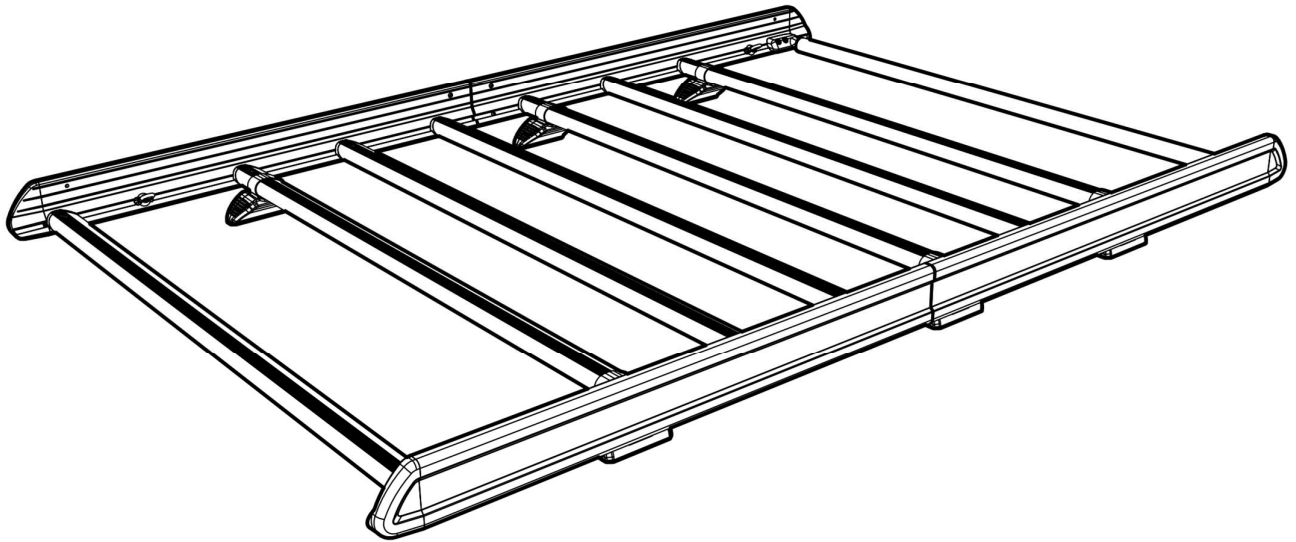


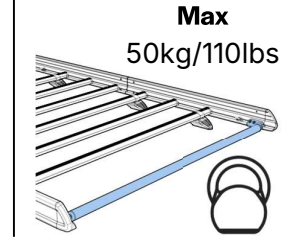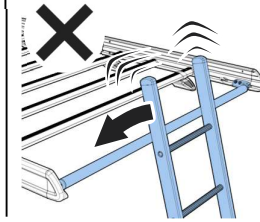


KammEdge.

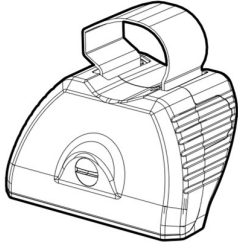


SA397U x 4

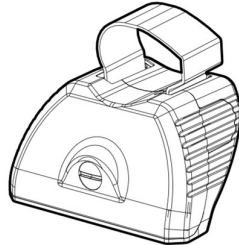


SA398U x 4

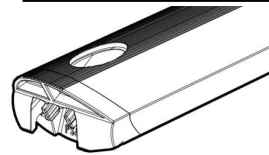


SA430/SA468 x 9

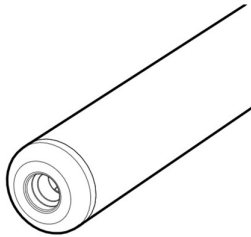


SA438 x 1

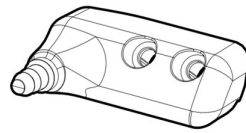


PS519 x 1

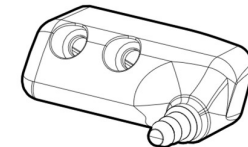


PS520 x 1

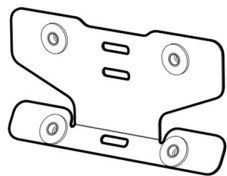


SA610 x 2/4




PS635 x 2/4

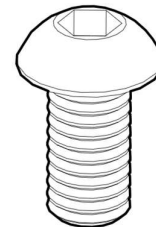


**FS323
(M6 x 16) x 8/16**

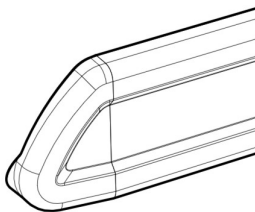

LSF (L) x 2

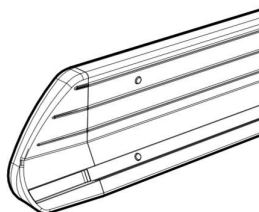


LSF (R) x 2

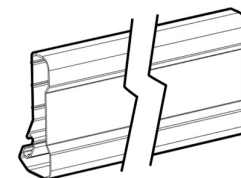


LSF (M) x 0/2




Fitting Kit




PS082 x 8

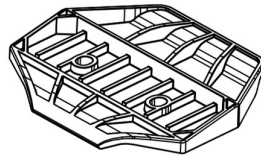

PS177 x 8

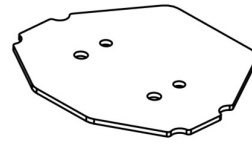


PS196 x 8

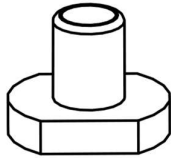


FN085 x 22




FN006 (M8) x 16




FW002 (M8) x 16

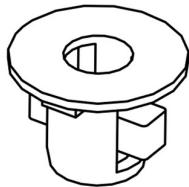


FN003 (M6) x 16

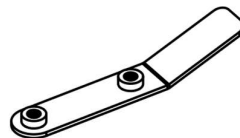


SA013 x 4



FW001 (M6) x 16

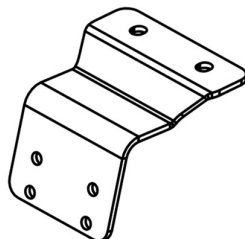

MS267 x 8




PS133-150 x 2



PS064 x 2




FT01 x 2




FT05 x 1



FS066
(M8 x 40) x 16



FS001
(M6 x 20) x 16




FS059
(M8 x 25) x 22



1.



2.

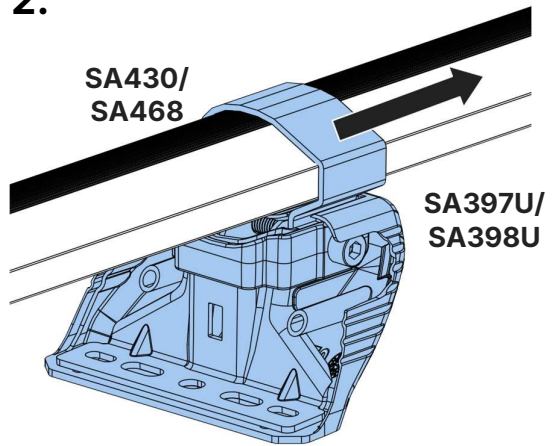


3.



SA397U
PS177

R

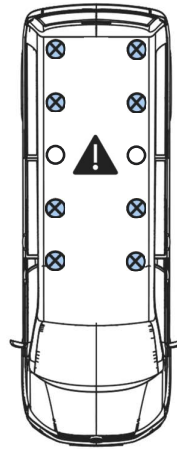


SA398U
PS177




(EXCLUDE
L3/L4 ONLY)







F







4.






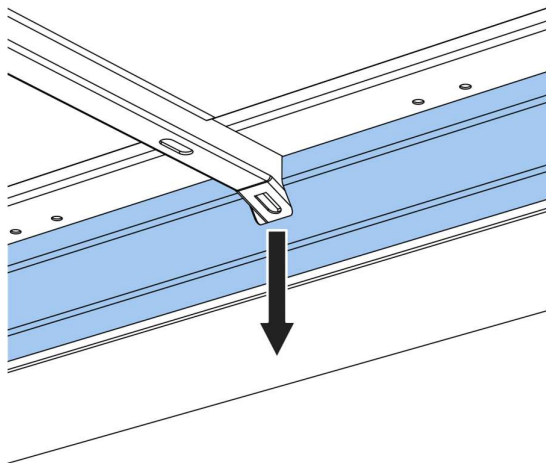


5.

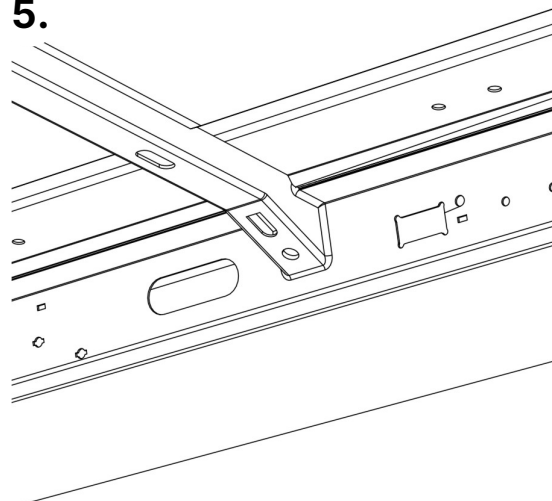


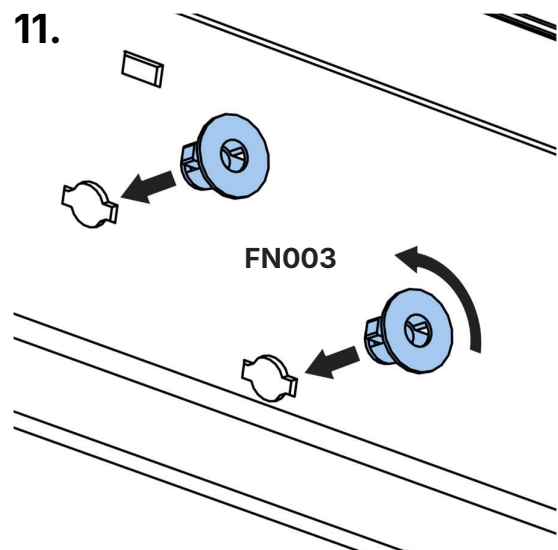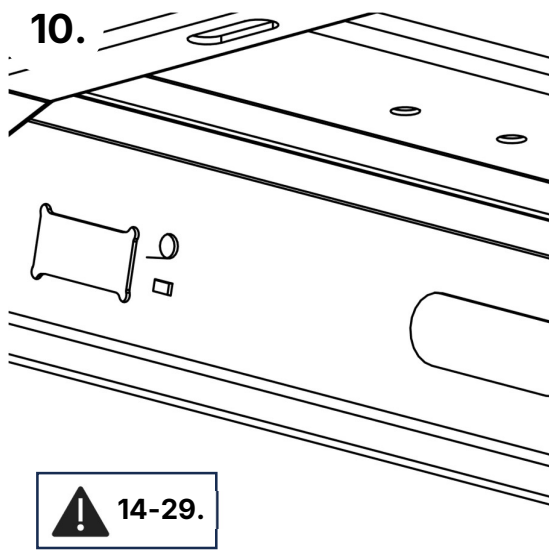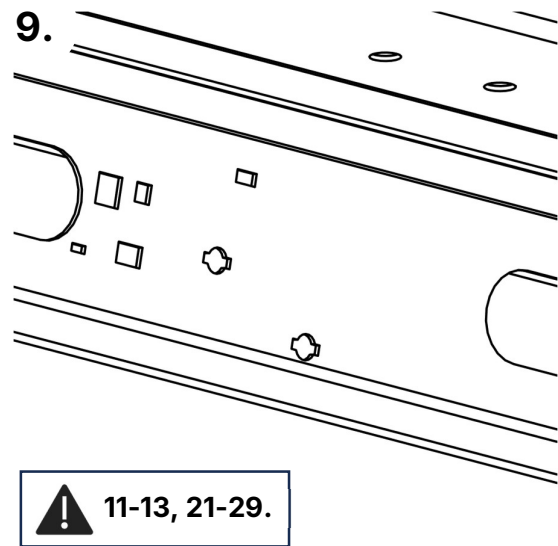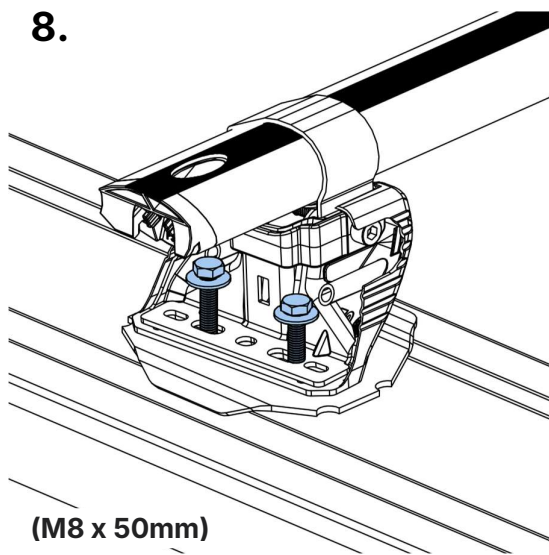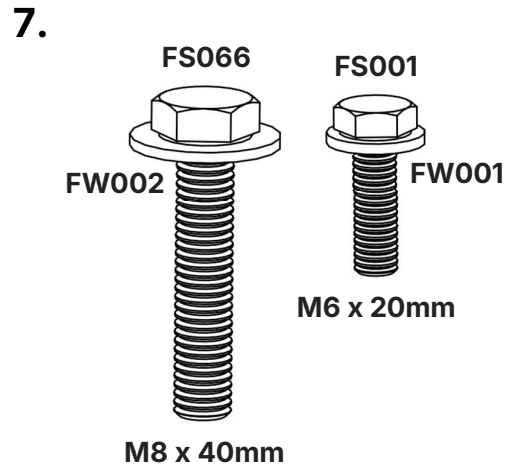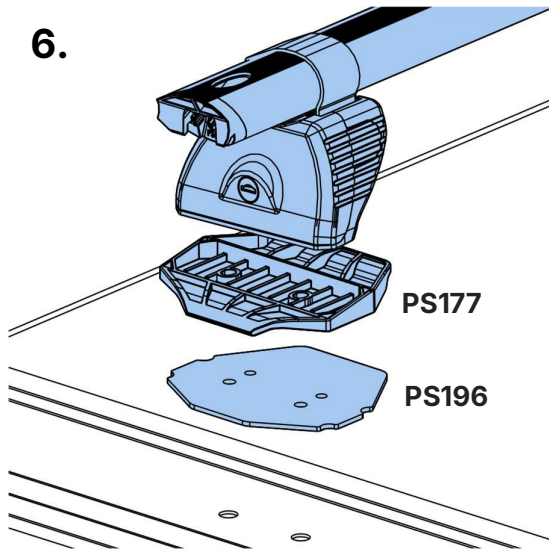

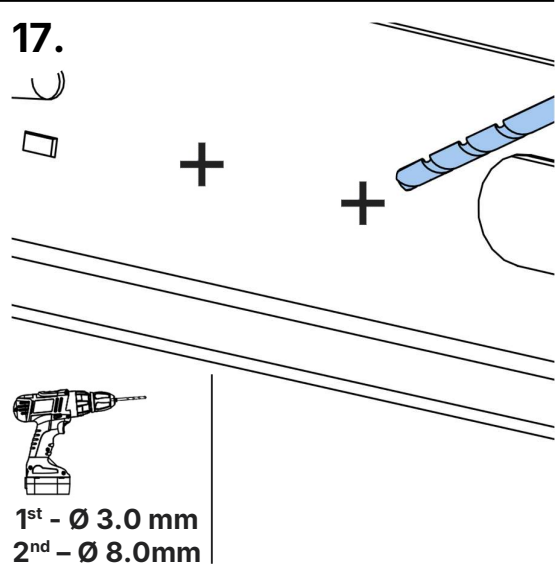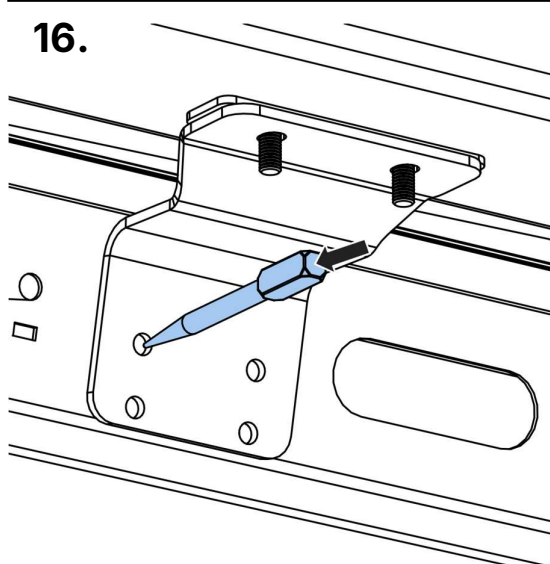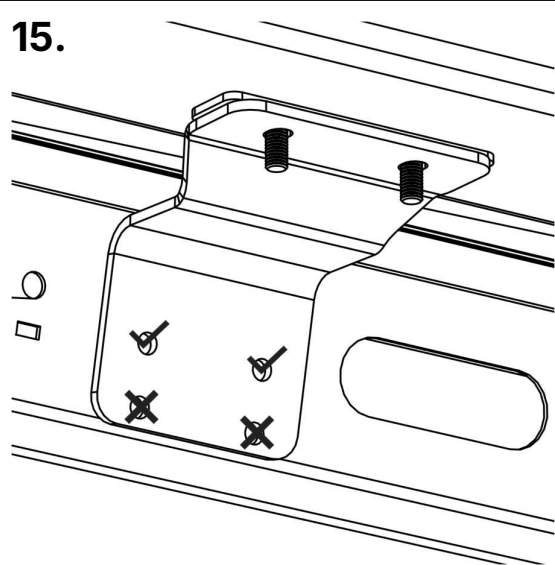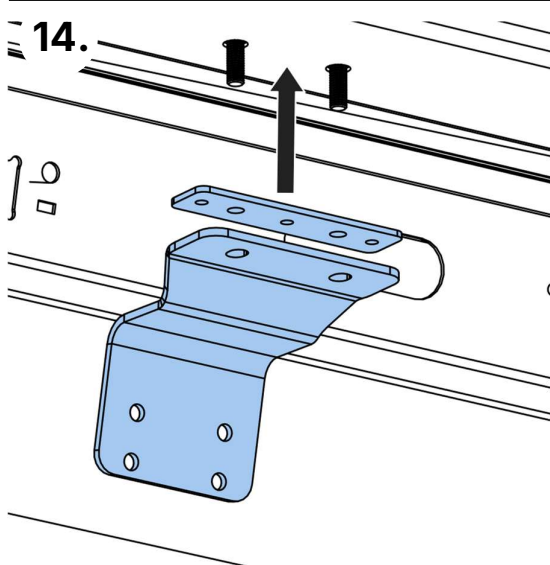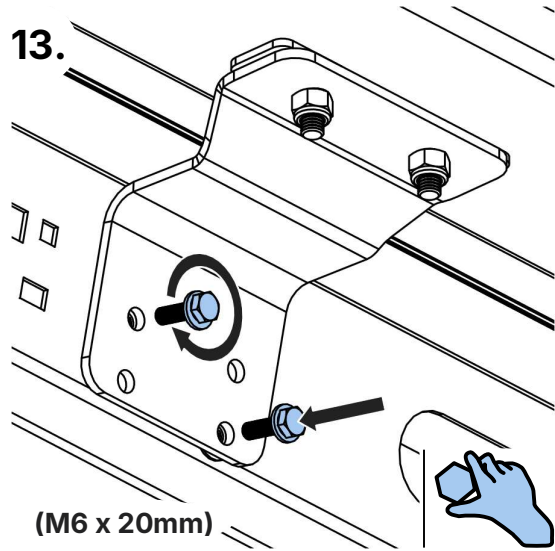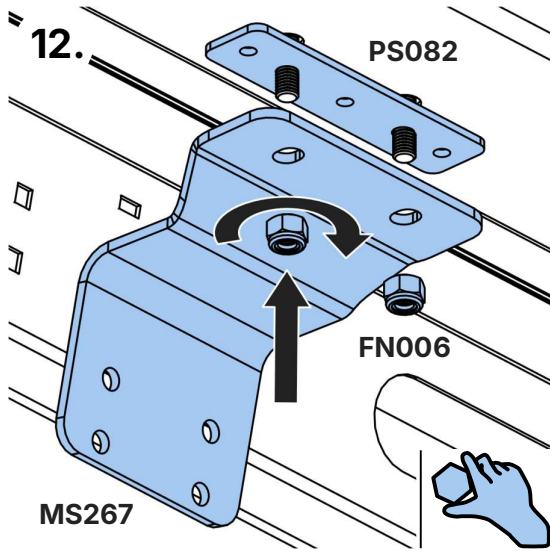


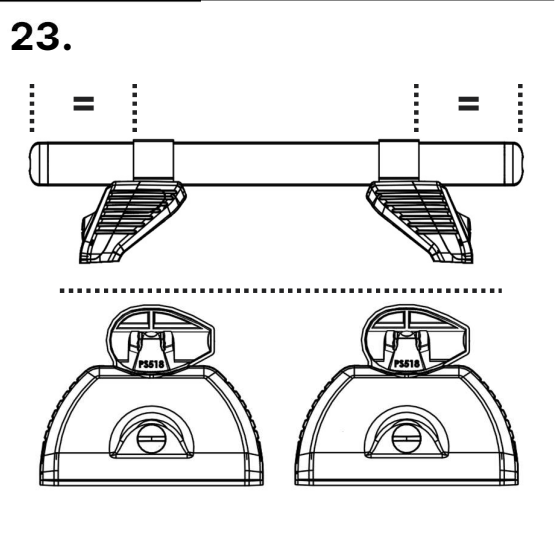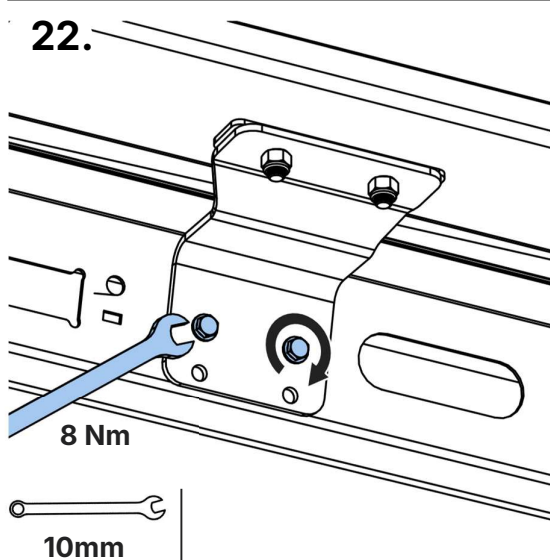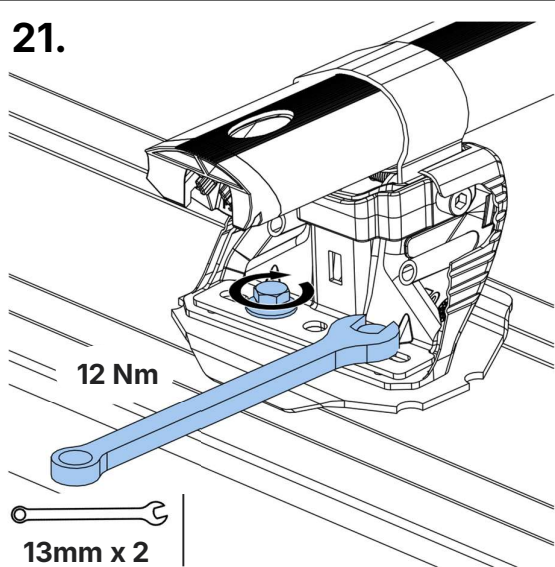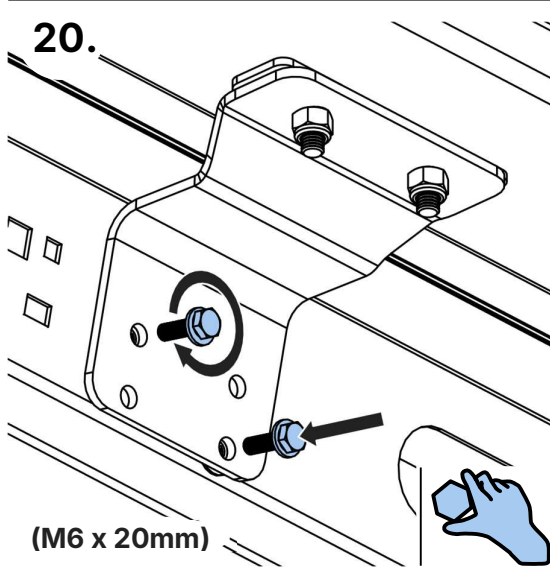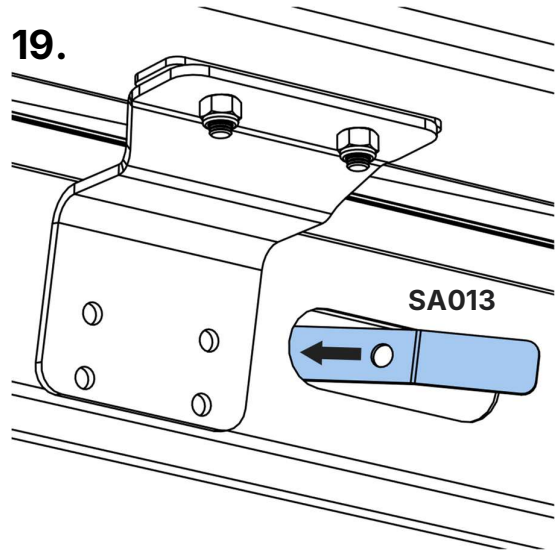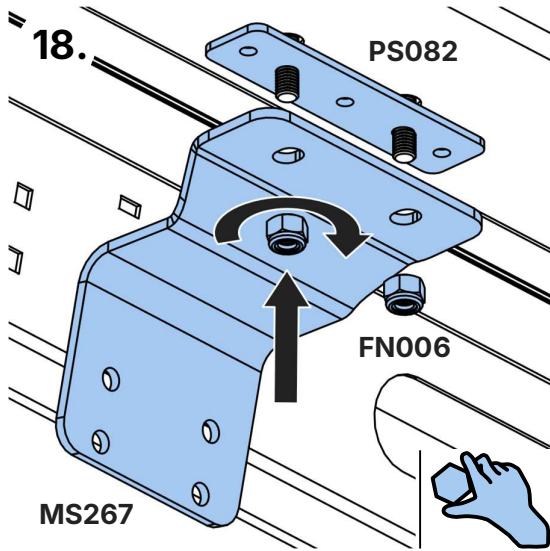


24.

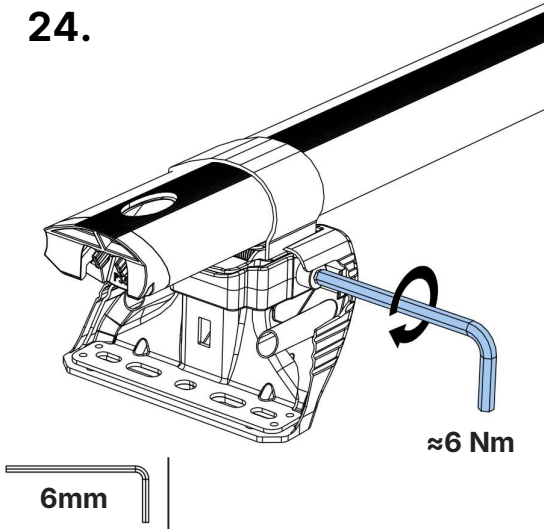


25.

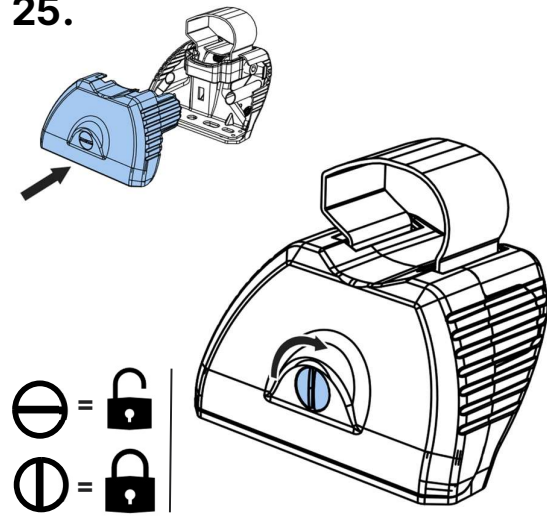


26.

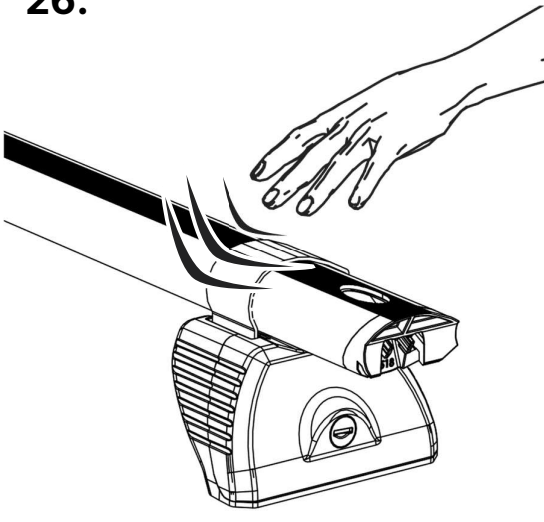


27.

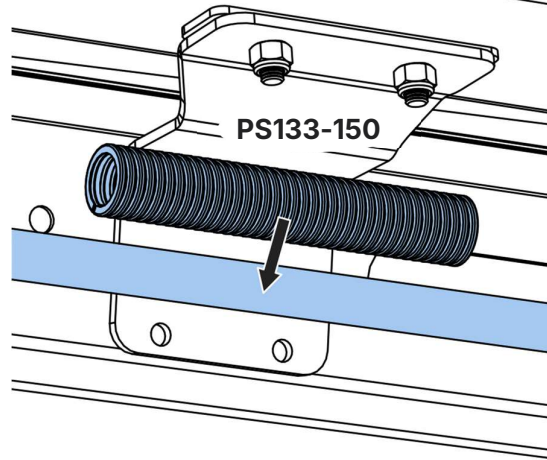



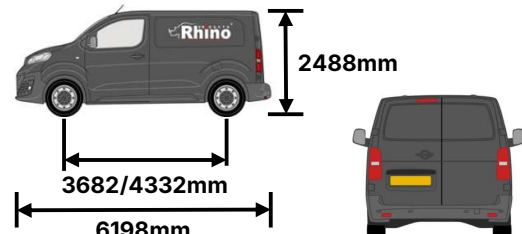
28.

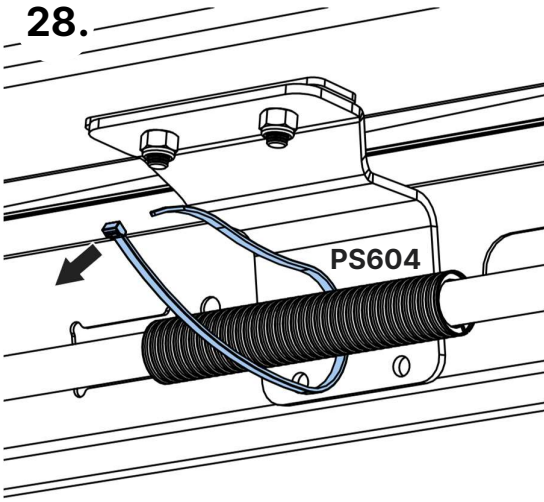
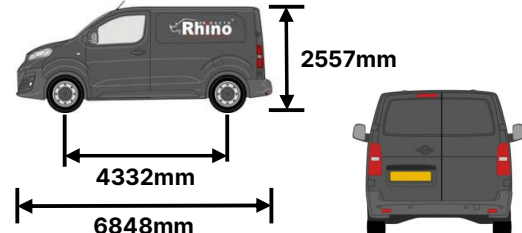



29.

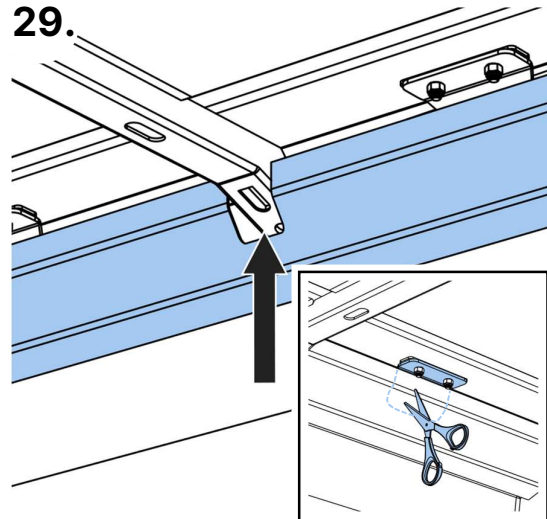
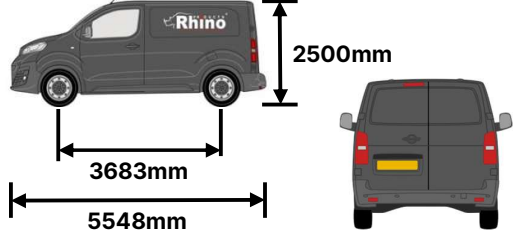


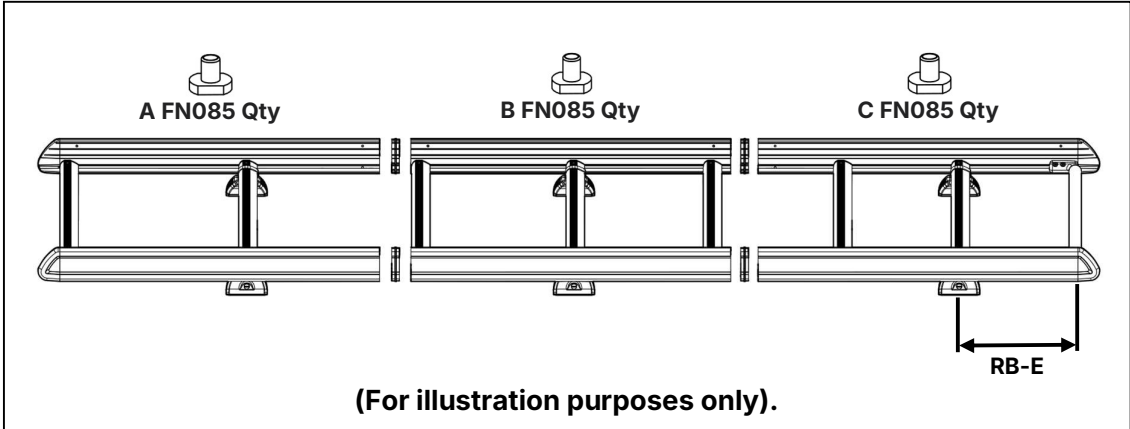
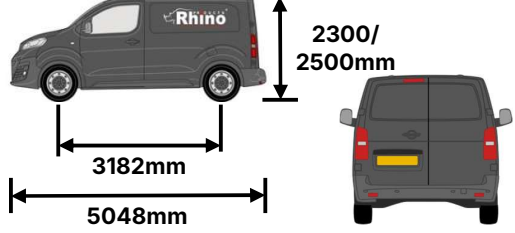


L606/LB606- Master/NV400/Interstar 2010-2024, Movano 2010-2020, L3-H2 (Twin)			
<p>Max Load = 150kg/330lbs</p>  <p>L606/LB606 = 47kg/104lbs</p>			
A FN085 Qty	B FN085 Qty	C FN085 Qty	Rear Bar – End (mm)
4	2	5	355
30-51, 65-75.			


L607/LB607- Master/NV400/Interstar 2010-2024, Movano 2010-2020, L4-H2 (Twin)			
<p>Max Load = 150kg/330lbs</p>  <p>L607/LB607 = 48kg/106lbs</p>			
A FN085 Qty	B FN085 Qty	C FN085 Qty	Rear Bar – End (mm)
4	2	5	362
30-51, 65-75.			

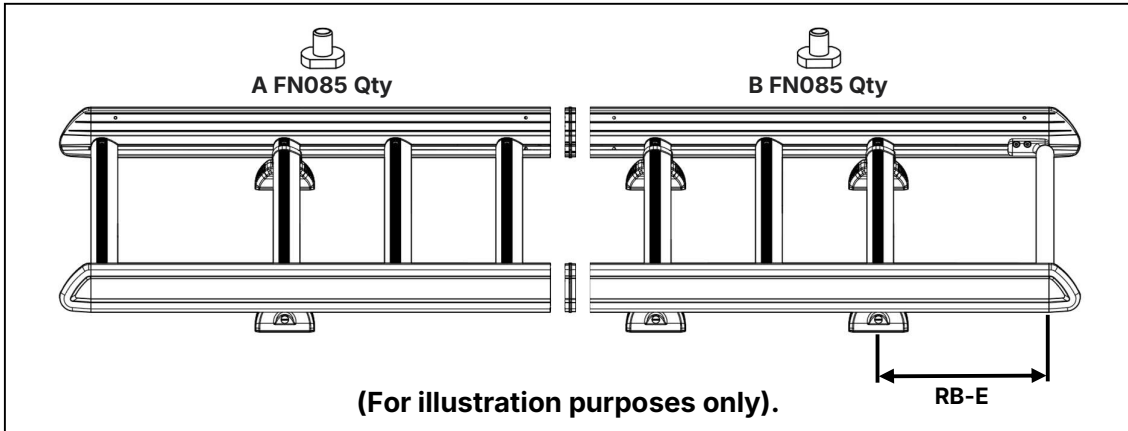


L605/LB605- Master/NV400/Interstar 2010-2024, Movano 2010-2020, L2-H2 (Twin)		
<p>Max Load = 150kg/330lbs</p>  <p>L605/LB605 = 42kg/93lbs</p>		
A FN085 Qty	B FN085 Qty	Rear Bar – End (mm)
5	6	361
30-34,52-75.		

L604/LB604- Master/NV400/Interstar 2010-2024, Movano 2010-2020, L1-H2 (Twin)		
<p>Max Load = 150kg/330lbs</p>  <p>L604/LB604 = 40kg/88lbs</p>		
A FN085 Qty	B FN085 Qty	Rear Bar – End (mm)
5	6	355
30-34,52-75.		


36.

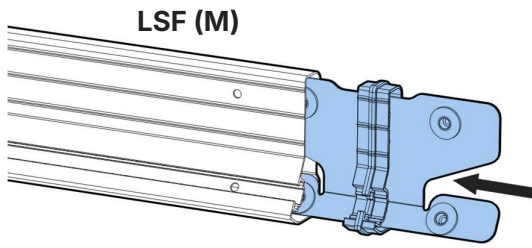


37.

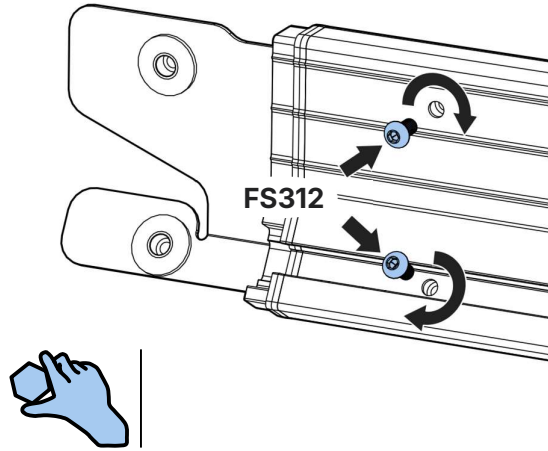


38.

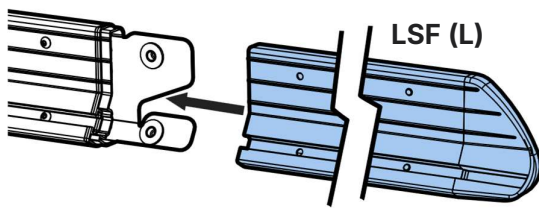


39.






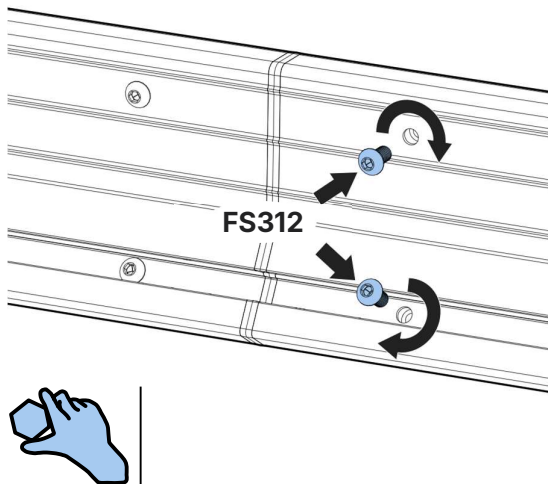


40.

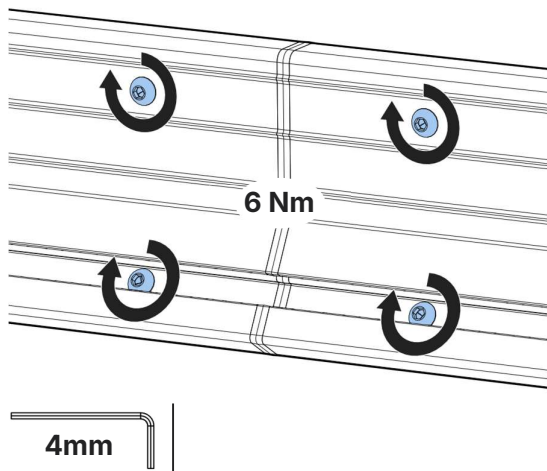


41.

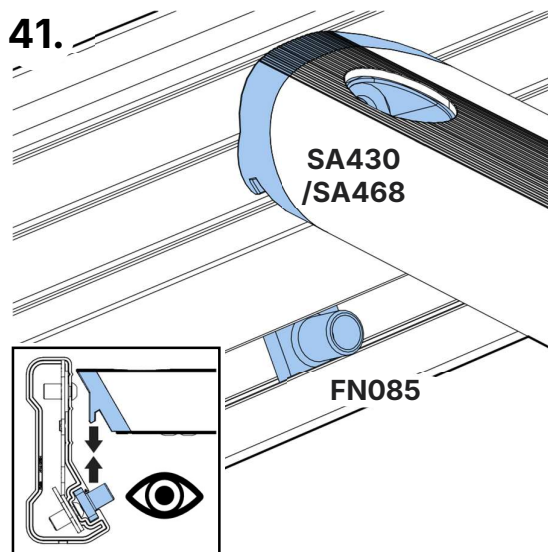


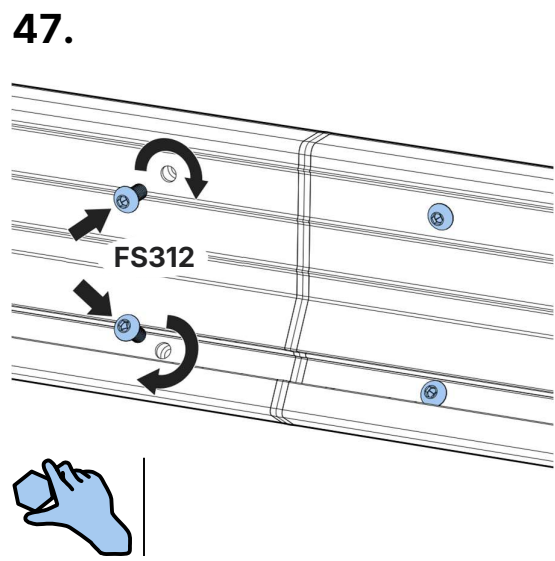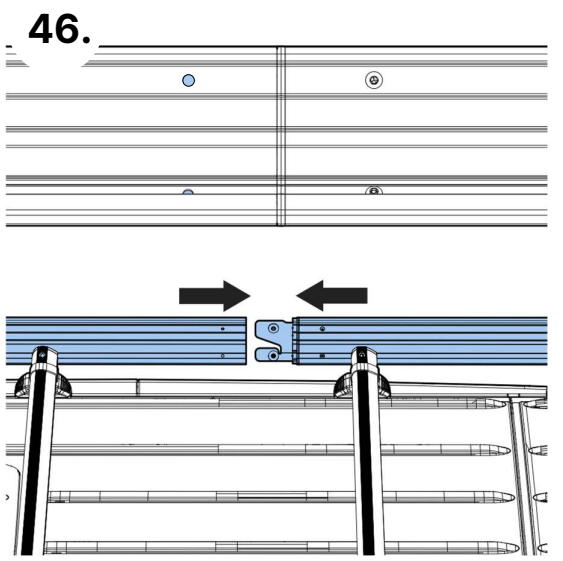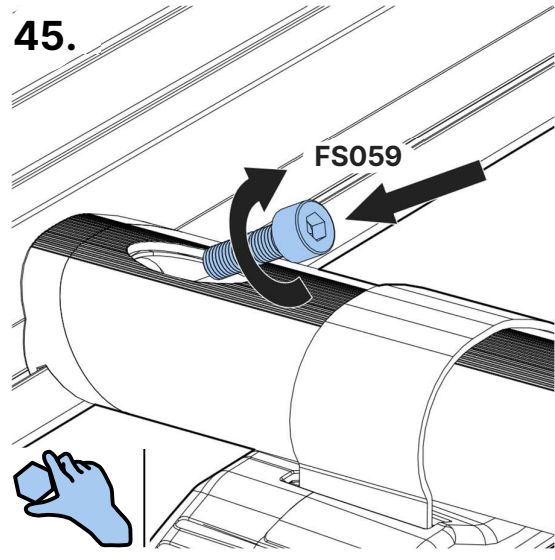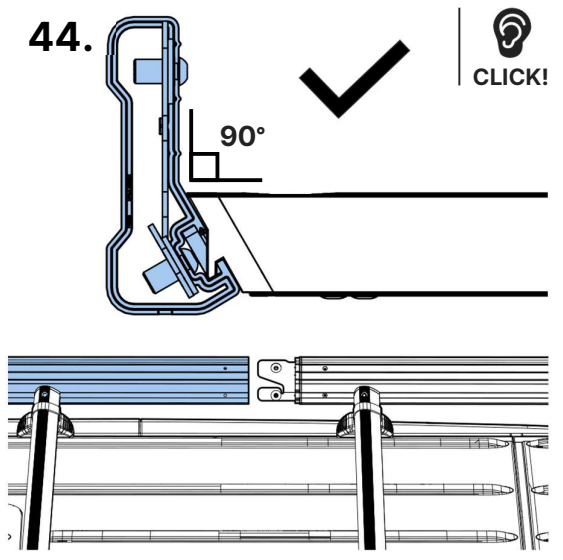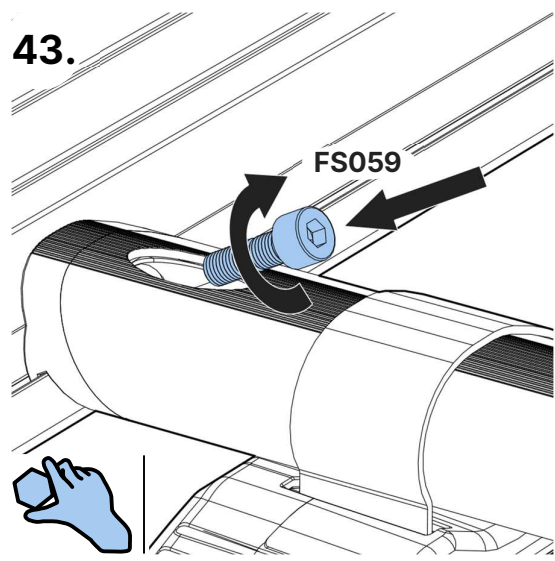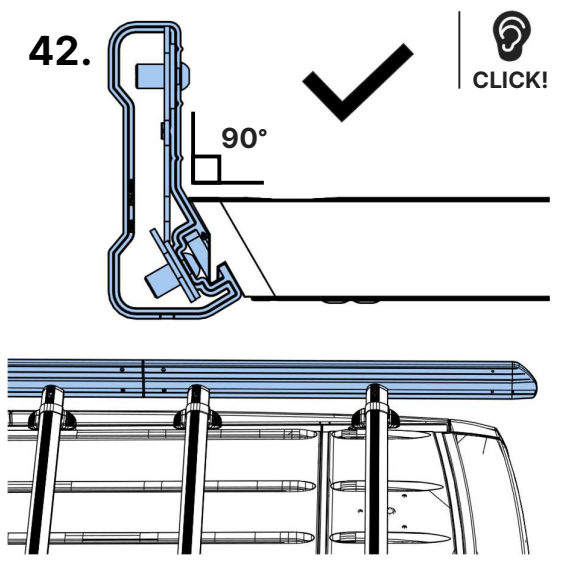


48.

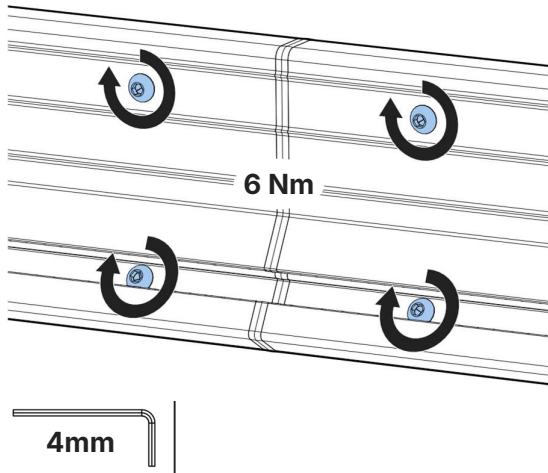


49.

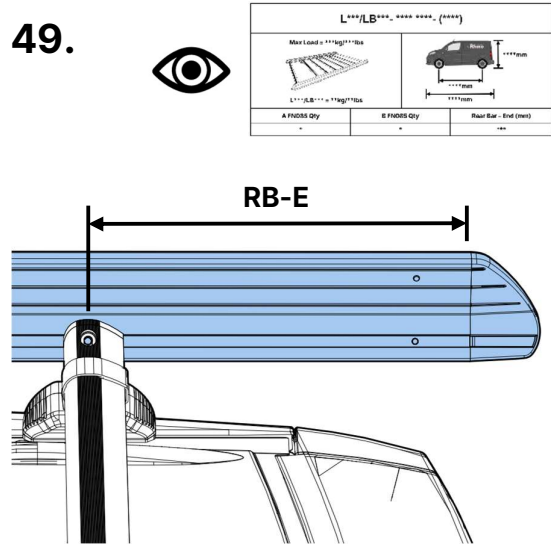


50.

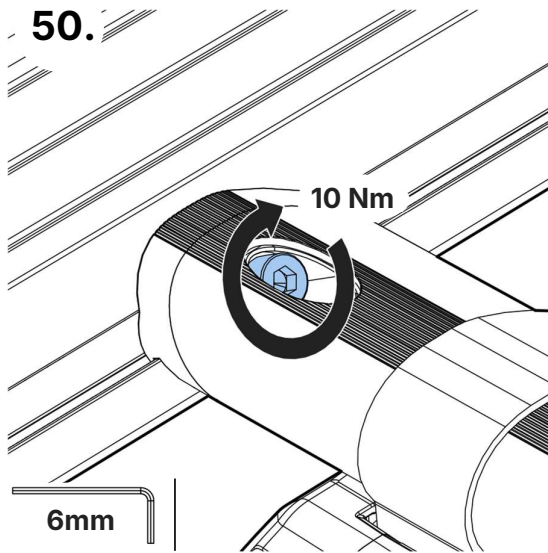


51.






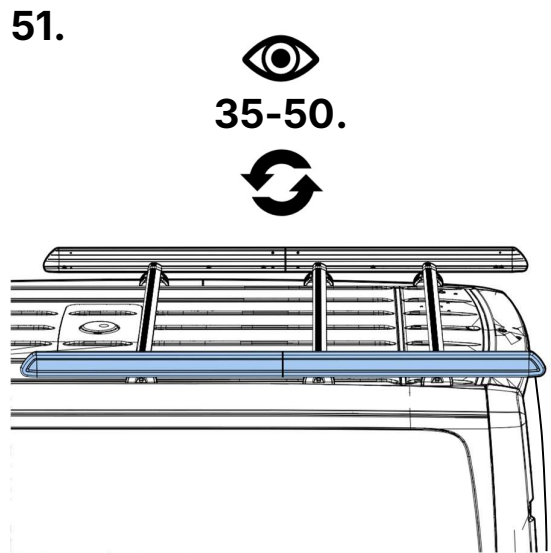


52.

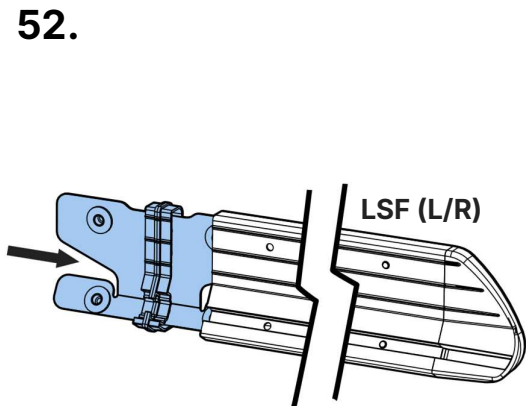


53.

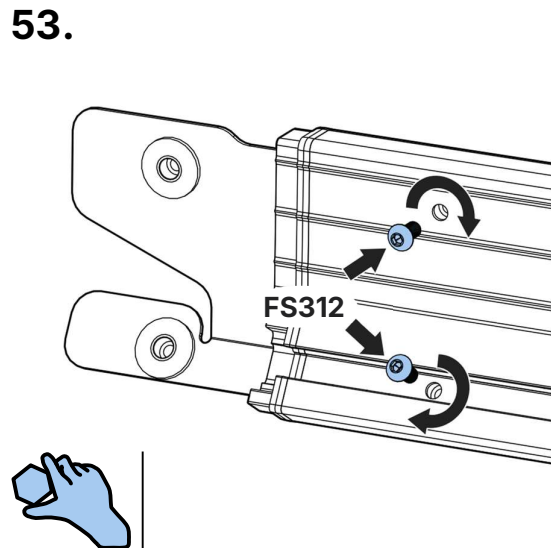


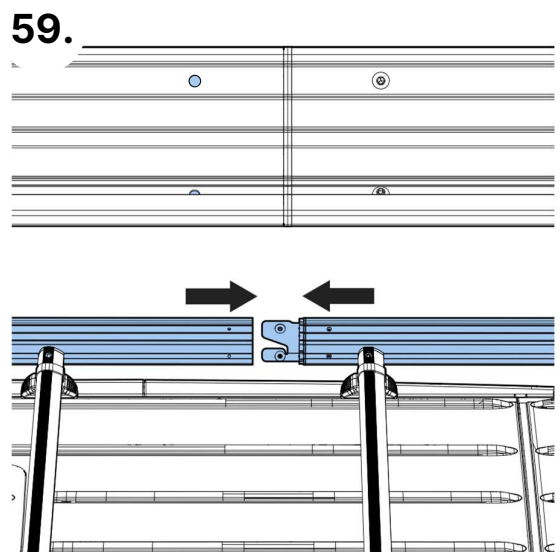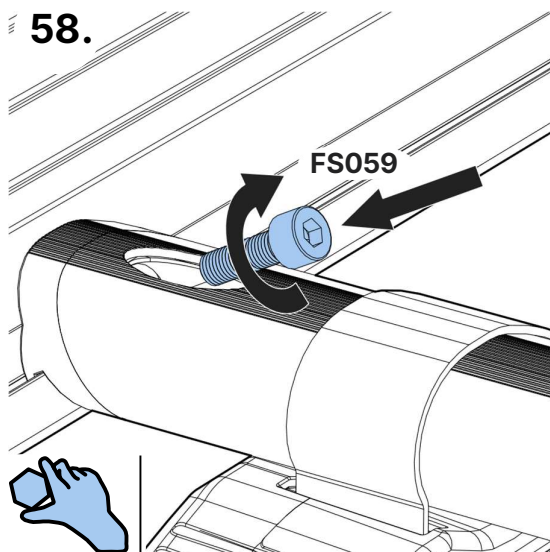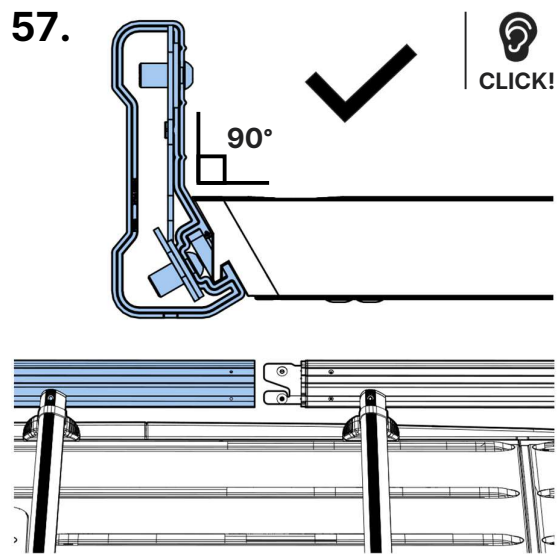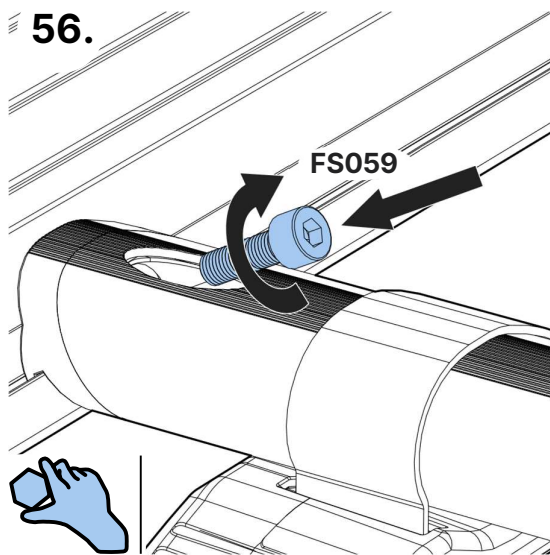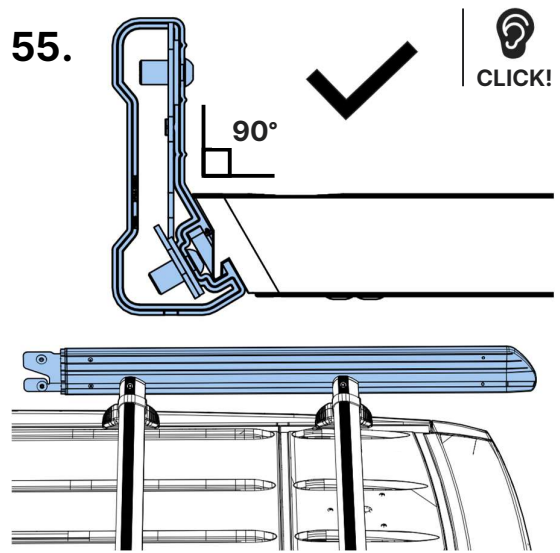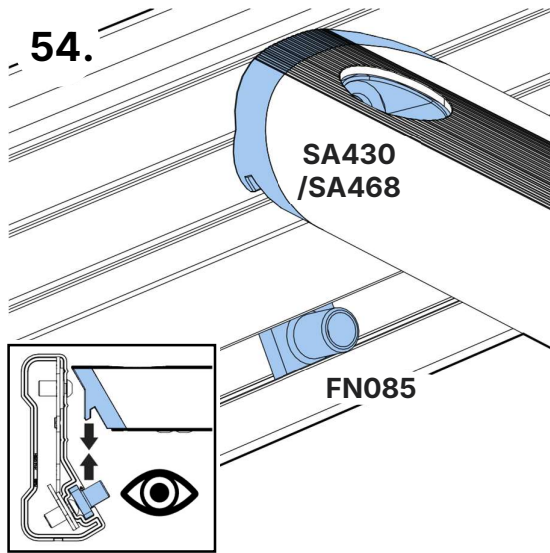

60.

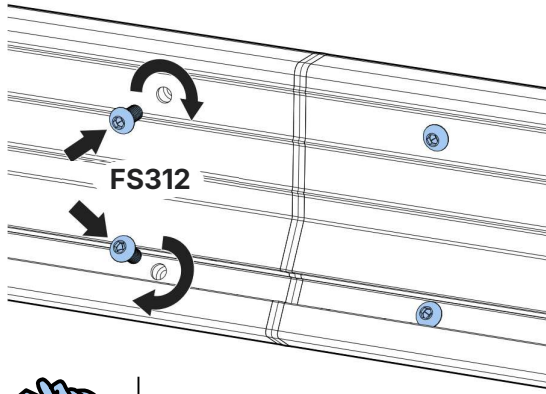


61.

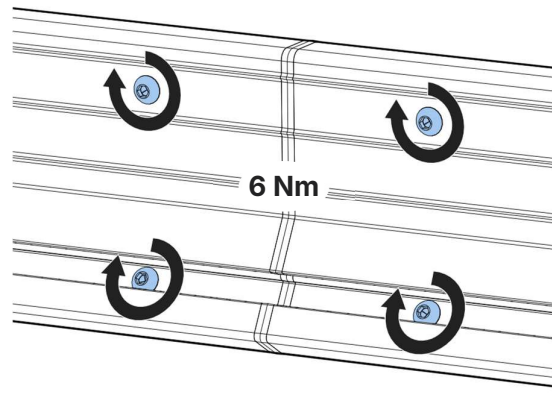


62.



L***LB***, ****, **** (****)		
Max Load = 11kg/110kg		****mm
****LB*** = 11kg/110kg		****mm
A: 11000 Dry	B: 11000 Dry	Rear Bar - End (100)

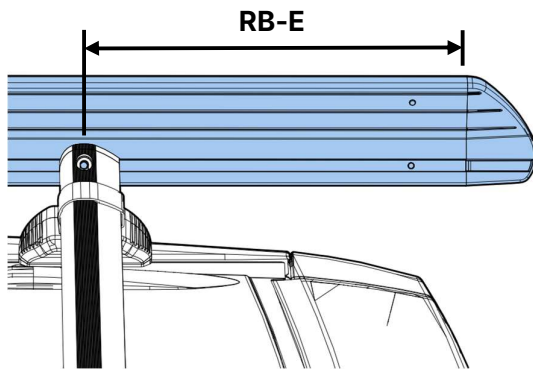


63.

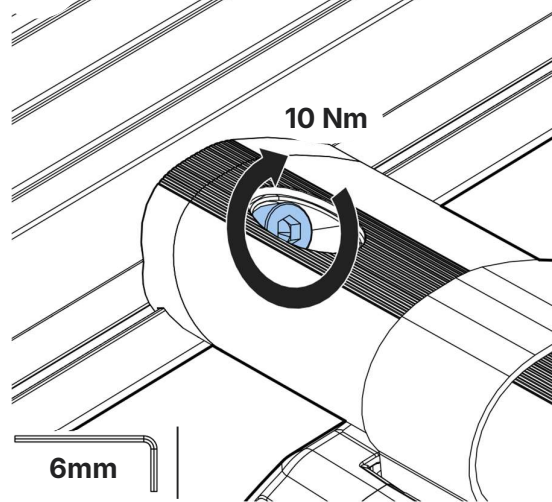


64.




52-63.

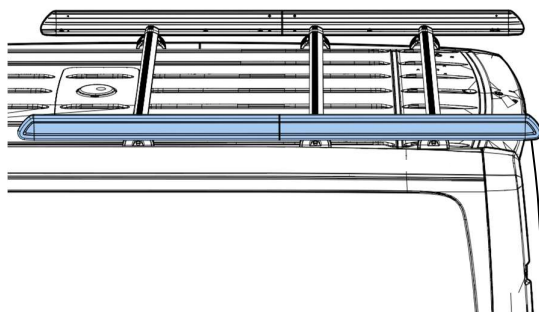


65.

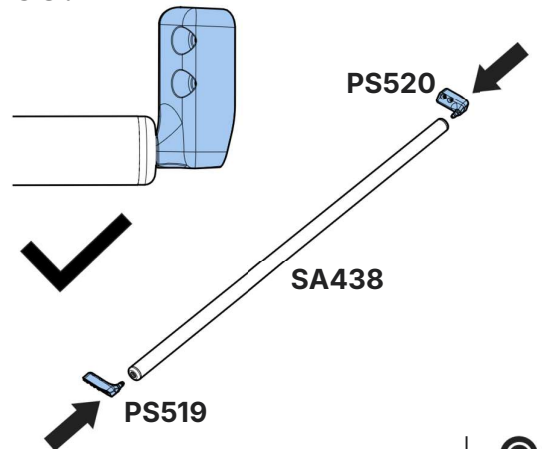


66.

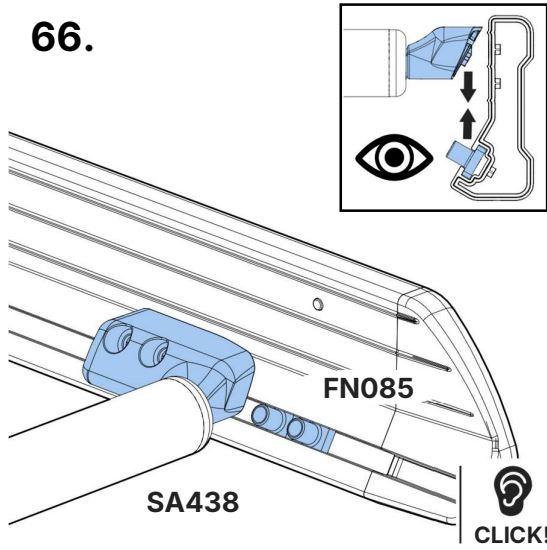


67.

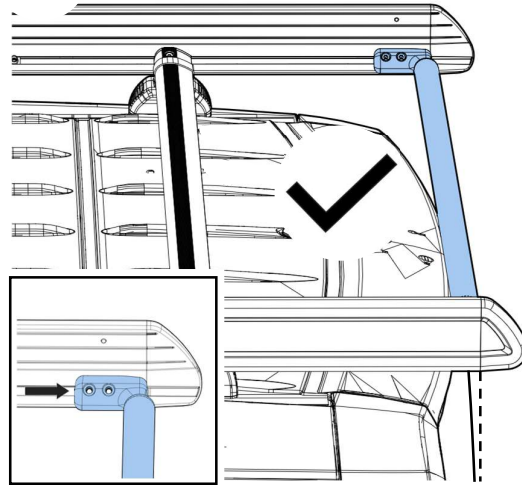


68.

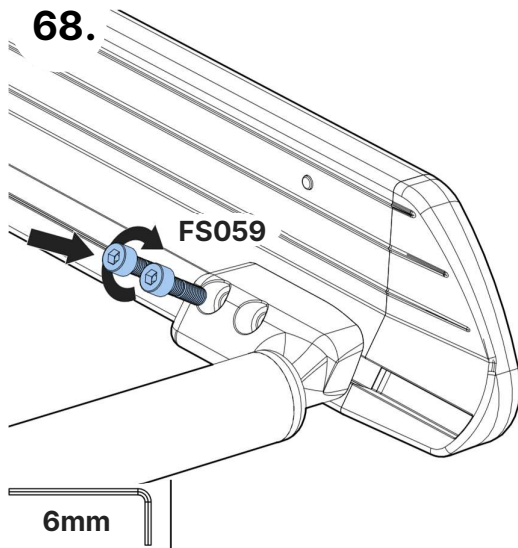

69.

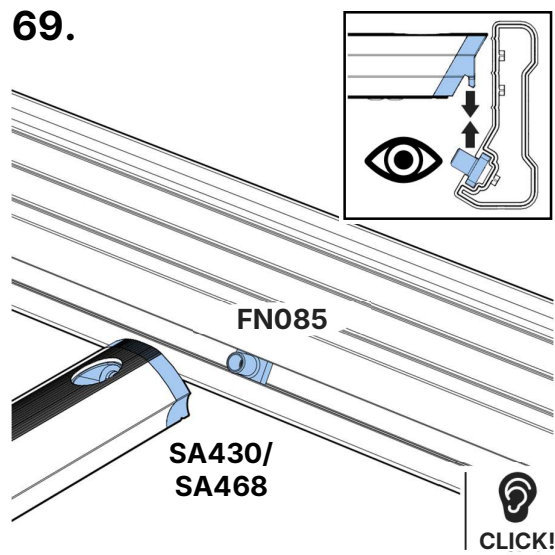

70.

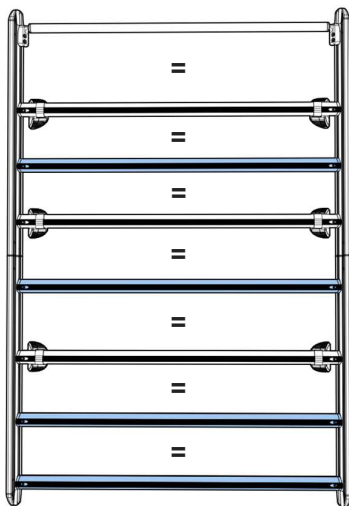

71.

