


QA4KR

KammRack

Instructions



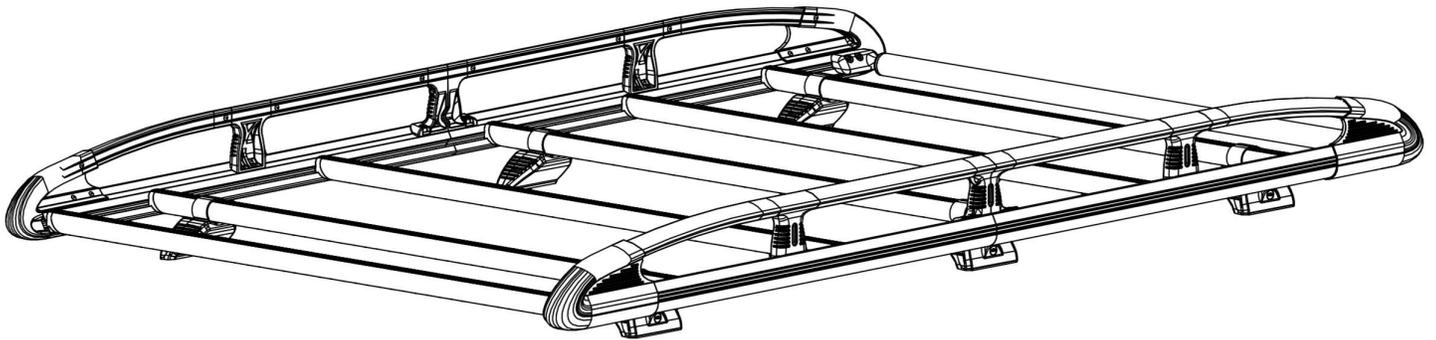


CITY CRASH (✓)

According to ISO/ PAS 11154:2006


QA4KR:

Renault Master 2010-
Vauxhall Movano 2010- 2020
Nissan NV400 2010-

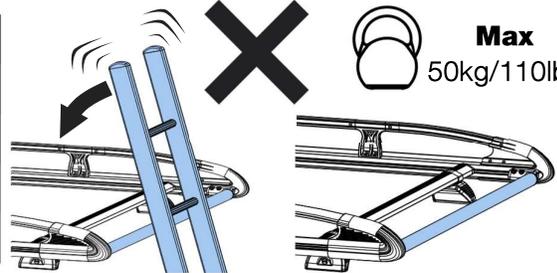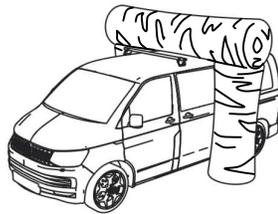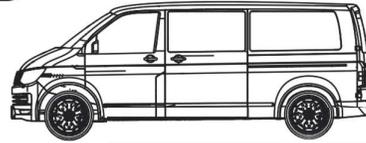


Max
50kg/110lbs


KammRack

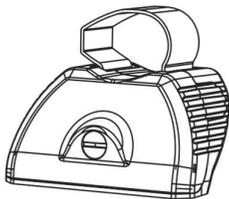

SA397U x 4

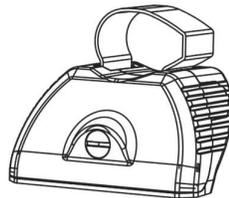


SA398U x 4

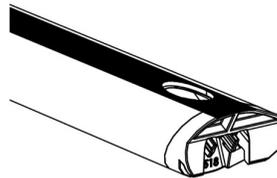


SA430




C04 x 8
optional upgrade




PS519 x 1

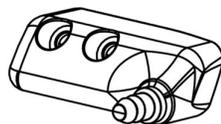

PS520 x 1

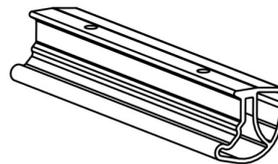

EXT15-02


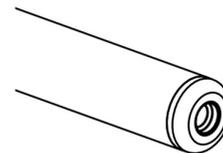


SA438 x 1

LHS x 2


RHS x 2

Centre x 2

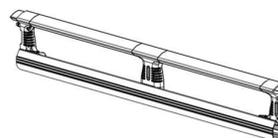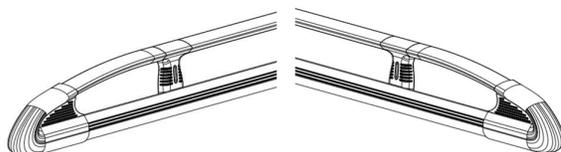

ASF x 1


Fitting Kit

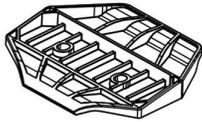

PS177 x 8



PS196 x 8




PS082 x 8



PS133-150 x 2



PS064 x 2




FW002
(M8) x 16




FW001
(M6) x 16



FN006
(M8) x 16

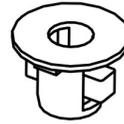

FN003
(M6) x 16




SA013 x 4



FS066
(M8 x 40) x 16



FS001
(M6 x 20) x 16

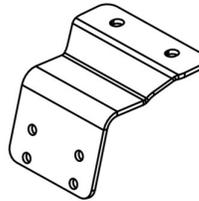


MS267 x 8



FT01 x 2



FS018
(M8 x 25) x 22




FN085 x 22




FT05 x 1



1.

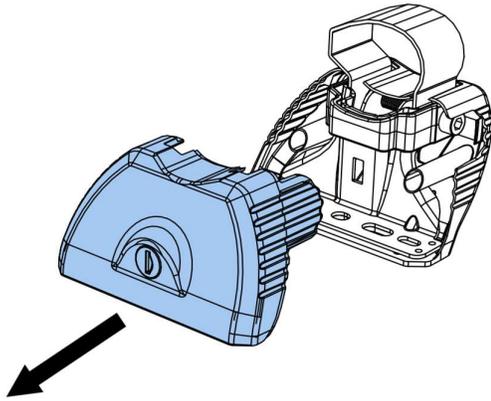


2.

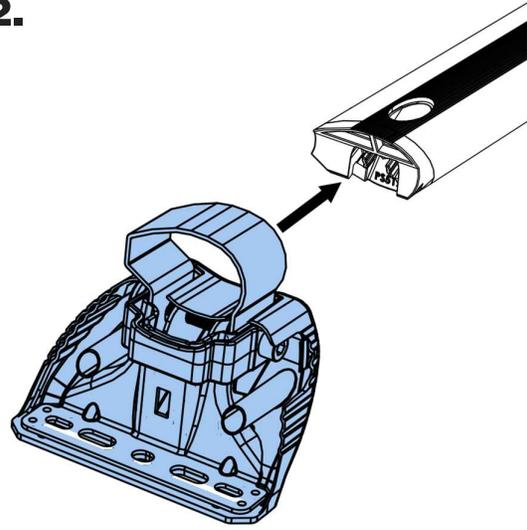


3.





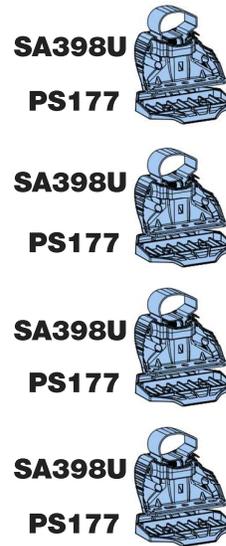
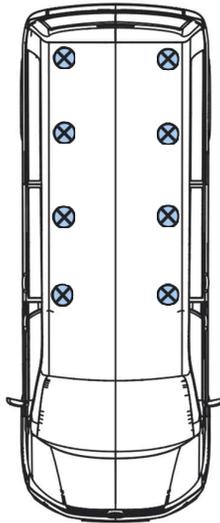








4.






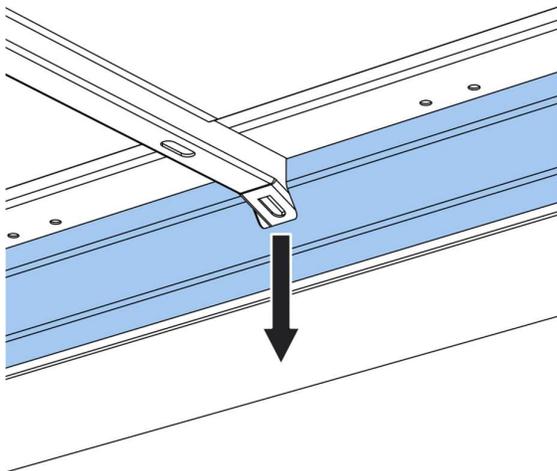


5.

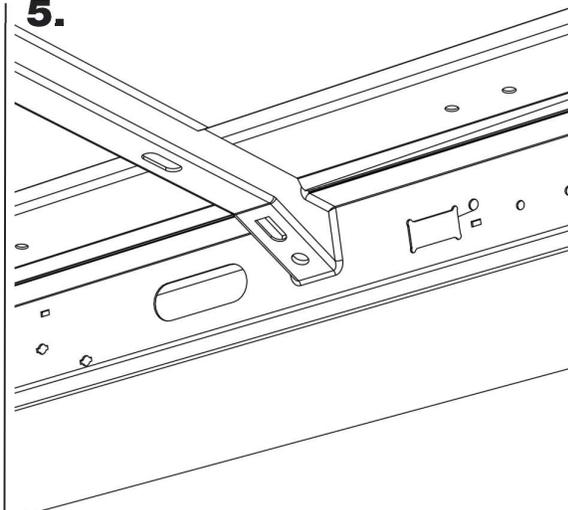


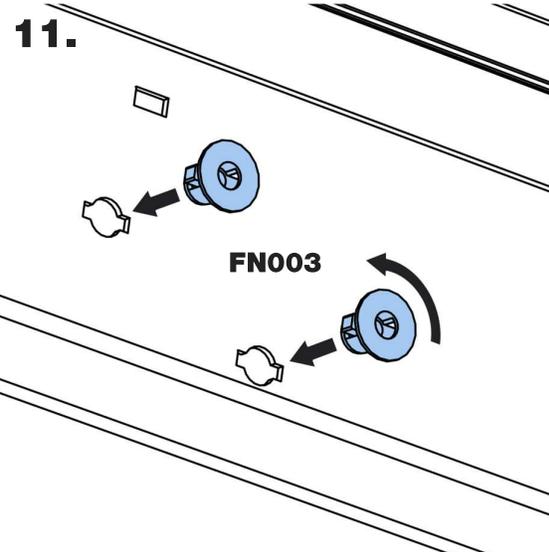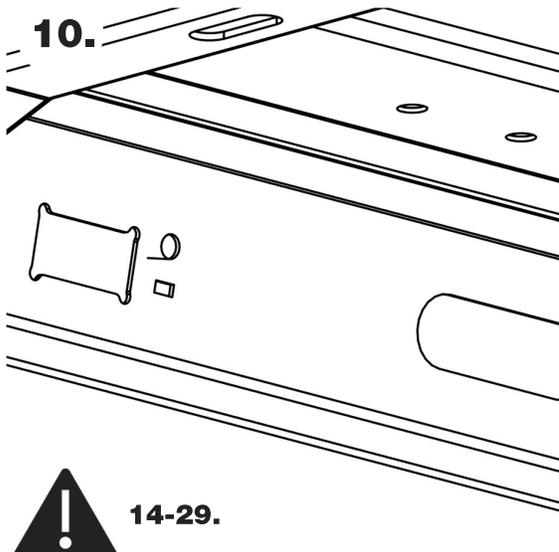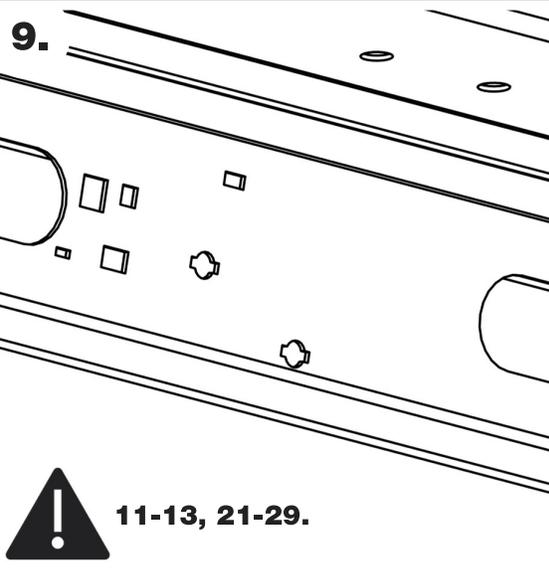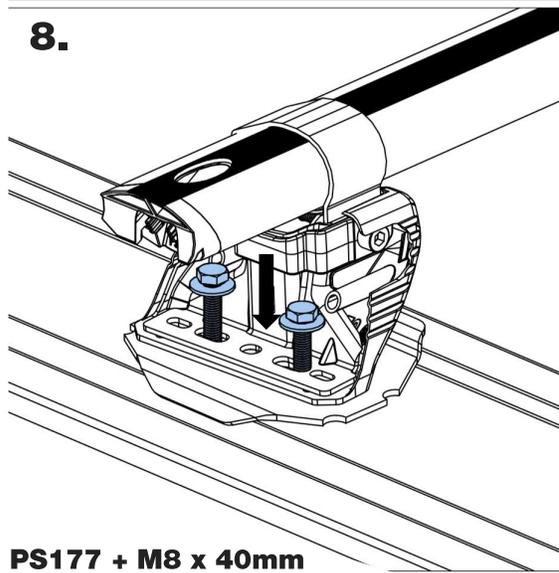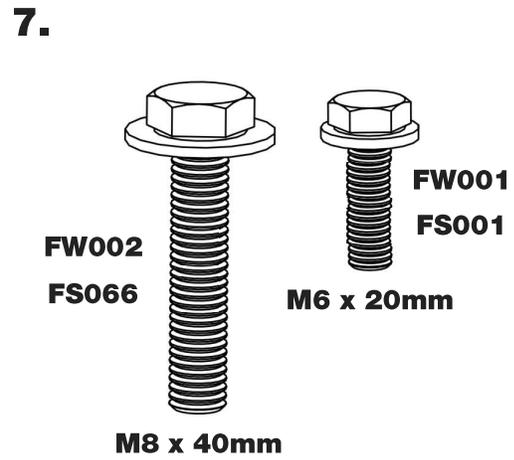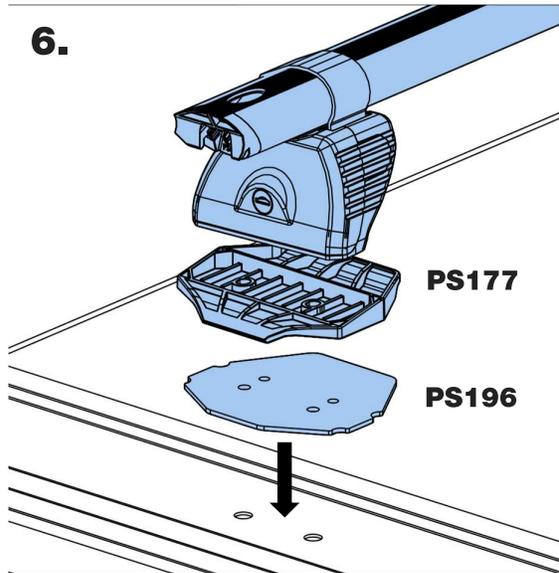

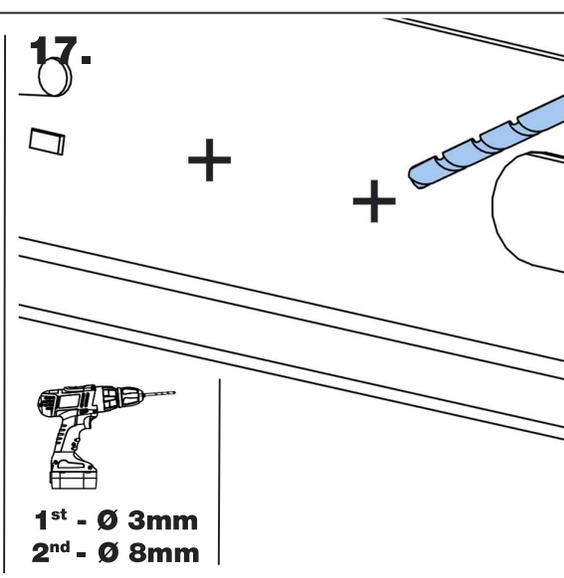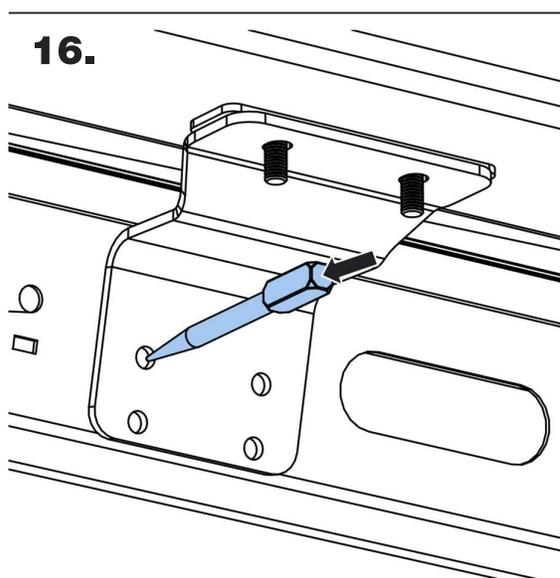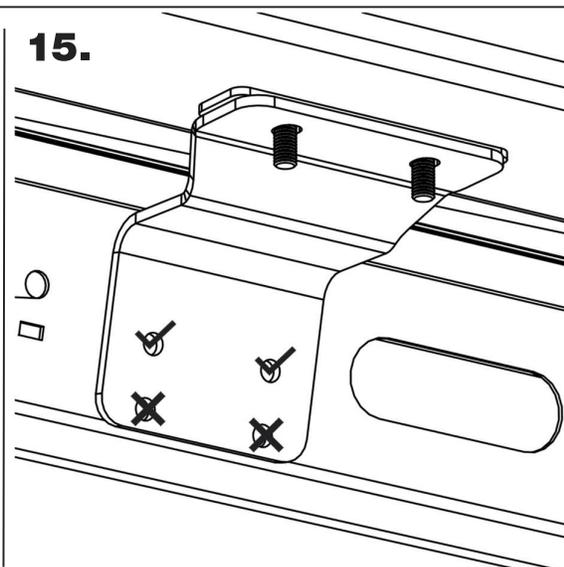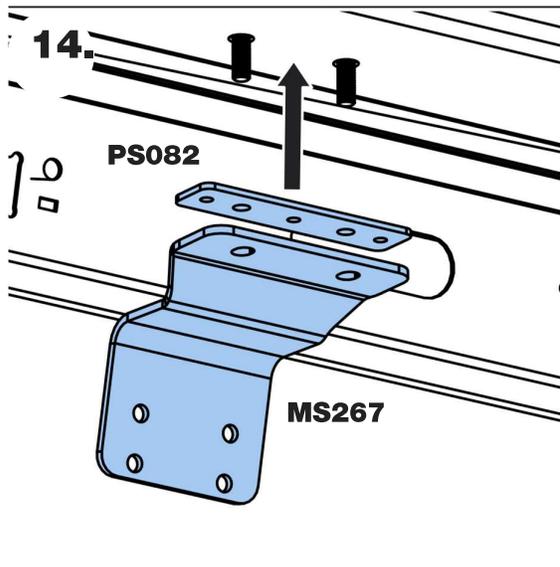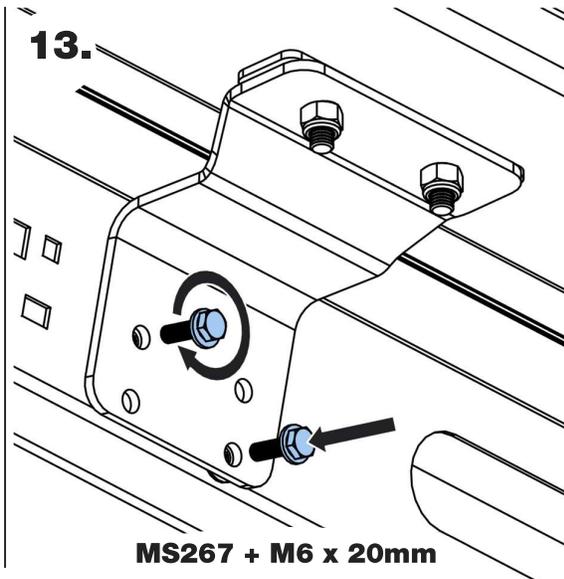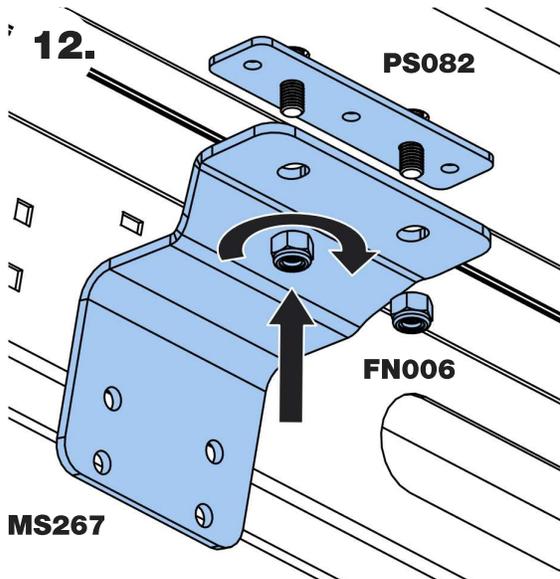


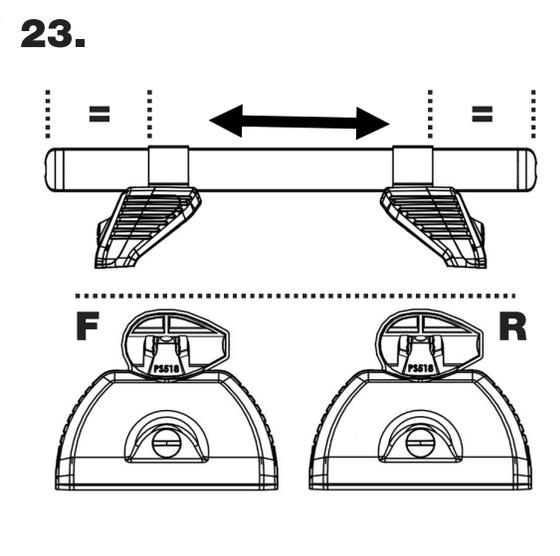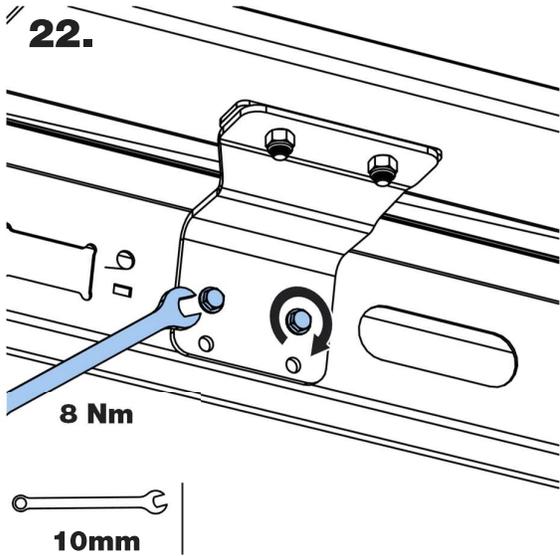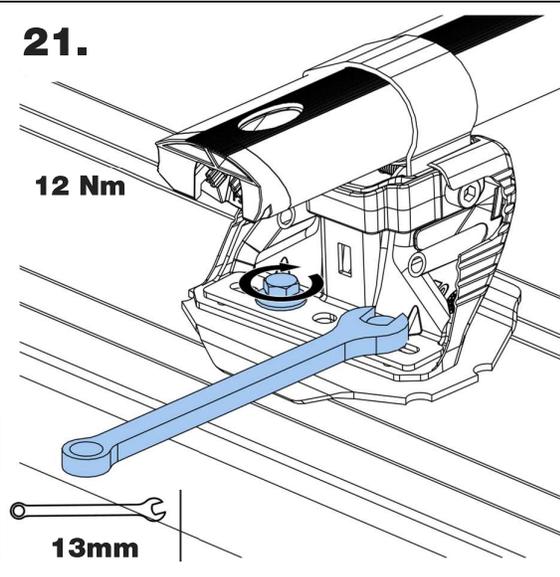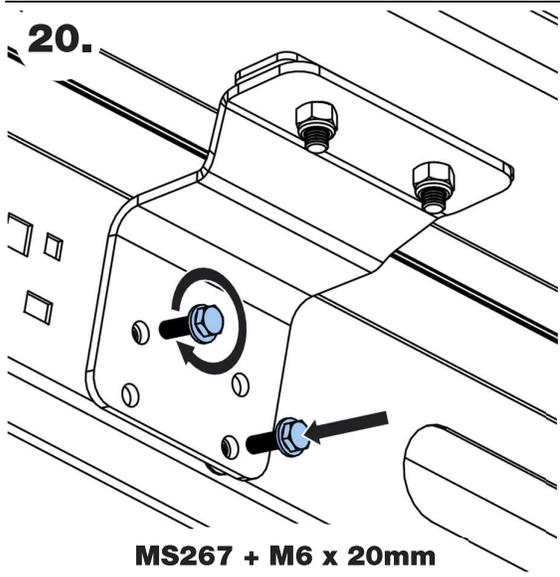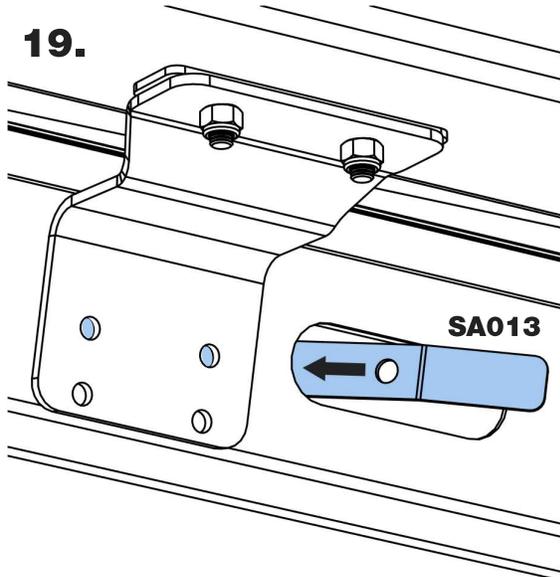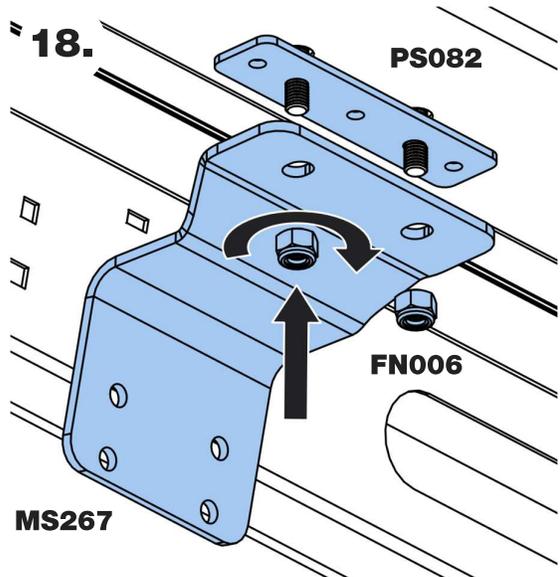

24.

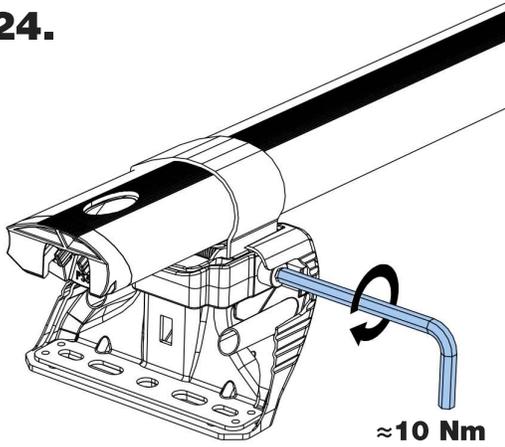


25.

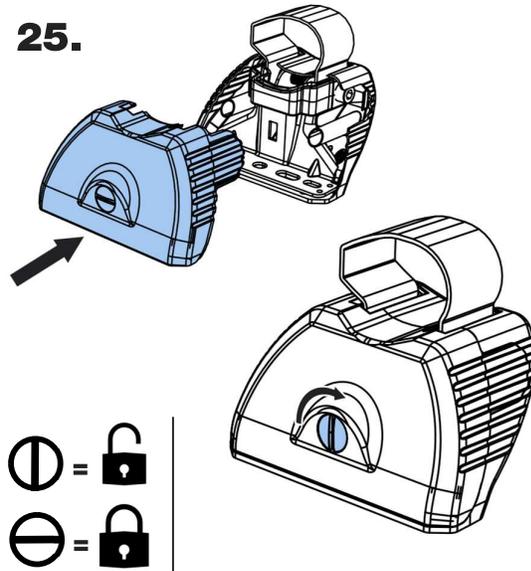


26.




27.

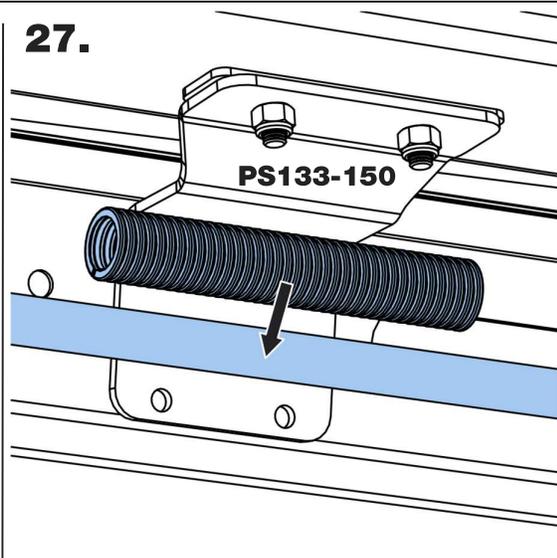


28.

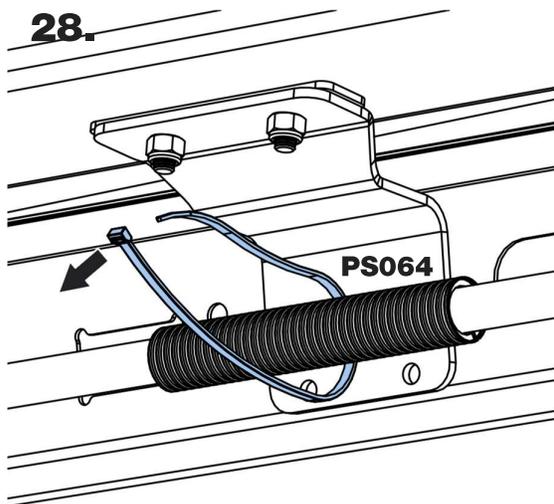



29.

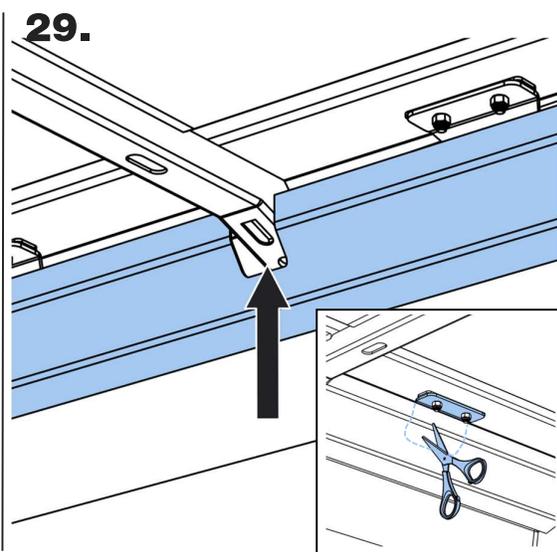

**K605- Master/NV400 2010-/ Movano 2010-2020
L2, H2**

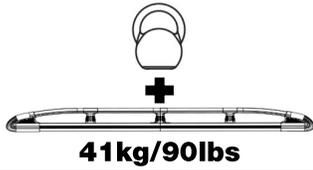


**150kg
Max**

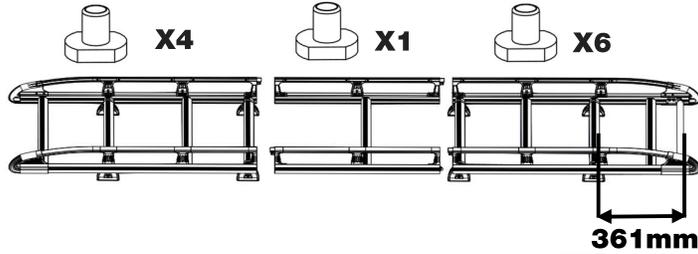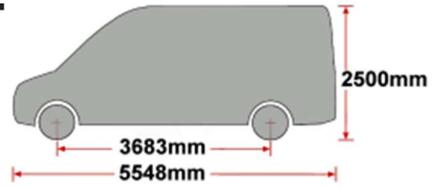


Pages 30-51, 68-77 ⚠️ 👁️



A

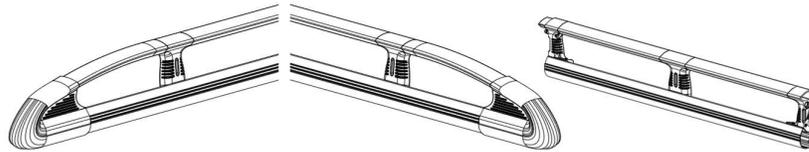

**K604- Master/NV400 2010-/ Movano 2010-2020
L1, H2**

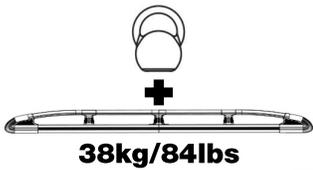


**150kg
Max**

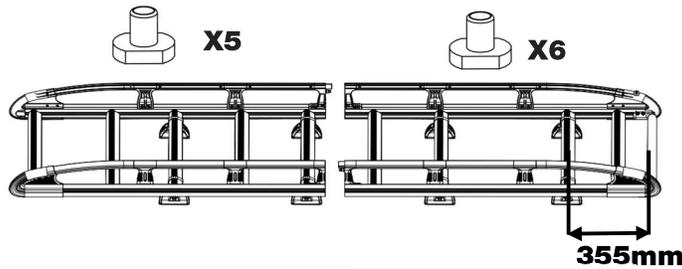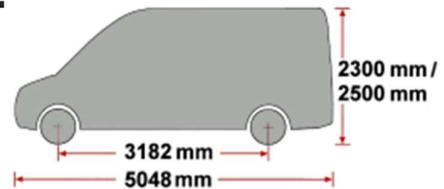


Page 52-77 ⚠️ 👁️



B

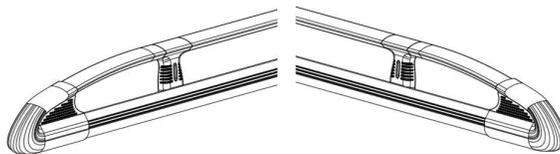


**K606- Master/NV400 2010- / Movano 2010-2020
L3, H2**

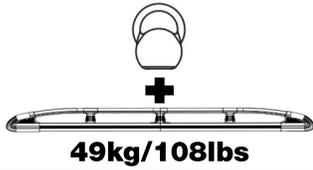


**150kg
Max**

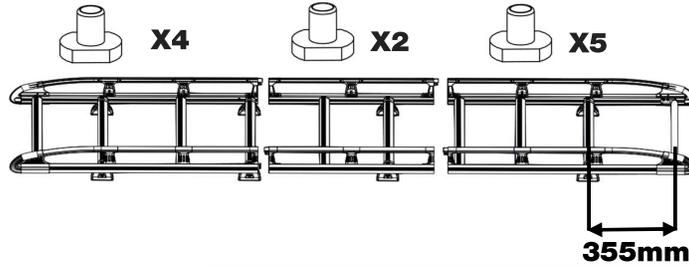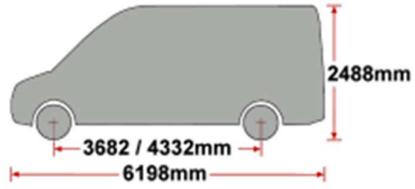



Pages 30-51, 68-77  

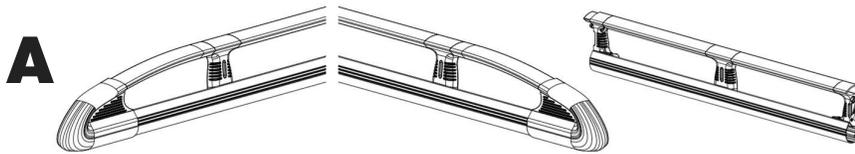


**K607- Master/NV400 2010- / Movano 2010-2020
L4, H2**






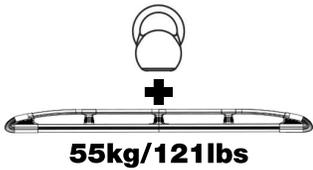


**150kg
Max**

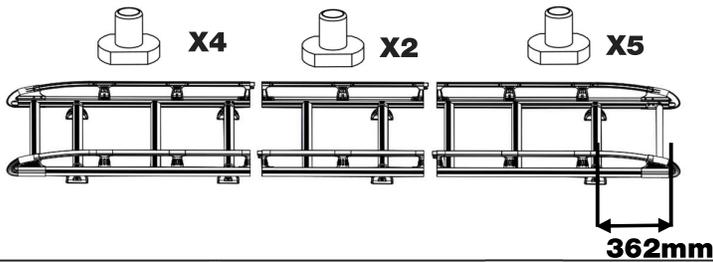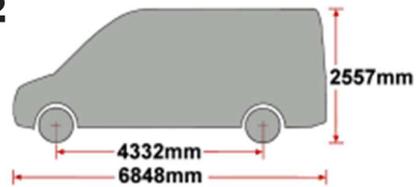


Pages 30-51, 68-77  

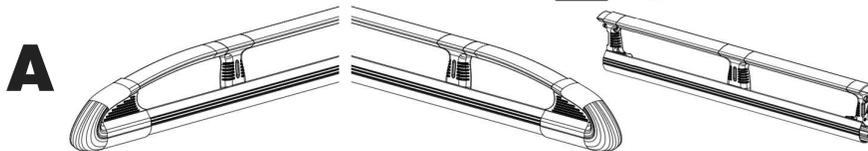


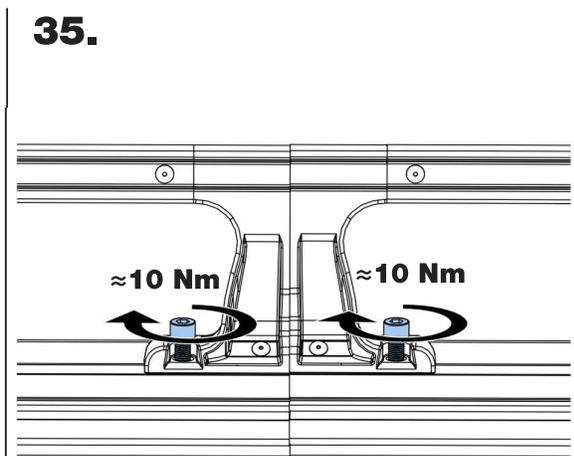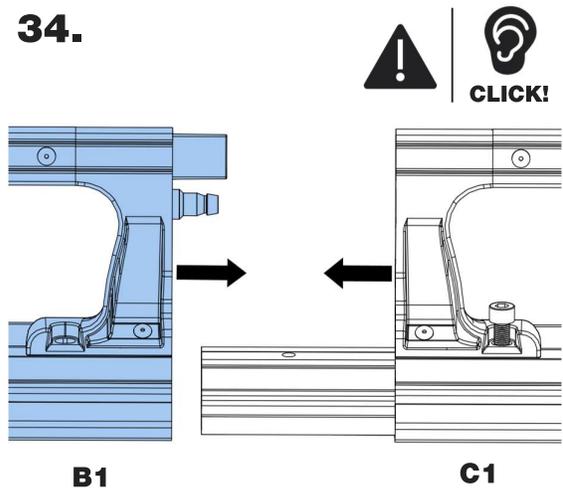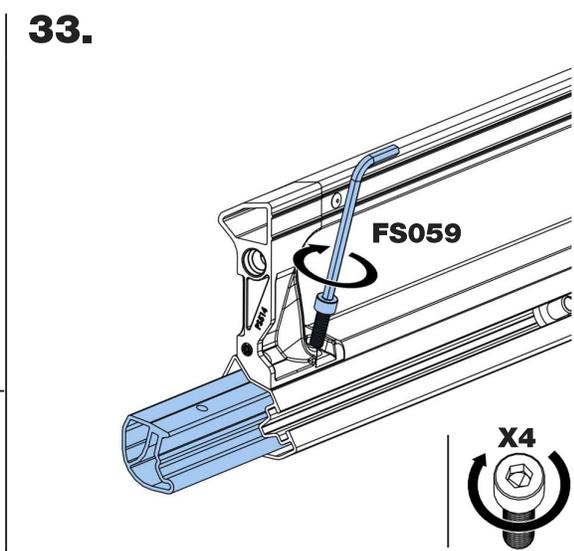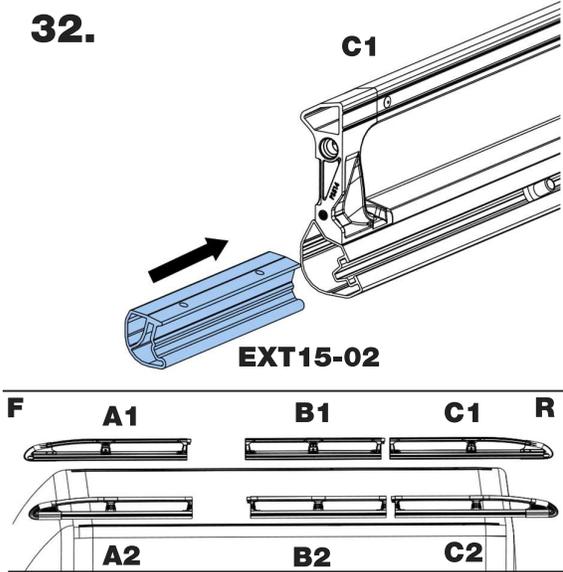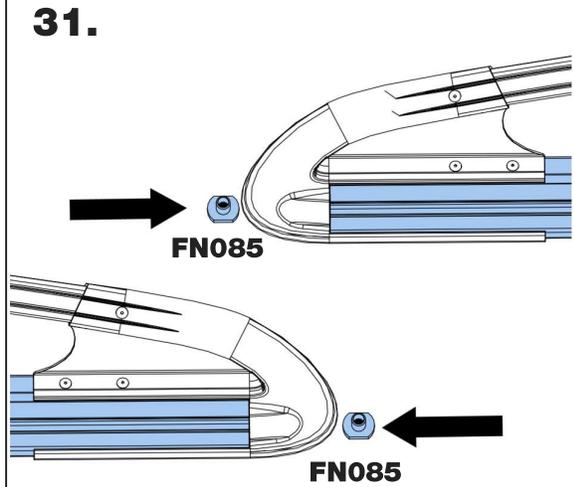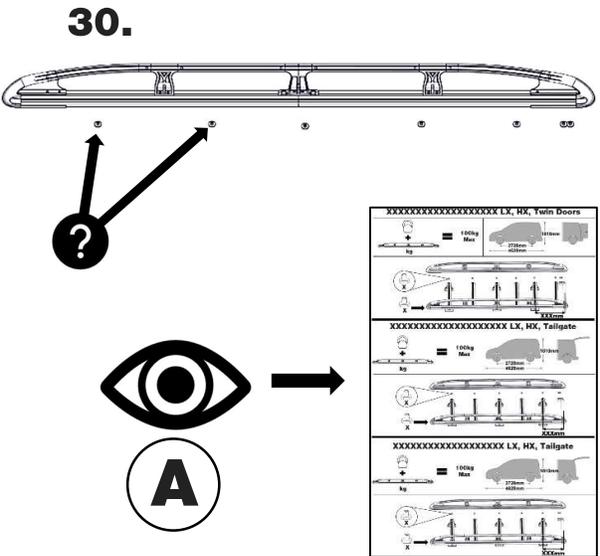


36.

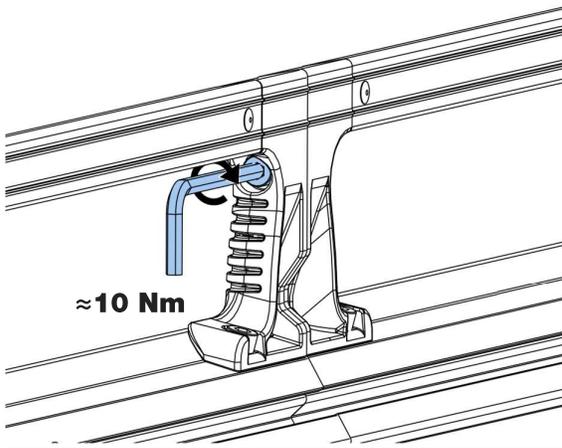


37.

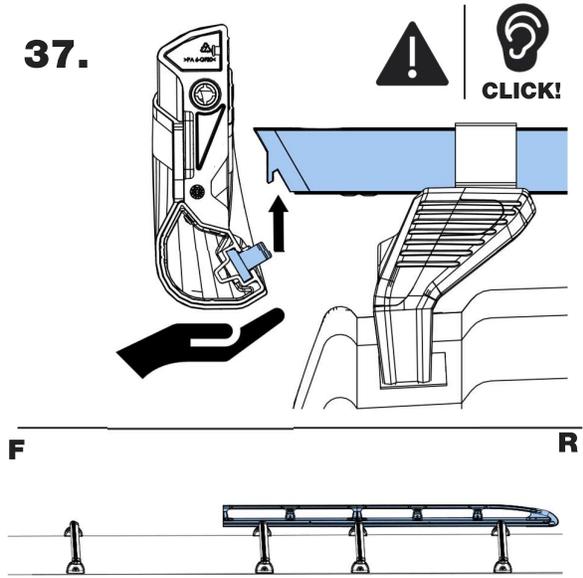


38.

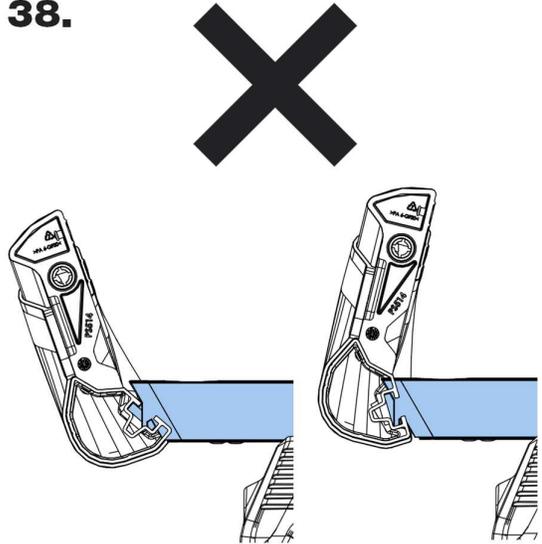


39.

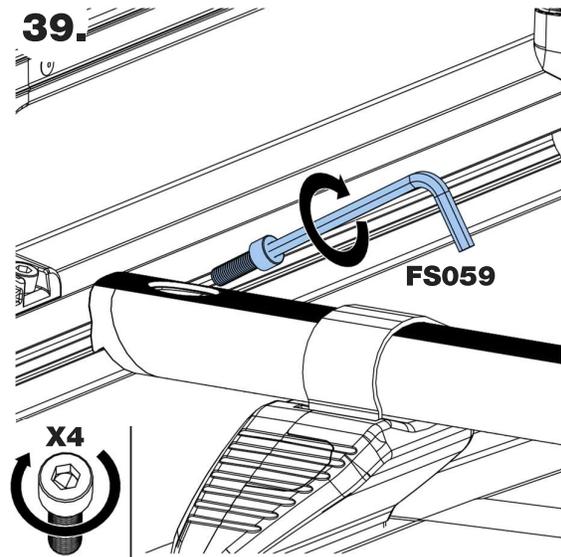


40.

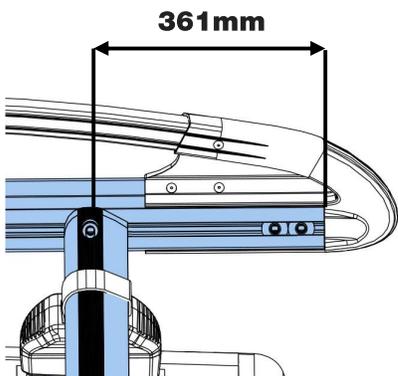


41.

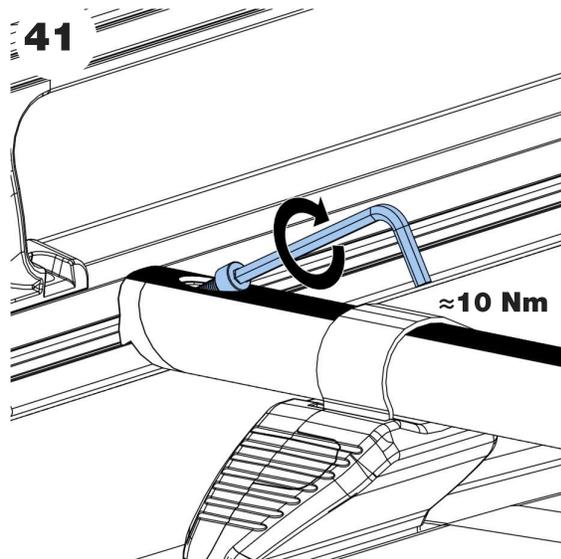


42.

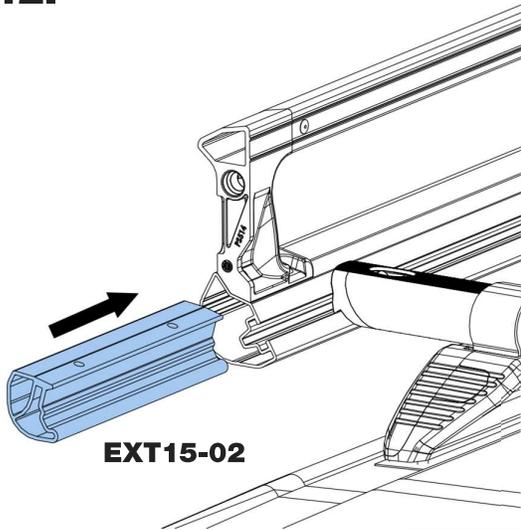


43.

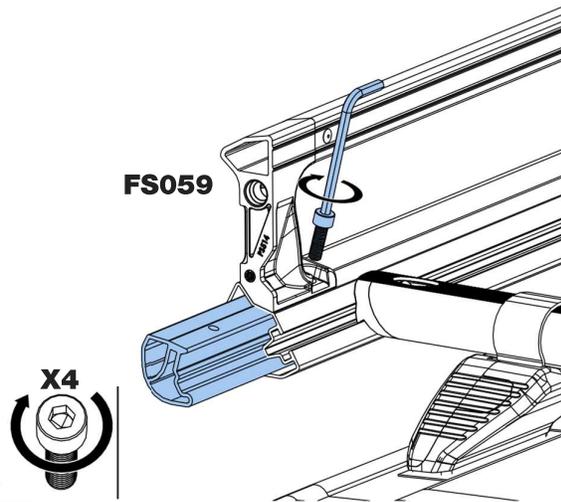


44.

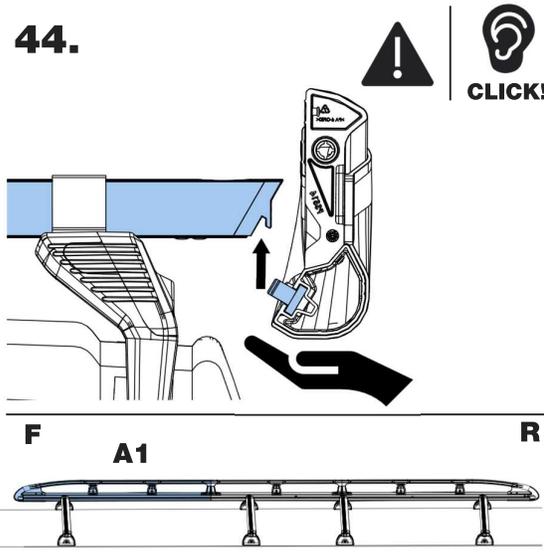


45.

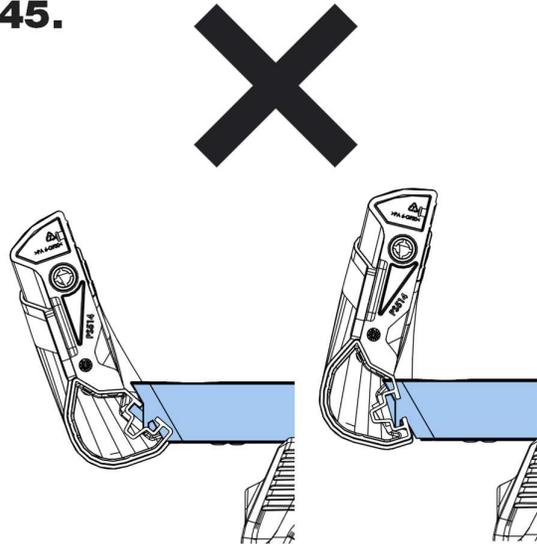


46.

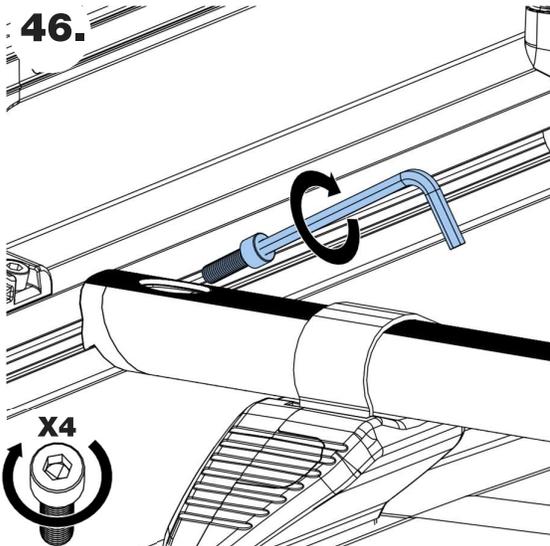


47.

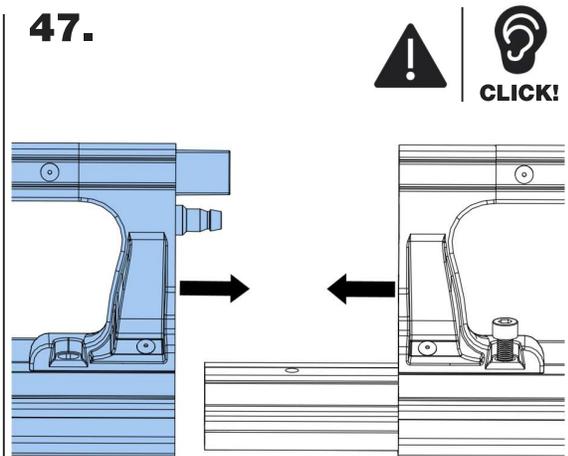


48.

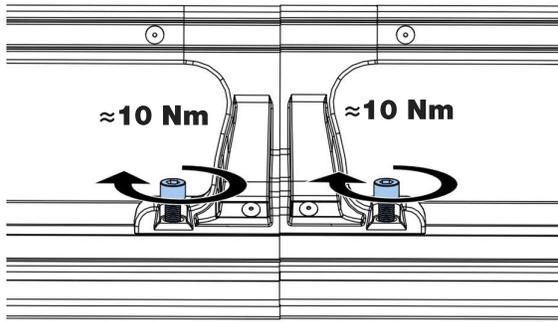



49.

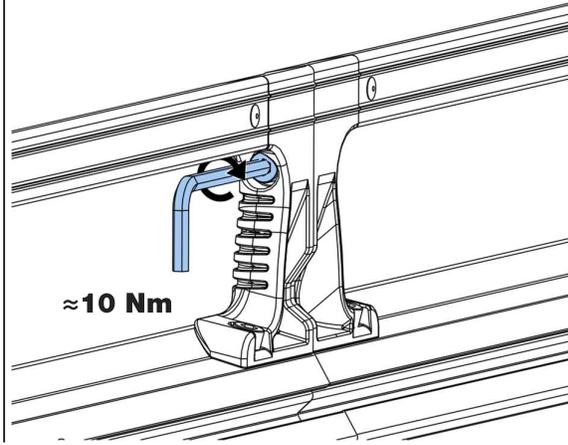


50.

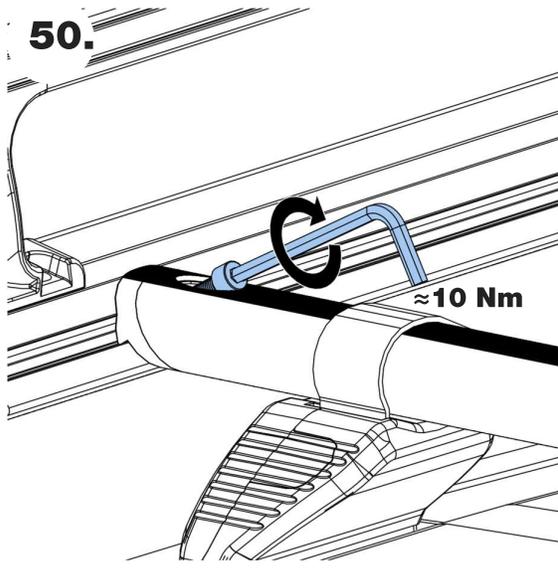


51.





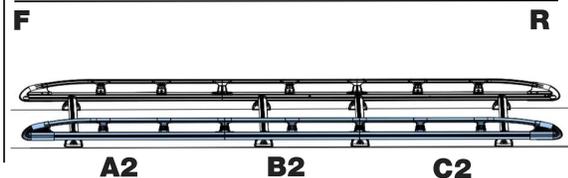
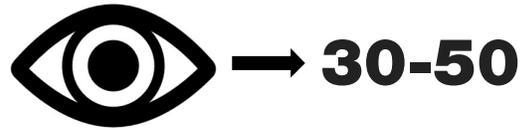


52.

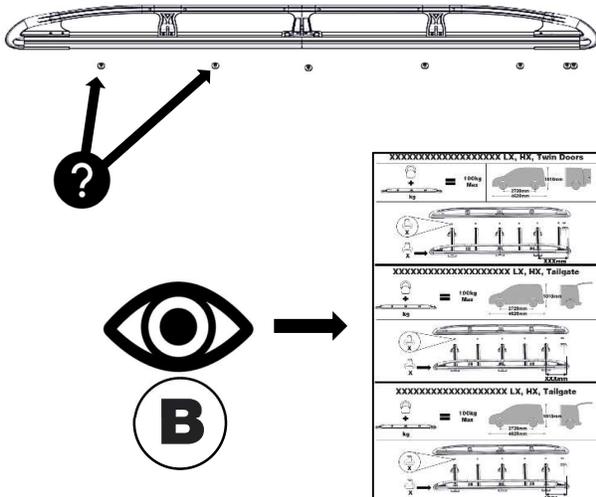


53.

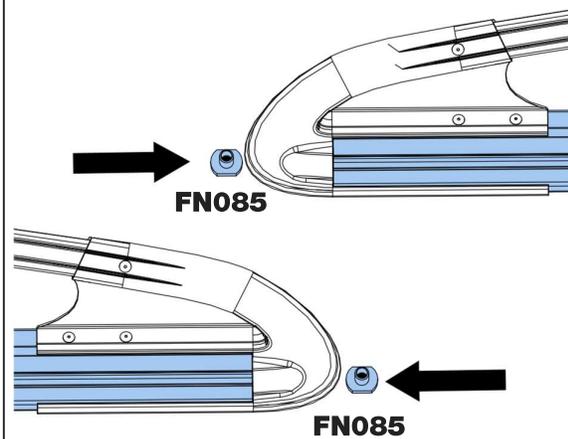


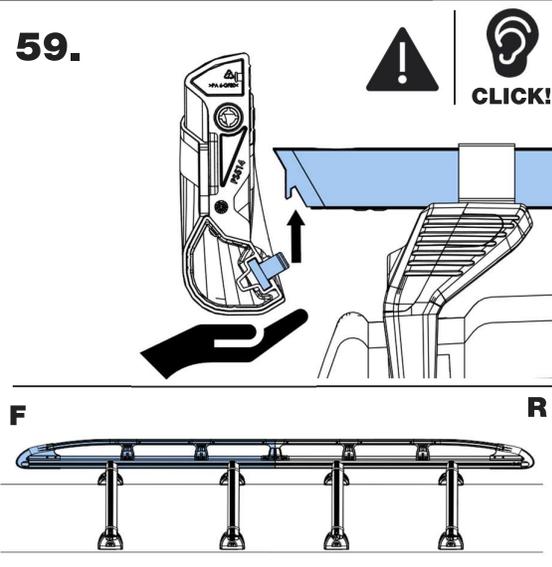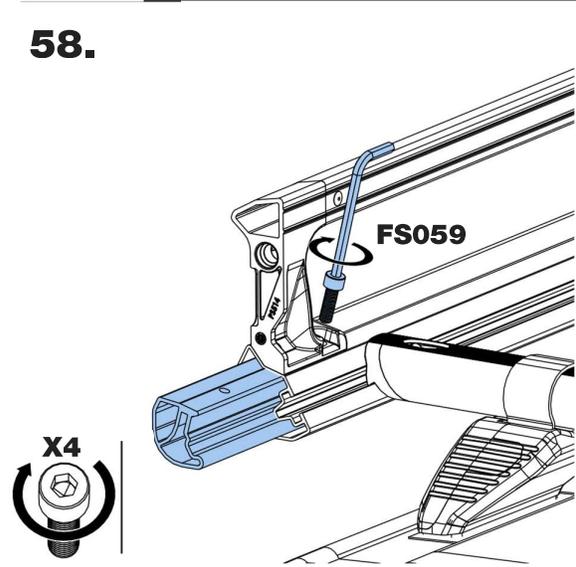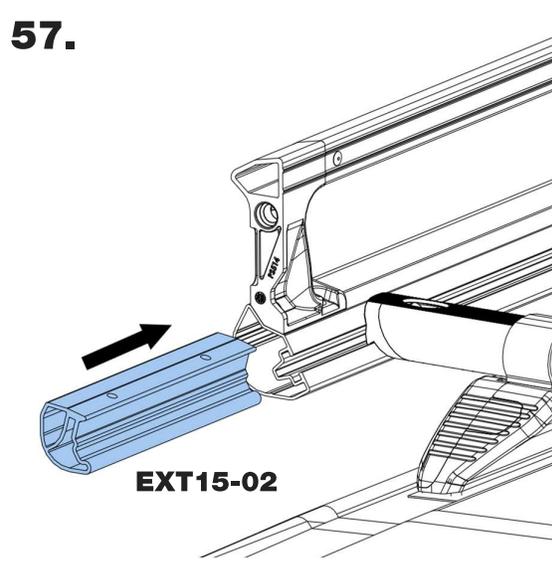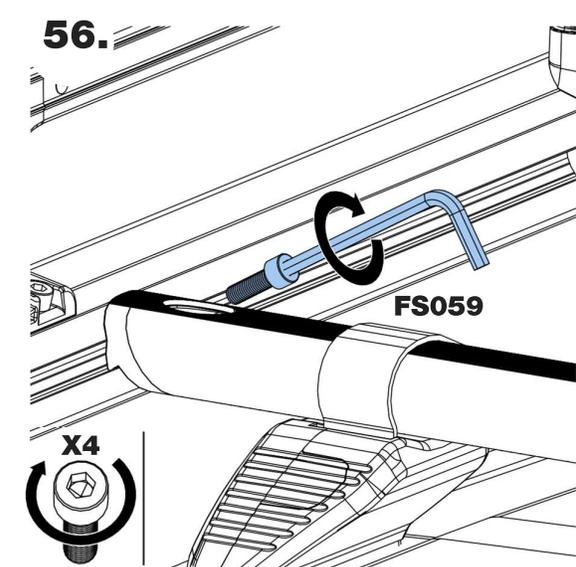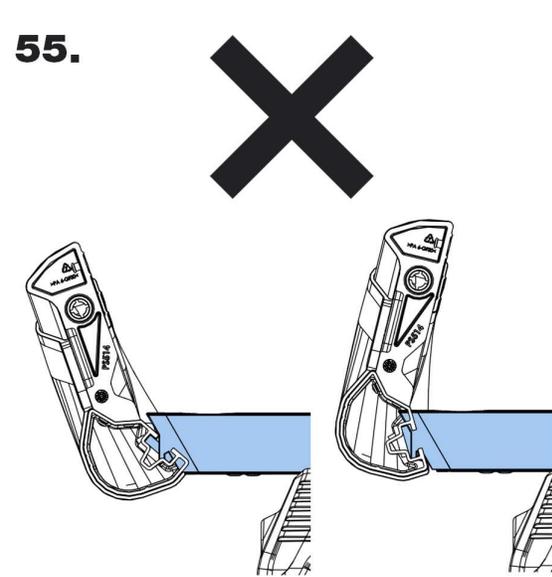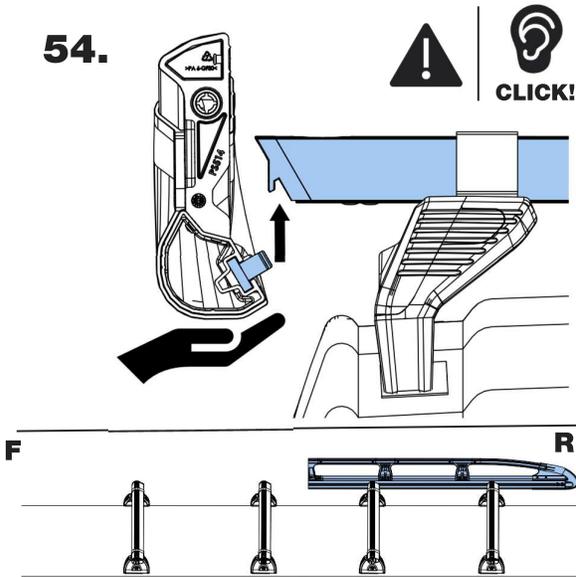


60.

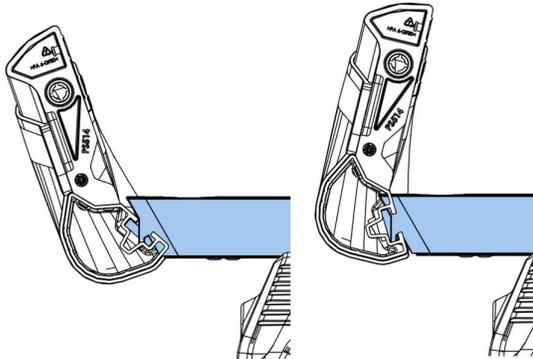


61.

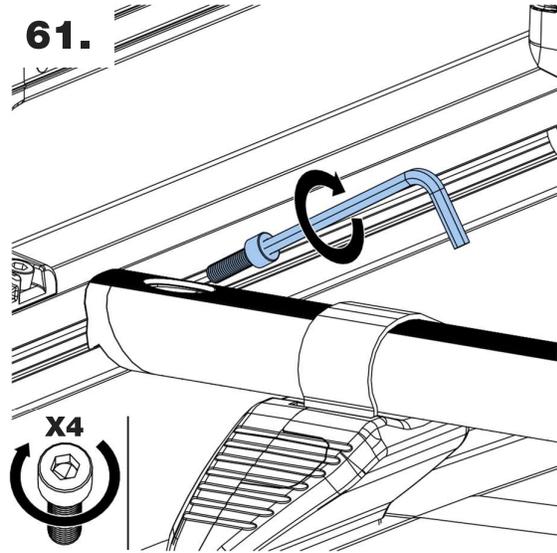


62.

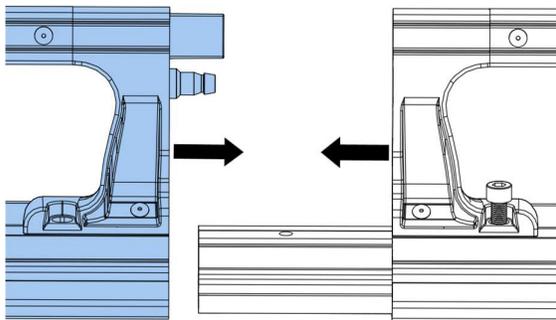

63.

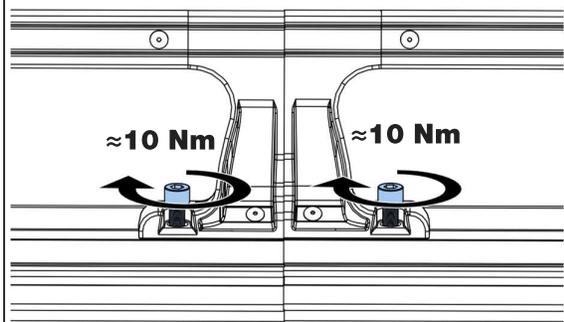

64.

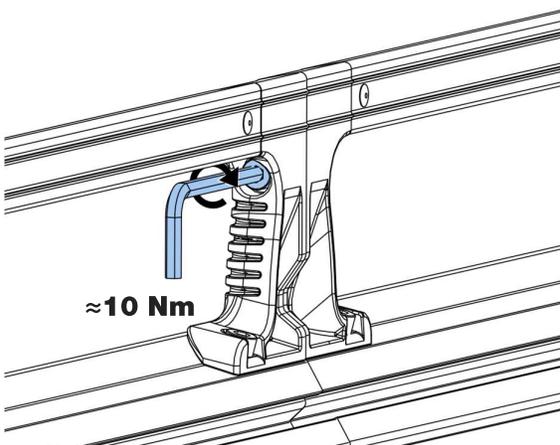

65.

