


RA4PR/FL



KammBar

Instructions

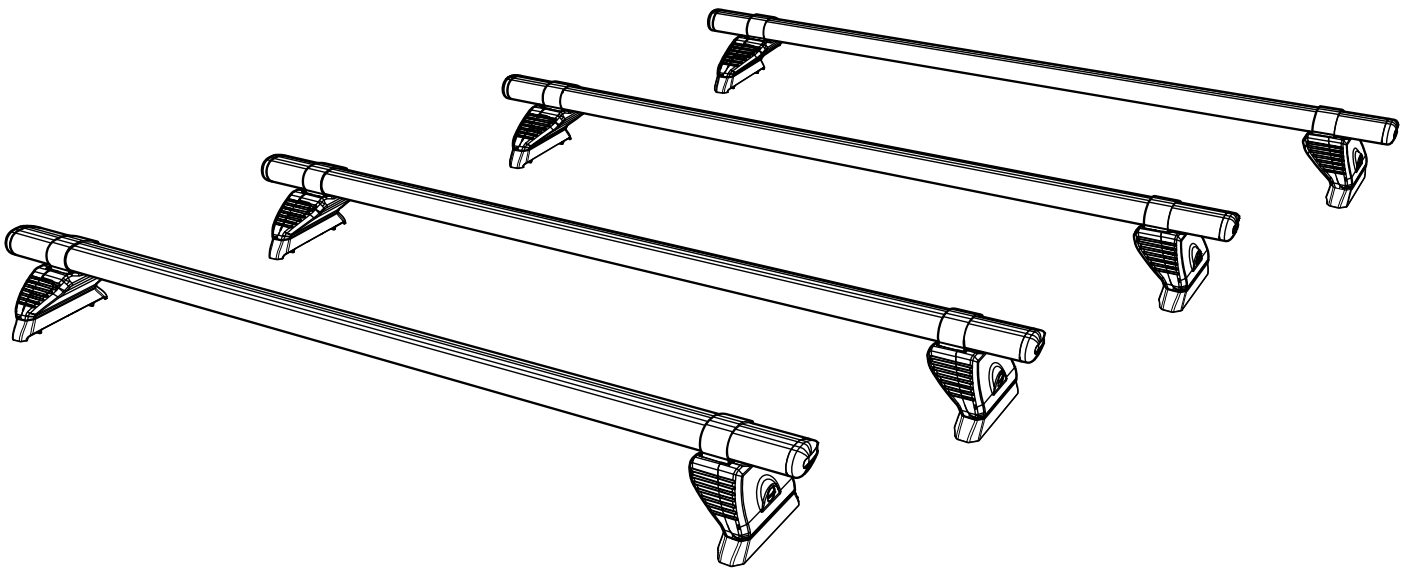


CITY CRASH (✓)


According to ISO/ PAS 11154:2006

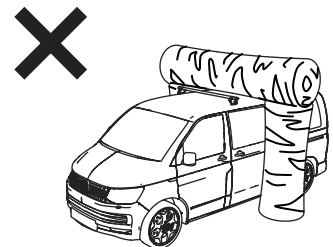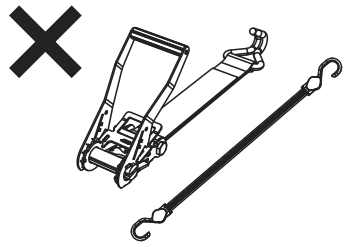


KammBar Pro

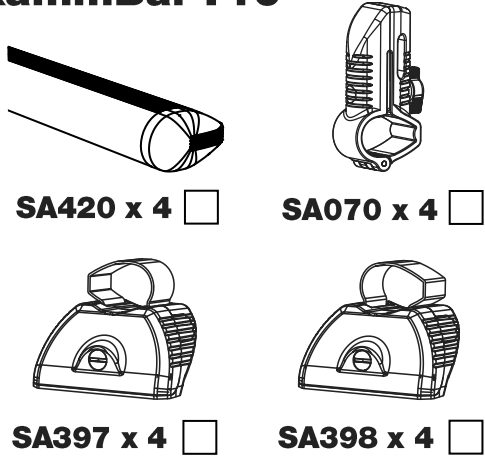

KammBar Fleet

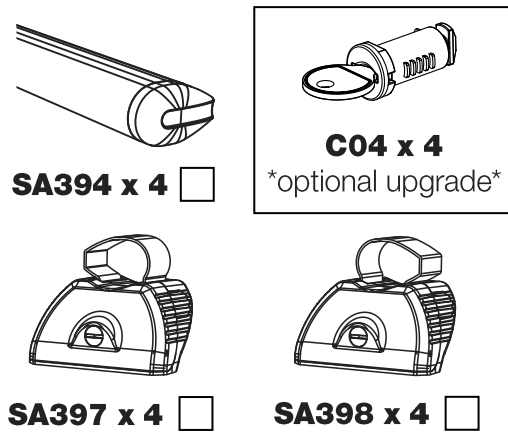


Fitting Kit

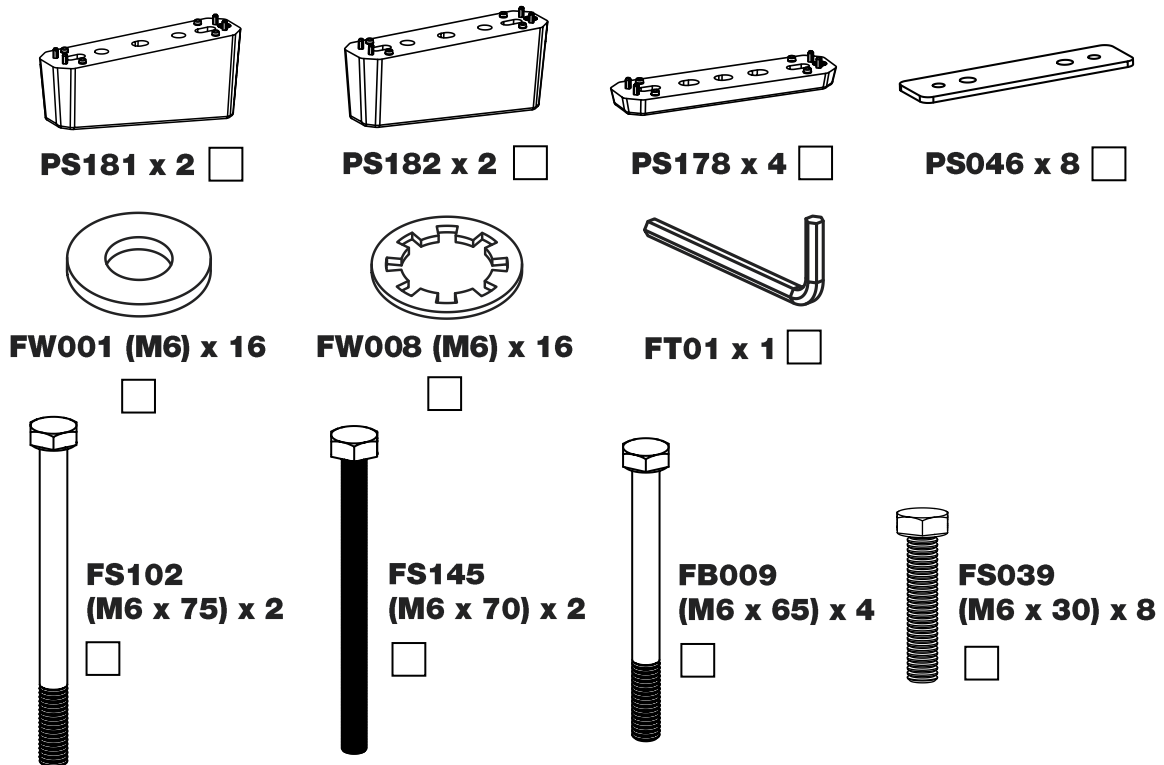

1.



2.

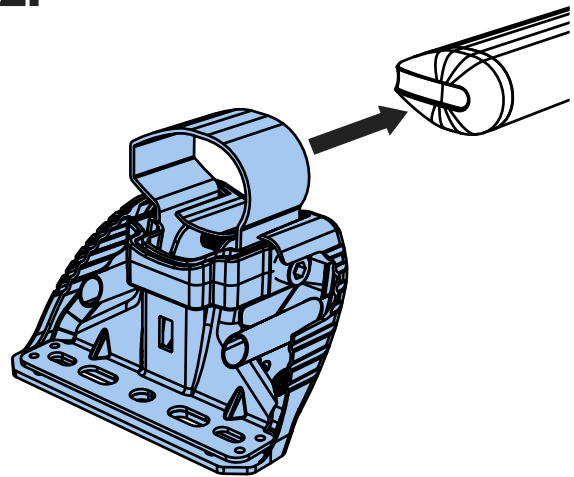


3.




SA397

PS182



SA397

PS178




SA397

PS178




SA397

PS181

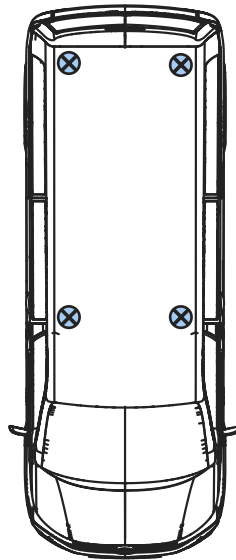


SA398



PS182

SA398




PS178

SA398




PS178

SA398



PS181

4.

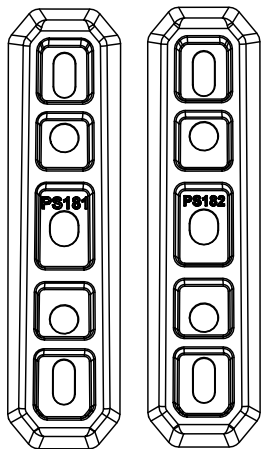

5.

FS102


FS145

FB009

FS039

FW008


FW001




M6 x 75mm



M6 x 70mm









M6 x 65mm




M6 x 30mm




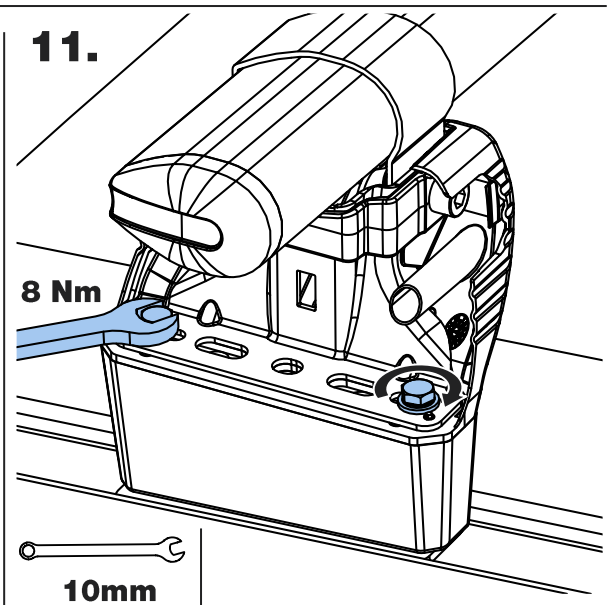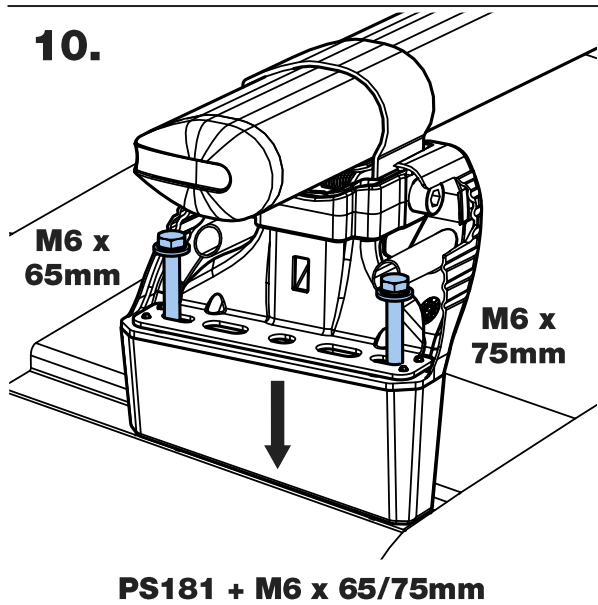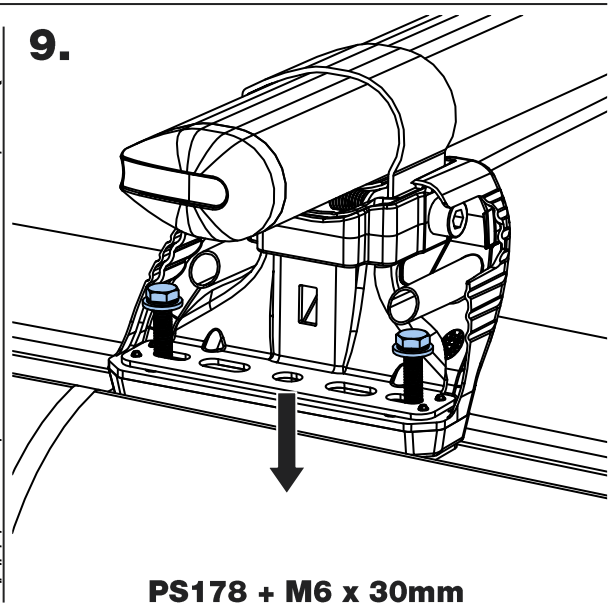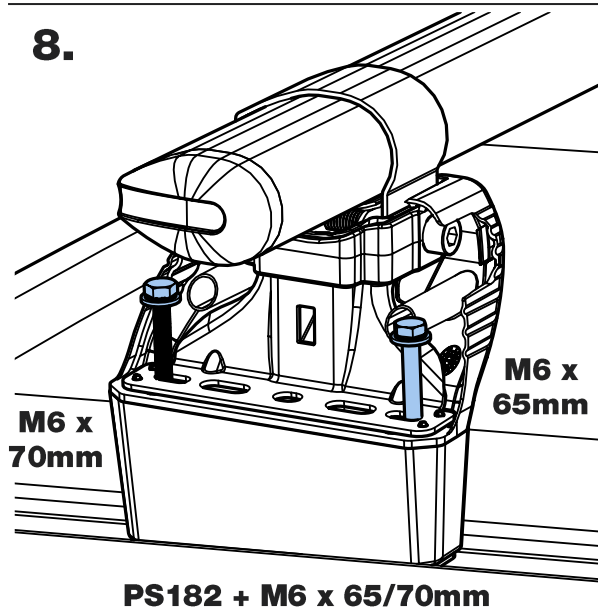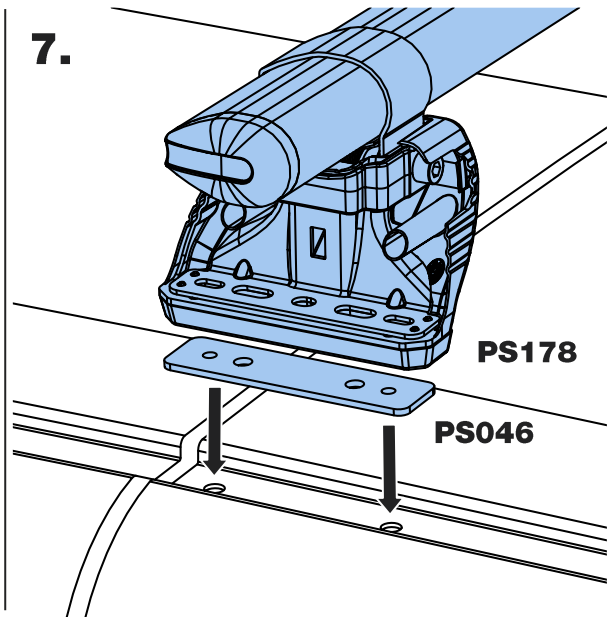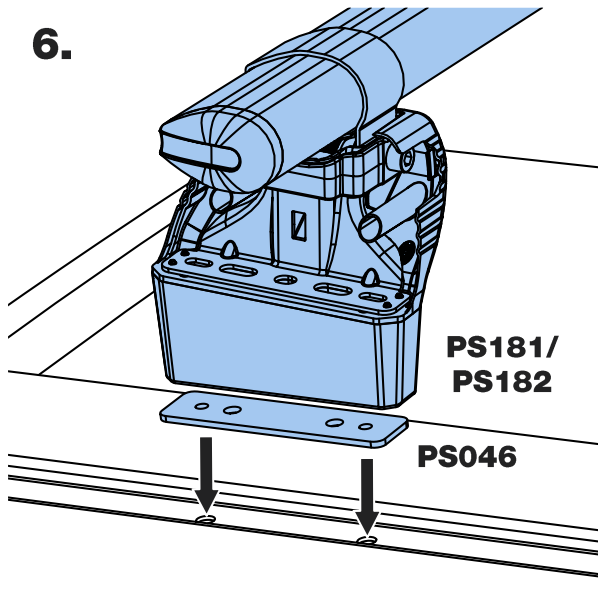


12.

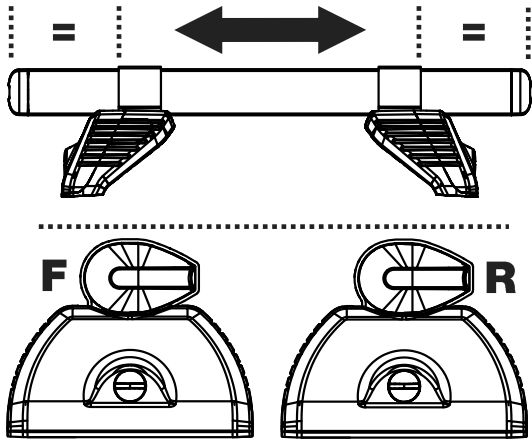

13.

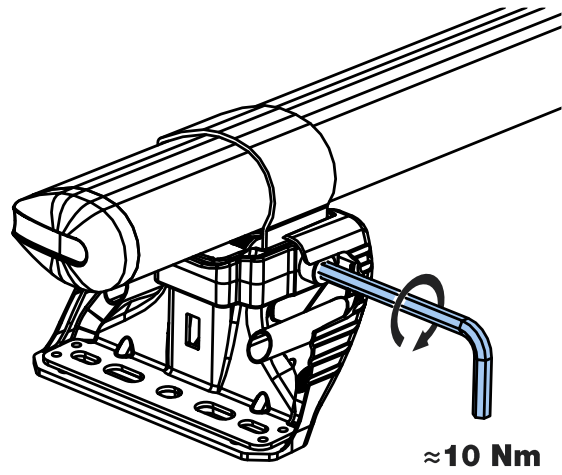

14.

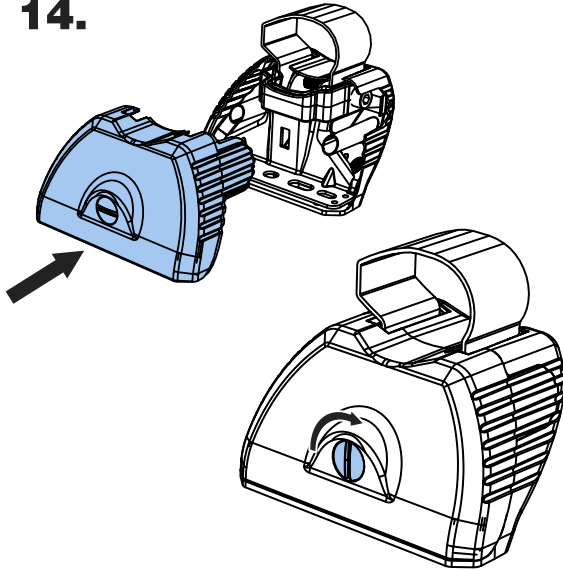

15.

