


SAFESTEP FITTING INSTRUCTIONS

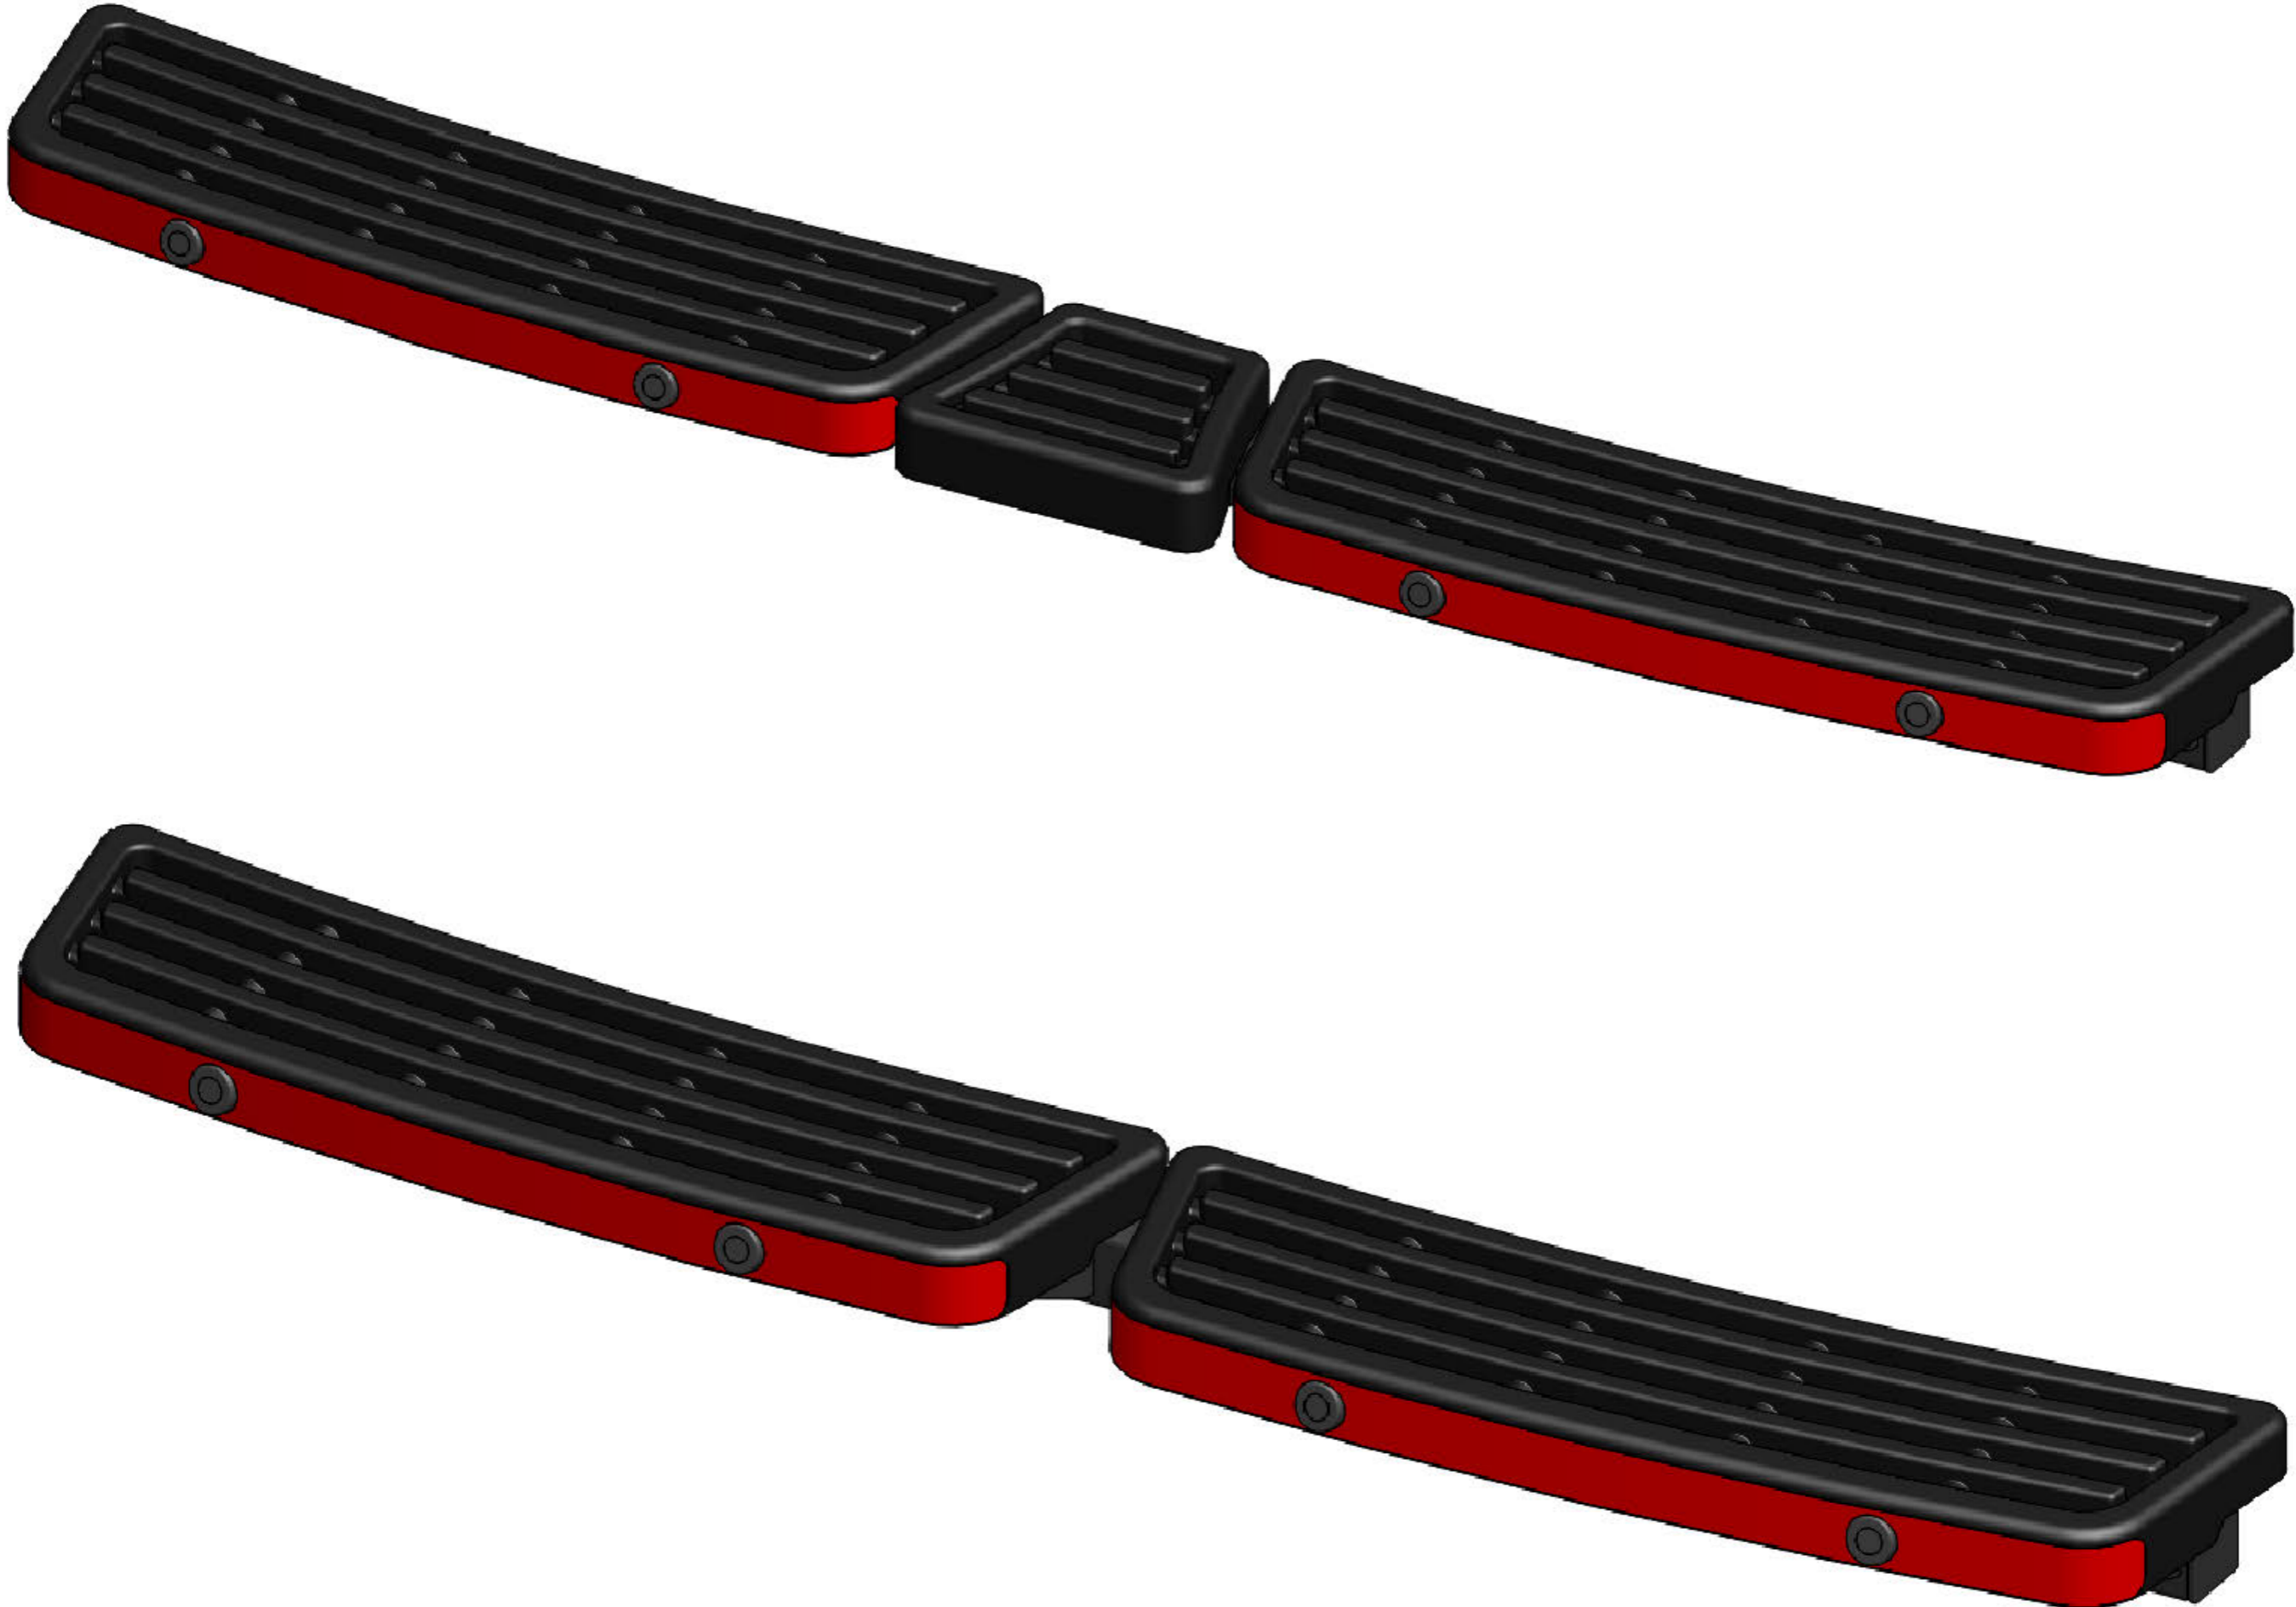

SAFESTEP FITTING INSTRUCTIONS


FITTING KIT CONTENTS FK888
(1:1)




FB006 (M8) x 4



FS082 (M12) x 6

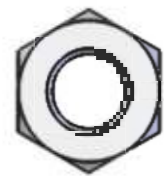


FN006 (M8) x 4

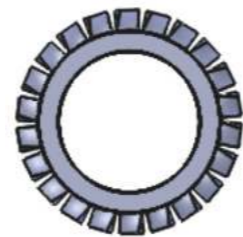

FW029 (M12) x 6




FW021 (M8) x 8

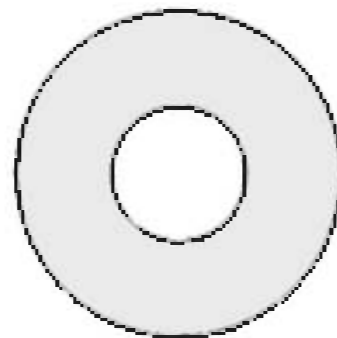


FW026 (M12) x 6

FITTING TIME: 30 Minutes

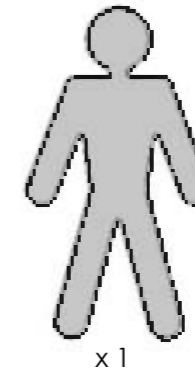





19mm x 1






13mm x 1

13mm x 1


SAFESTEP FITTING INSTRUCTIONS

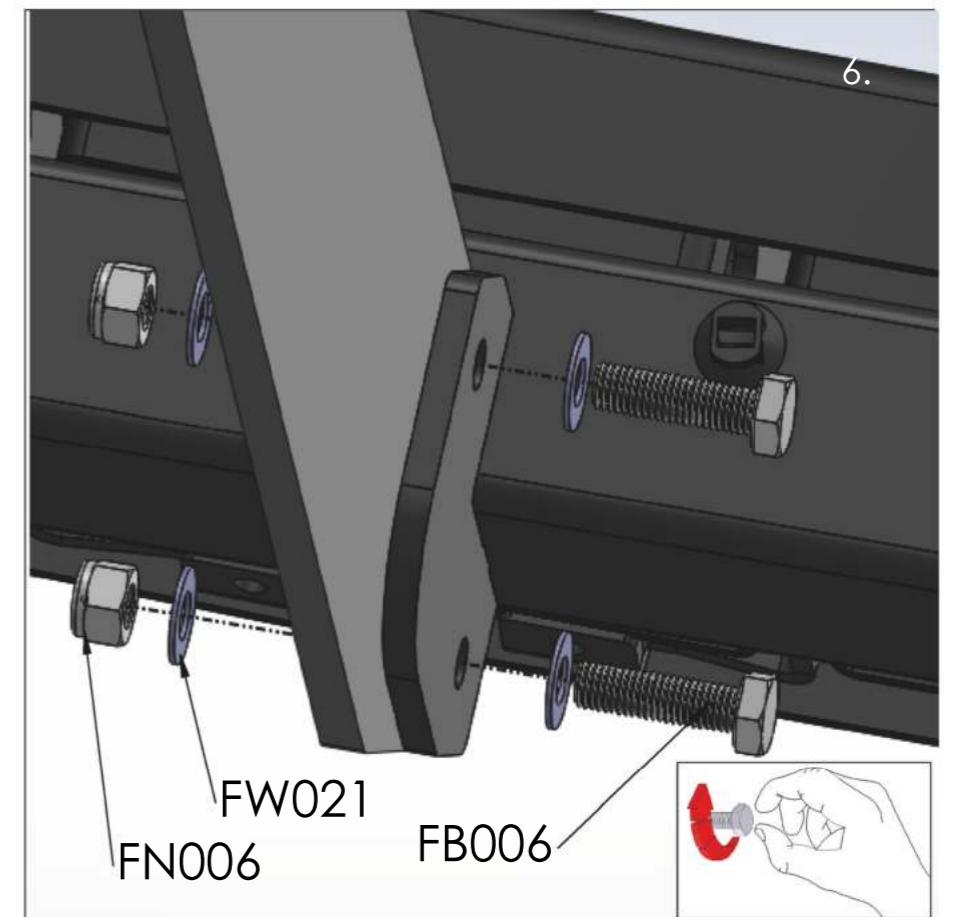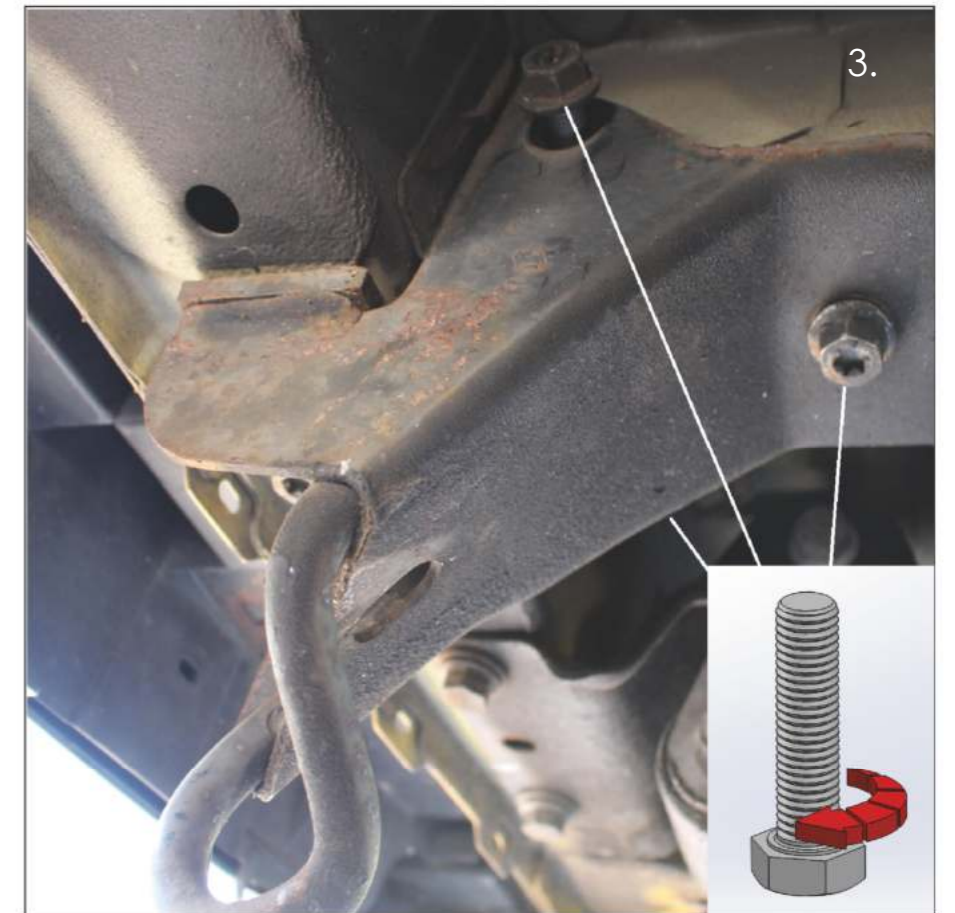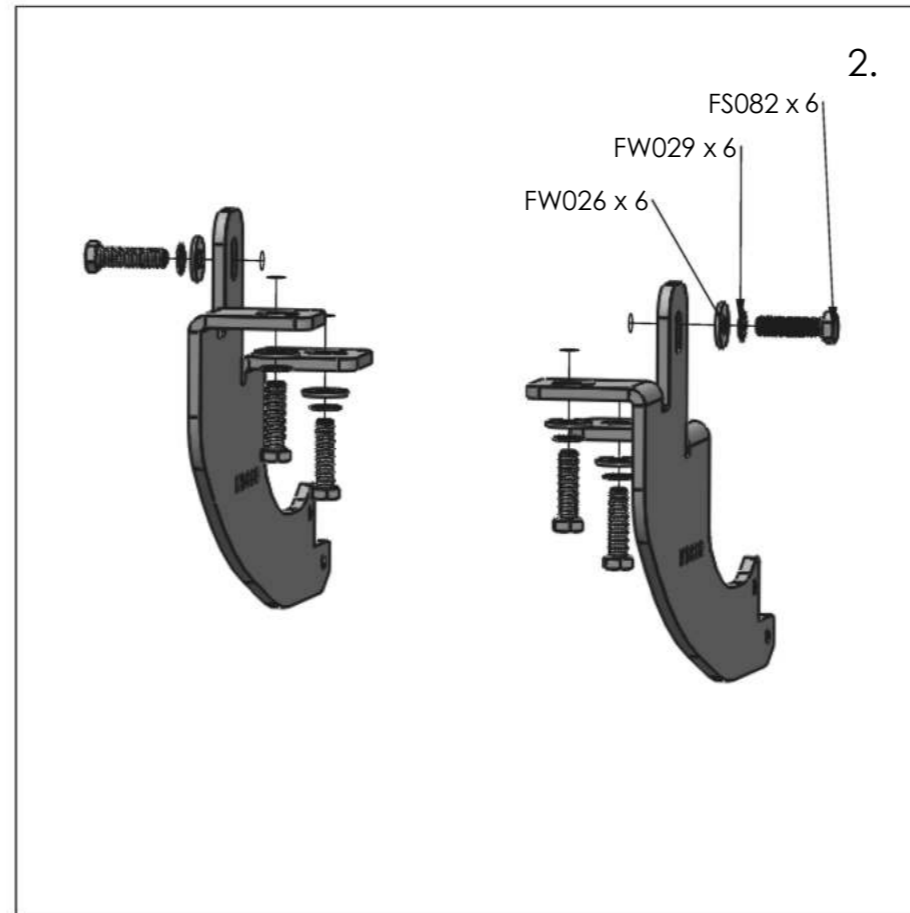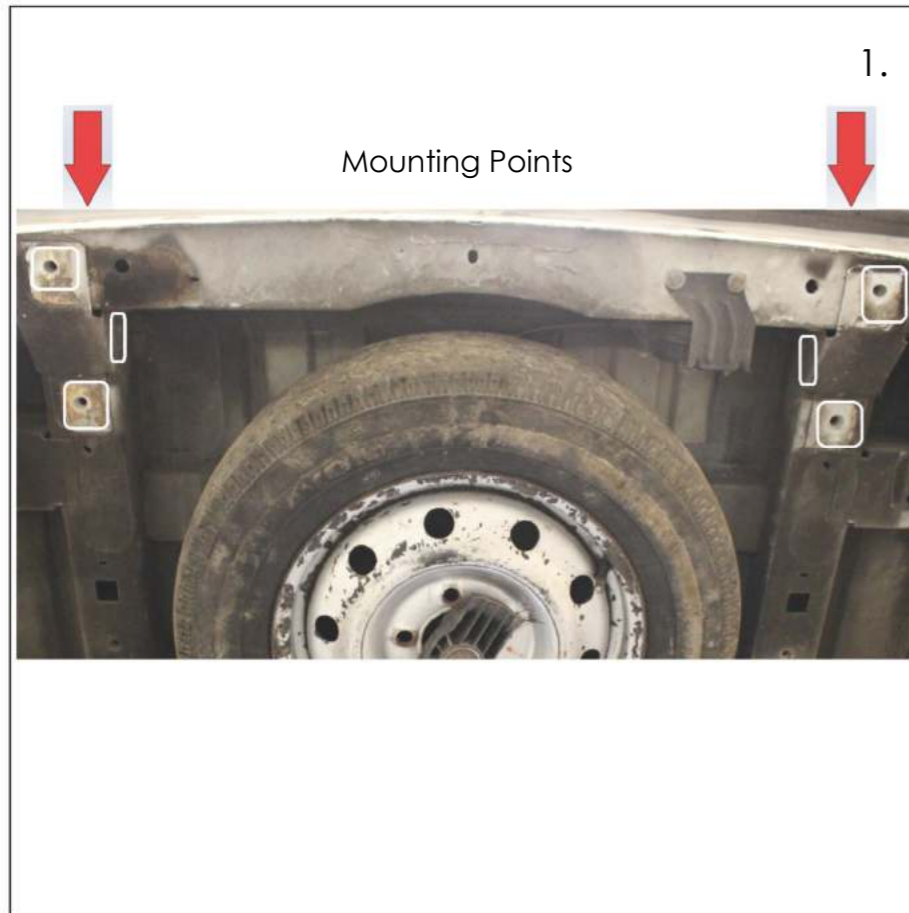

SAFESTEP FITTING INSTRUCTIONS



IMPACT STEP FITTING INSTRUCTIONS

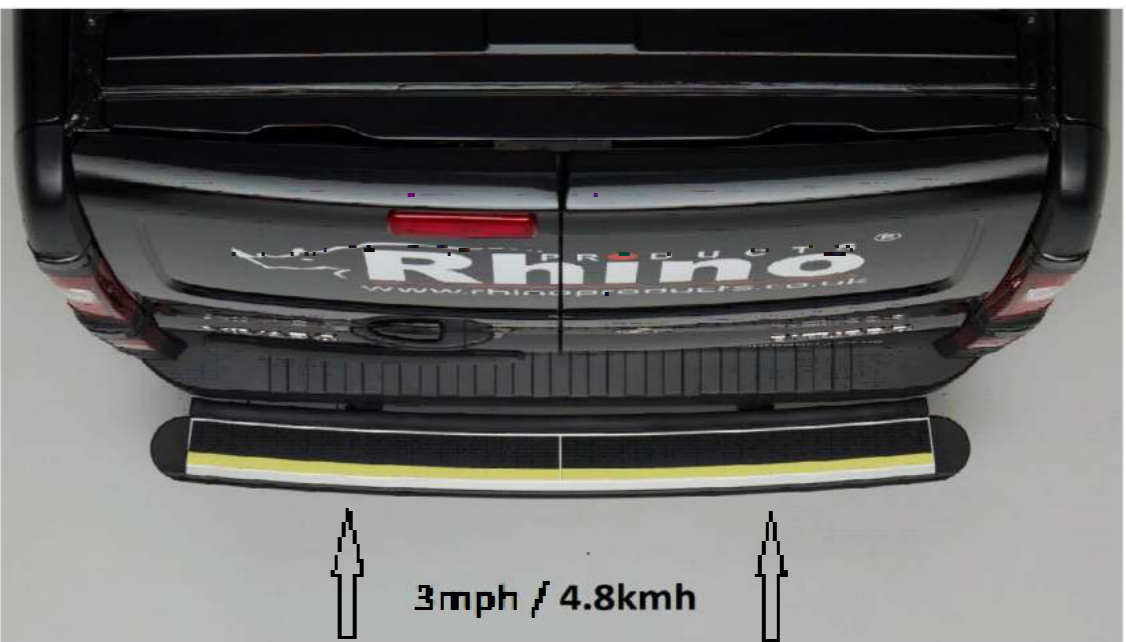


IMPACT STEP FITTING INSTRUCTIONS

FITTING KIT CONTENTS FK888 (1:1)


1.




FW020 (M8) x 4

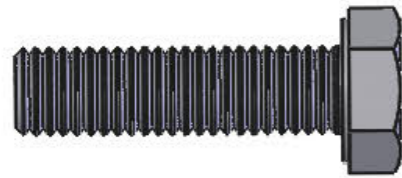

FB006 (M8 x 30) x 4

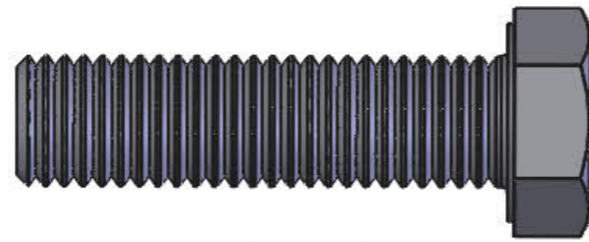


FS082 (M12 x 45) x 6

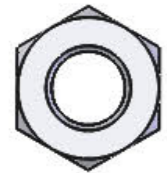


FN006 (M8) x 4

SAFESTEP	✓
IMPACT STEP	✗

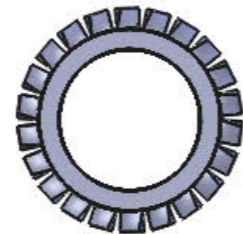


FW029 (M12) x 6

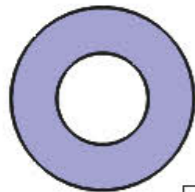

FW021 (M8) x

SAFESTEP	8
IMPACT STEP	4

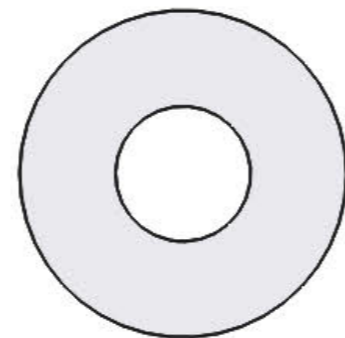


FW026 (M12) x 6

FITTING TIME: 40 Minutes

2.




x 1

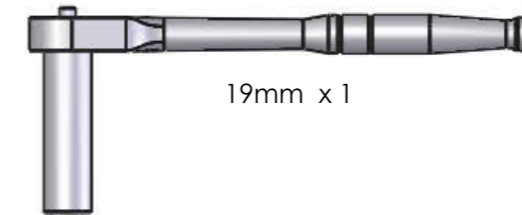





19mm x 1



13mm x 1

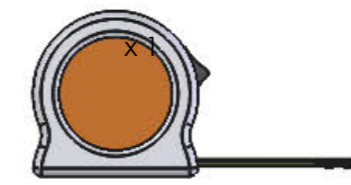

IMPACT STEP FITTING INSTRUCTIONS

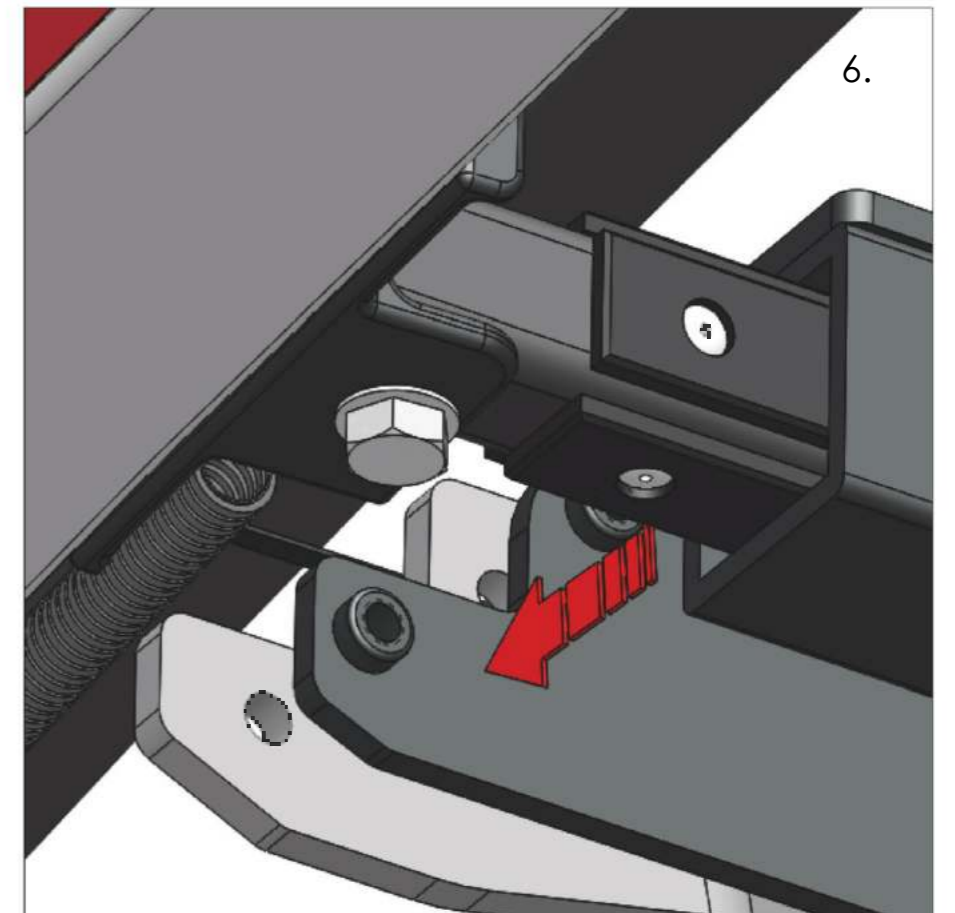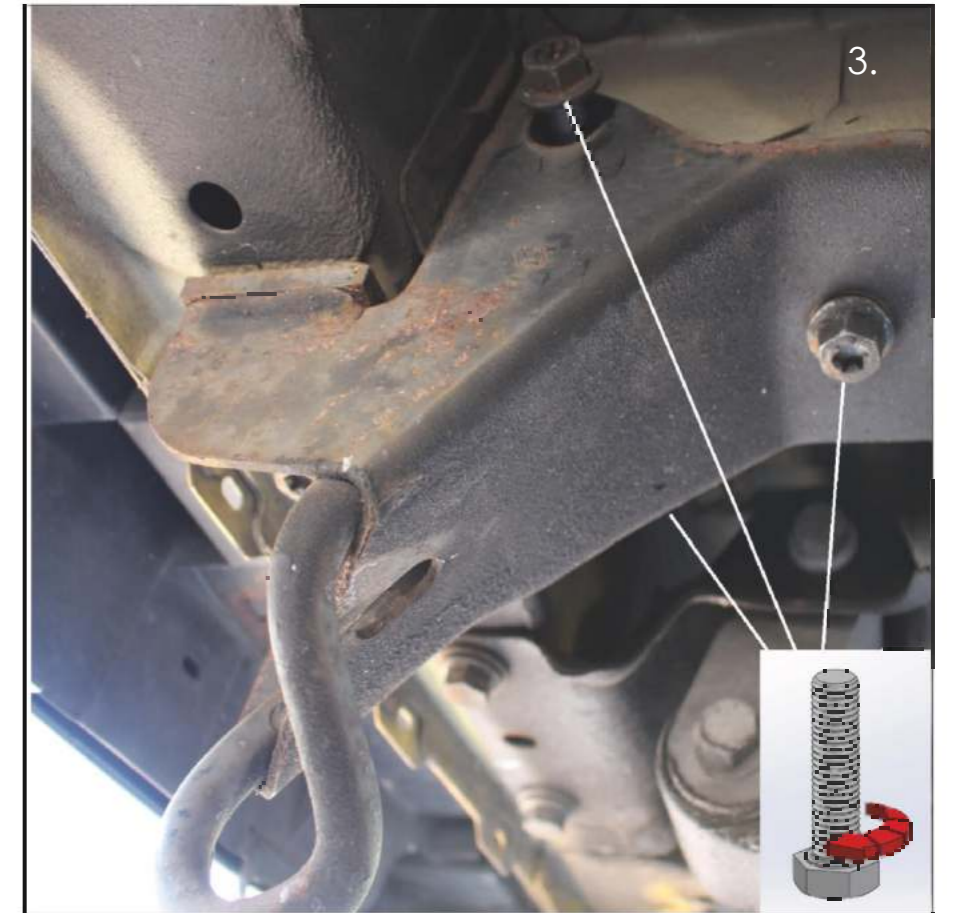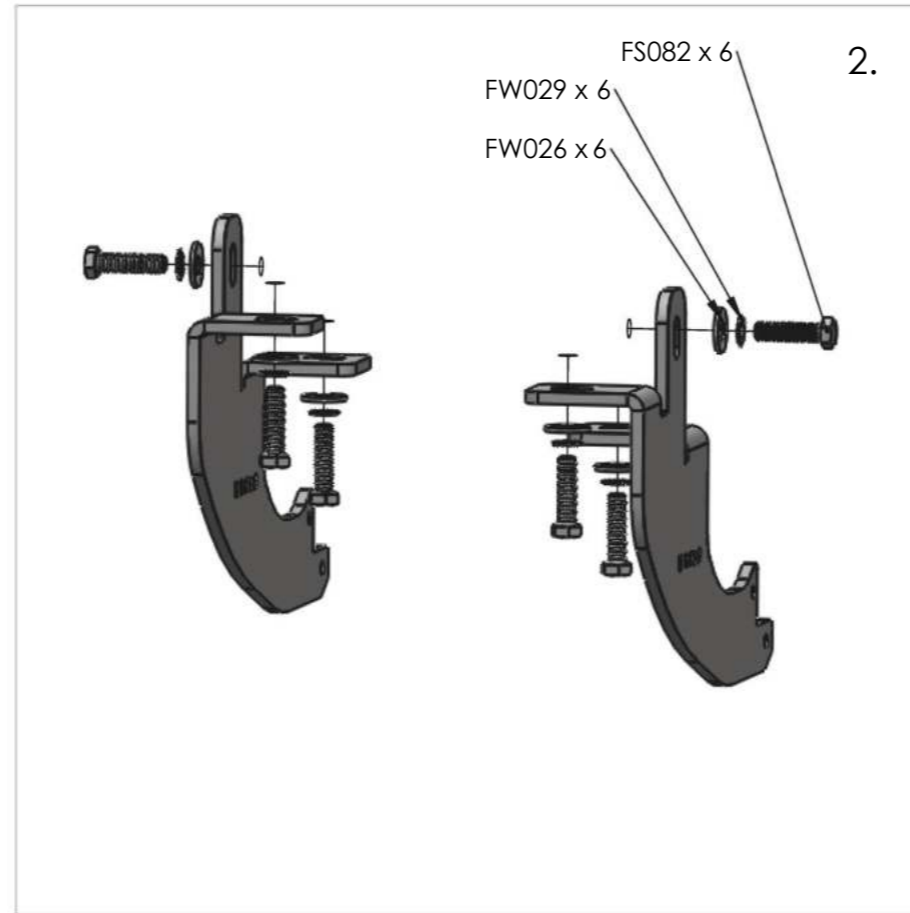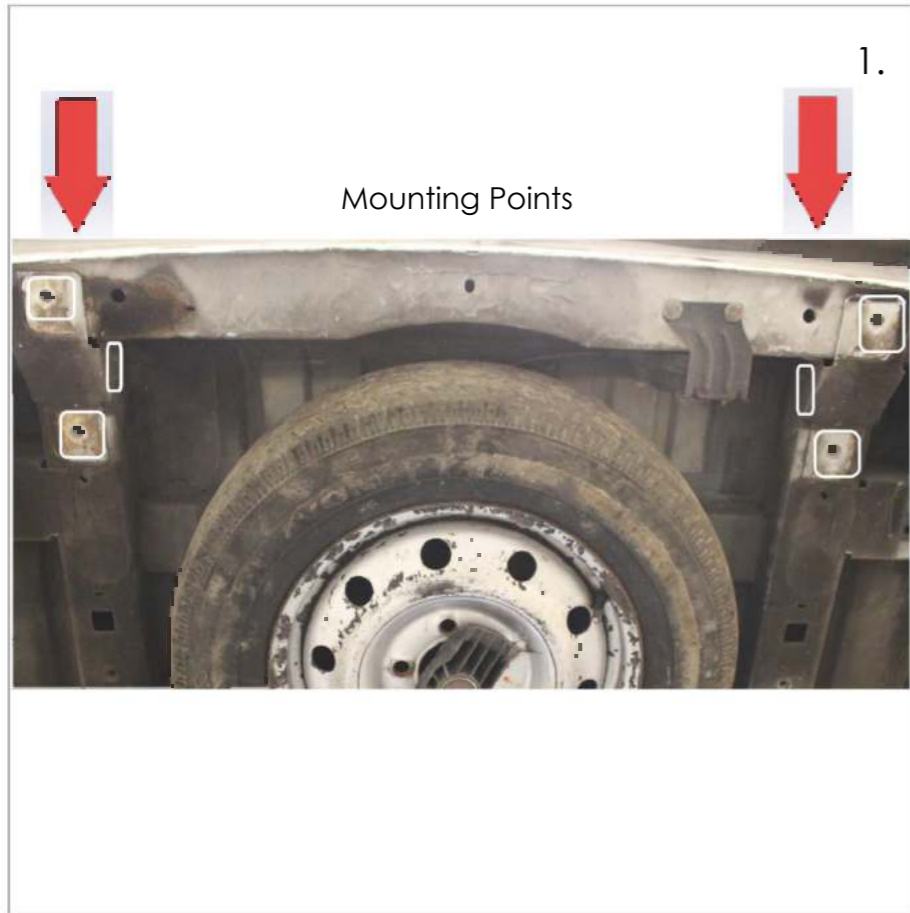

IMPACT STEP FITTING INSTRUCTIONS

