



# IMPACTSTEP FITTING INSTRUCTIONS

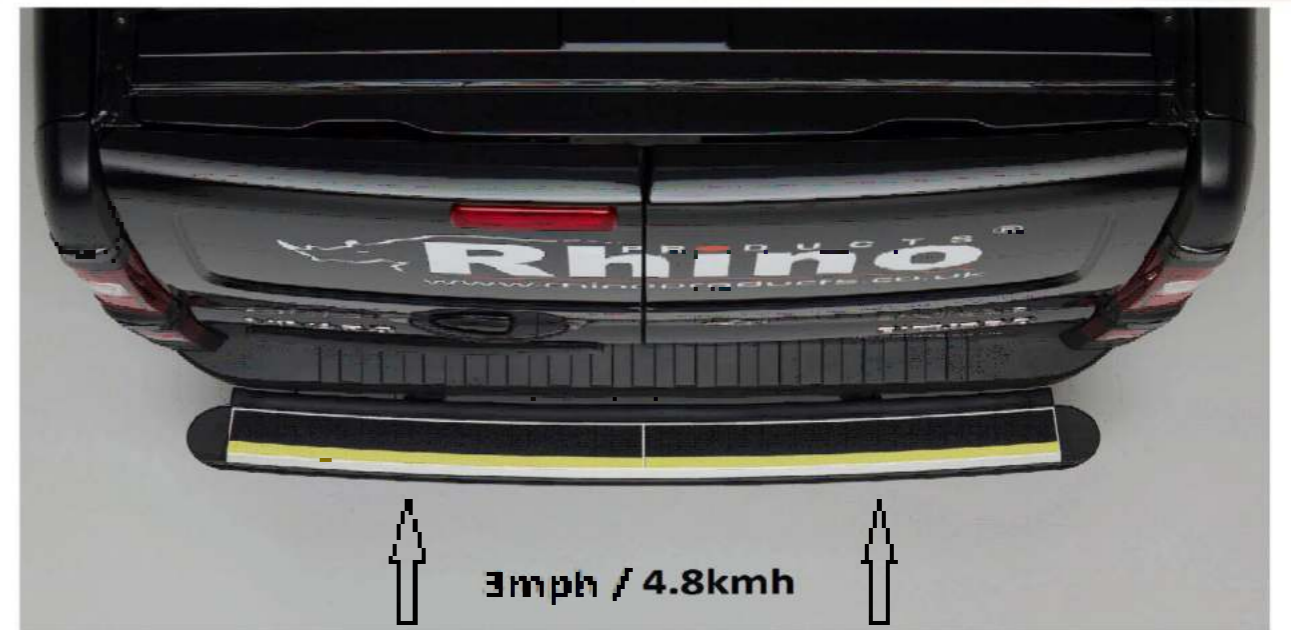


FITTING KIT CONTENTS FK886  
(1:1)


FITTING TIME: 40 Minutes

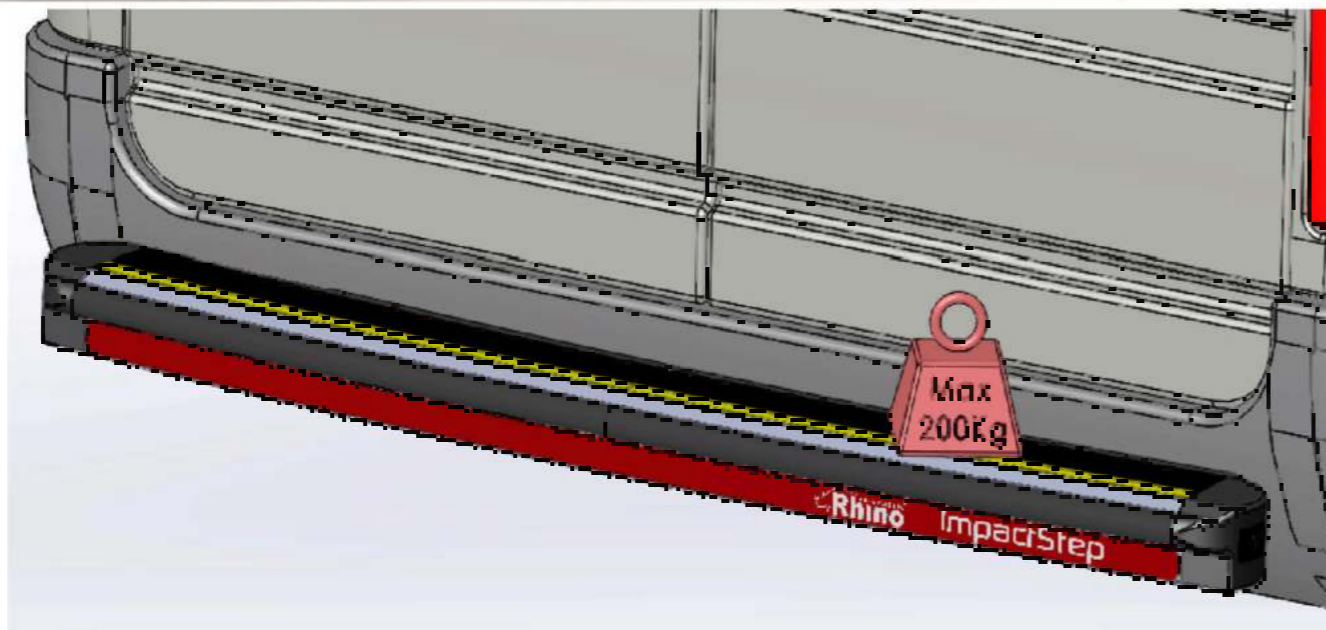


FW020 (M8) x 4

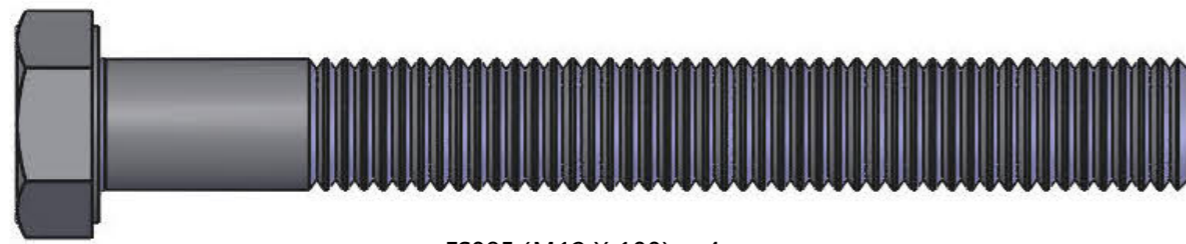

FS085 (M12 X 100) x 4

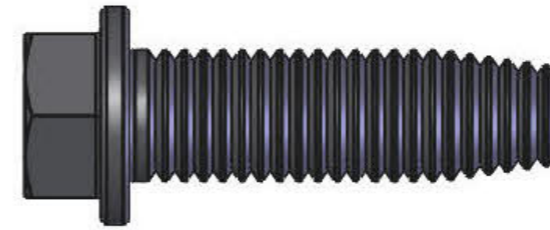


FS095 (M12 X 40) x 4

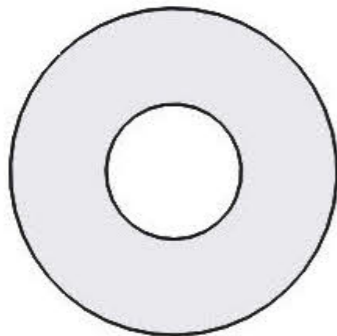

FW026 (M12) x 16




FN034 (M12) x 4

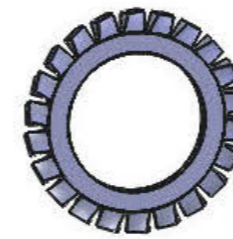


FW029 (M12) x 4




x 1

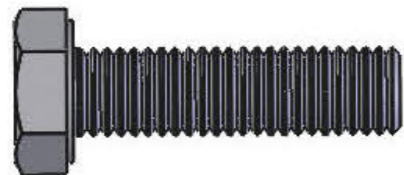


FB006 (M8 X 30mm) x 4

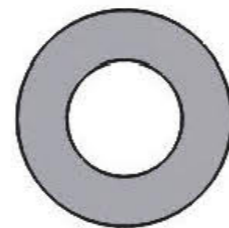

FW006 (M10) x 12

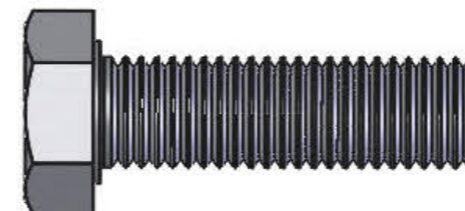

FS088 (M10 X 35) x 6

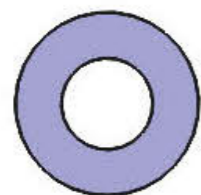

FW021 (M8) x 4



FN008 (M10) x 6




13mm x 1



15mm x 1



19mm x 1



19mm x 1

