


T52PR/FL


KammBar

Instructions

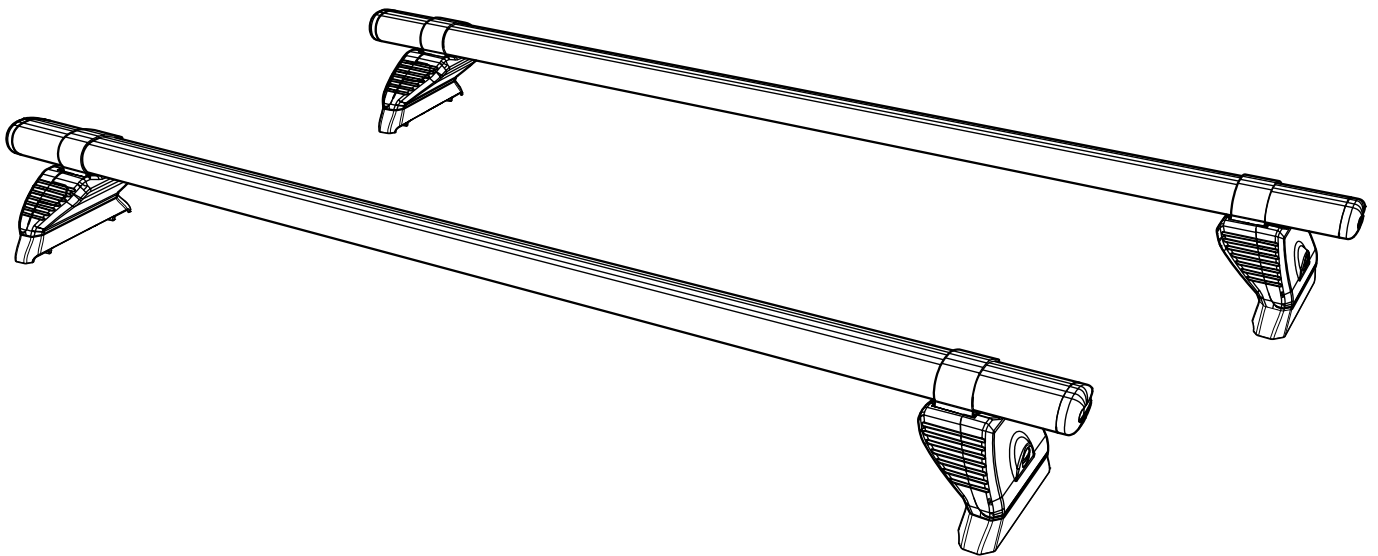


CITY CRASH (✓)


According to ISO/ PAS 11154:2006

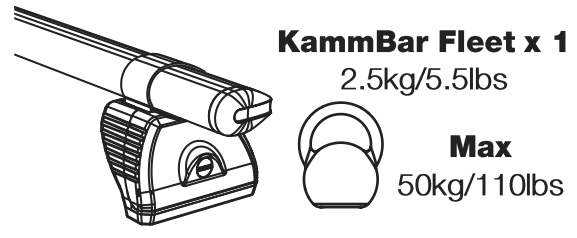


KammBar Pro

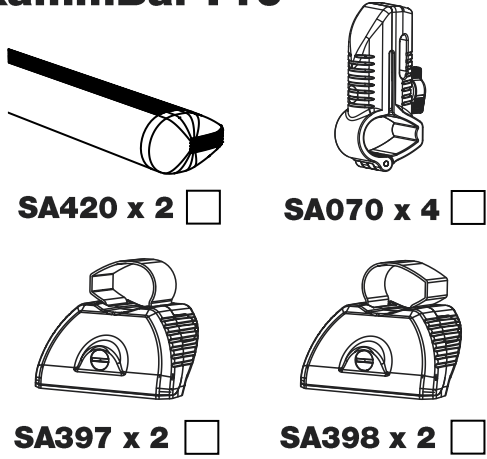

KammBar Fleet

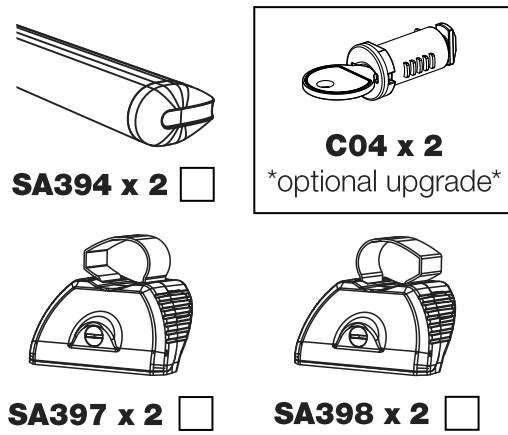


Fitting Kit

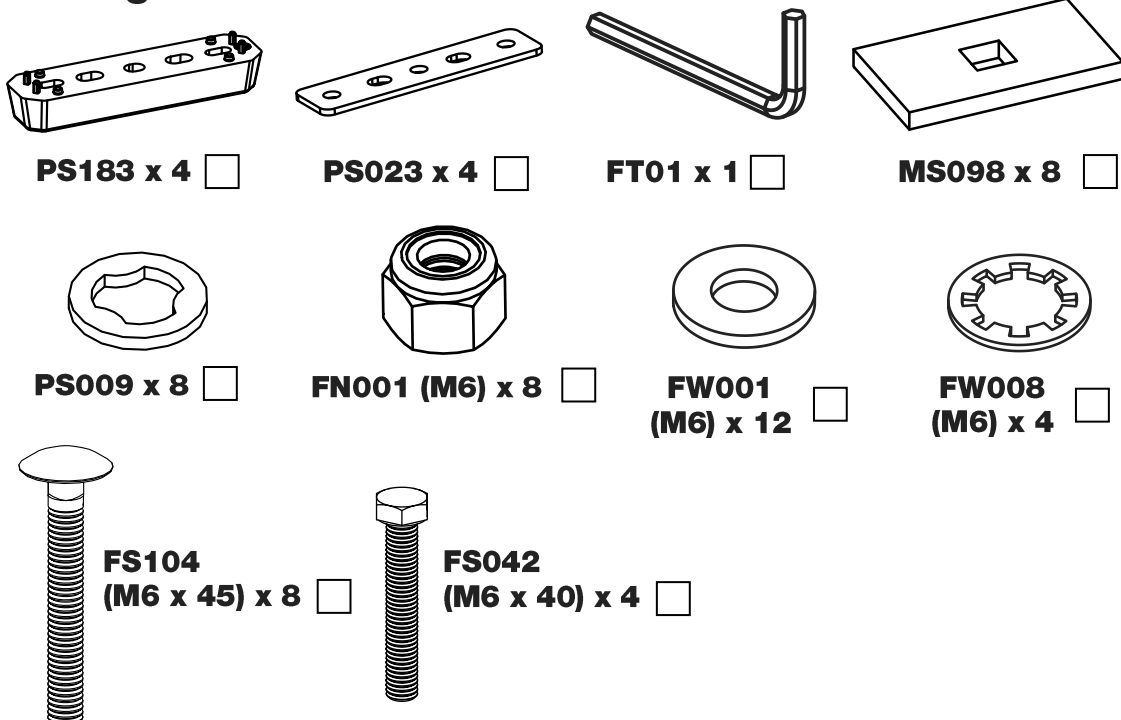


1.



2.


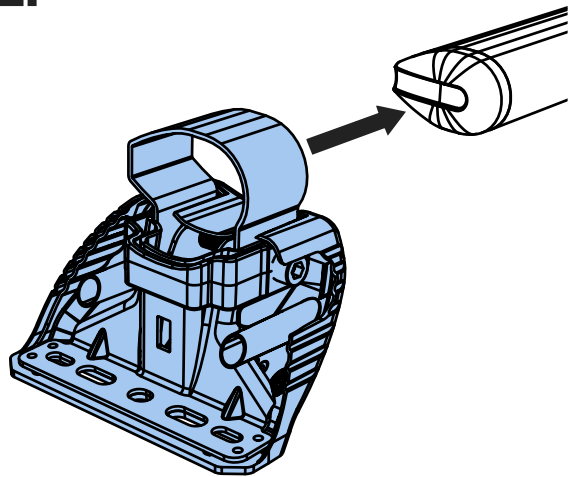


3.

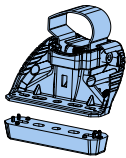



SA397
PS183

SA398
PS183

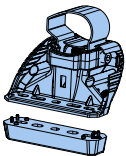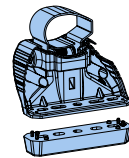


SA397
PS183

SA398
PS183

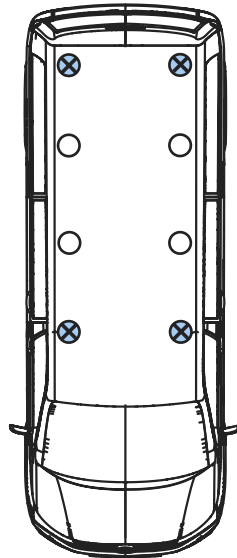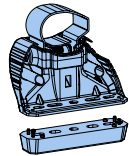


4.

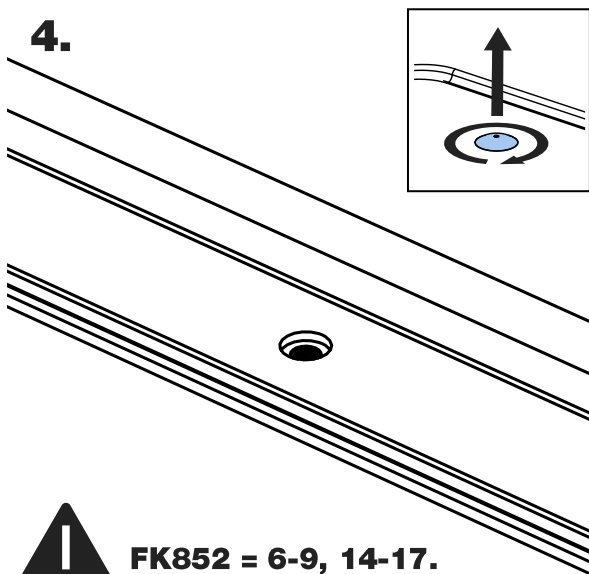

FK852 = 6-9, 14-17.

5.

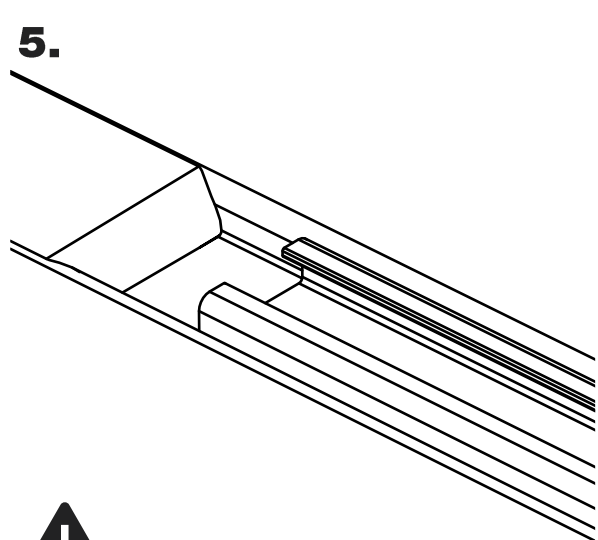

FK863 = 10-17.

