


TA3PR/FL





KammBar

Instructions

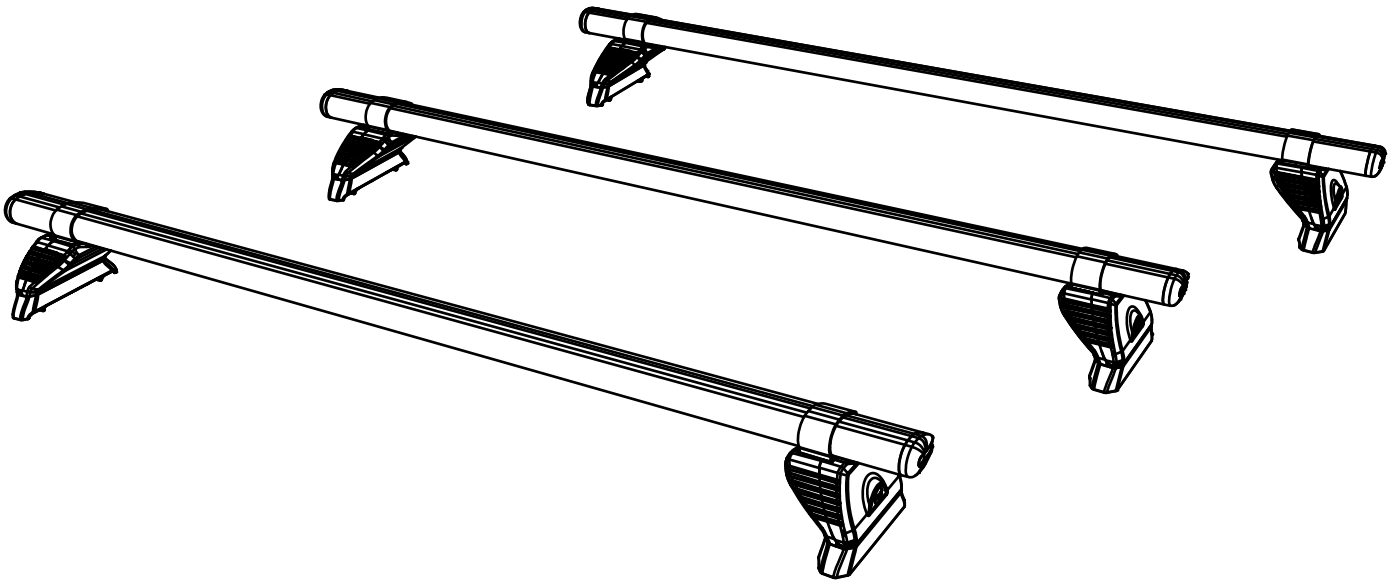


CITY CRASH (✓)


According to ISO/ PAS 11154:2006

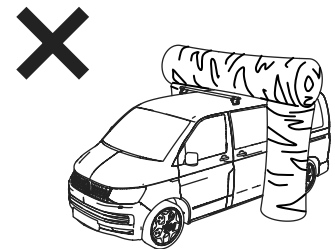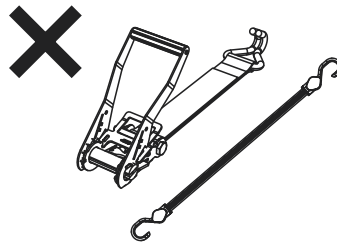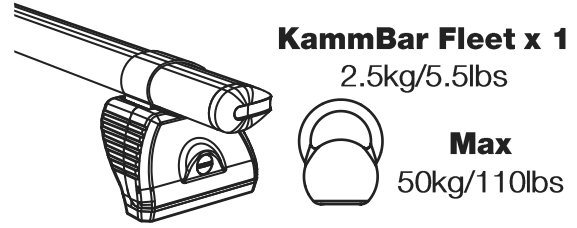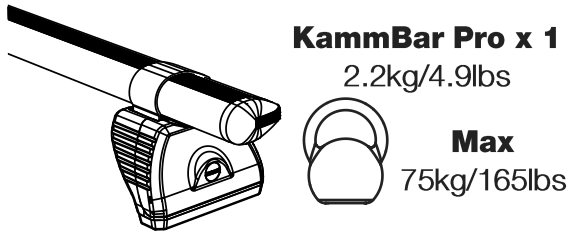


KammBar Pro

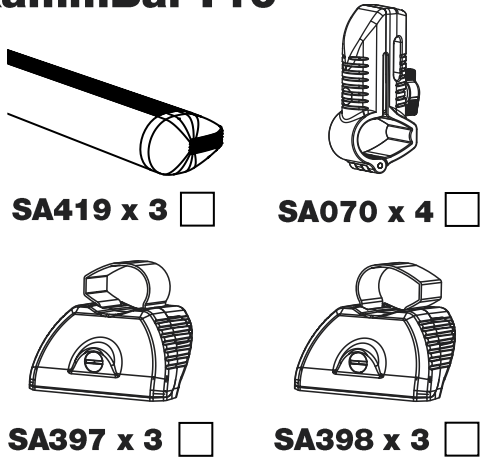

KammBar Fleet

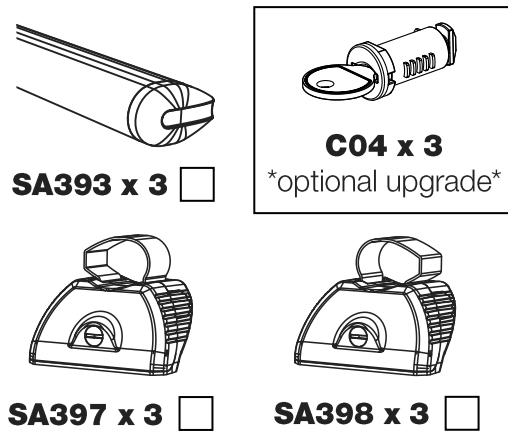

Fitting Kit

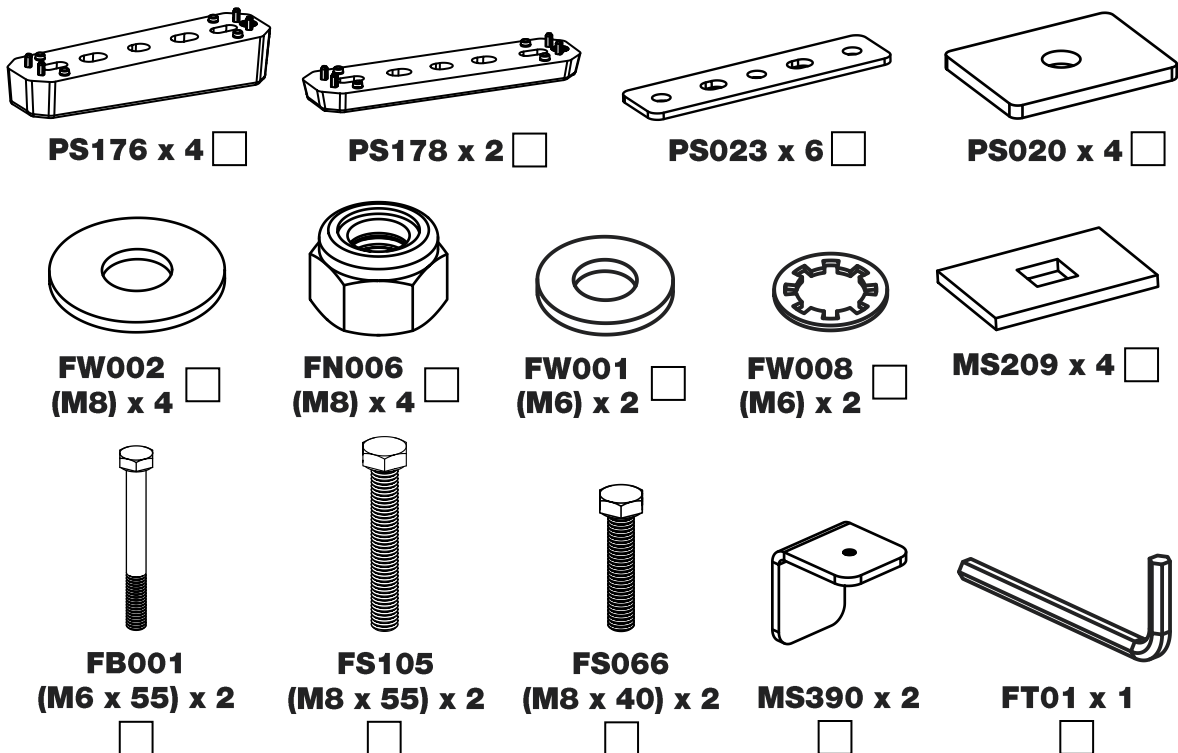


1.



2.




3.




SA397

PS176




SA397

PS178




SA397

PS176

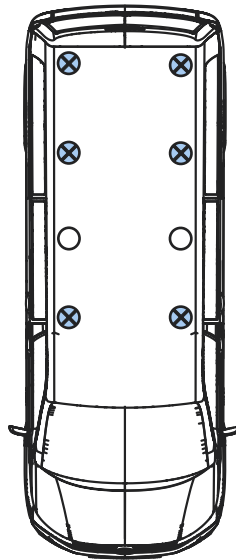


SA398




PS176

SA398





PS178

SA398



PS176

4.

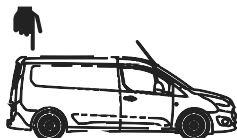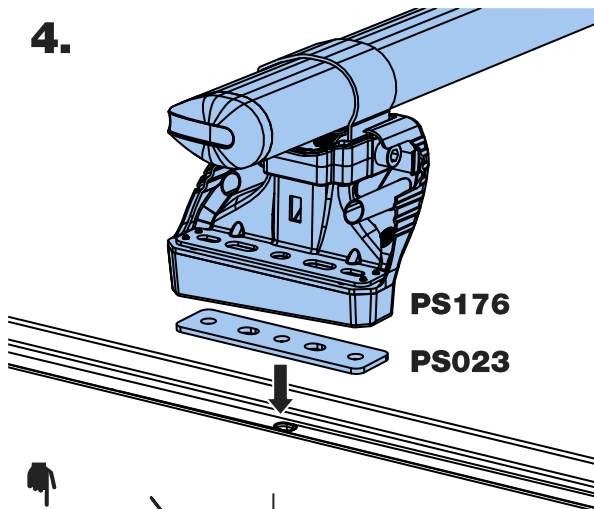

5.

