


TB2PR/FL






KammBar

Instructions

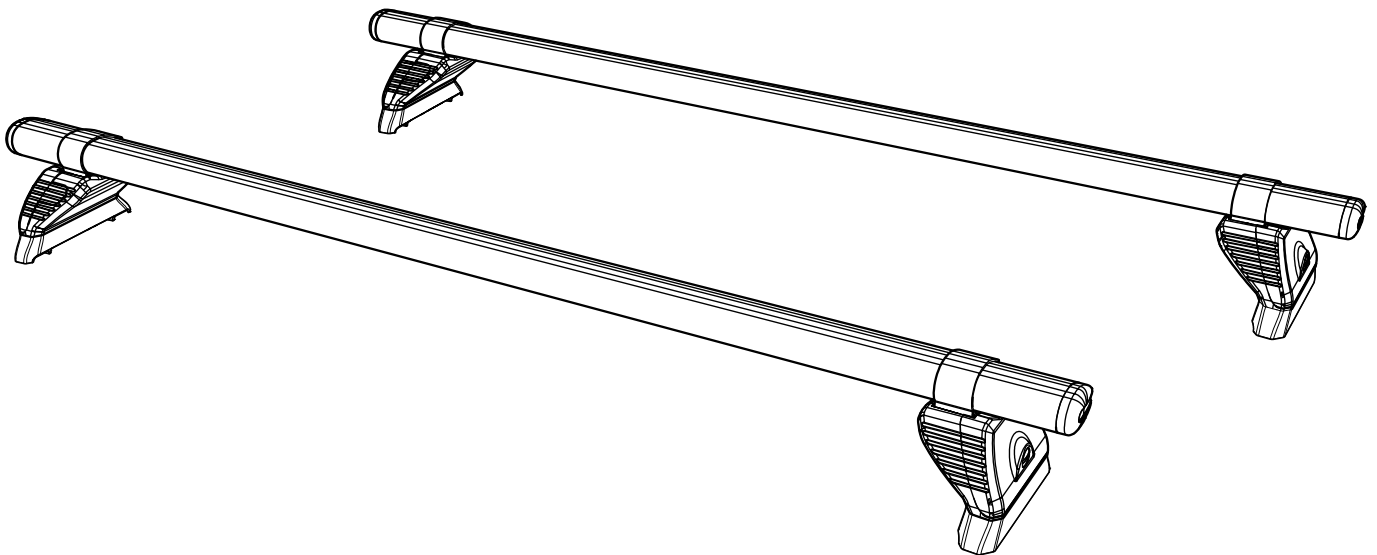


CITY CRASH (✓)


According to ISO/ PAS 11154:2006

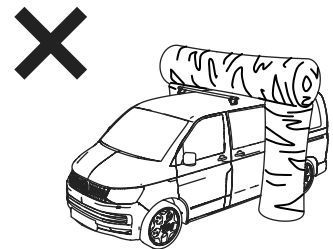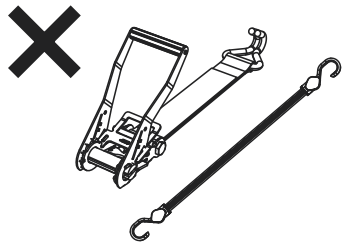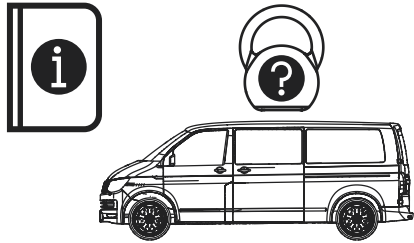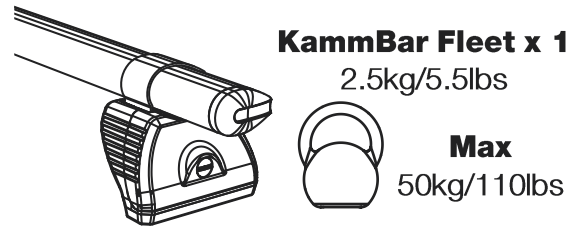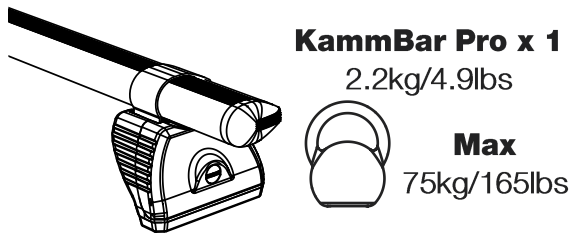


KammBar Pro

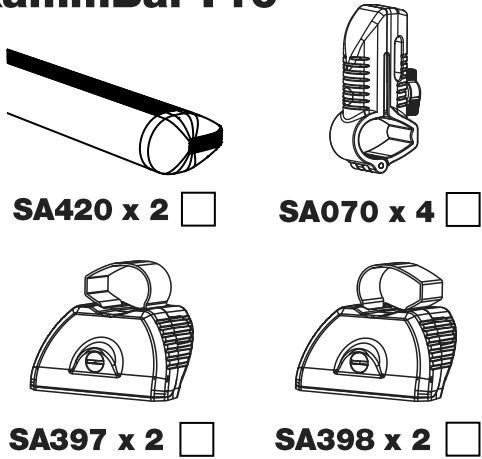


KammBar Fleet

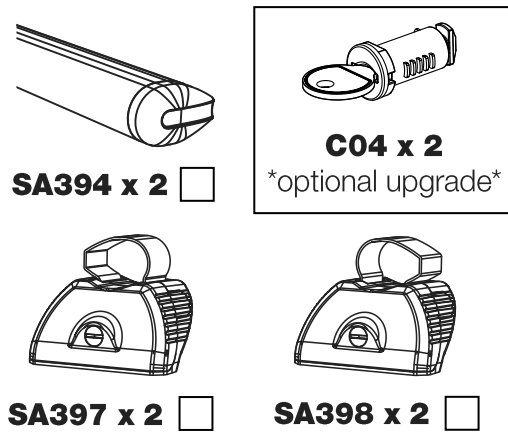


Fitting Kit

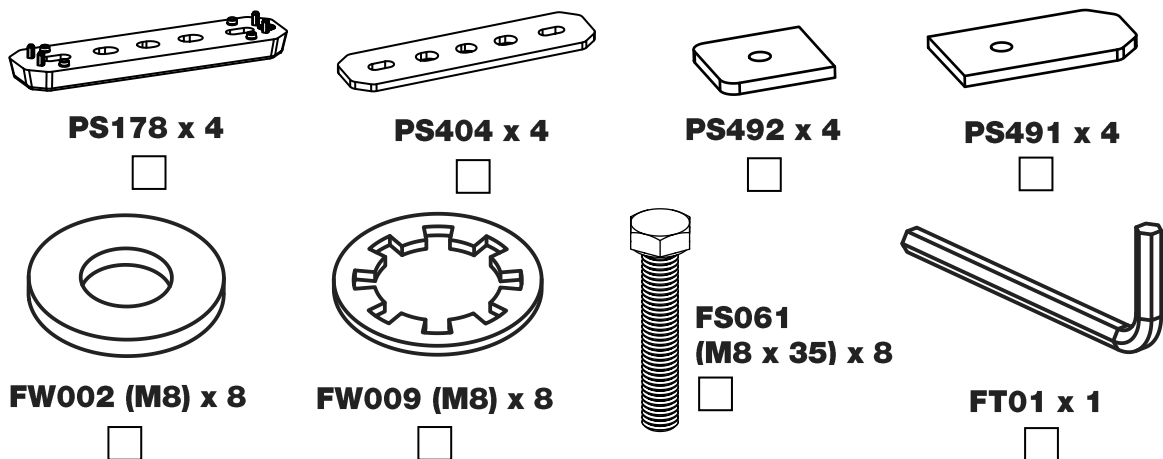


1.

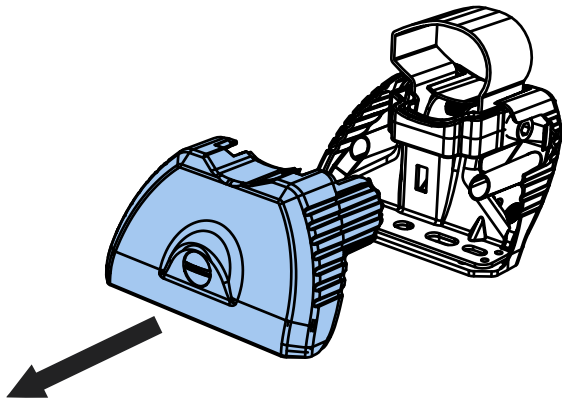


2.

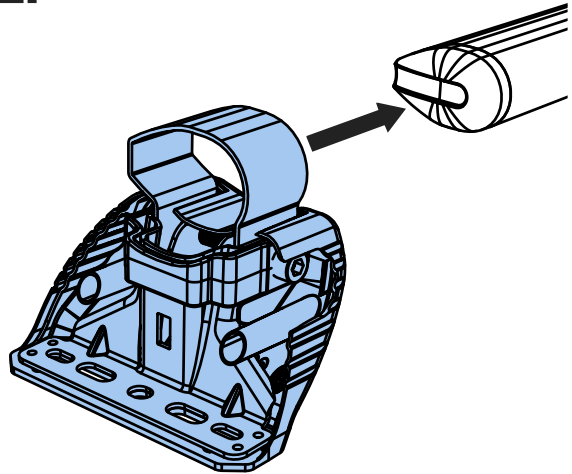



3.

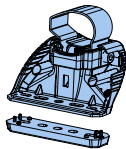

SA397
PS178

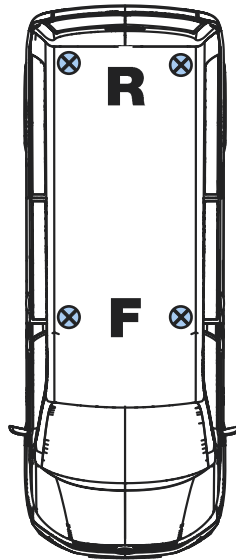


SA398
PS178

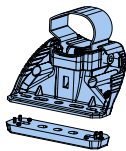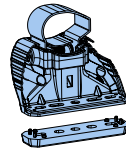


SA397
PS178


SA398
PS178

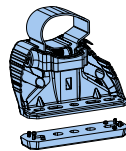


4.

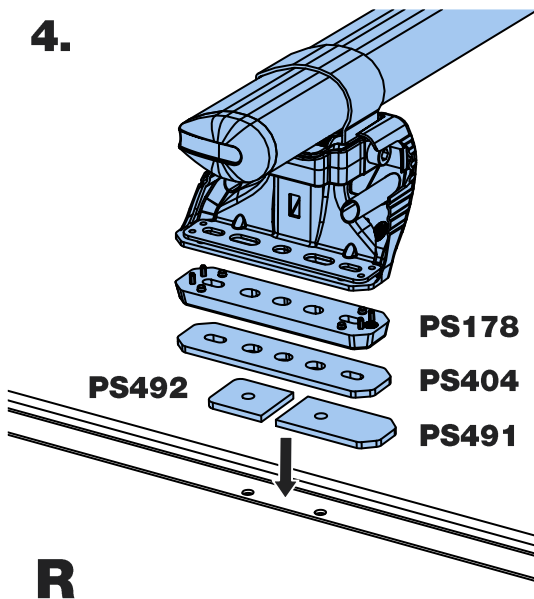


5.

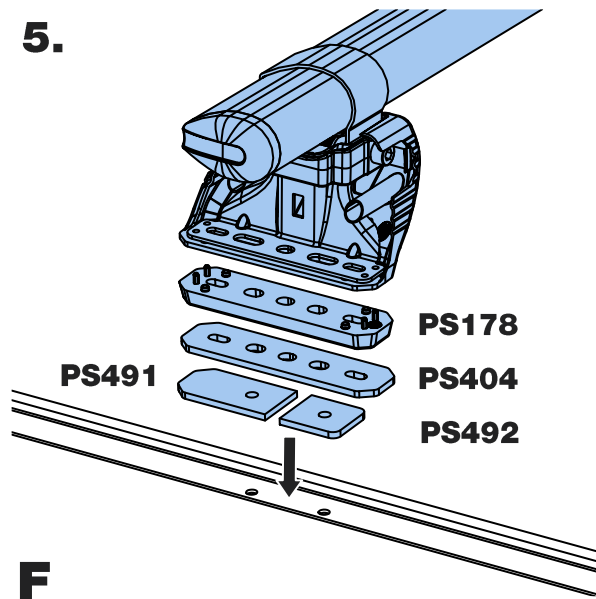


6.

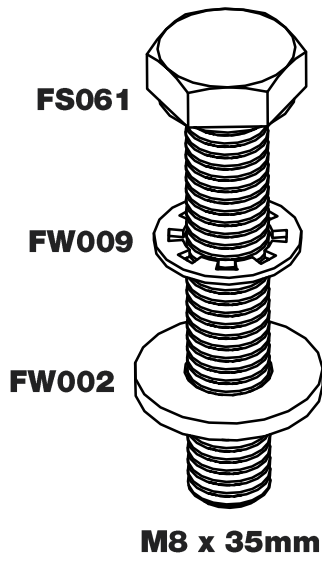


7.

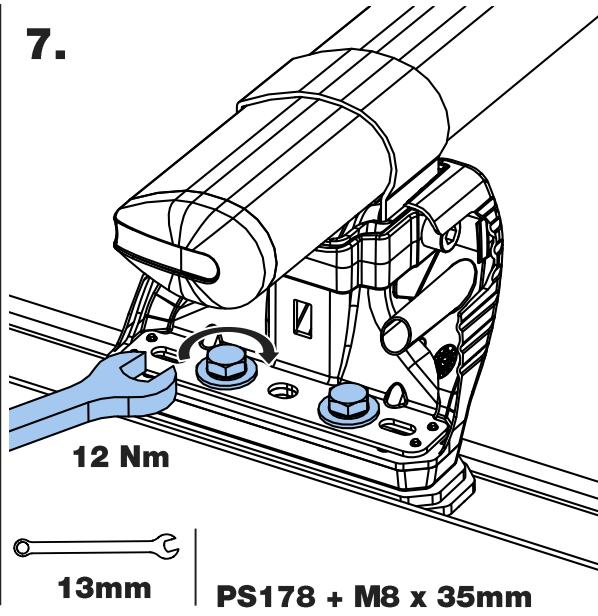


8.

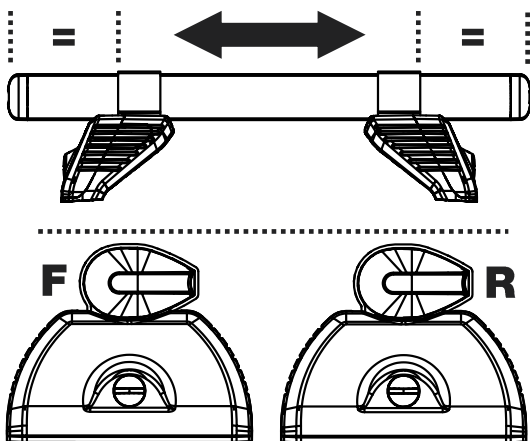

9.

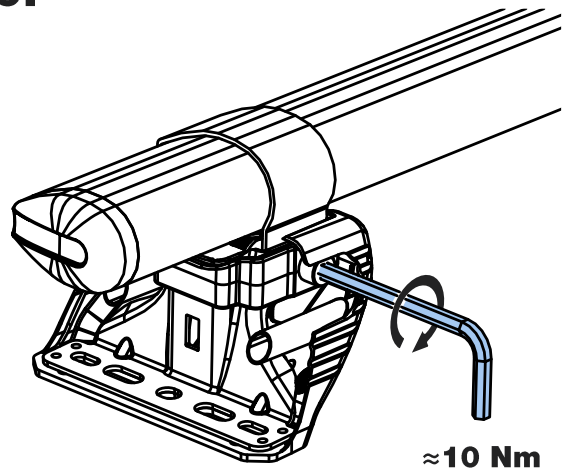

10.

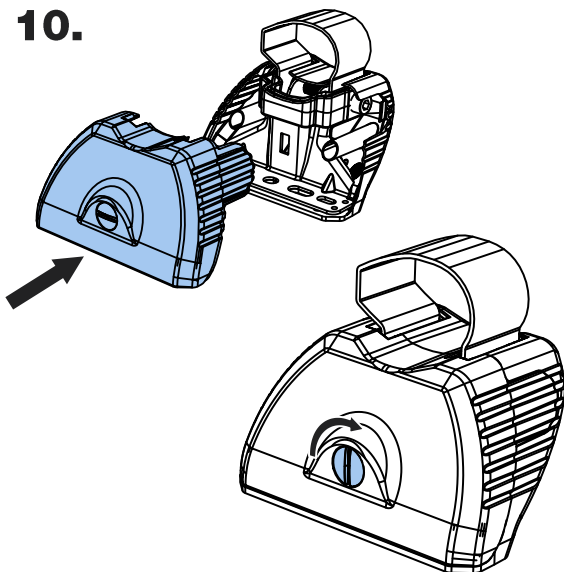

11.

