






<b>Issue:</b>	<b>Drawn By:</b>	<b>Checked By:</b>	<b>CRF No.:</b>	<b>Date:</b>	<b>Description:</b>
a	SJ	KB	3609	21/10/25	First Issue
b					
c					
d					

# VA4KE


# KammEdge.

## Instructions

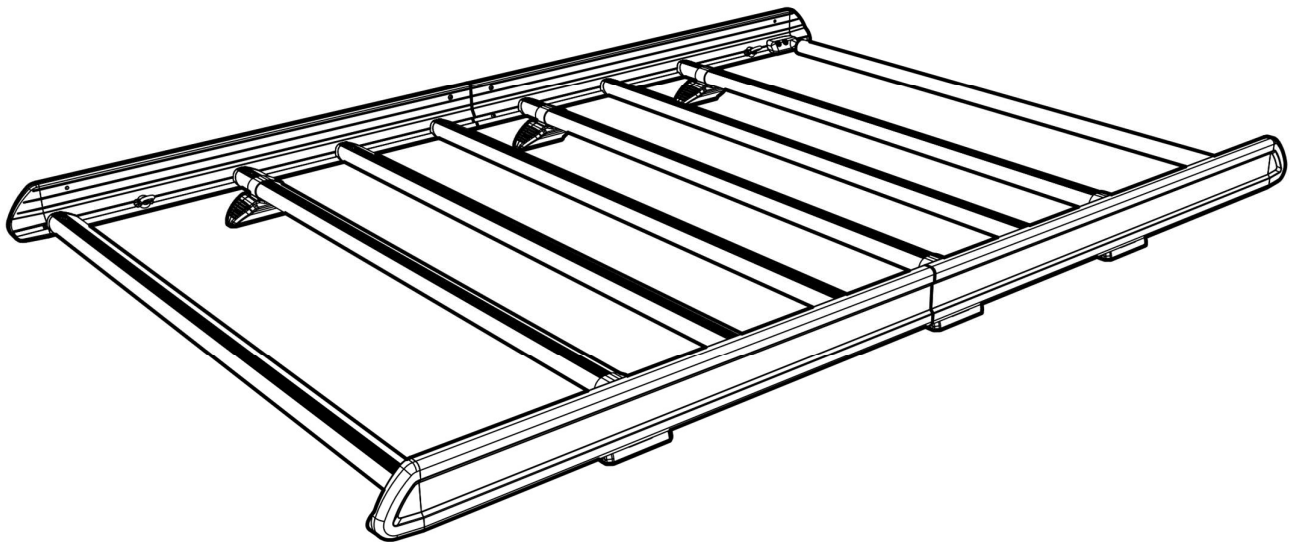


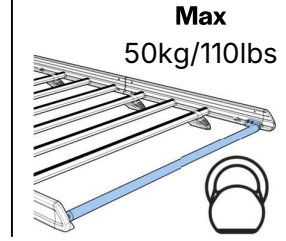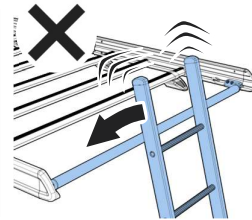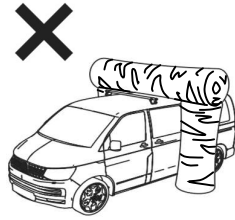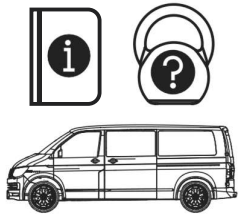

**KammEdge.**

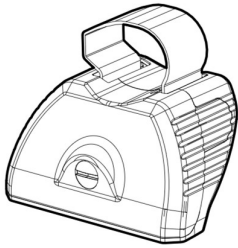

**SA397U x 4**

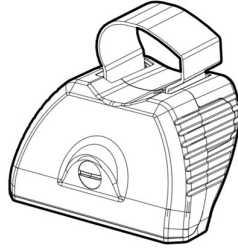


**SA398U x 4**




**SA430/SA468 x 7**




**SA438 x 1**

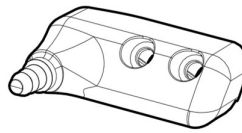

**PS519 x 1**

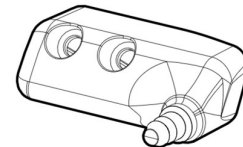


**PS520 x 1**

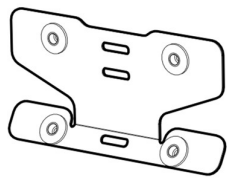


**SA610 x 2**




**PS635 x 2**

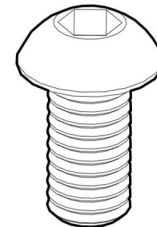

**FS323  
(M6 x 16) x 8**

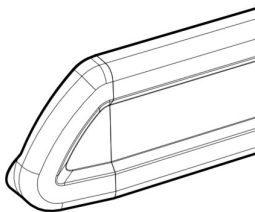

**LSF (L) x 2**

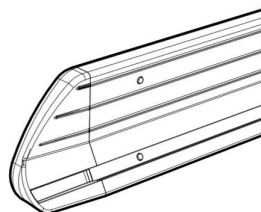


**LSF (R) x 2**




**C04 x 8  
\*optional upgrade\***


# Fitting Kit




SA069 x 6

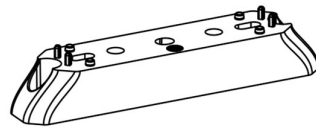


PS186 x 8




PS210 x 8

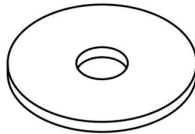


PS208 (M6) x 2



FW036 (M6) x 2



PS209 (M6) x 12

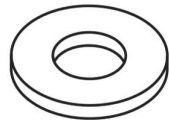

FW002 (M8) x 6




FW001 (M6) x 12



TP030 (M6) x 2




FT02 x 1



FT05 x 1



FT01 x 1

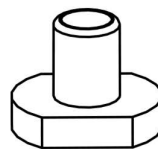

FN085 x 18




FS103  
(M6 x 25) x 12



FB001  
(M6 x 55) x 2




FS062  
(M8 x 25) x 6




FS059  
(M8 x 25) x 18




1.

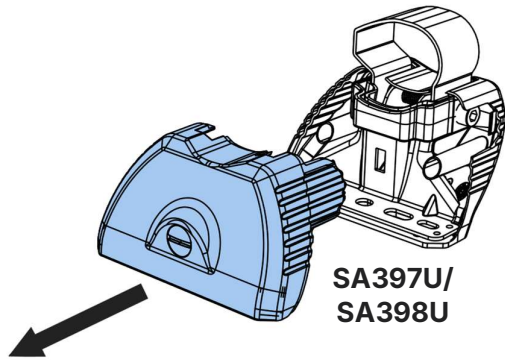


2.

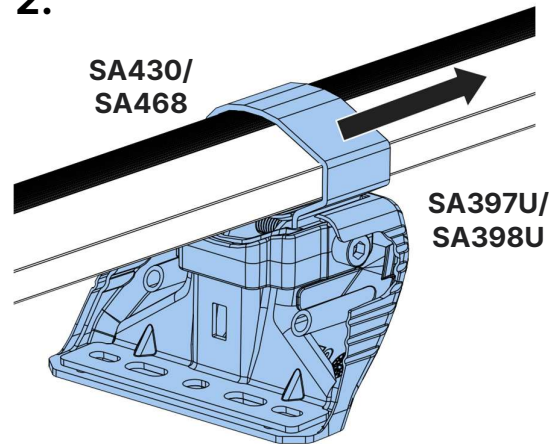


3.

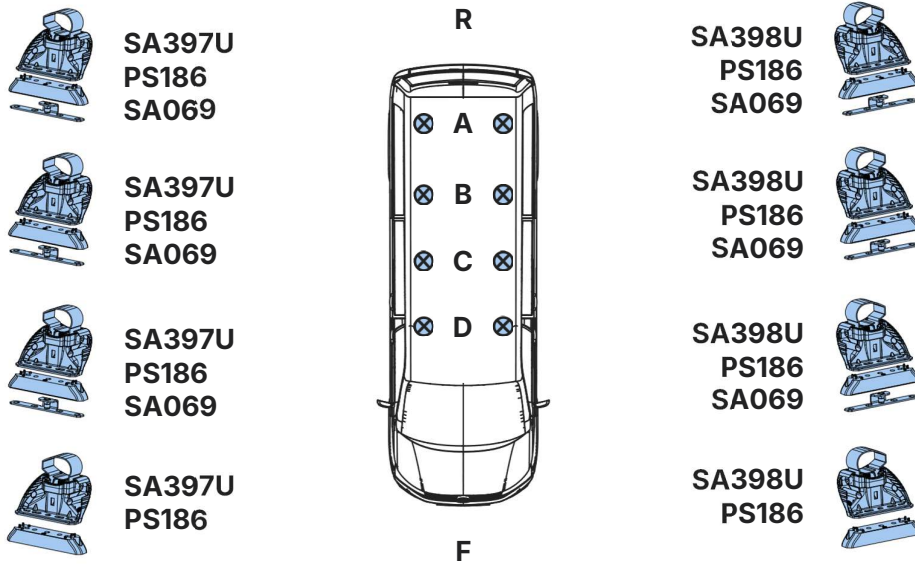


4.





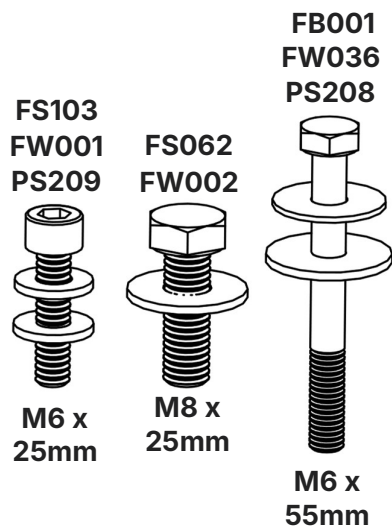








5a.



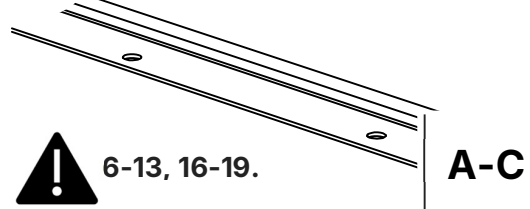



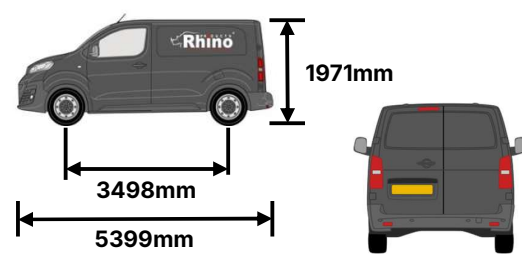
5b.

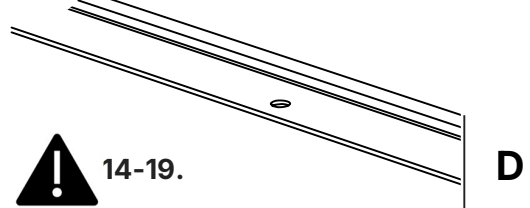

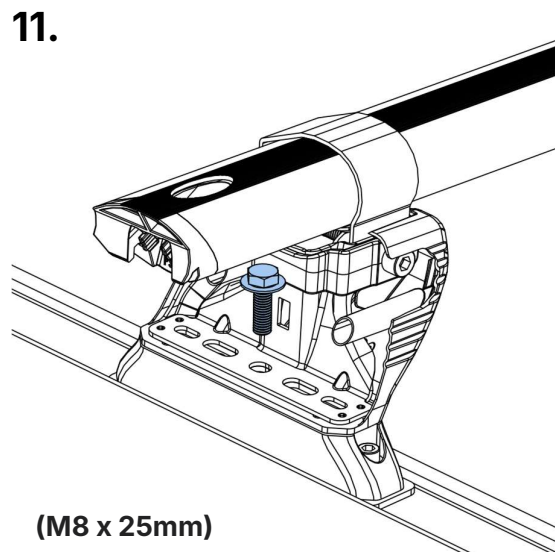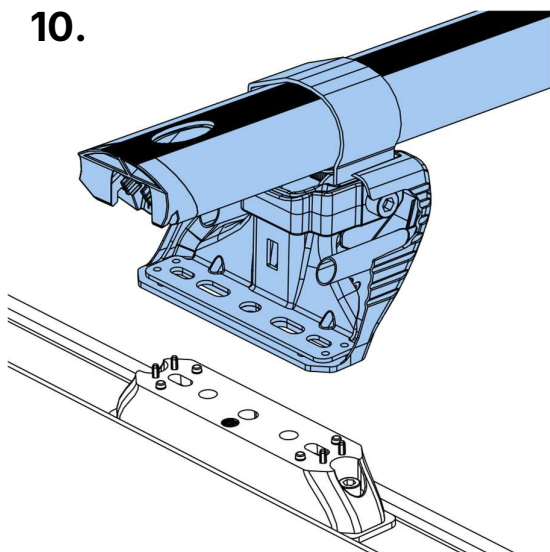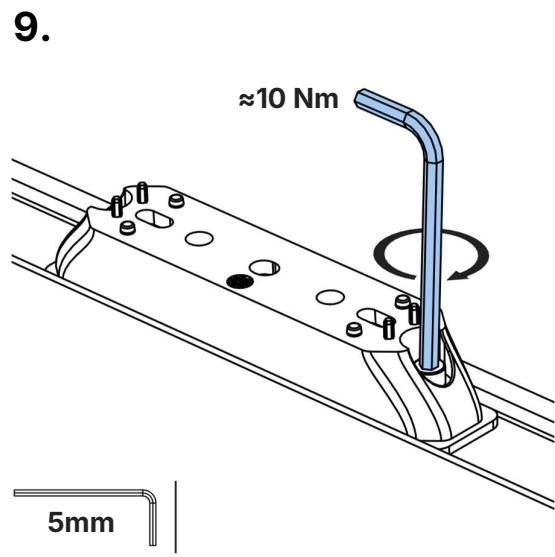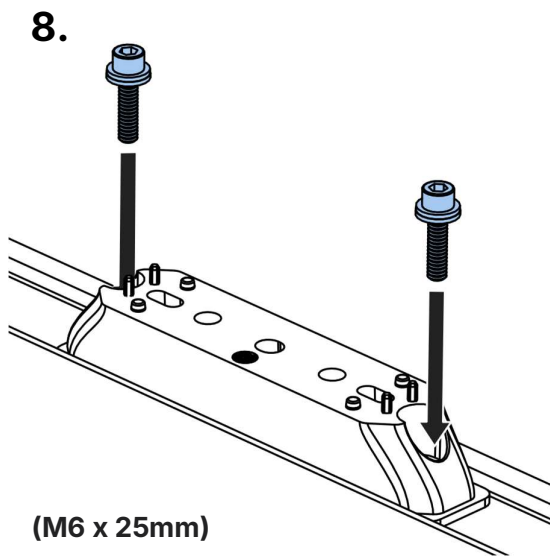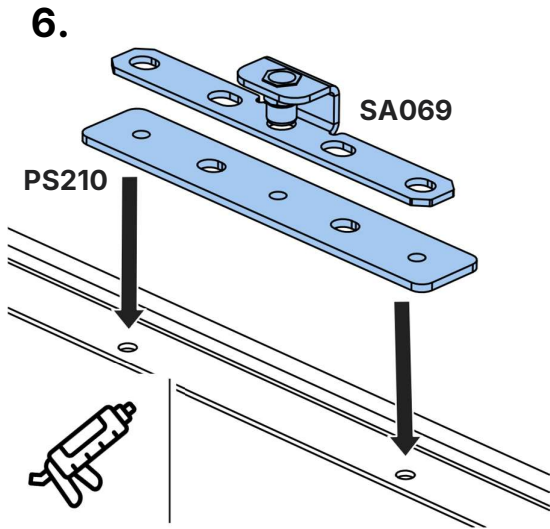
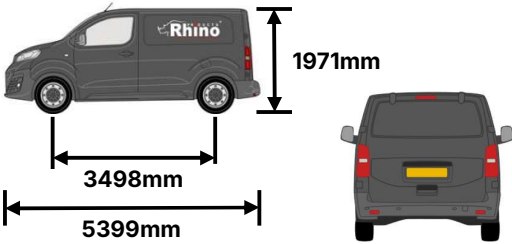


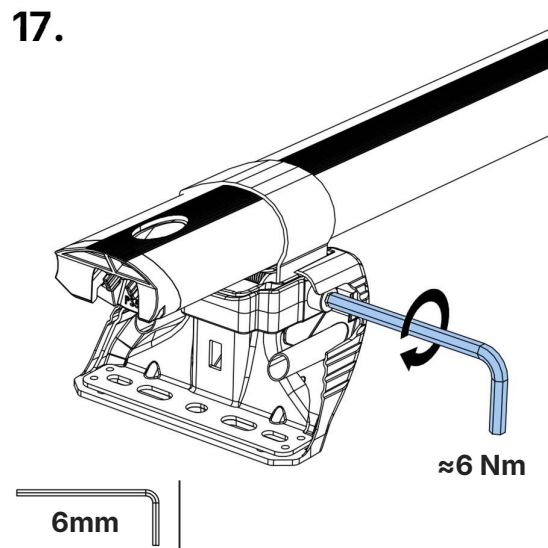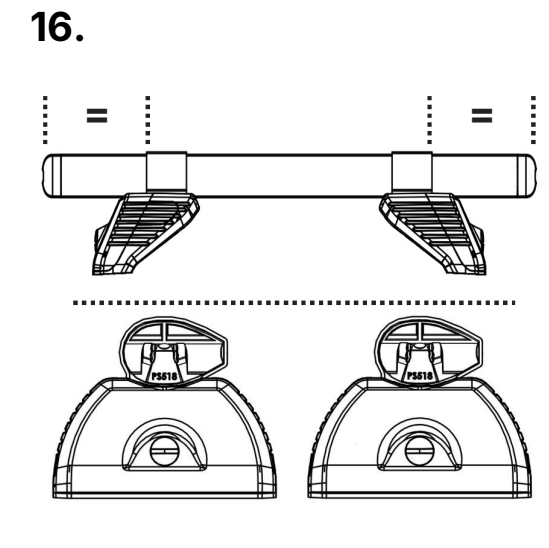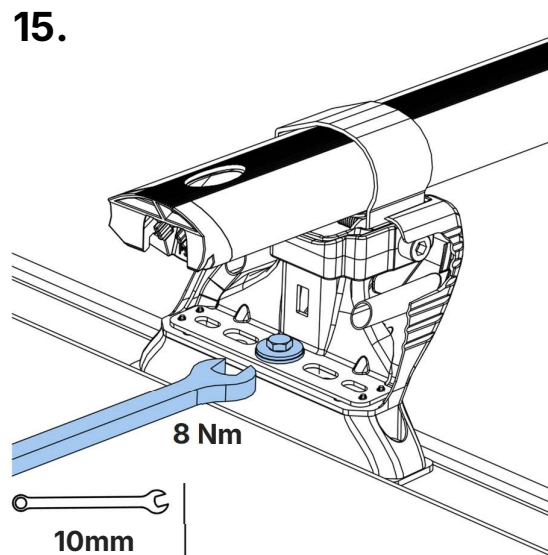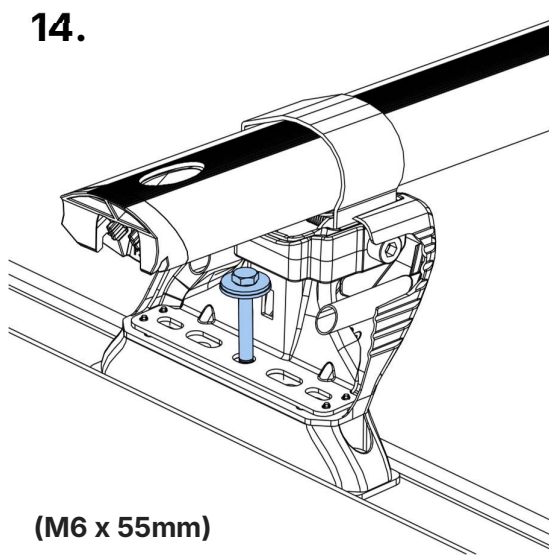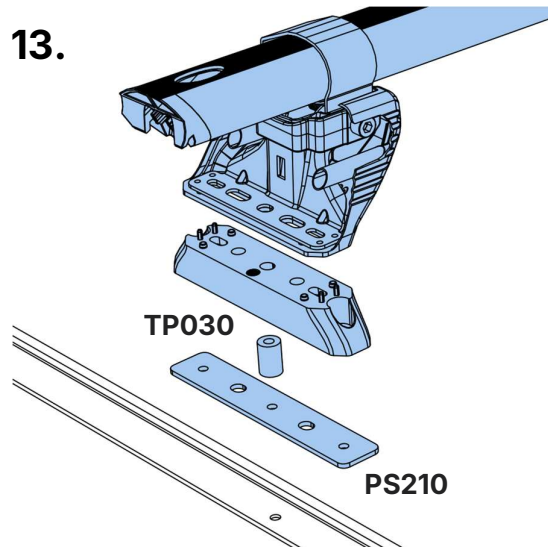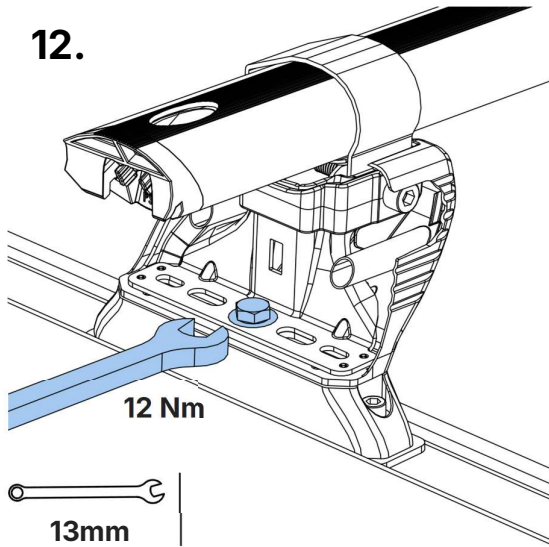

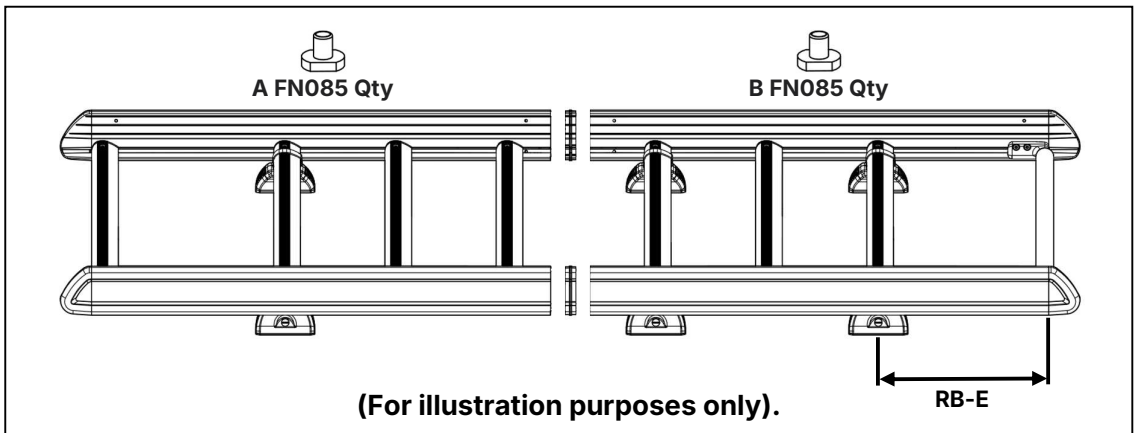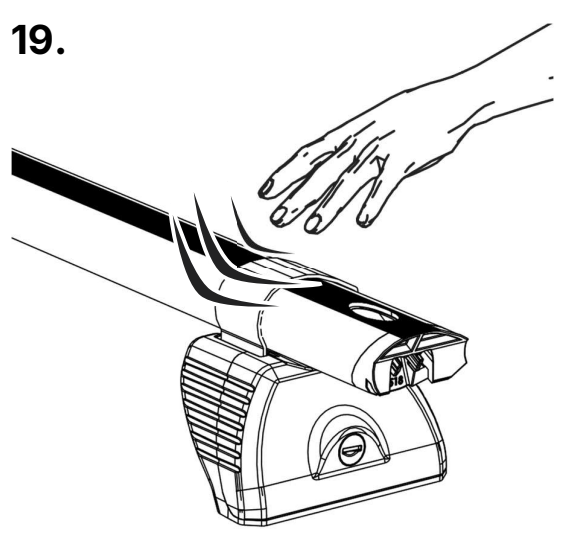
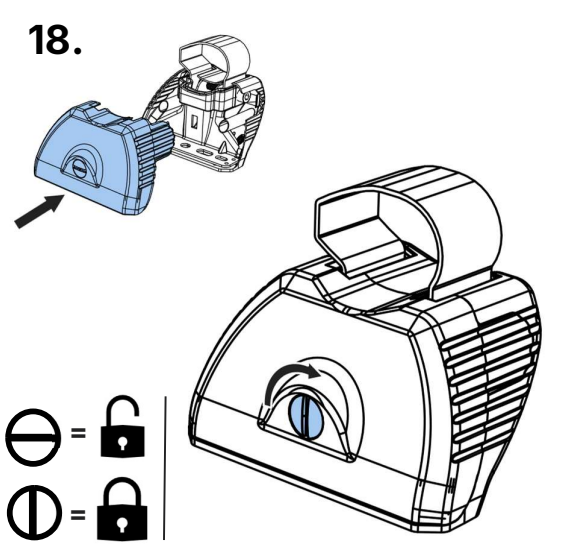


L631/LB631- Trafic 2014-, NV300/Primastar 2016-, Vivaro 2014-2019, Talento 2016-2021, L2-H1 (Twin)		
<p>Max Load = 150kg/330lbs</p>  <p>L631/LB631 = 28kg/62lbs</p>		
<b>A FN085 Qty</b>	<b>B FN085 Qty</b>	<b>Rear Bar – End (mm)</b>
4	5	420


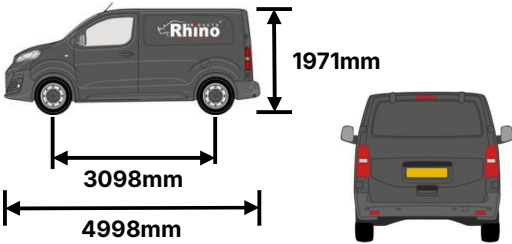
**L632/LB632- Trafic 2014-, NV300/Primastar 2016-, Vivaro 2014-2019, Talento 2016-2021, L2-H1 (Tailgate)**

<p>Max Load = 150kg/330lbs</p>  <p>L632/LB632 = 27kg/59lbs</p>			
<b>A FN085 Qty</b>	<b>B FN085 Qty</b>	<b>Rear Bar – End (mm)</b>	
3	6	220	

**L629/LB629- Trafic 2014-, NV300/Primastar 2016-, Vivaro 2014-2019, Talento 2016-2021, L1-H1 (Twin)**

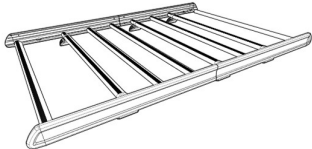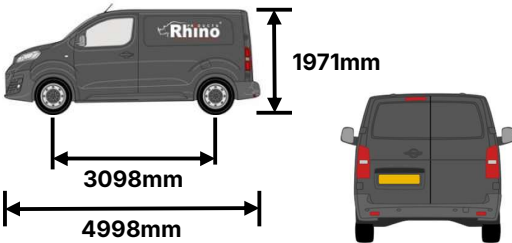
<p>Max Load = 150kg/330lbs</p>  <p>L629/LB629 = 27kg/59lbs</p>			
<b>A FN085 Qty</b>	<b>B FN085 Qty</b>	<b>Rear Bar – End (mm)</b>	
3	6	400	

**L630/LB630- Trafic 2014-, NV300/Primastar 2016-, Vivaro 2014-2019, Talento 2016-2021, L1-H1 (Tailgate)**


<p>Max Load = 150kg/330lbs</p>  <p>L630/LB630 = 26kg/58lbs</p>			
<b>A FN085 Qty</b>	<b>B FN085 Qty</b>	<b>Rear Bar – End (mm)</b>	
3	6	240	




26.

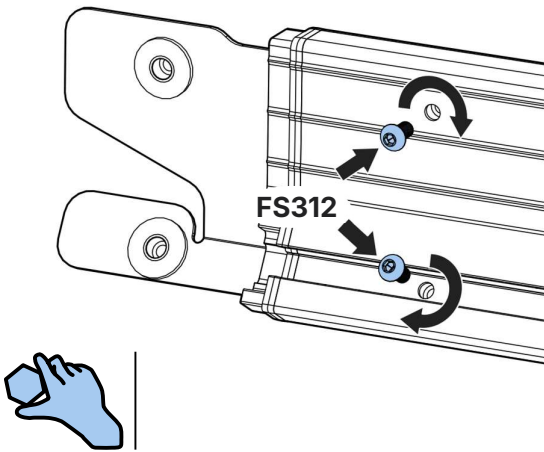


27.

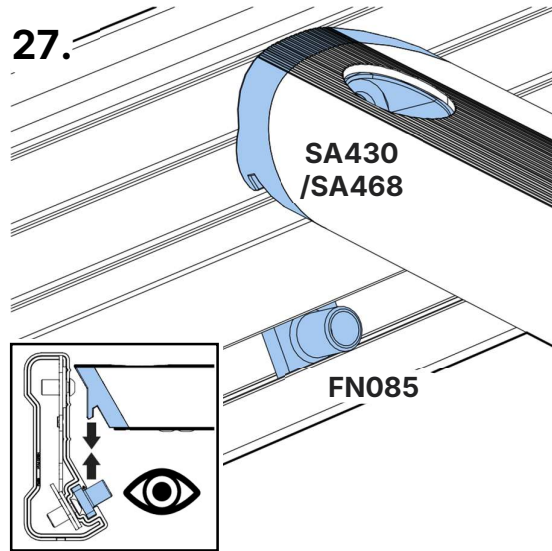


28.

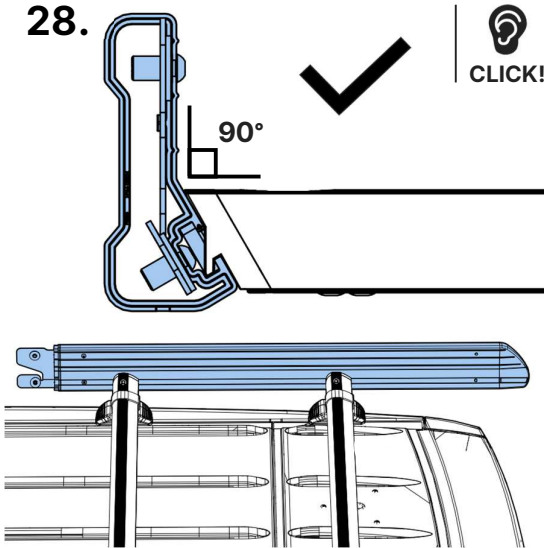

29.

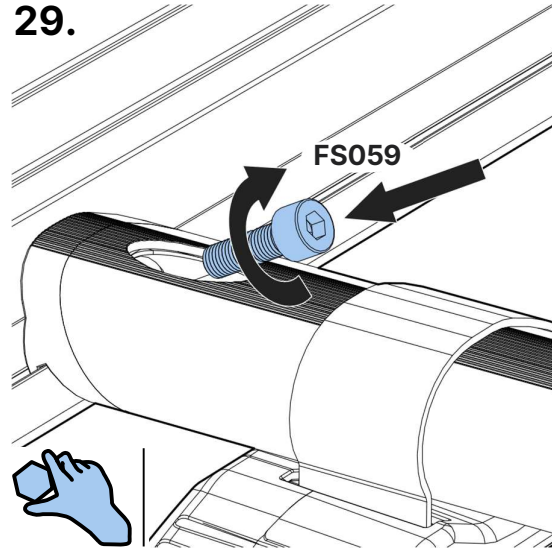

30.

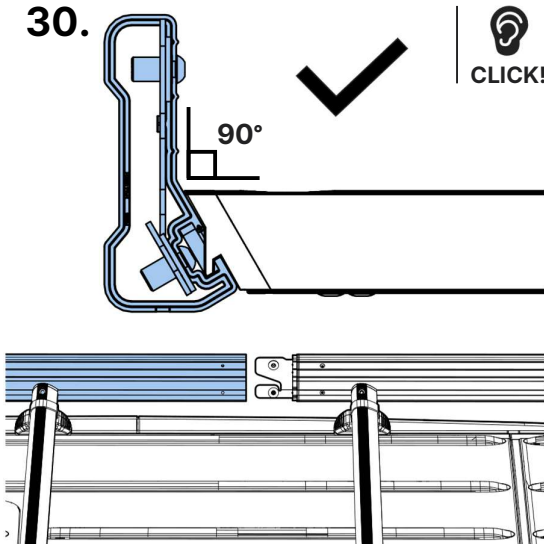

31.

