



Issue:	Drawn By:	Checked By:	CRF No.:	Date:	Description:
a	SJ	KB	3609	21/10/25	First Issue
b					
c					
d					

WD3KE


KammEdge.

Instructions

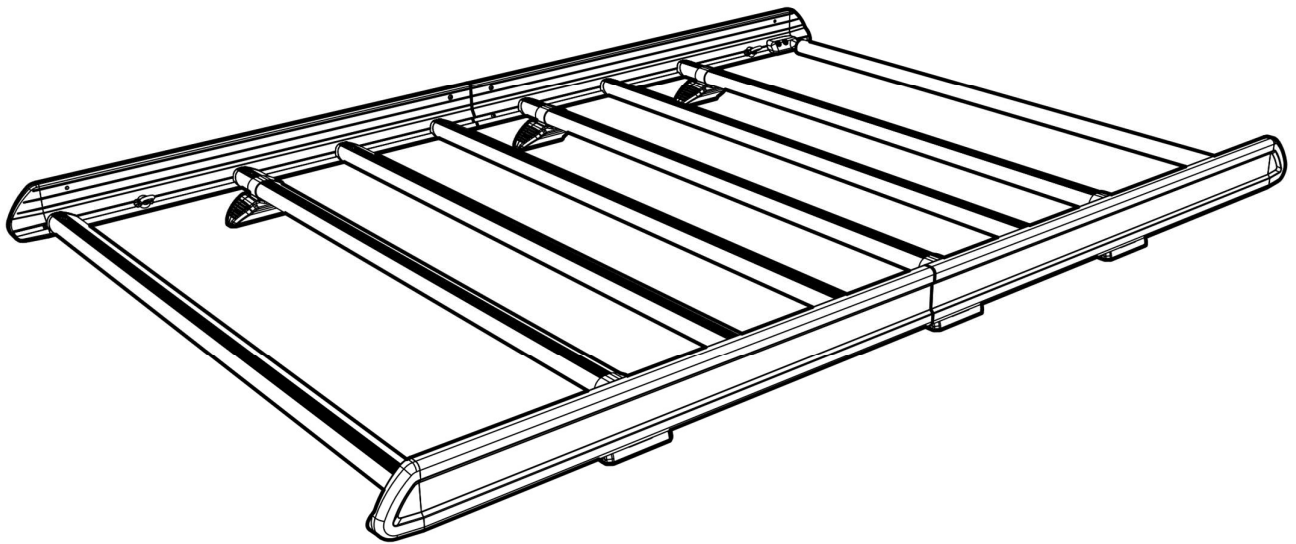


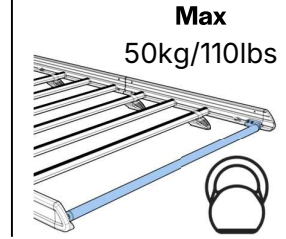

KammEdge.

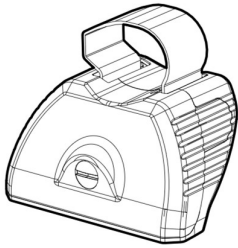

SA397U x 3

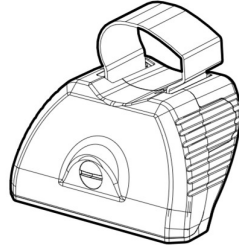


SA398U x 3




SA428/SA466 x 6




SA436 x 1

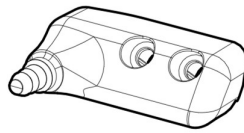

PS519 x 1

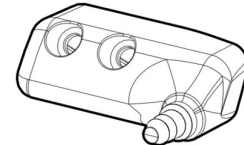


PS520 x 1

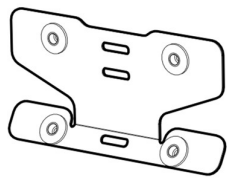


SA610 x 2




PS635 x 2

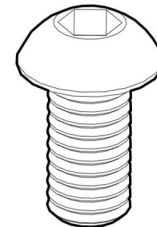

**FS323
(M6 x 16) x 8**

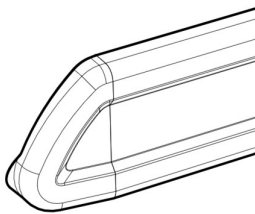

LSF (L) x 2

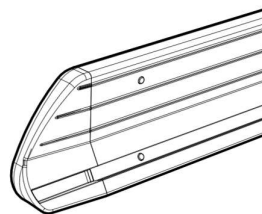


LSF (R) x 2




**C04 x 6
*optional upgrade***


Fitting Kit




PS030 x 4



PS178 x 2




PS176 x 4

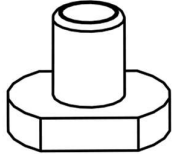


FN085 x 16




FW008 (M6) x 10

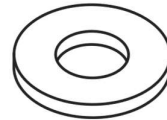


FW001 (M6) x 10

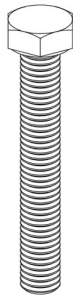


FS042
(M6 x 40) x 4




FB007
(M6 x 45) x 4




FS039
(M6 x 30) x 2




FT01 x 1



FT05 x 1



FS038
(M6 x 25) x 2



PS031 x 4




FS059
(M8 x 25) x 16




1.




2.

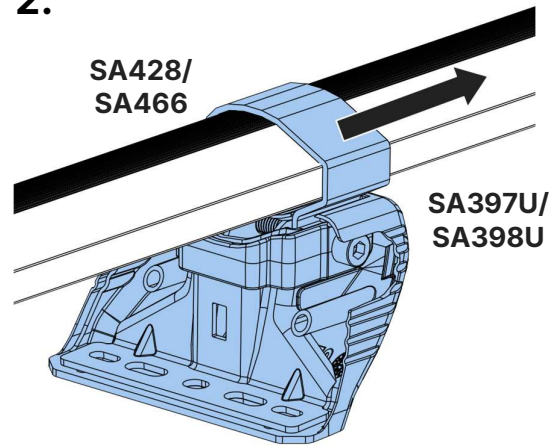


3.






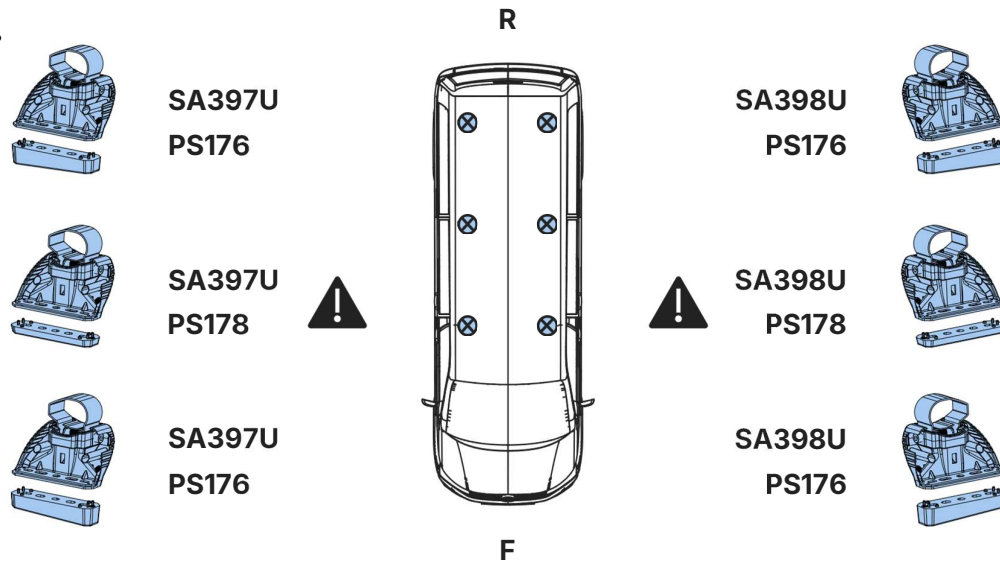


4.

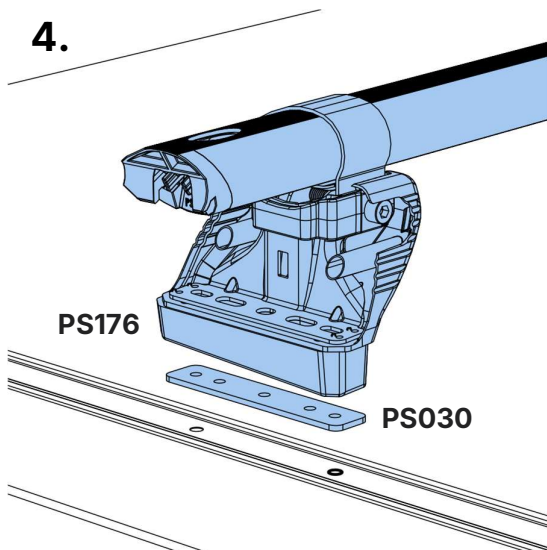


5.


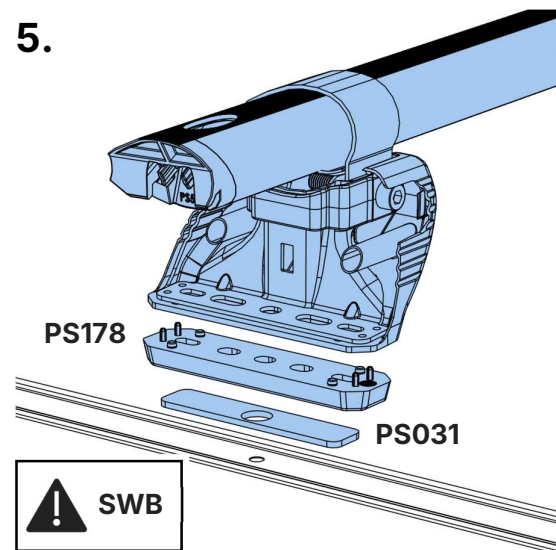


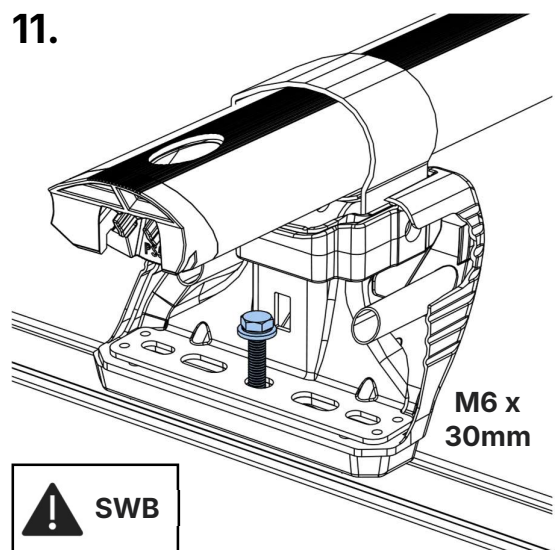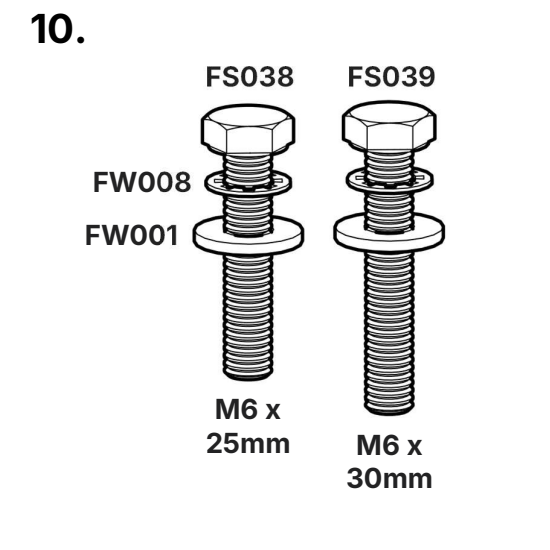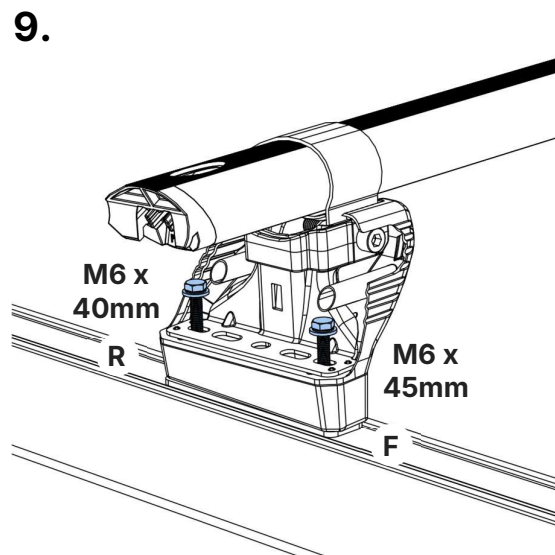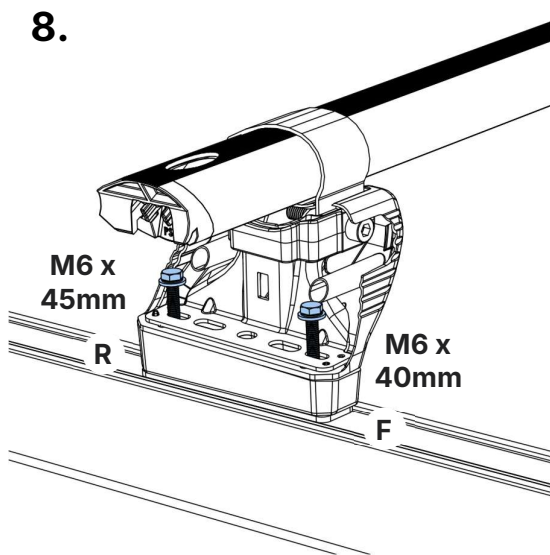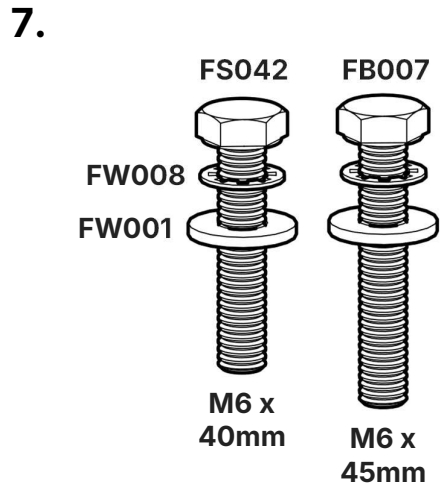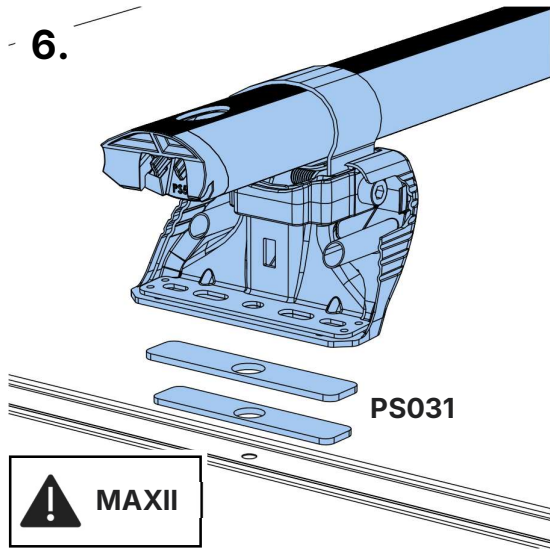


12.

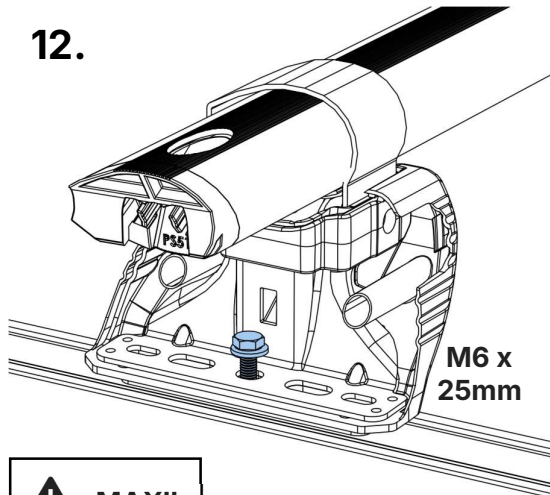


13.

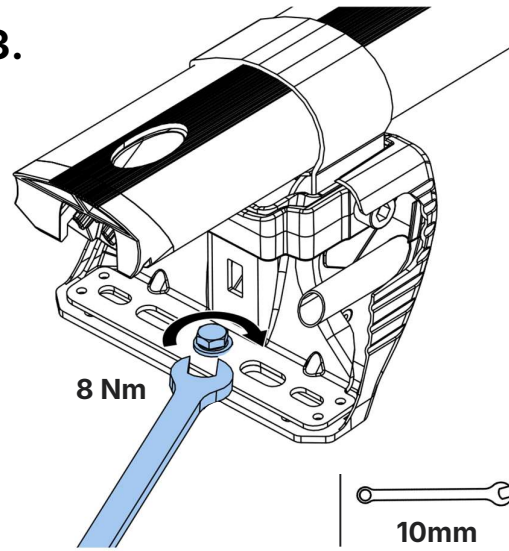


14.

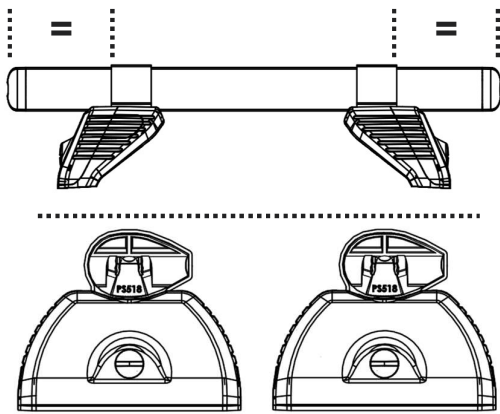

15.

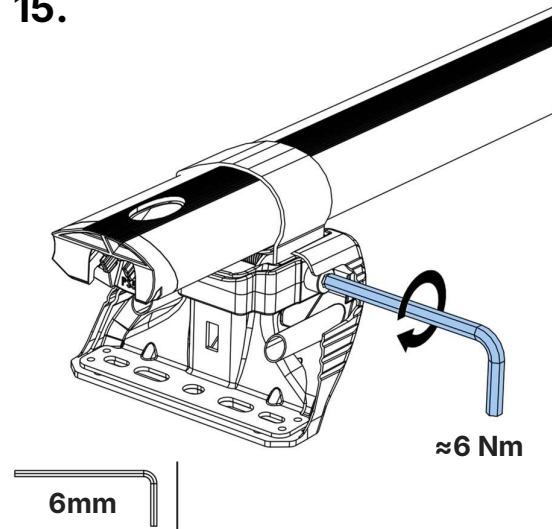


16.

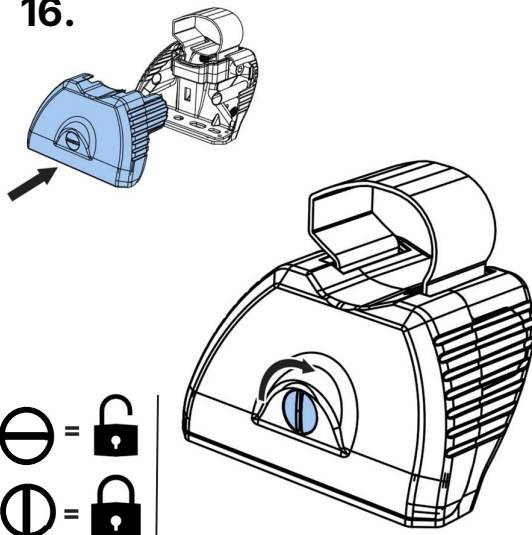

17.




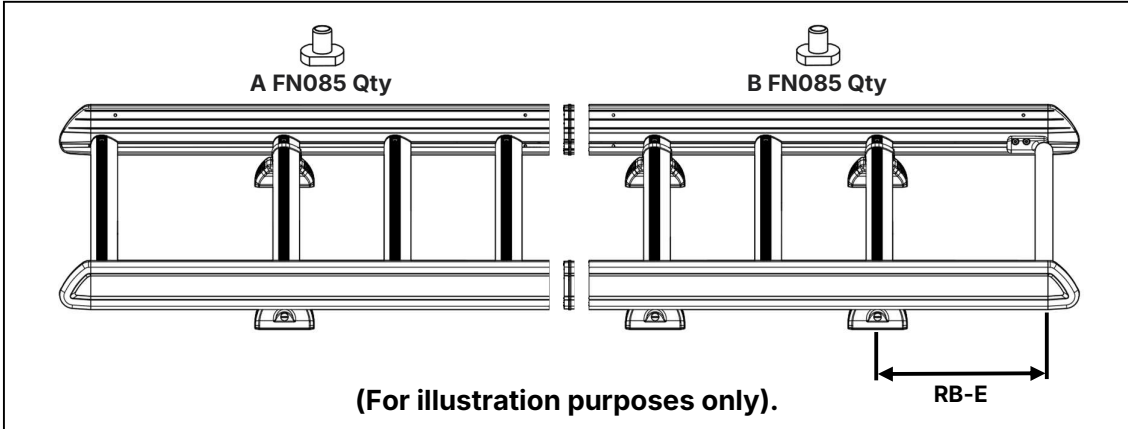


L602/LB602- Doblo 2010-2022, Combo 2012-2018, L1-H1 (Twin)		
<p style="text-align: center;">Max Load = 150kg/330lbs</p> <p style="text-align: center;">L602/LB602 = 19kg/42lbs</p>		
A FN085 Qty	B FN085 Qty	Rear Bar – End (mm)
3	5	325

L603/LB603- Doblo 2010-2022, Combo 2012-2018, L2-H1 (Twin)		
<p style="text-align: center;">Max Load = 150kg/330lbs</p> <p style="text-align: center;">L603/LB603 = 20kg/44lbs</p>		
A FN085 Qty	B FN085 Qty	Rear Bar – End (mm)
4	4	342


24.

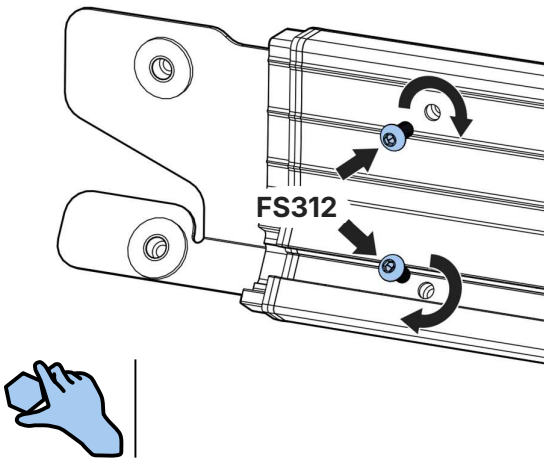


25.

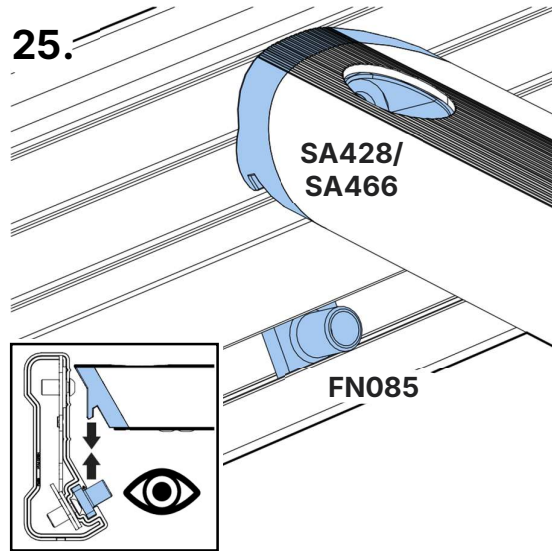


26.

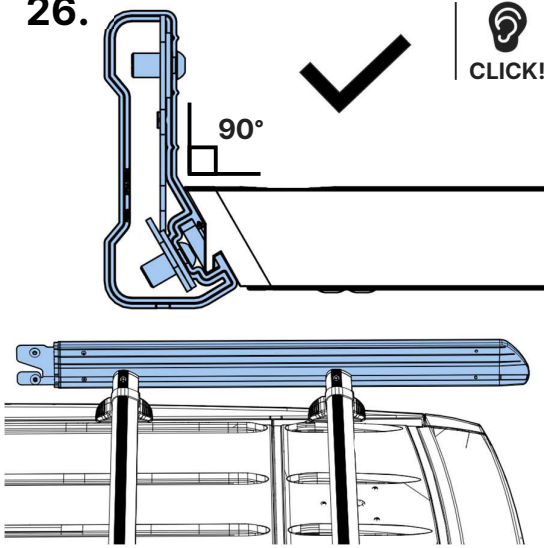

27.

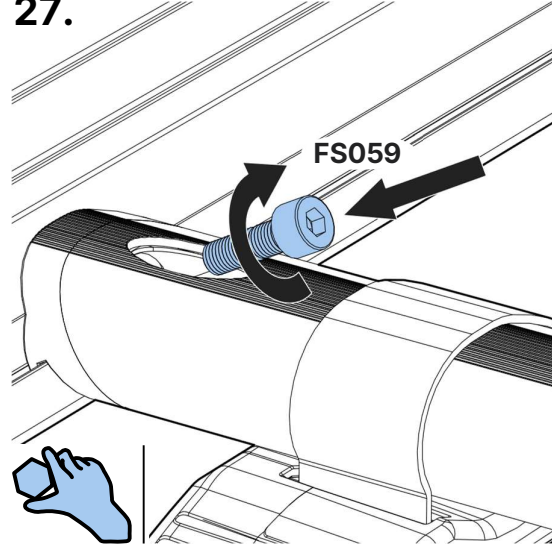

28.

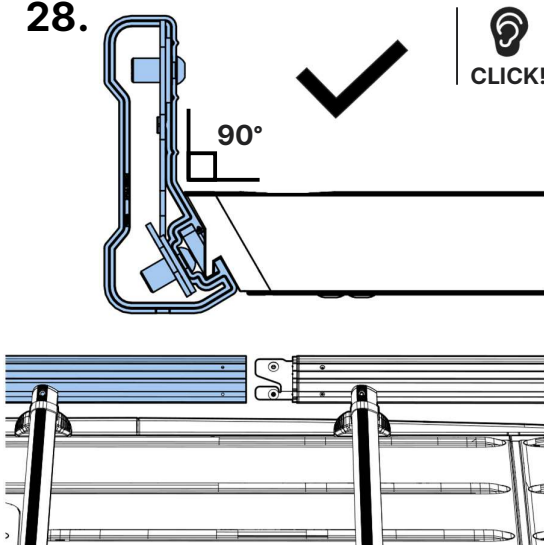

29.

