


XC4PR/FL





KammBar

Instructions

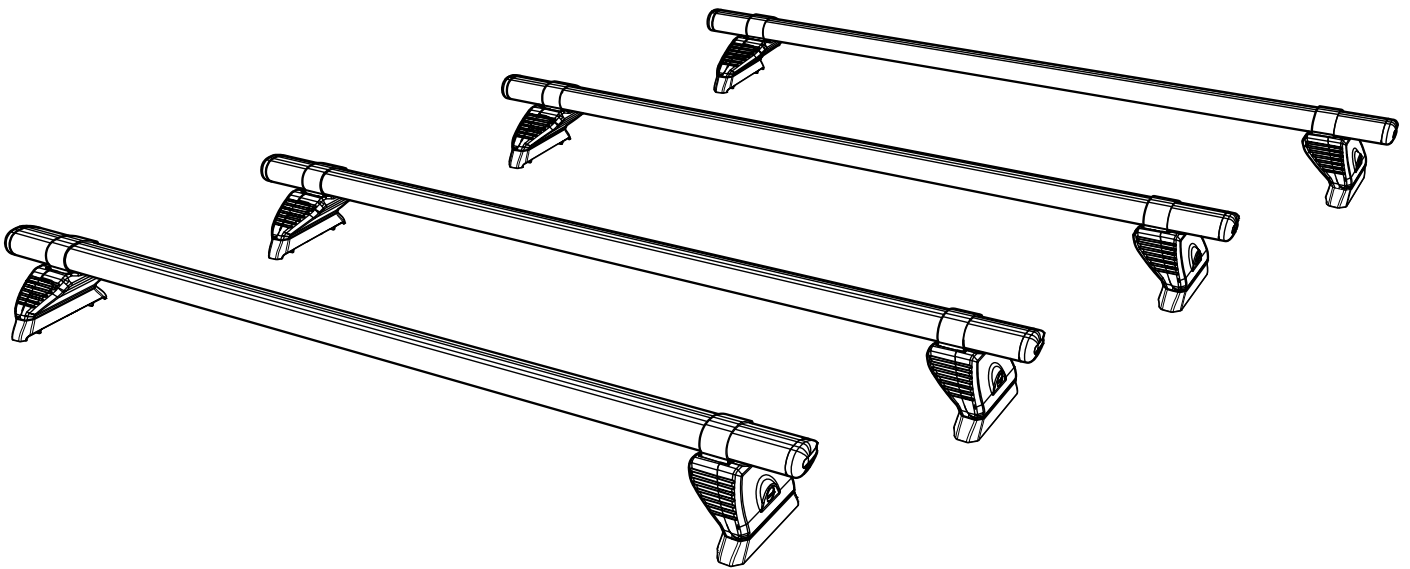


CITY CRASH (✓)


According to ISO/ PAS 11154:2006

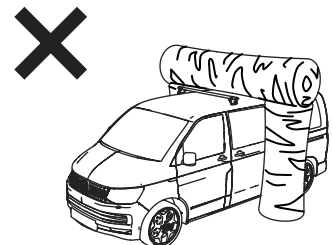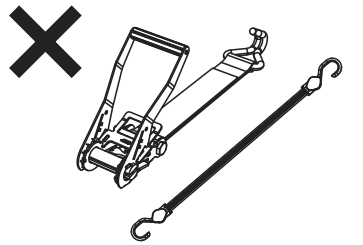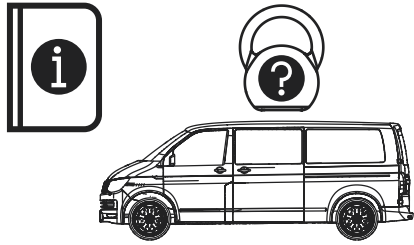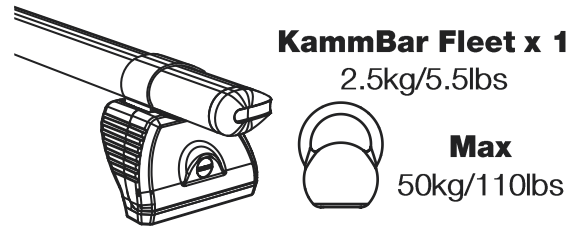


KammBar Pro

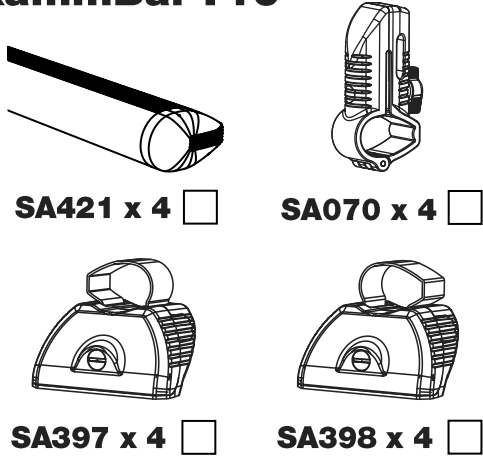


KammBar Fleet

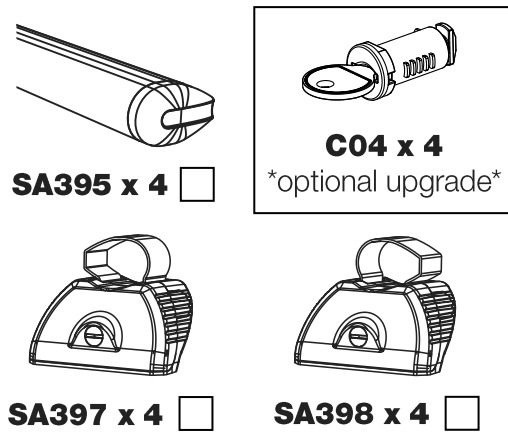






Fitting Kit

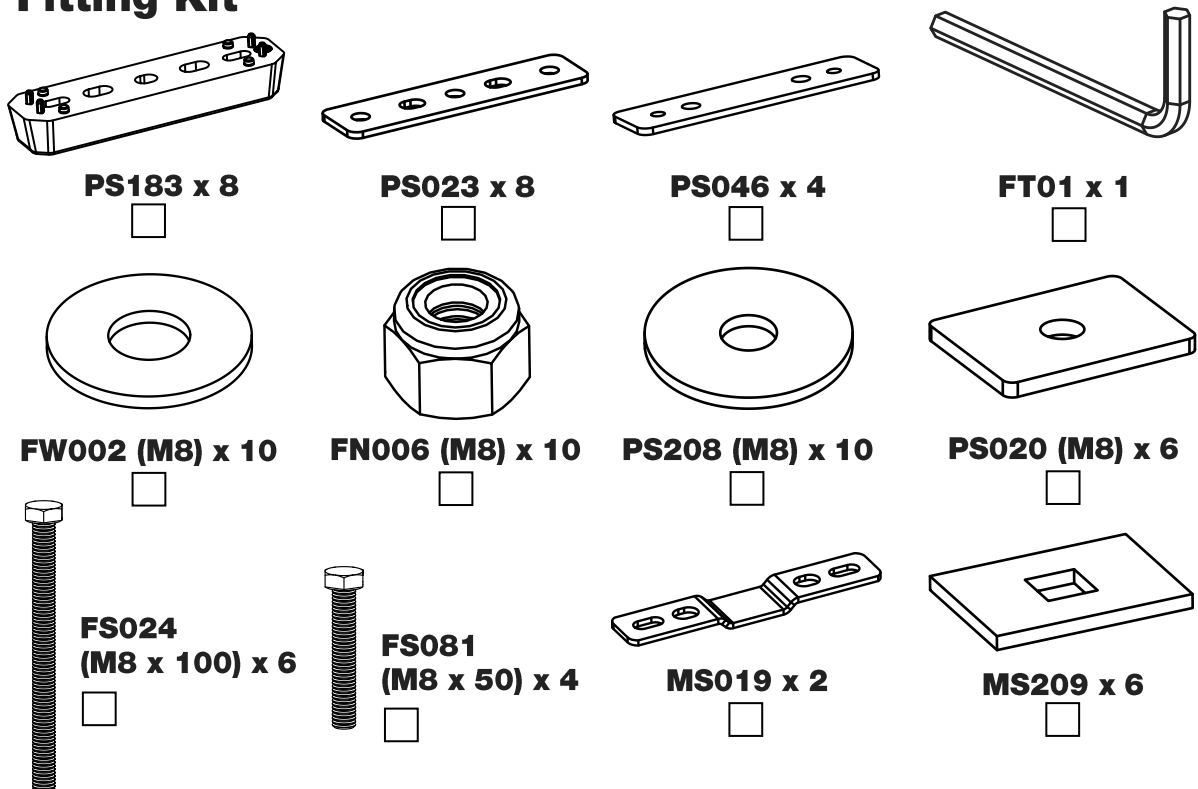


1.

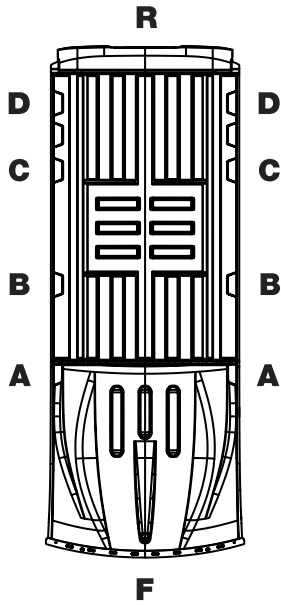


2.

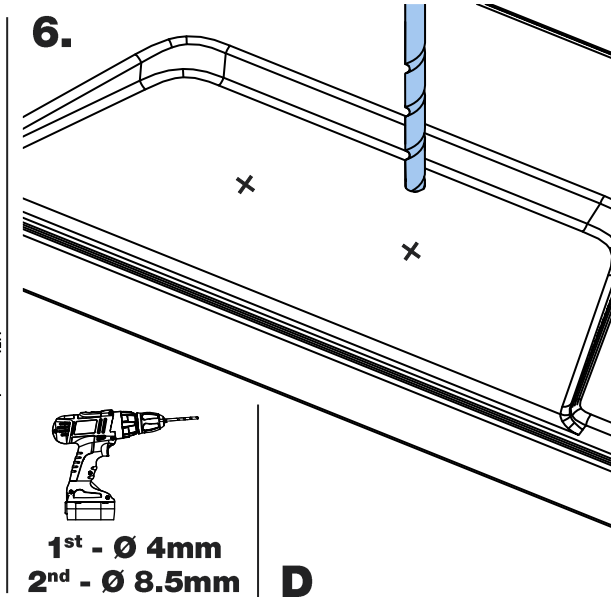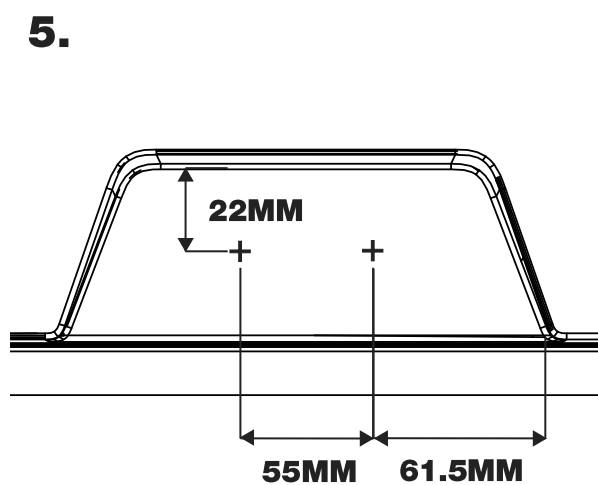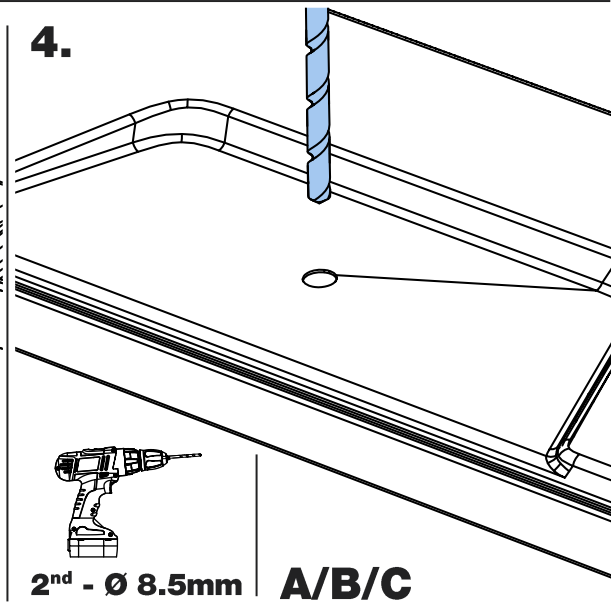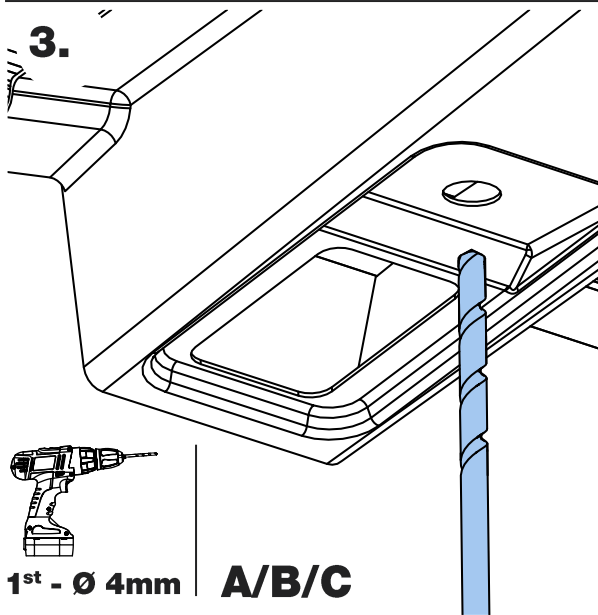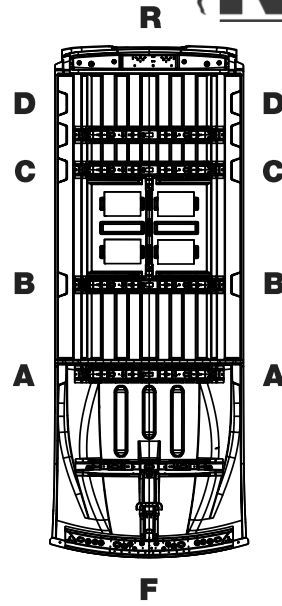


7.

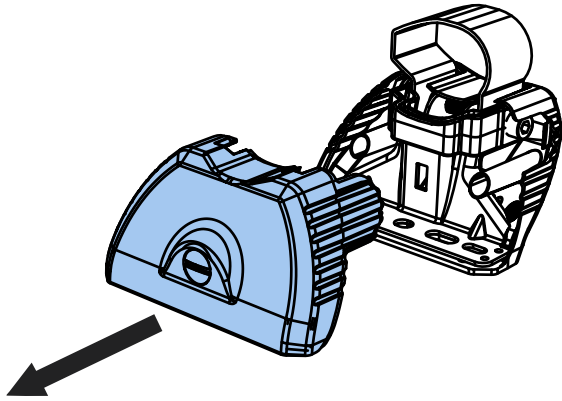


8.

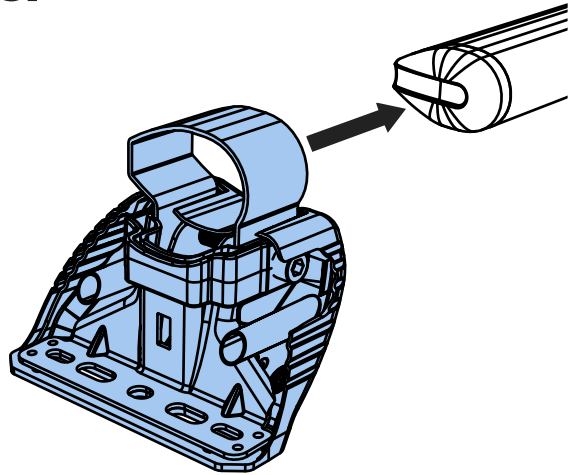


9.




SA397



SA397




SA397




SA397

PS183

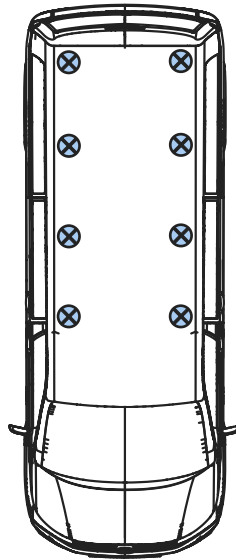


SA398




PS183

SA398




PS183

SA398



PS183

SA398




PS183

10.


FW002

PS208

FS024



M8 x 100mm



M8 x 50mm

FW002

PS208

FS081

11.

