
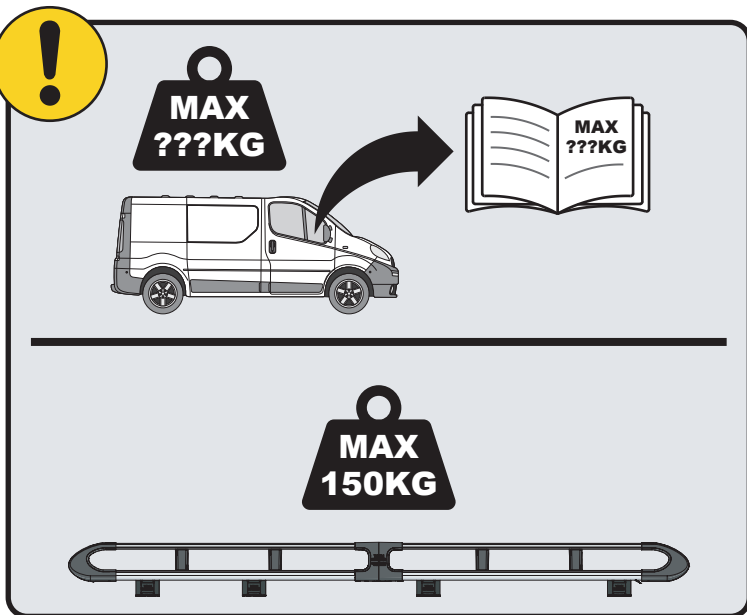


IN8273

ULTI Rack+

2

**VAN
GUARD**

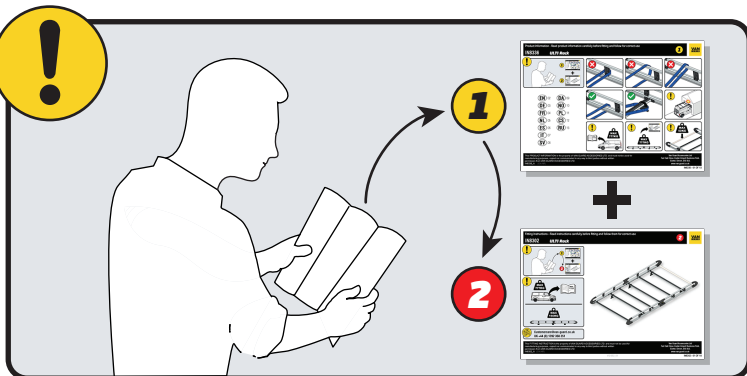



This FITTING INSTRUCTION is the property of VAN GUARD ACCESSORIES LTD. and must not be used for manufacturing purposes, copied nor communicated in any way to third parties without written permission from VAN GUARD ACCESSORIES LTD.
IN8273_A (CN:NR)

Van Guard Accessories Ltd
Fair Oak Close, Exeter Airport Business Park,
Exeter, Devon, EX5 2UL
www.van-guard.co.uk

VGUR-202

Nissan Primastar: 2002-2014
Renault Trafic: 2002-2014
Vauxhall Vivaro: 2002-2014


L1H1 (SWB)
Tailgate

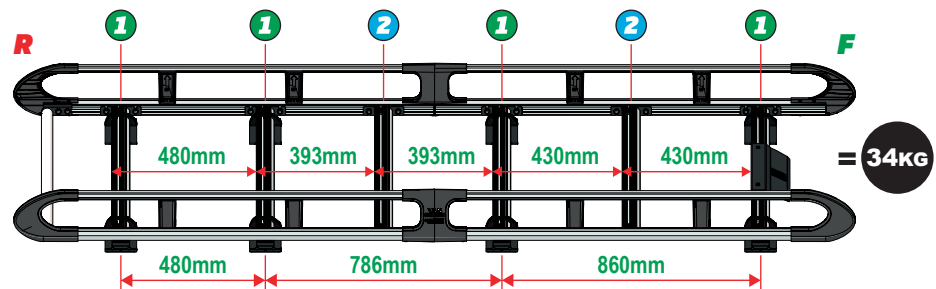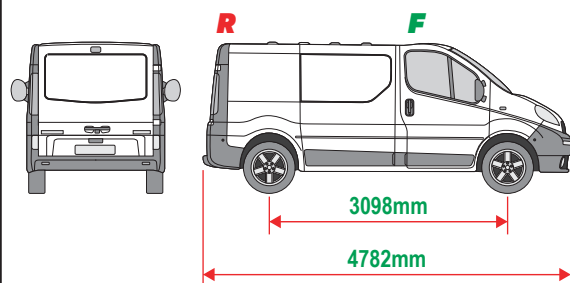



SUPPLIED COMPONENTS - CHECK ALL PARTS ARE PRESENT AND CORRECT BEFORE PROCEEDING (1 OF 2)

TOOLS REQUIRED

10MM X1

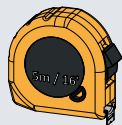


13MM X1

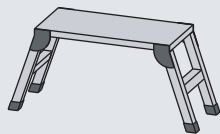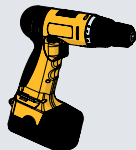

AS3537 X2

(2600 / A)

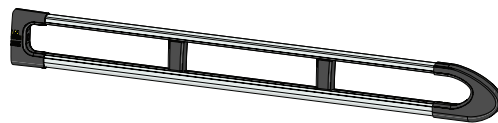


MA6118 X12



FX4241 X28




ME1622 X2



AS3536 X2


(2600 / B)




FX4008 X1



MA6145 X1




ME1623 X2



ME1628 X6

(1554mm)



FX4001 X2

(M8X40)




FX4235 X24

(M5X25)




ME0203 X8




AS3160 X1

(1540mm)




MA6007 X4




FX4248 X1


(T25)




MA6065 X8



AS3590 X1

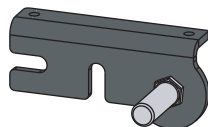


MA6093 X14




FX4239 X28

(M8X20)



ME1620 X4




FX4016 X26


(M6)



AS3591 X1



ME0316 X14




FX4240 X28

(M8)




ME1621 X4



FX4042 X26

(M6X16)



ME0355 X1




FX4017 X16

(M6)




ME0690 X1

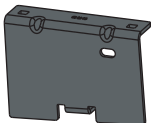


FX4061 X2


(M6X14)




ME0691 X1

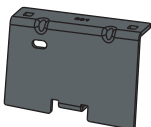

FX4126 X14



ME0692 X6

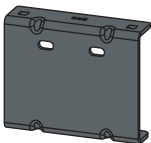


FX4010 X16

(M6)




FX4012 X14

(M6X16)




01

1L



X4

1R



X4




2L





X2

2R



X2

02

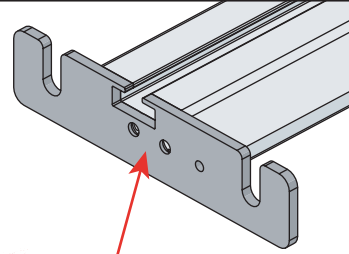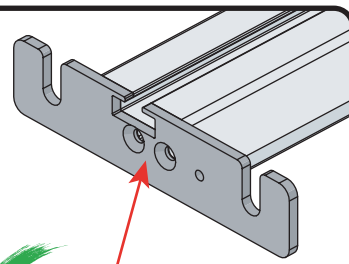


03

01


FX4248




+

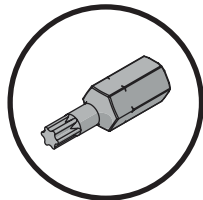

02

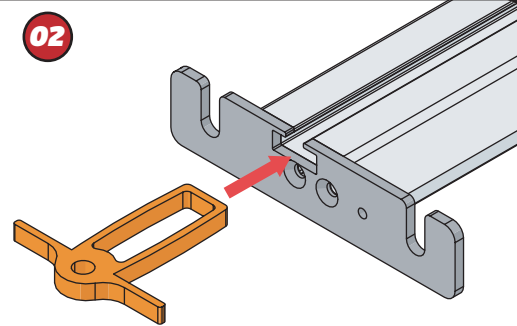


04

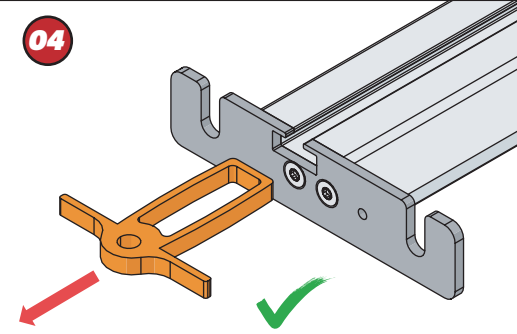

04




1

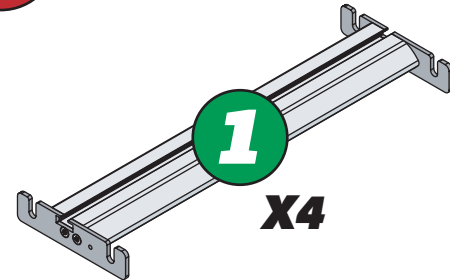

X4

2



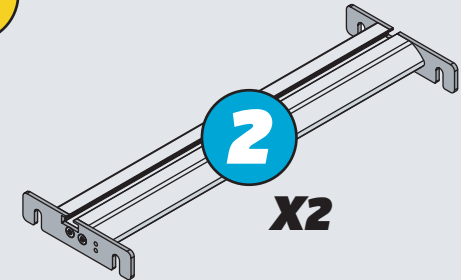


X2


03




11Nm

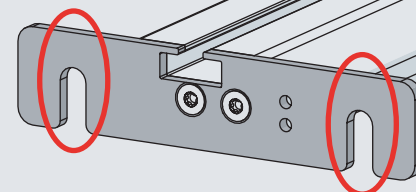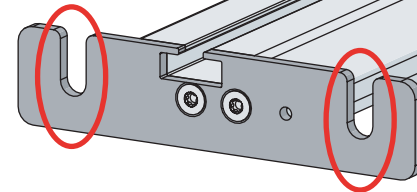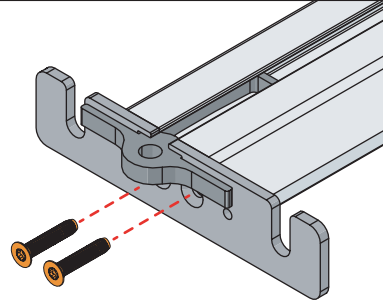


05

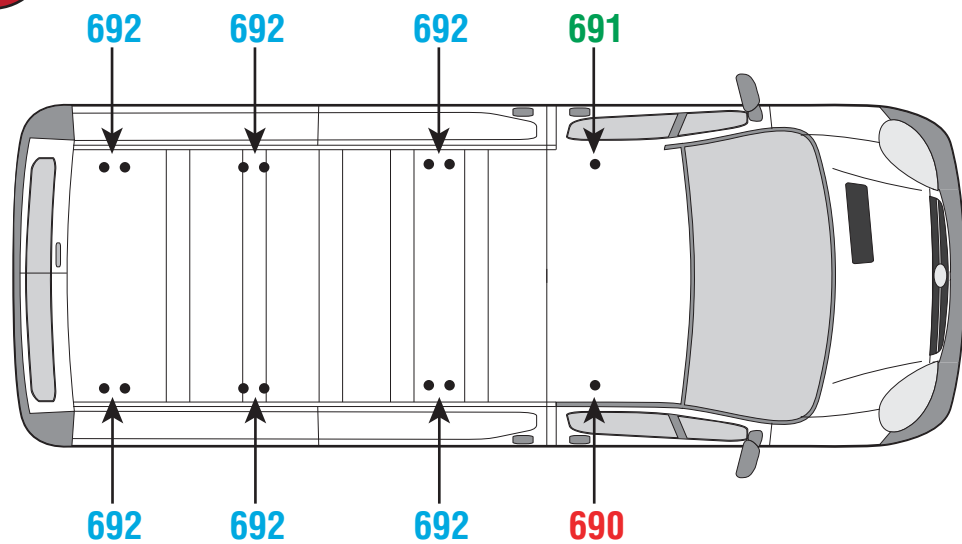


690

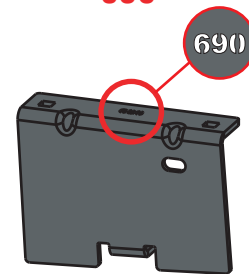



691

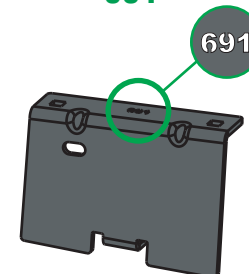


692

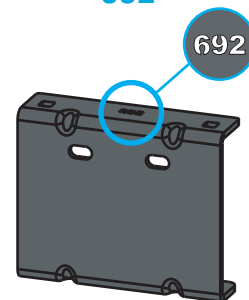


06

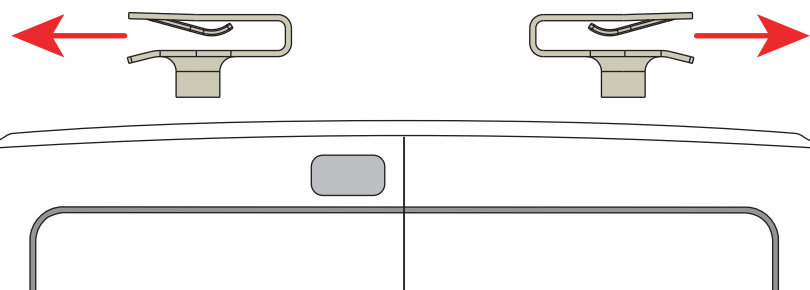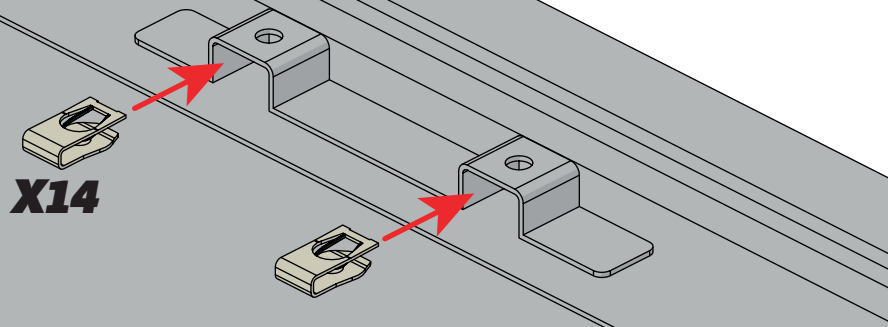


07

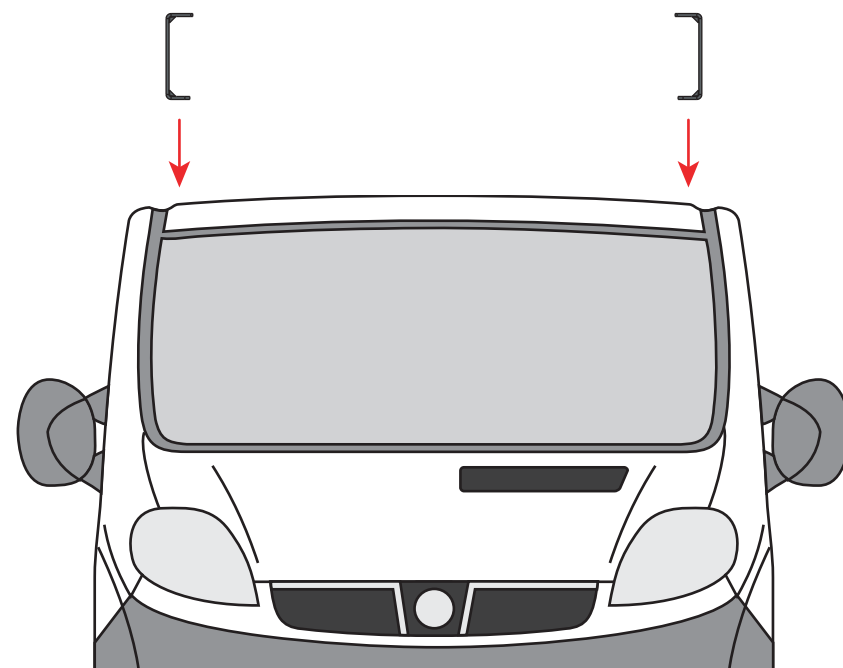


08

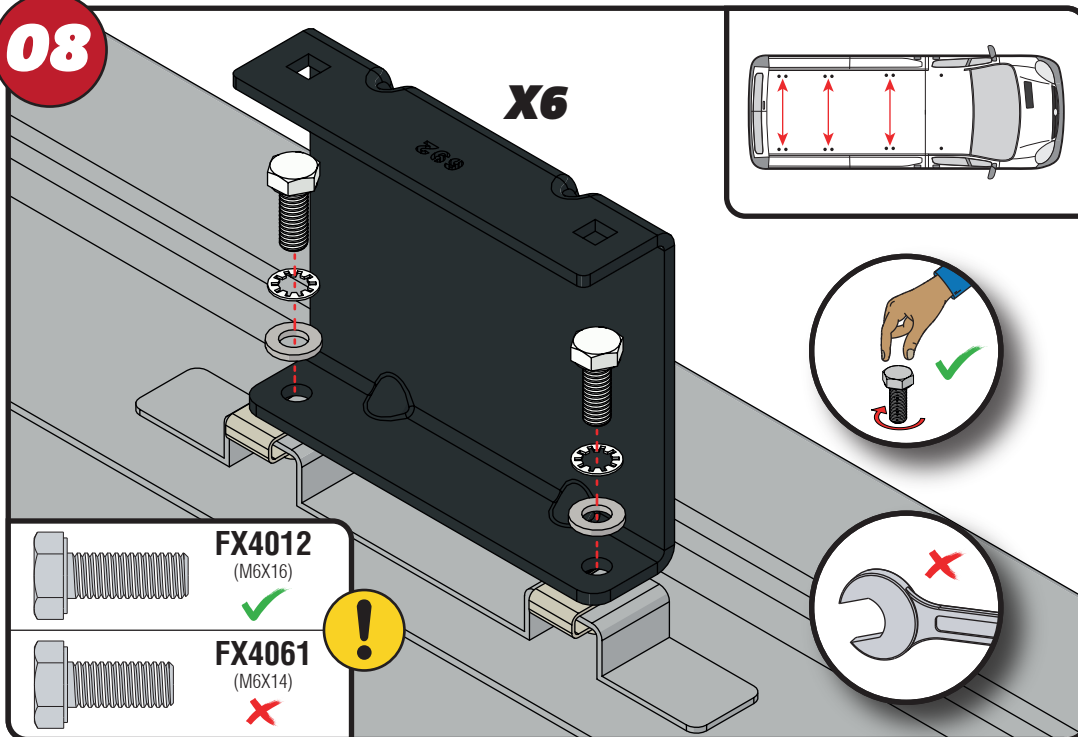


09

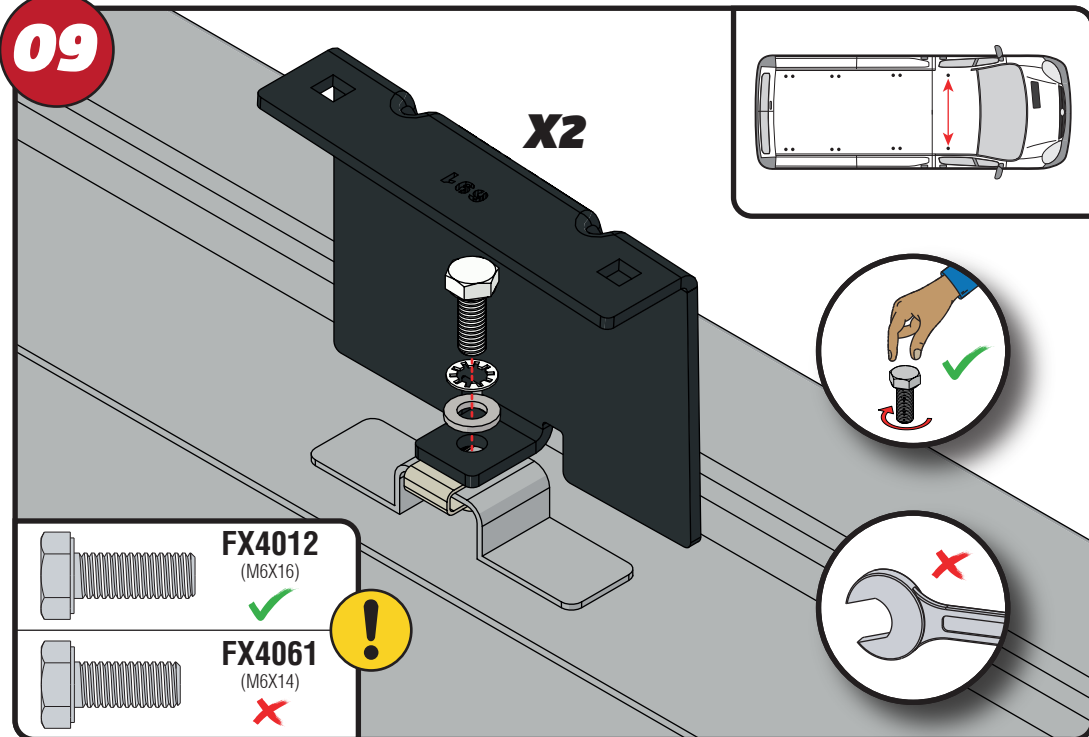


10

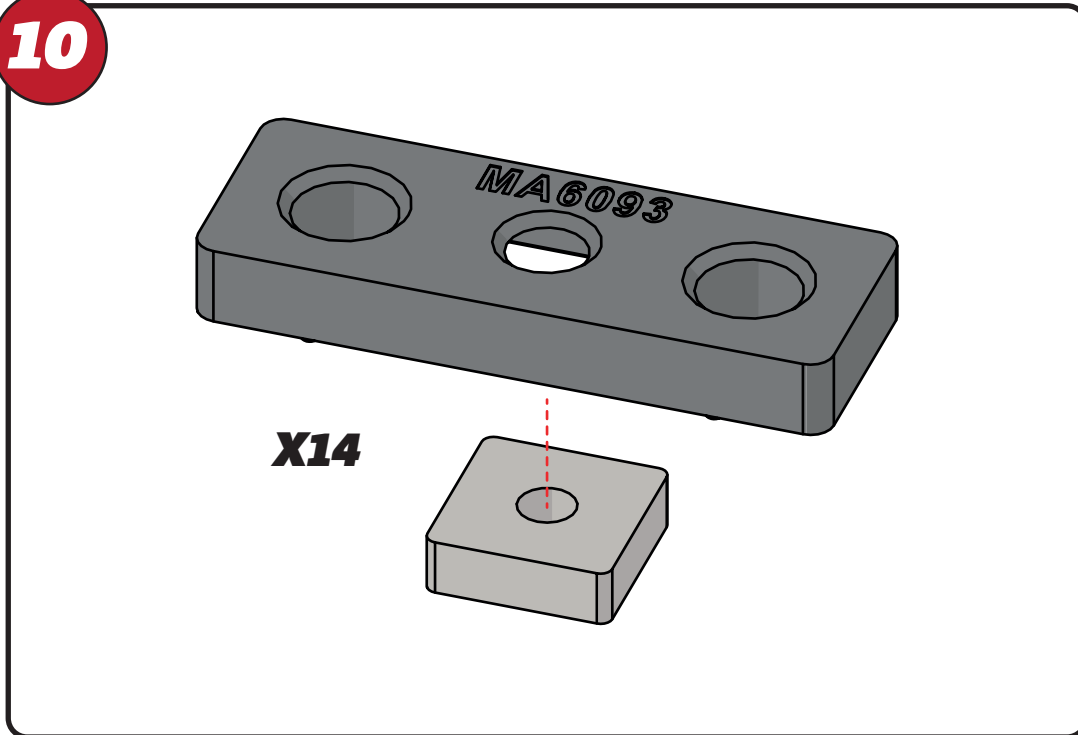


11

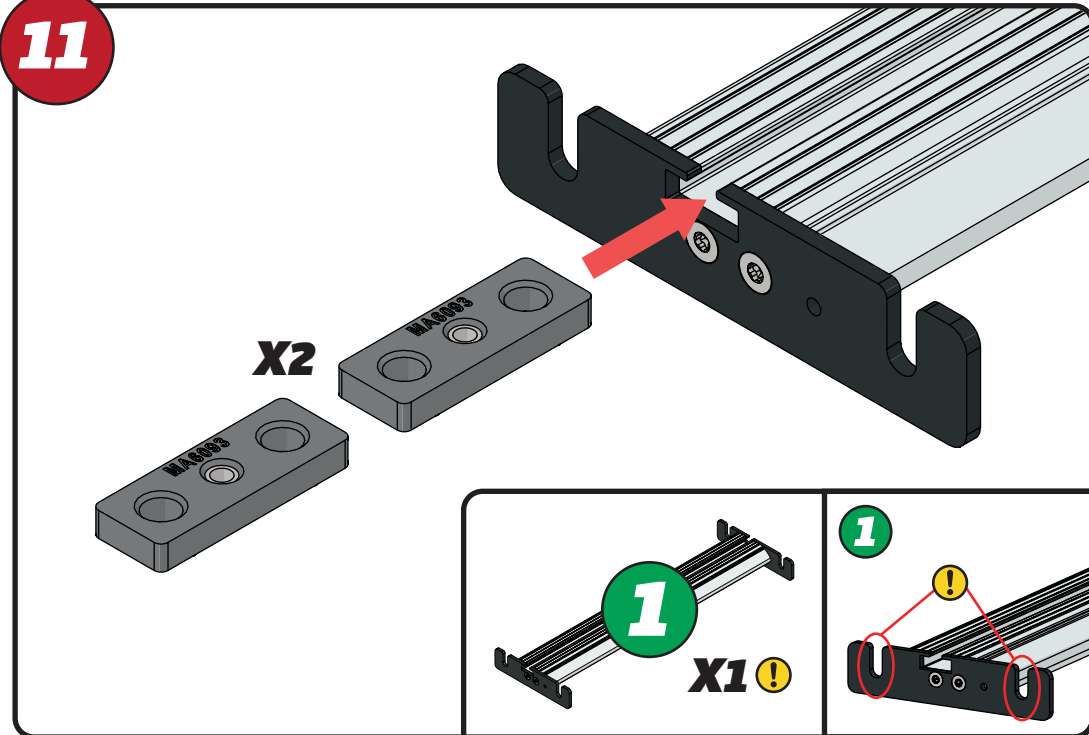


12

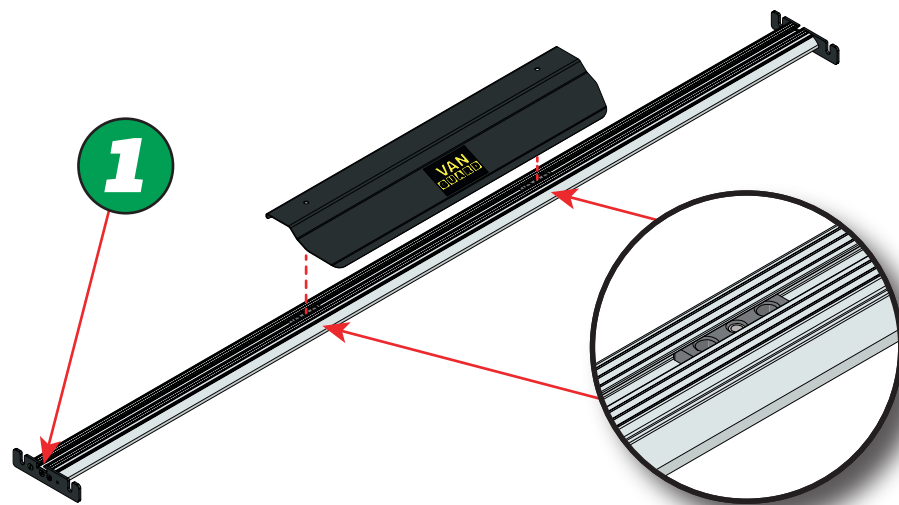

13

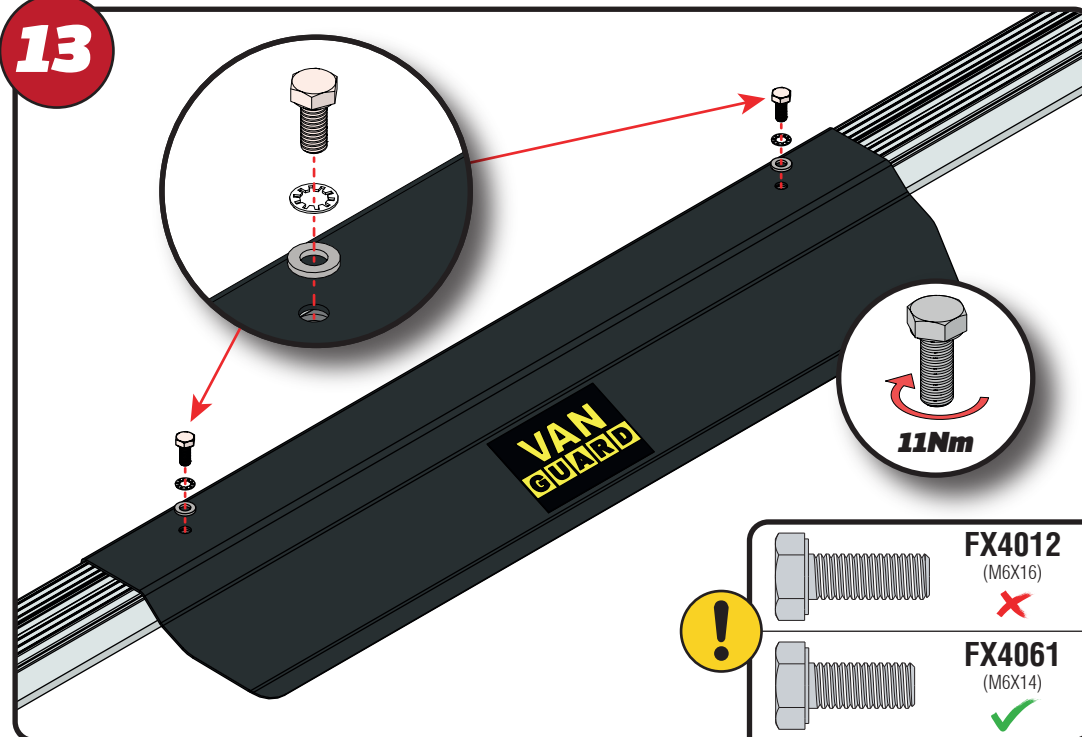


14

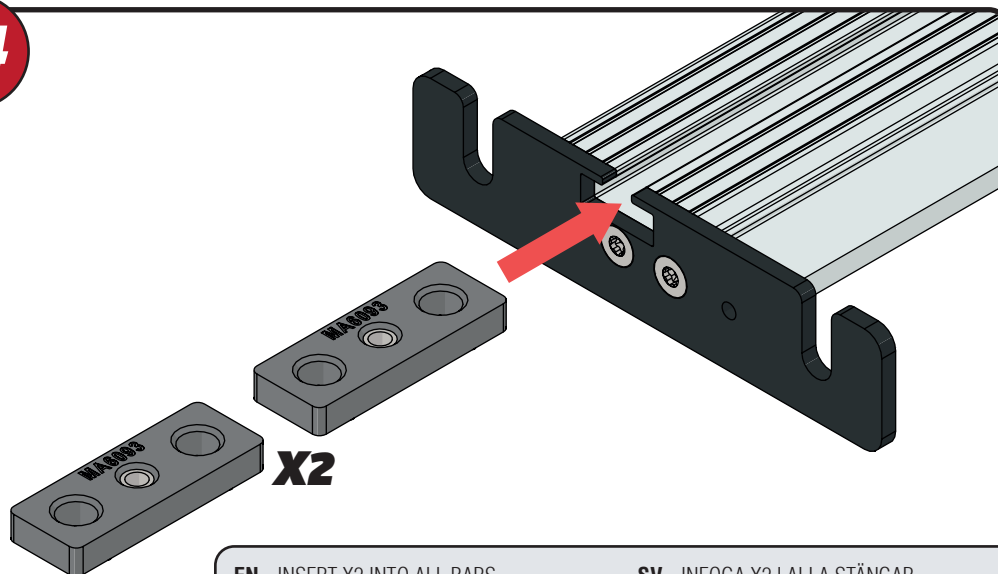



EN - INSERT X2 INTO ALL BARS
 DE - X2 IN ALLE STANGEN EINFÜGEN
 FR - INSÉRER X2 DANS TOUTES LES BARRES
 NL - PLAATS X2 IN ALLE BARS
 ES - INSERTAR X2 EN TODAS LAS BARRAS
 IT - INSERIRE X2 IN TUTTE LE BARRE

SV - INFOGA X2 I ALLA STÄNGAR
 DA - INDSÆT X2 I ALLE STÆNGER
 NO - SETT X2 INN I ALLE TAKSTENGER
 PL - WSTAW X2 DO WSZYSTKICH PRĘTÓW
 CS - VLOŽTE X2 DO VŠECH TYČÍ


15

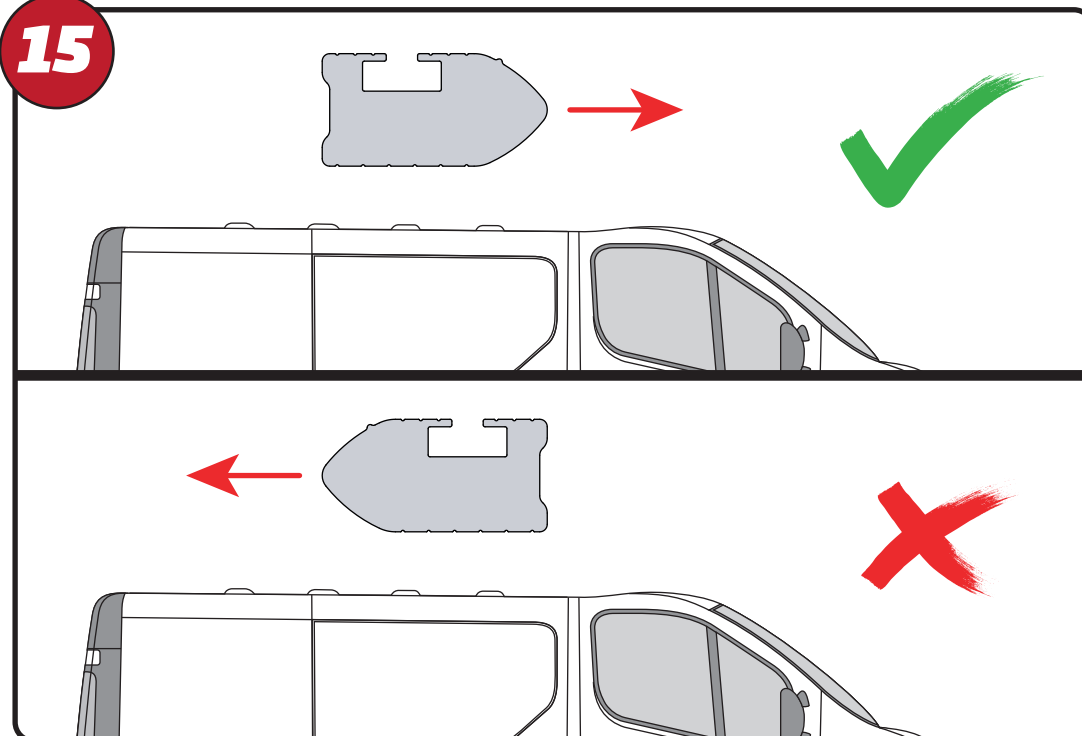


16

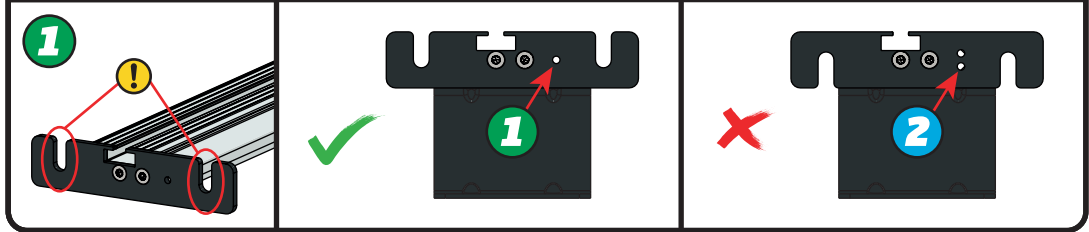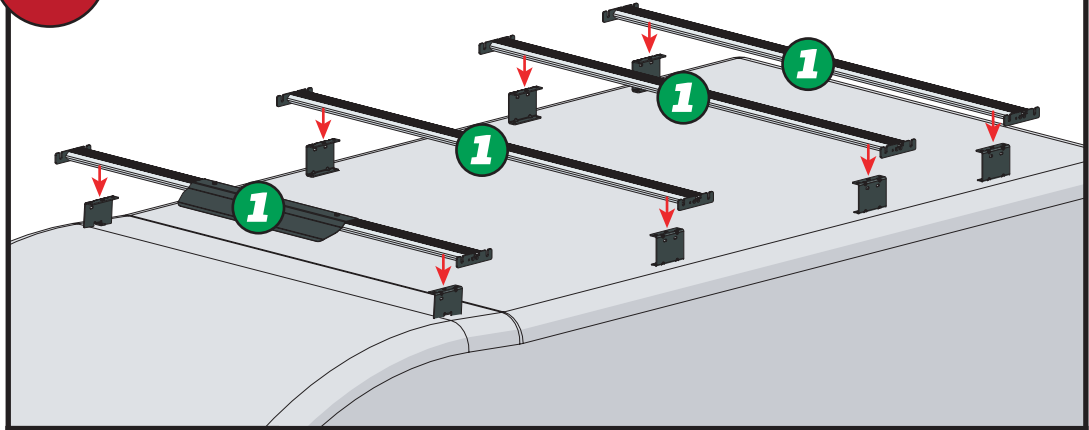


17

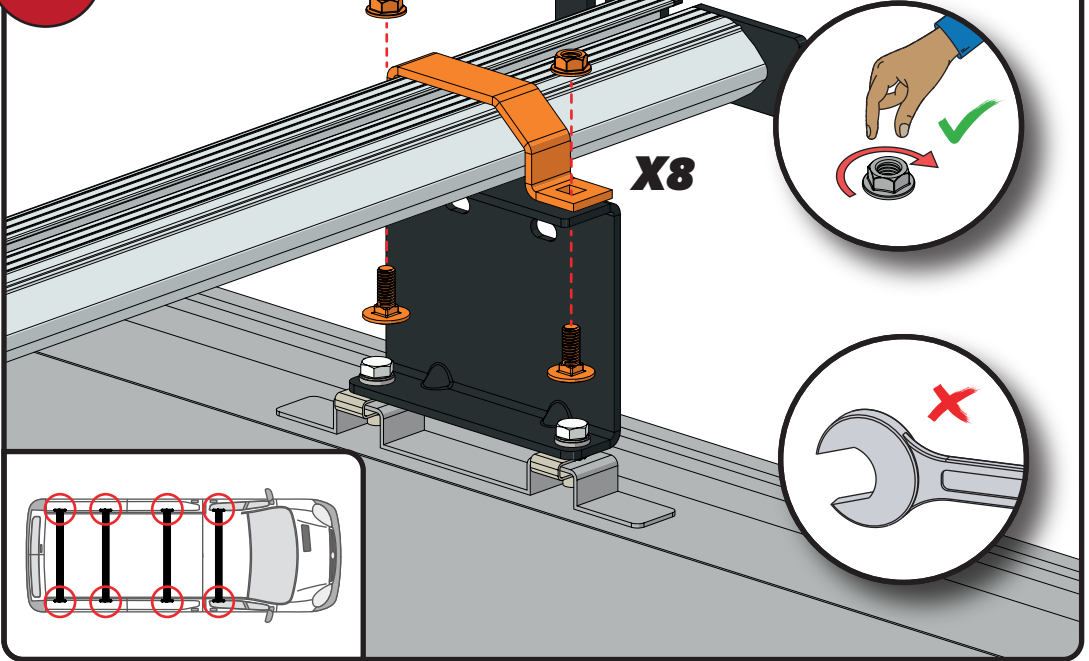


18

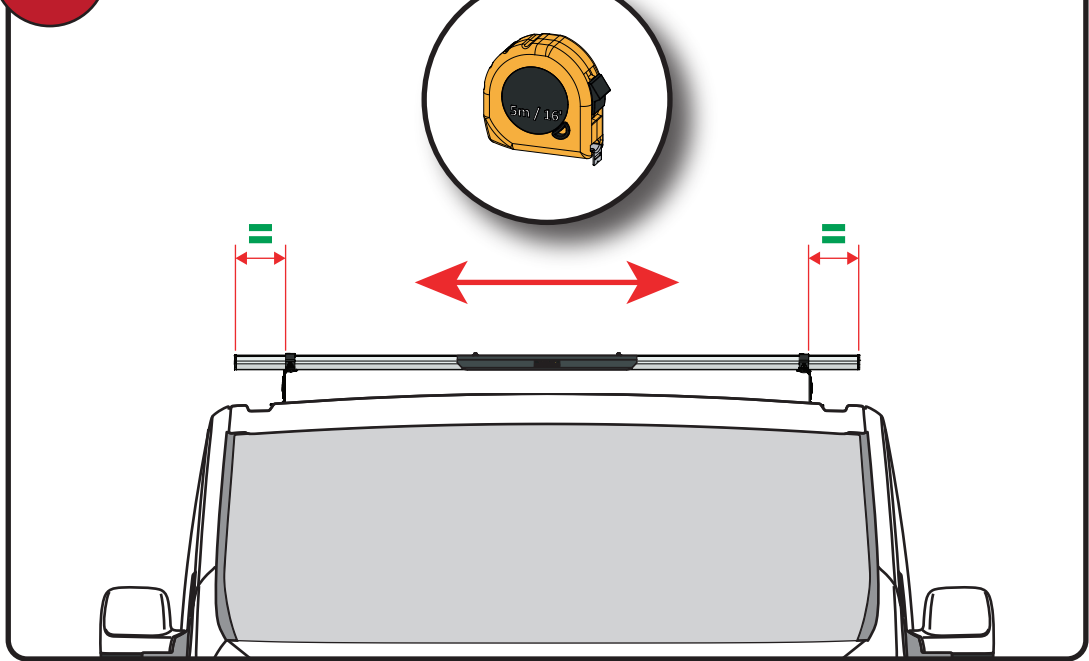


19

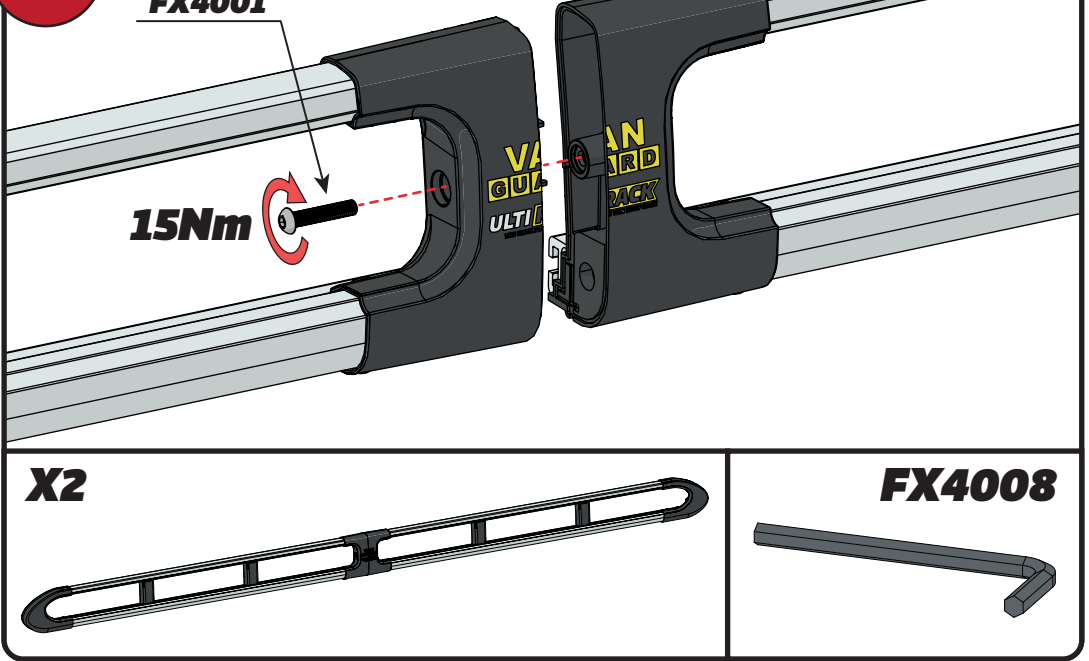


20

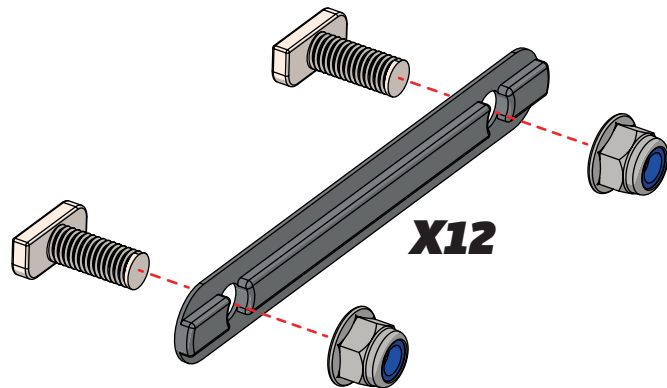


21

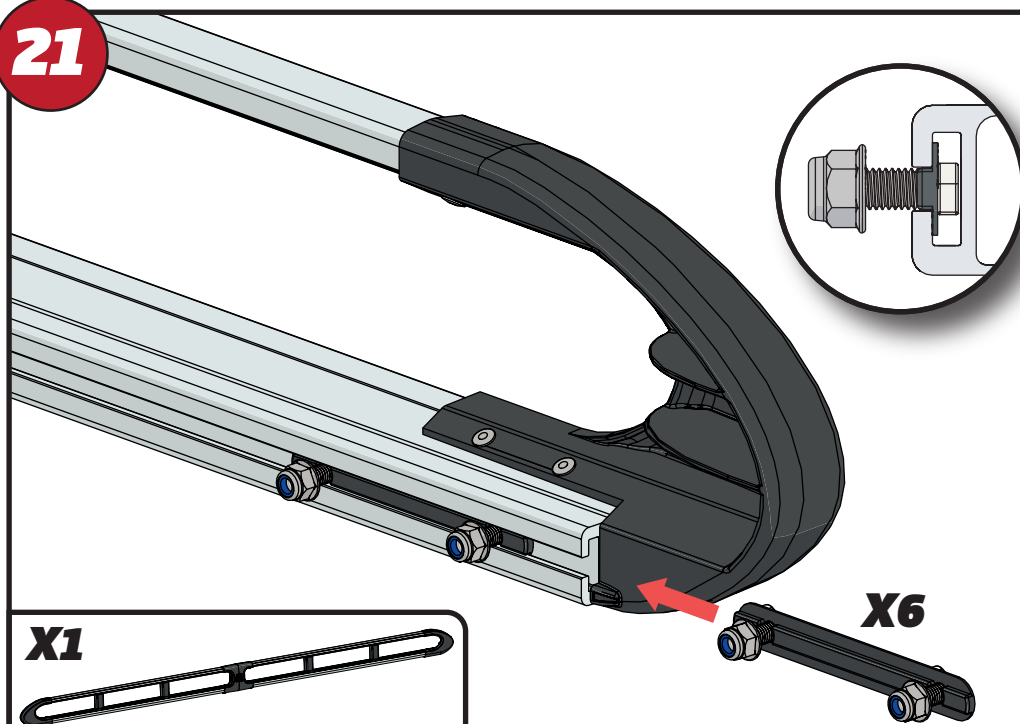


22

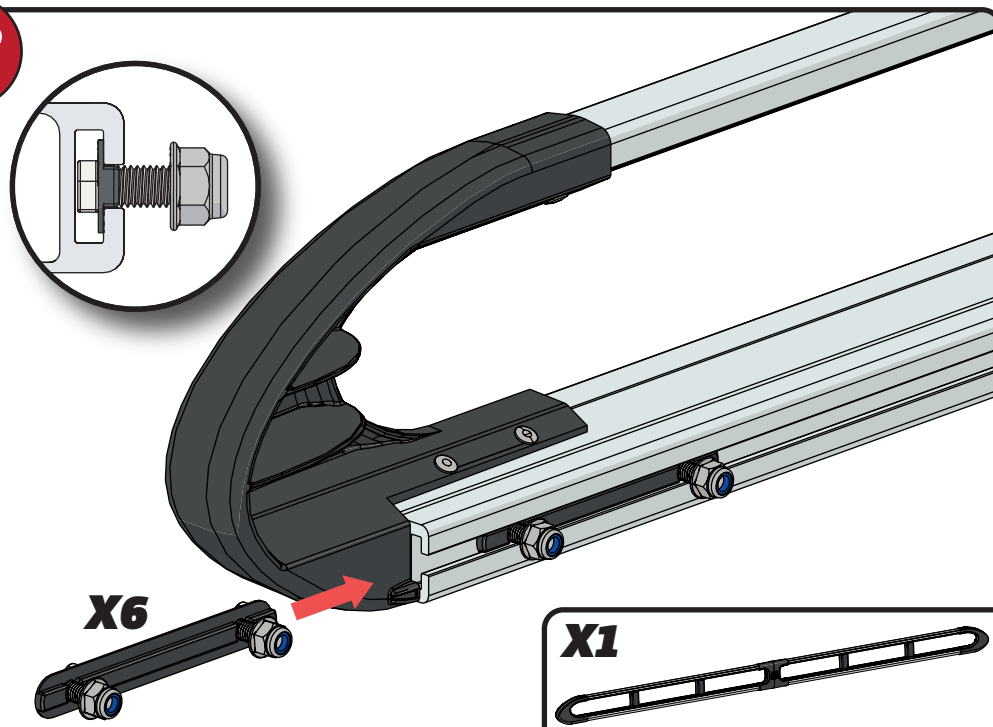


23

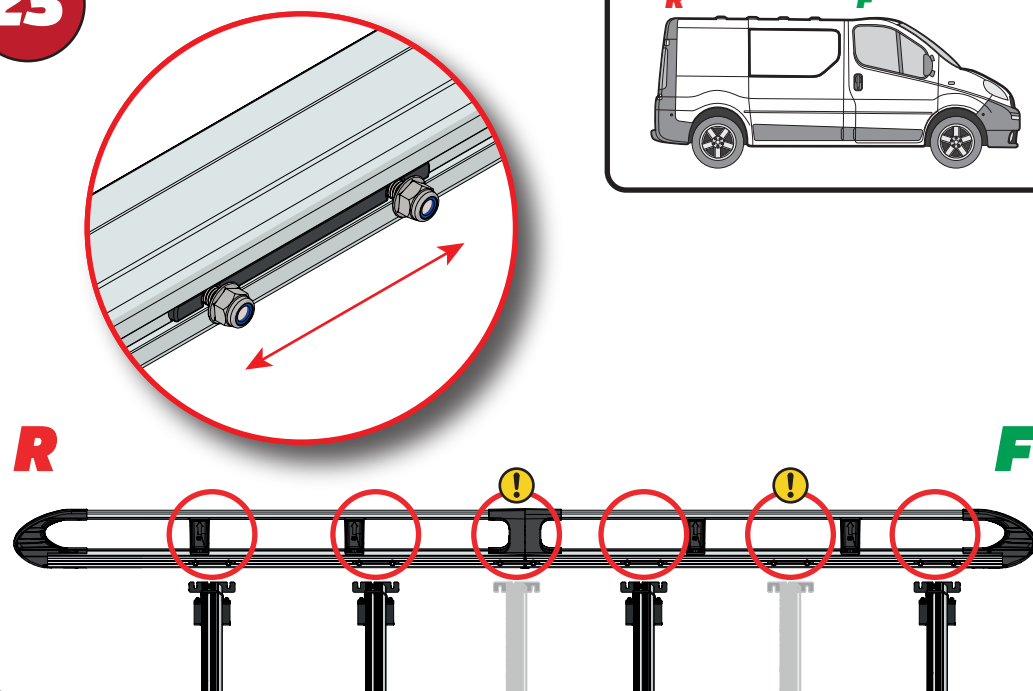


24

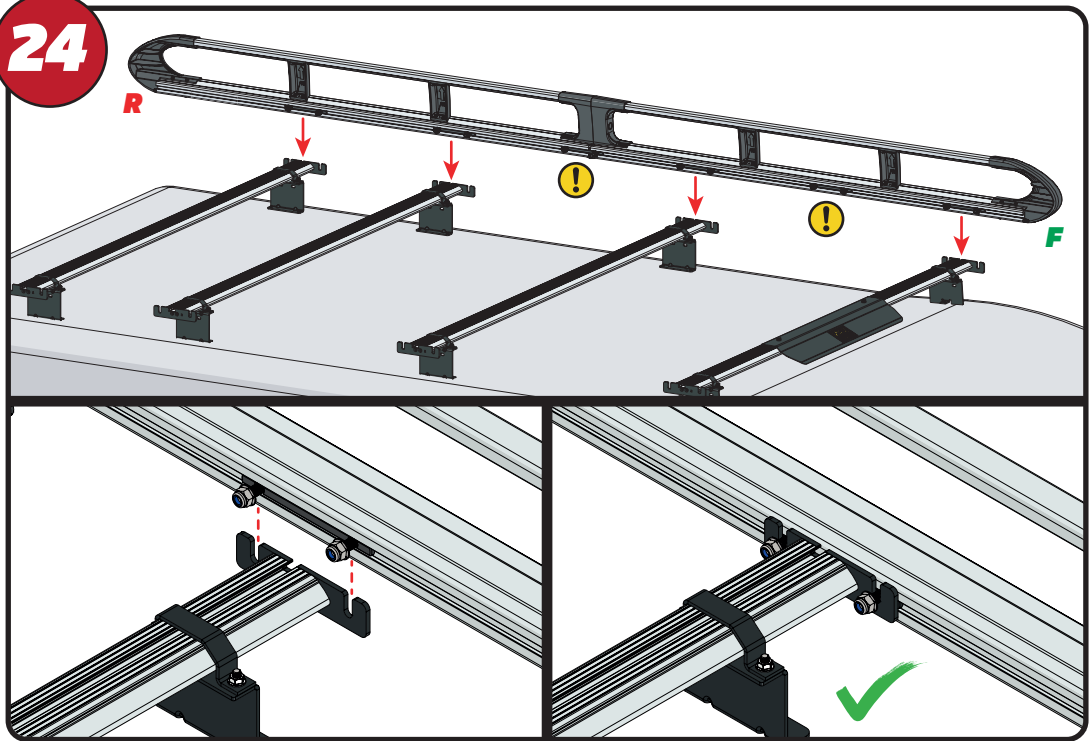


25

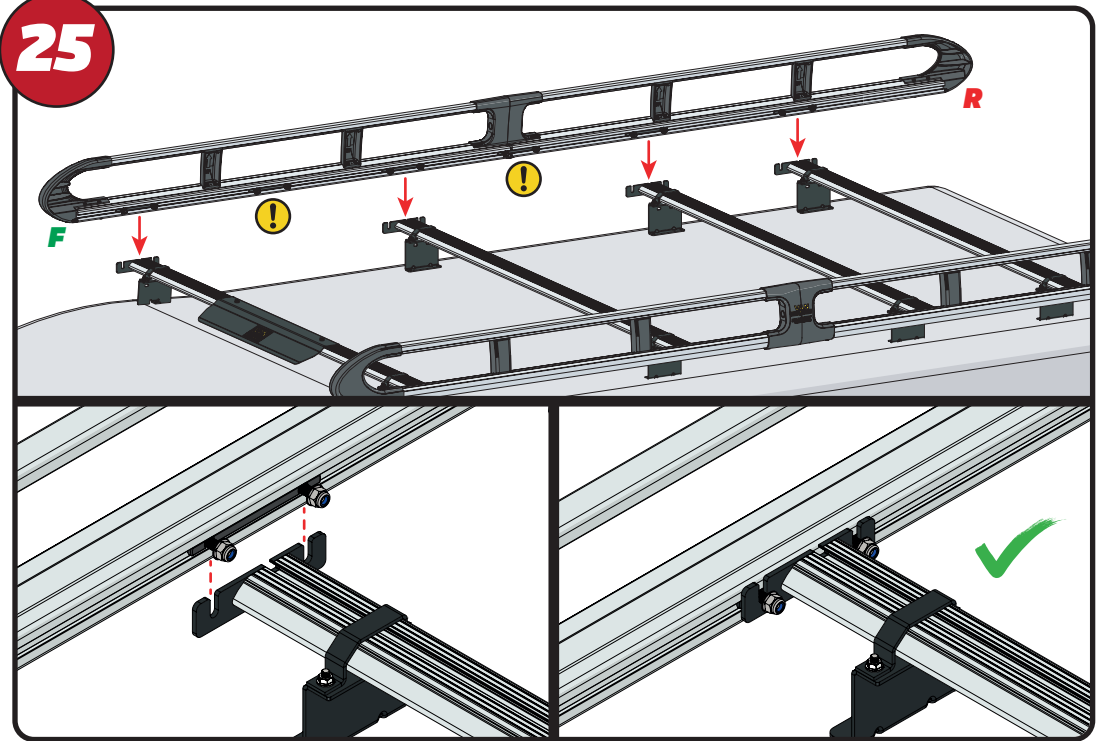


26

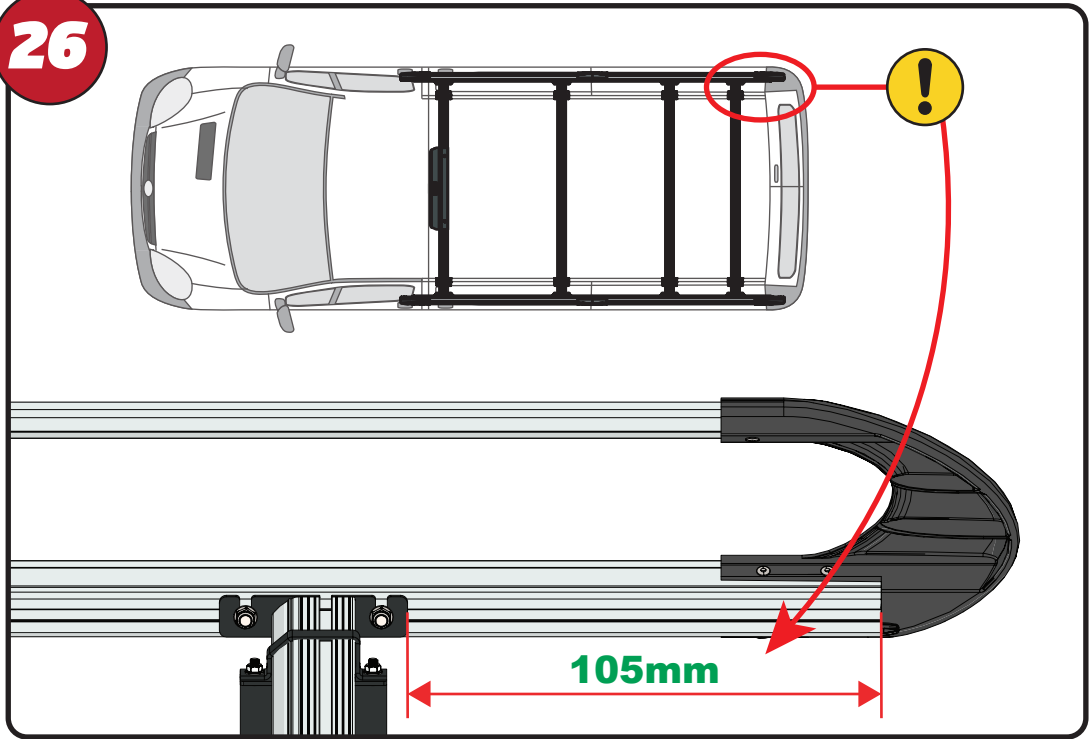


27

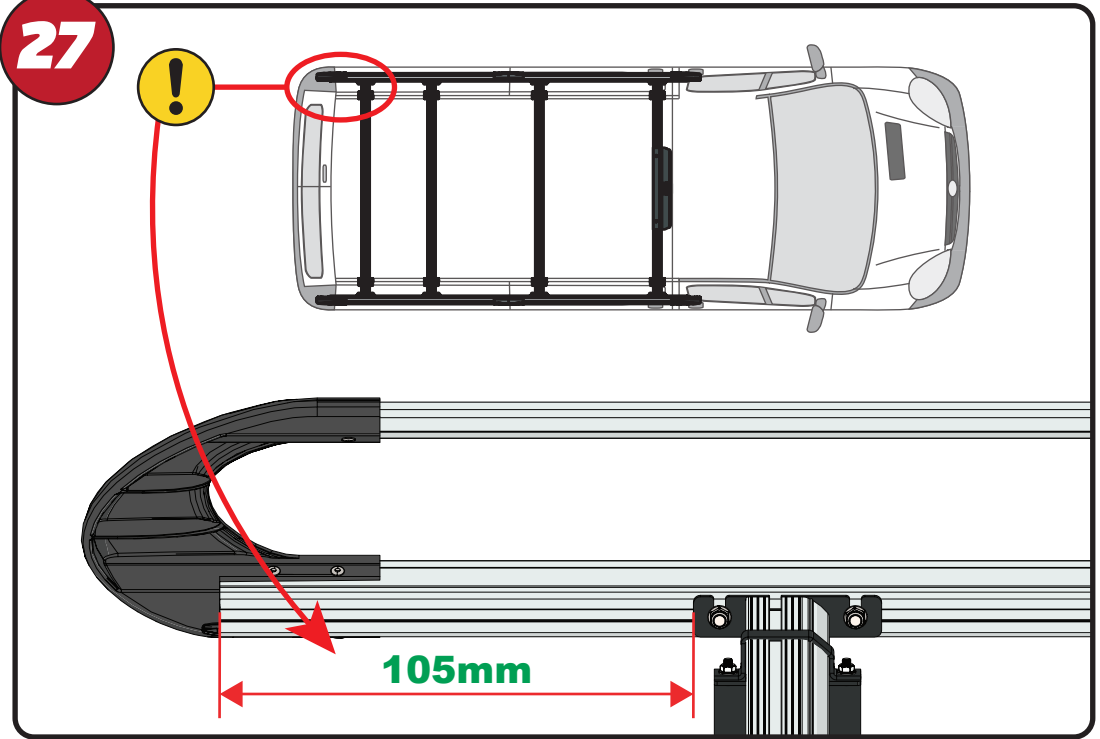


28

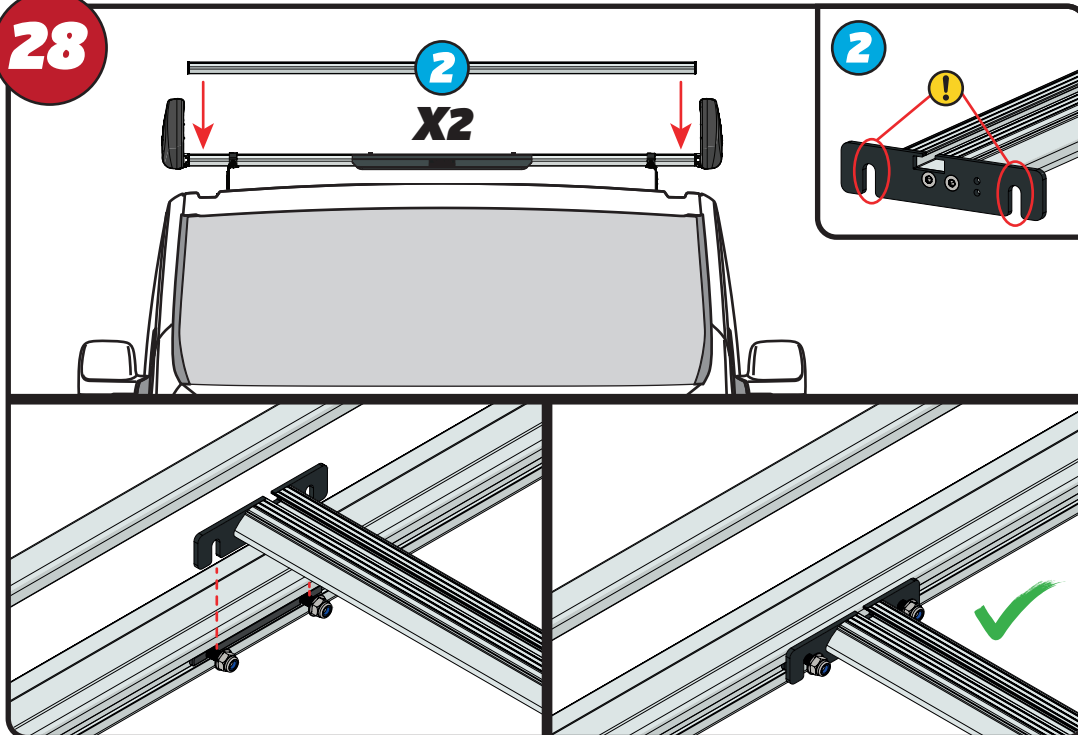

29

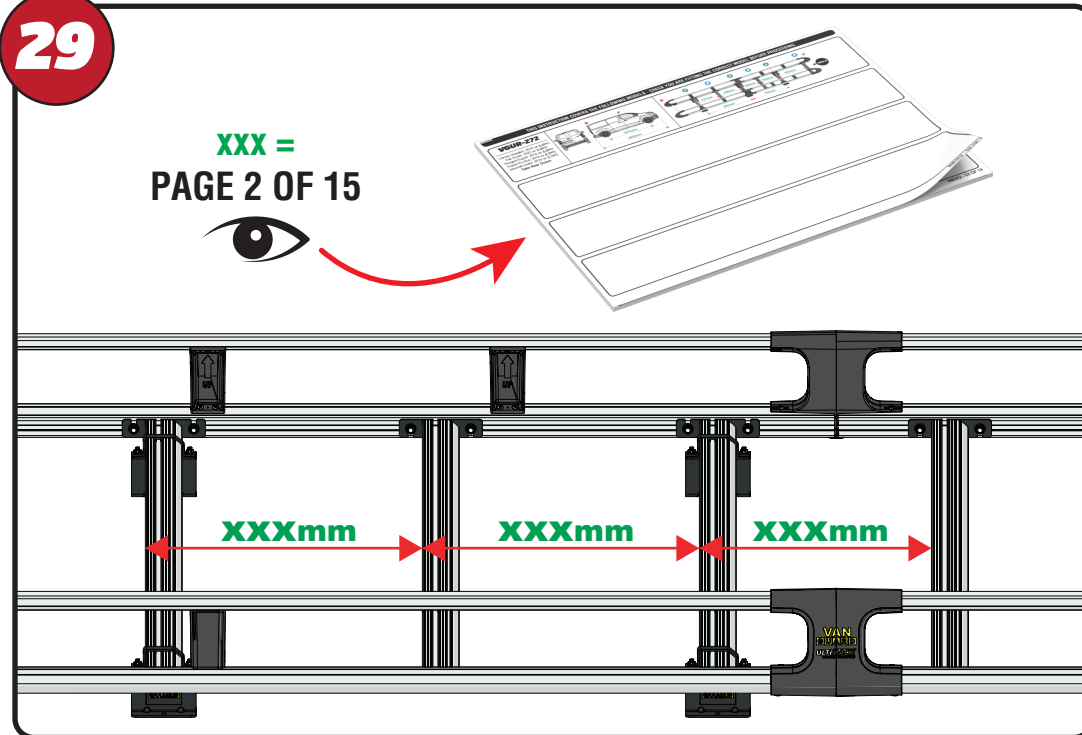


30

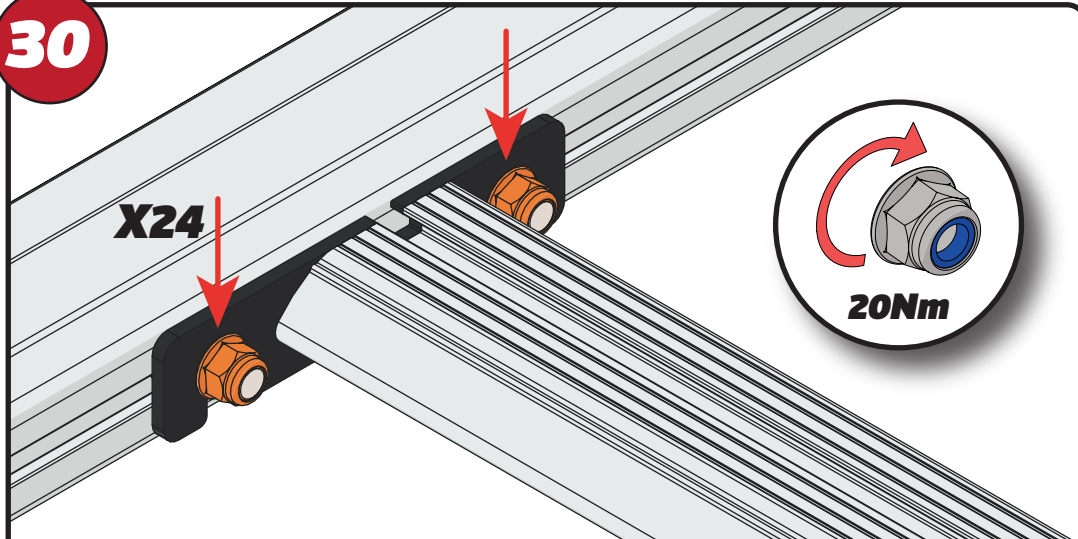



EN - TIGHTEN ALL OF THE CROSS BARS
DE - ALLE QUERSTANGEN FESTZIEHEN
FR - SERREZ TOUTES LES BARRES TRANSVERSALES
NL - DRAAI ALLE DWARSBALK VAN HET DAK AAN
ES - APRIETE TODAS LAS BARRAS TRANSVERSALES
IT - STRINGERE TUTTE LE BARRE TRASVERSALI

SV - SKRU UPP ALLA KORSSTANGAR
DA - SKRU ALLE TAGBØJLER OP
NO - SKRU OPP ALLE TVERRSTENGER
PL - DOKRĘCIĆ WSZYSTKIE POPRZECZKI
CS - VŠECHNY PŘÍČNÉ TYČE SEŠROUJTE


31

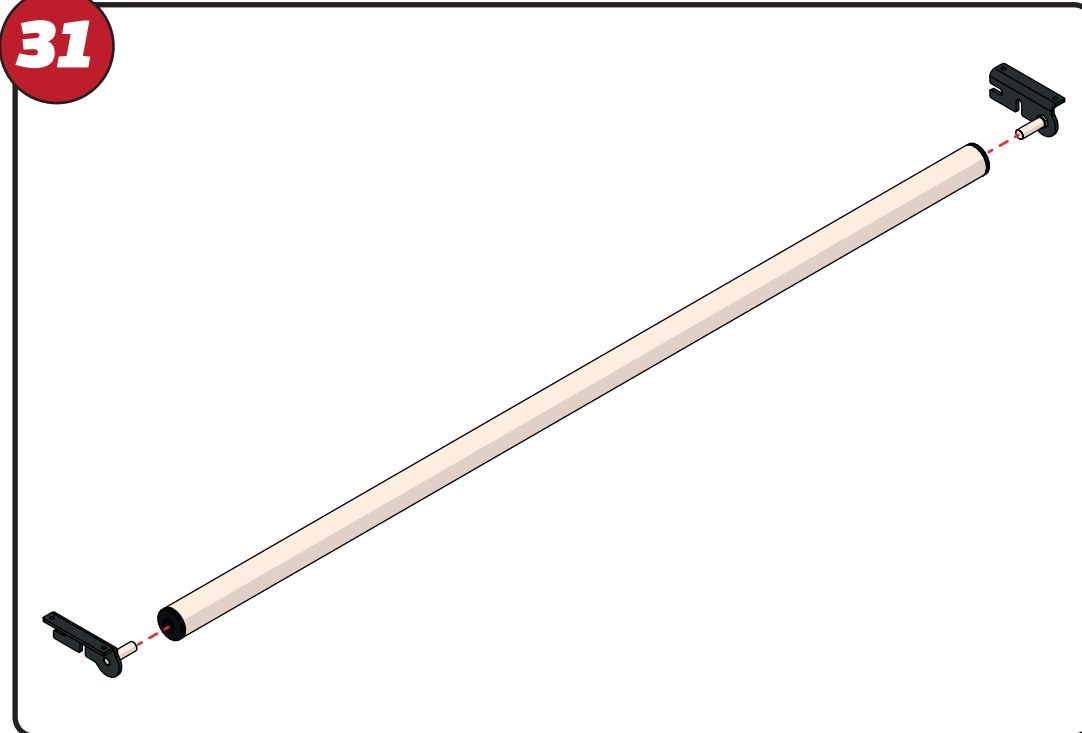


32

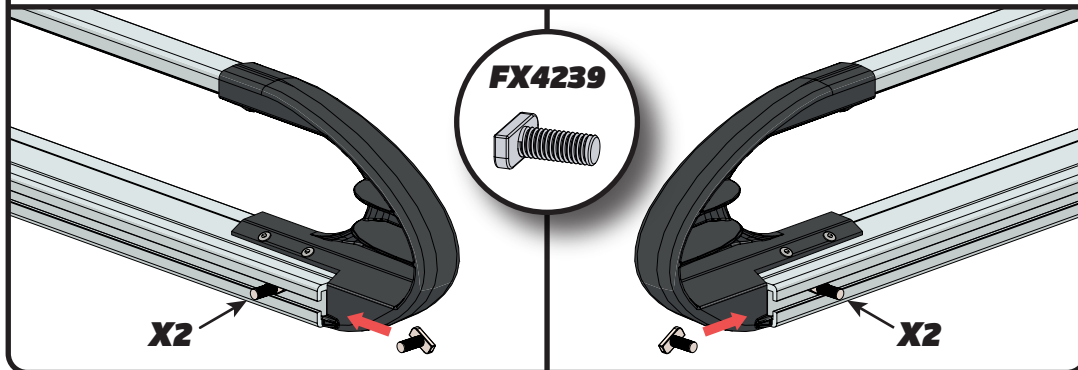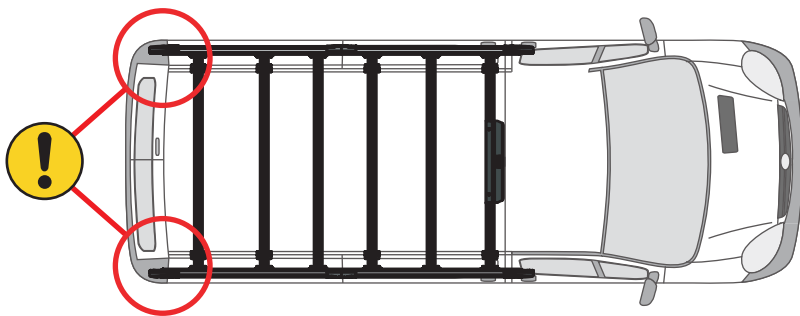


33

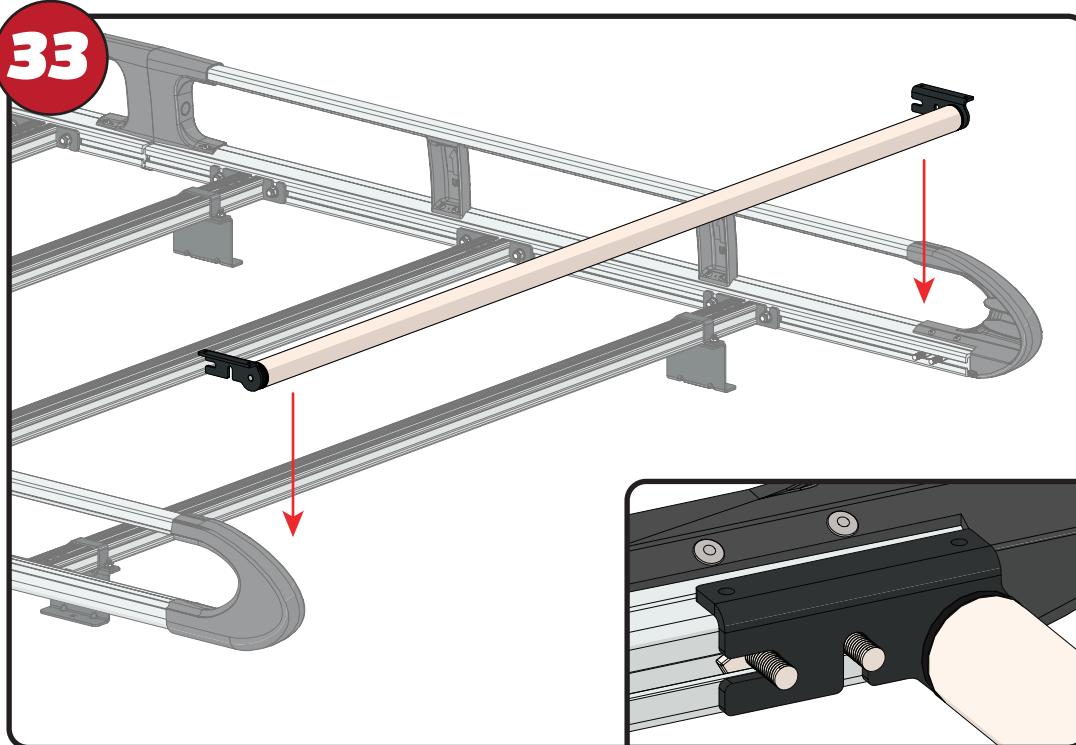


34

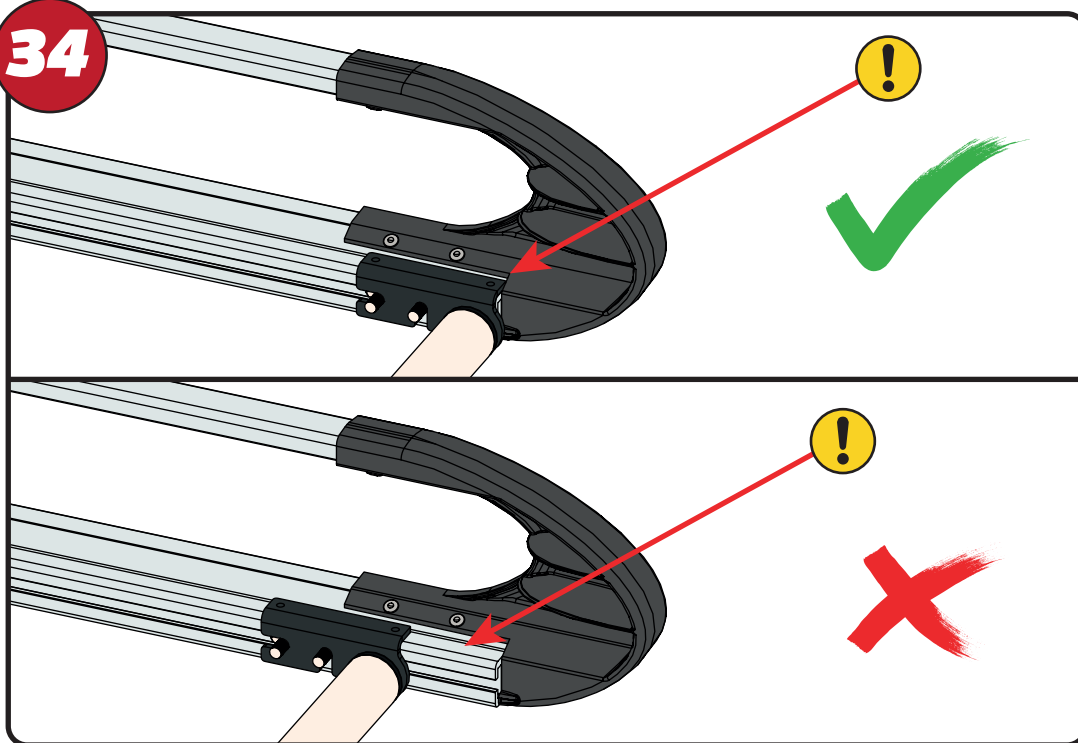


35

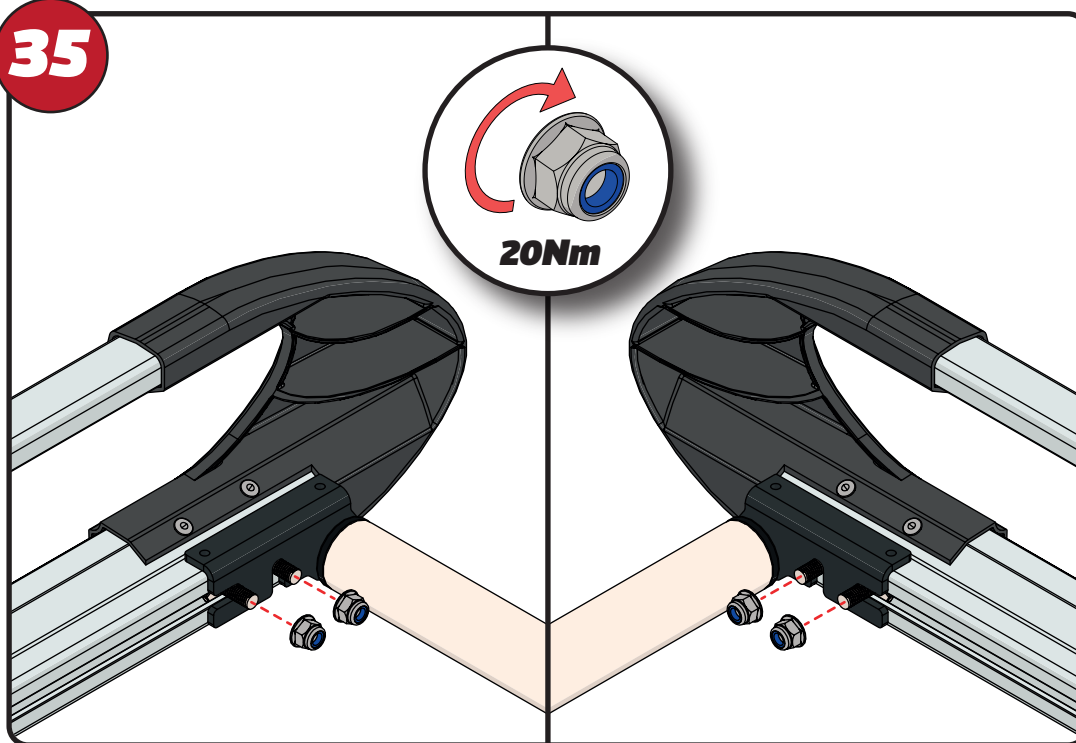


36

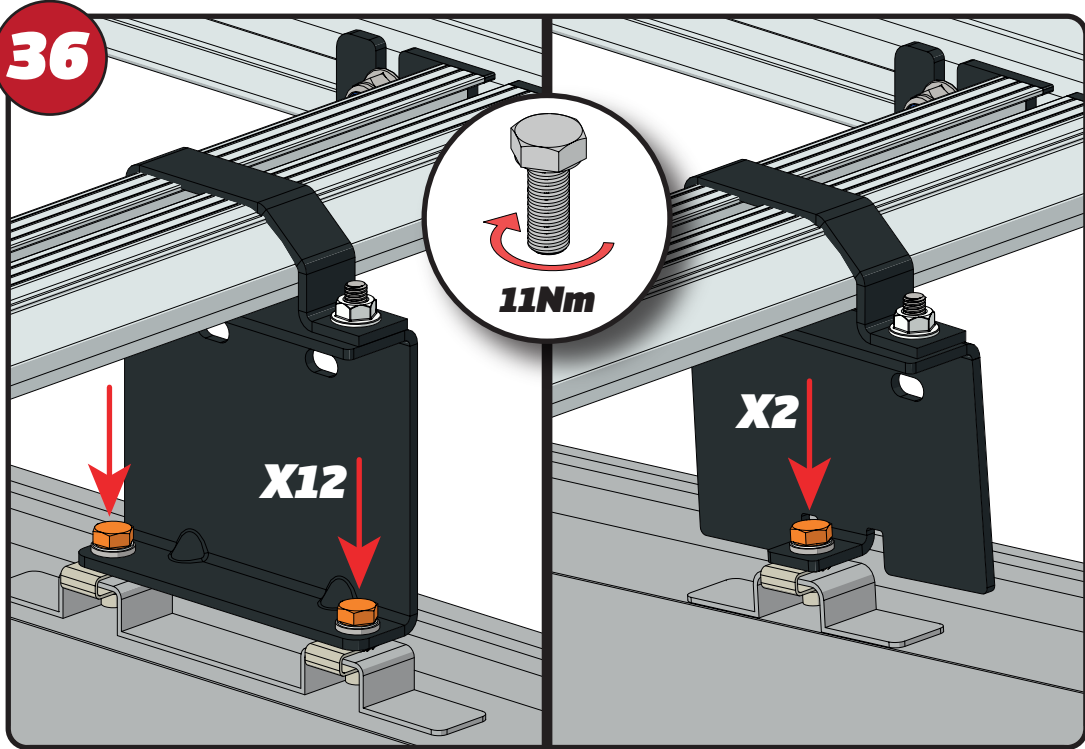


37

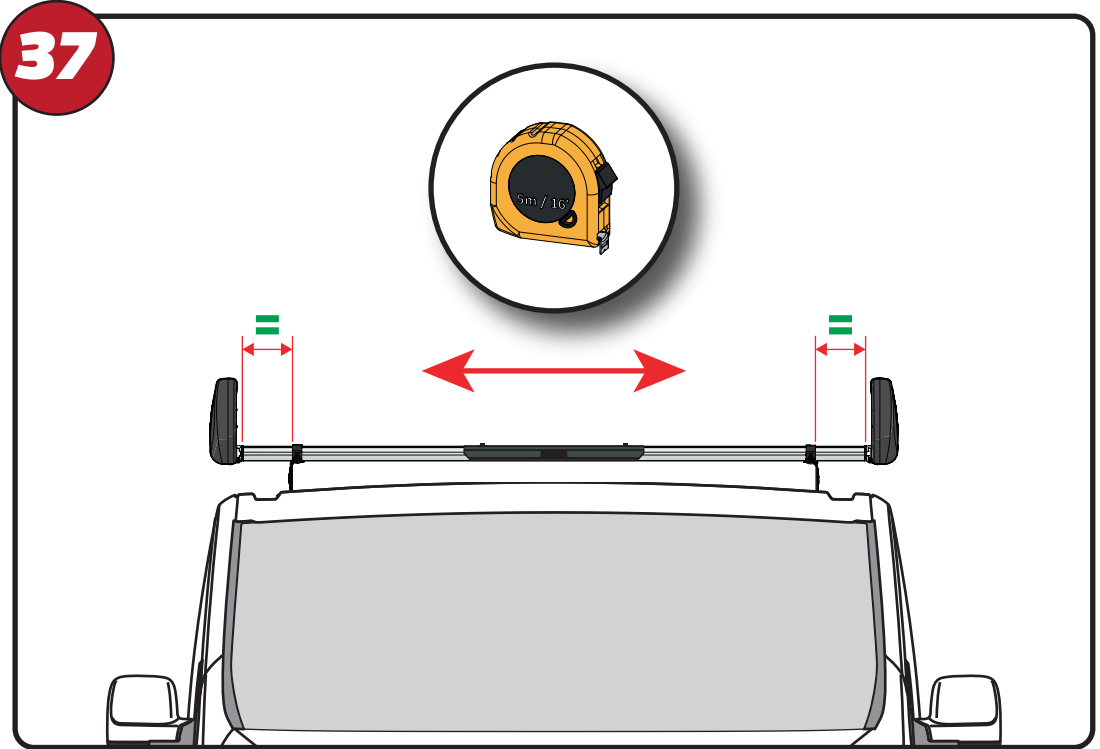


38

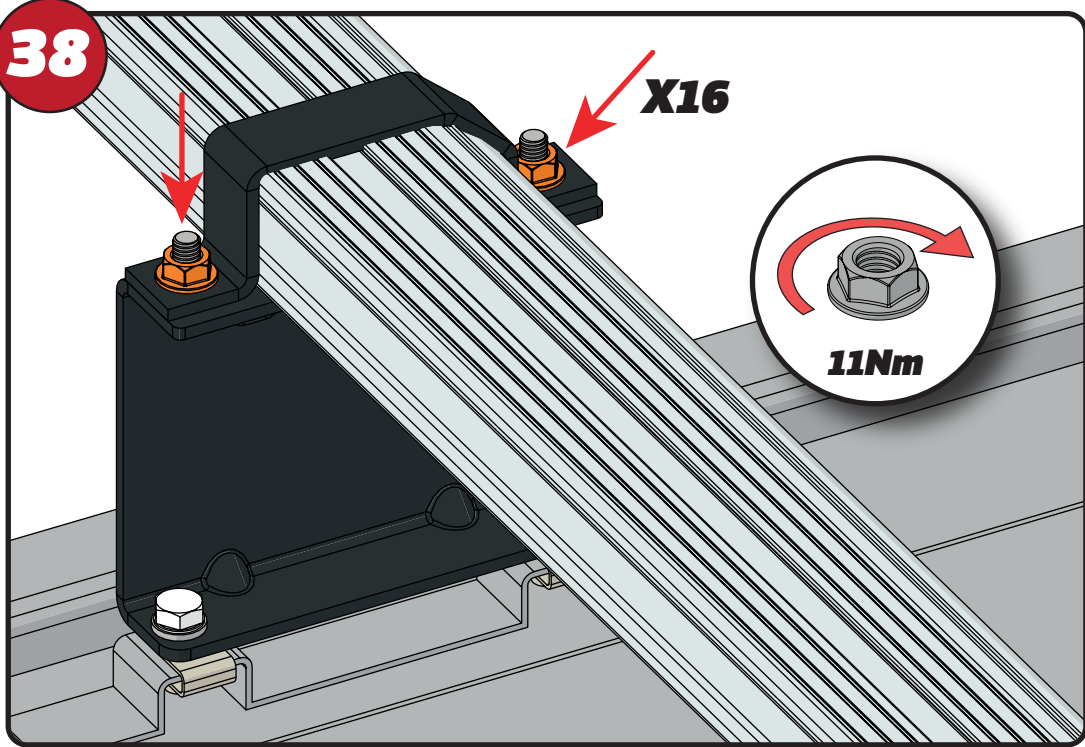


39

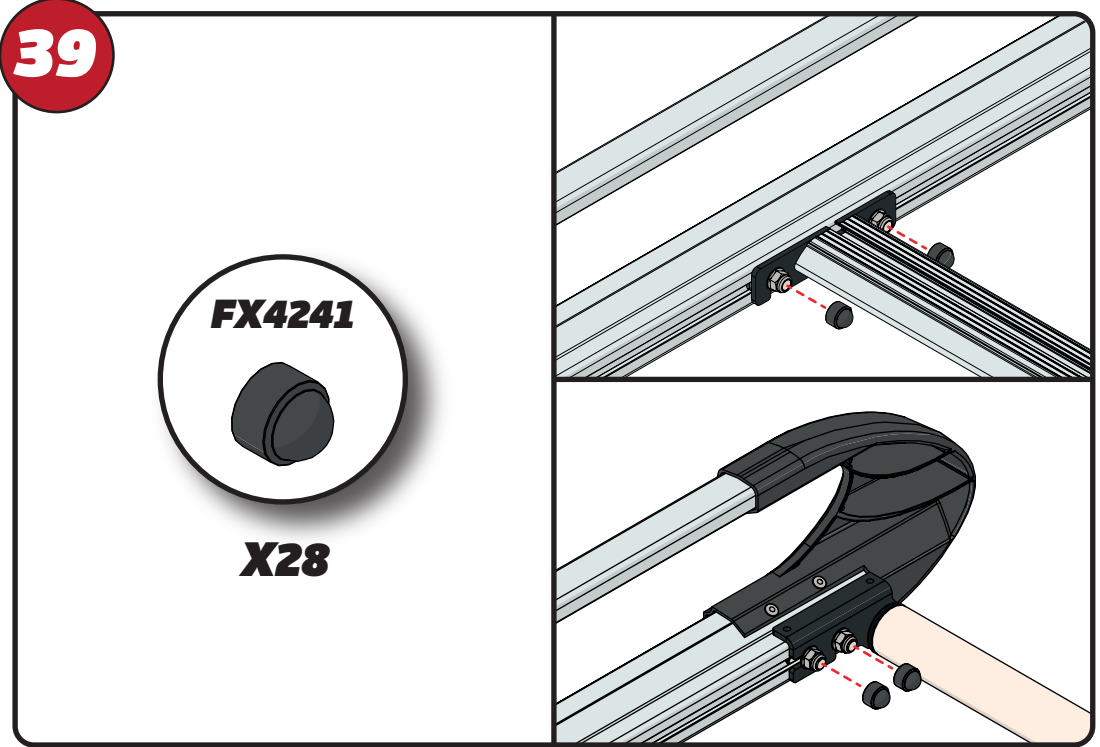


40

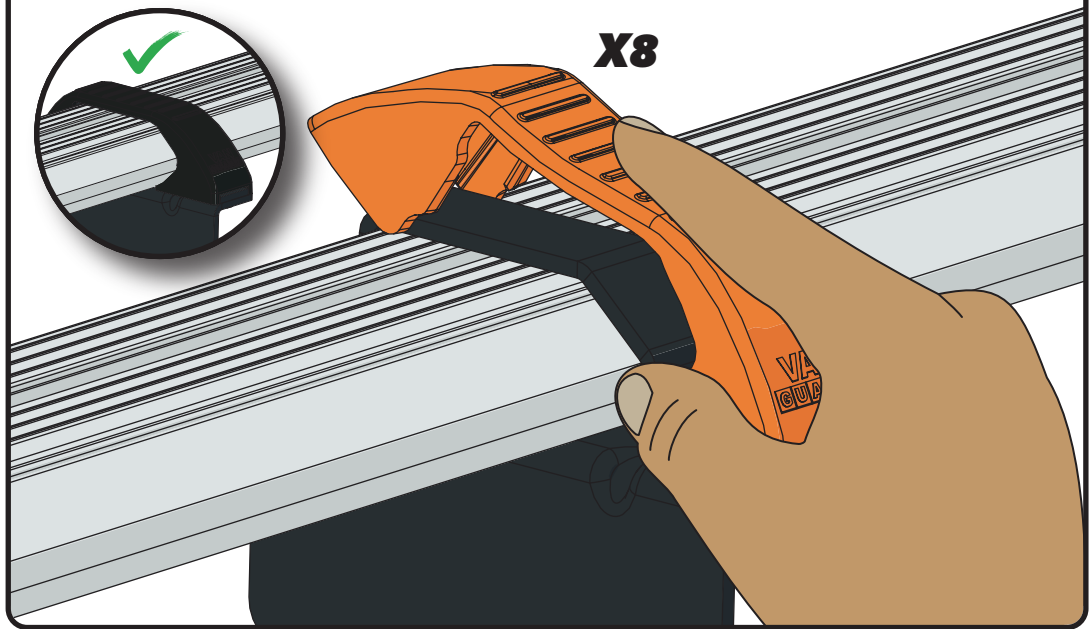

41

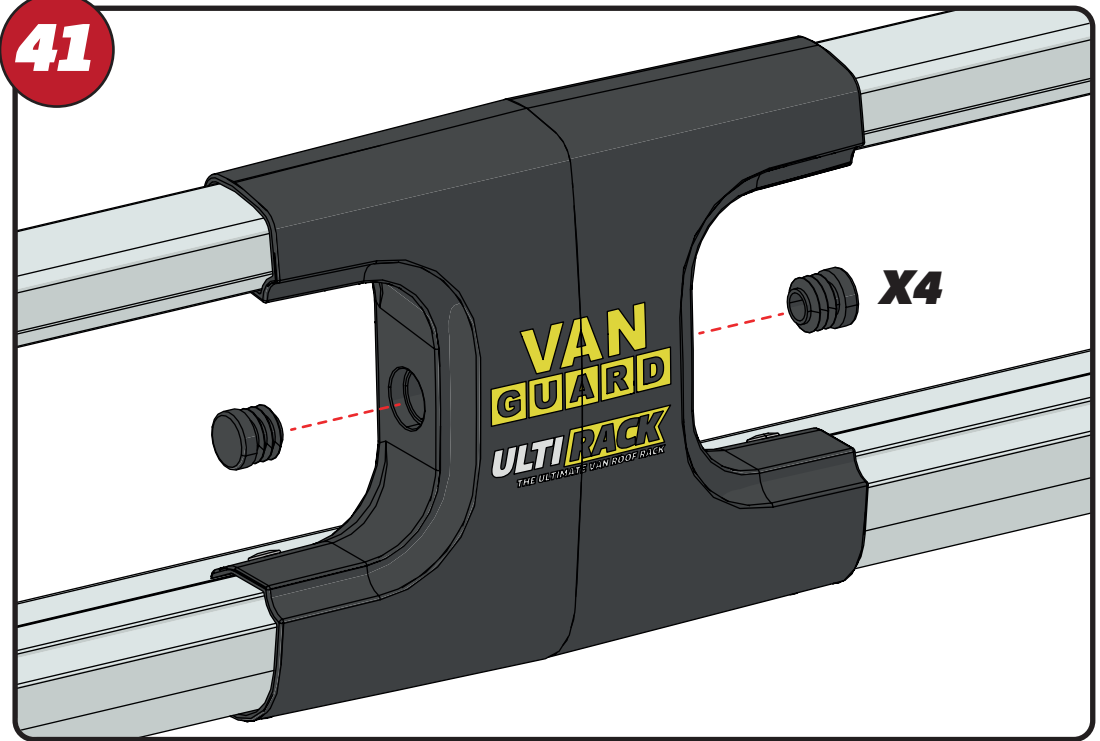

42

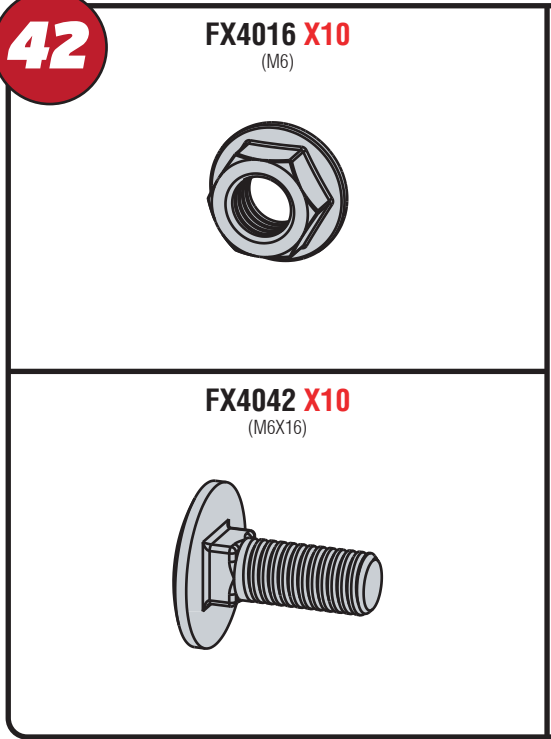

43

