
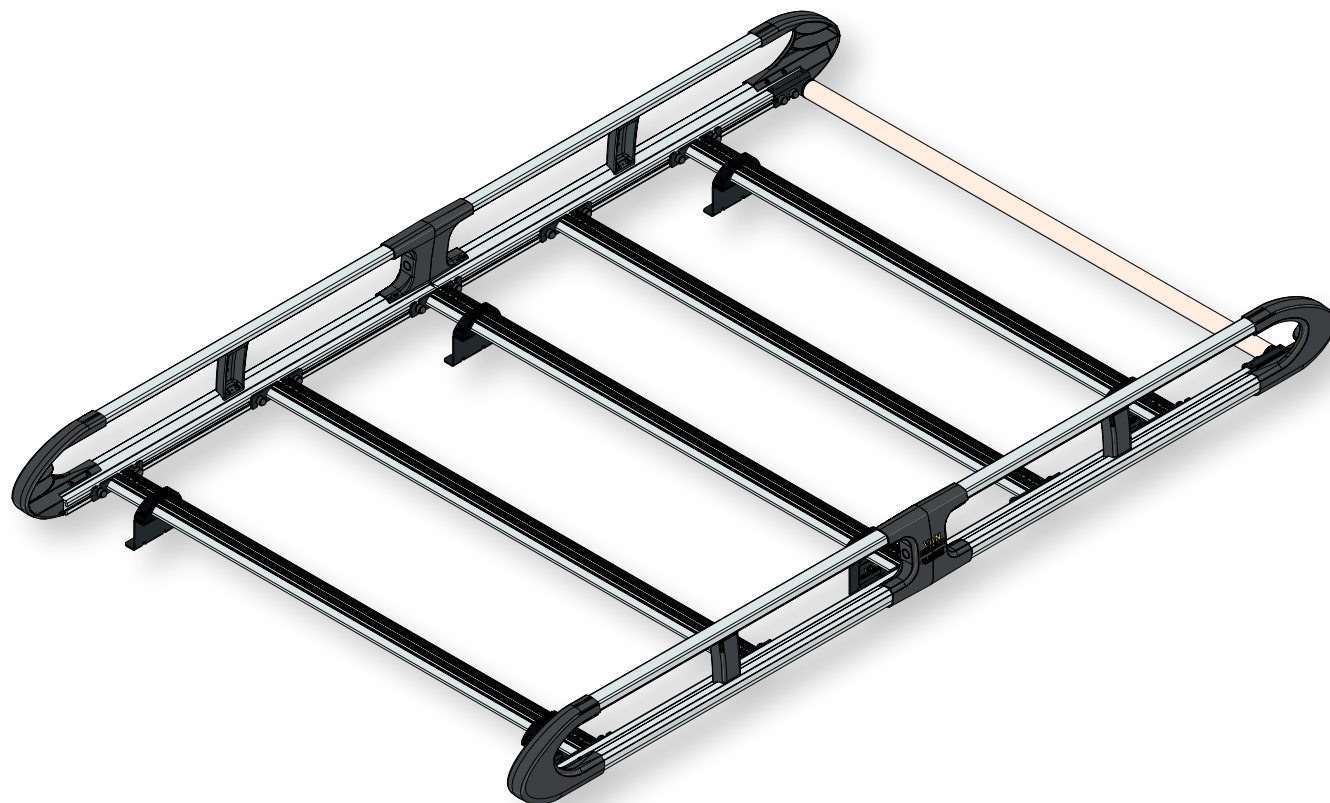
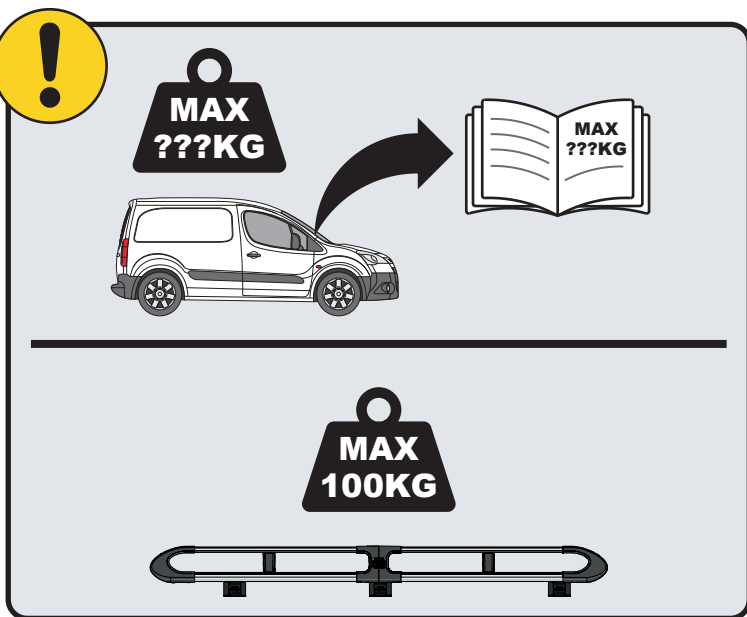


IN8305

ULTI Rack+

2

**VAN
GUARD**

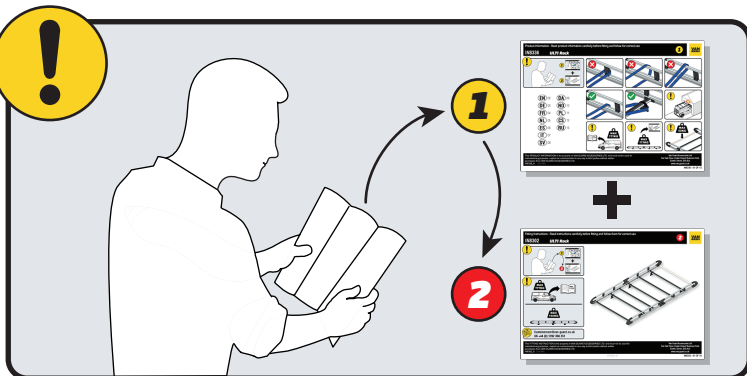



This FITTING INSTRUCTION is the property of VAN GUARD ACCESSORIES LTD. and must not be used for manufacturing purposes, copied nor communicated in any way to third parties without written permission from VAN GUARD ACCESSORIES LTD.
IN8305_A (CN:NR)

Van Guard Accessories Ltd
Fair Oak Close, Exeter Airport Business Park,
Exeter, Devon, EX5 2UL
www.van-guard.co.uk

VGUR-234

Citroen Berlingo: 2008-2018
Peugeot Partner: 2008-2018


L1H1 (SWB)
Twin Rear Doors

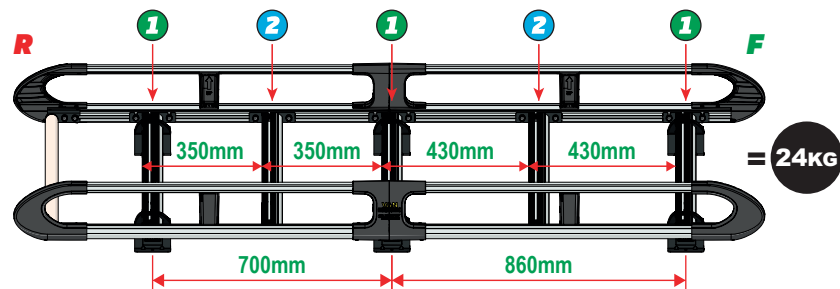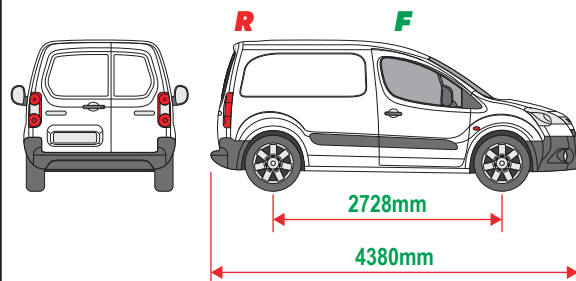




SUPPLIED COMPONENTS - CHECK ALL PARTS ARE PRESENT AND CORRECT BEFORE PROCEEDING (1 OF 2)

TOOLS REQUIRED

10MM X1

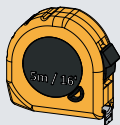


13MM X1

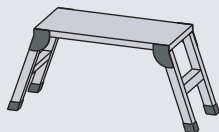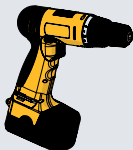

AS3531 X2

(2000 / A)

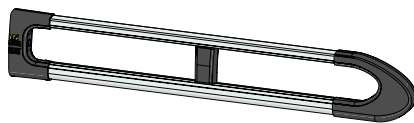


MA6118 X10



FX4241 X24




ME1622 X2



AS3530 X2


(2000 / B)




FX4008 X1



MA6145 X1




ME1623 X2



ME1626 X5

(1264mm)



FX4001 X2

(M8X40)




FX4235 X20

(M5X25)




ME0203 X6




AS3158 X1

(1250mm)




MA6007 X4




FX4248 X1


(T25)




MA6065 X6



AS3590 X1

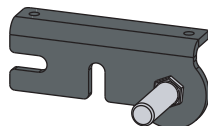


MA6093 X10




FX4239 X24

(M8X20)



ME1620 X3




FX4016 X12


(M6)



AS3591 X1



ME0316 X10




FX4240 X24

(M8)




ME1621 X3




FX4042 X12

(M6X16)



ME0741 X1

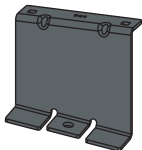


FX4019 X6


(M8)




ME0742 X1

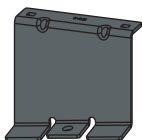


MA6018 X6




ME0743 X2



ME0744 X1




ME0745 X1

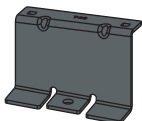

FX4018 X6

(M8X20)




01

1L



X3

1R



X3



2L





X2

2R



X2


02

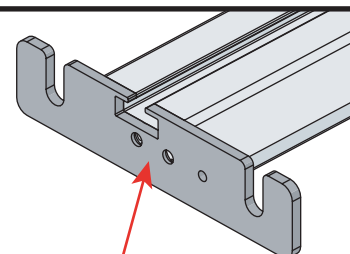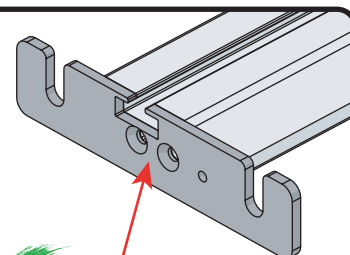


03

01


FX4248

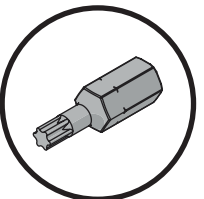

02

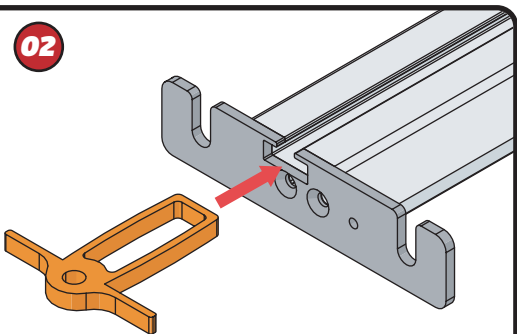


04

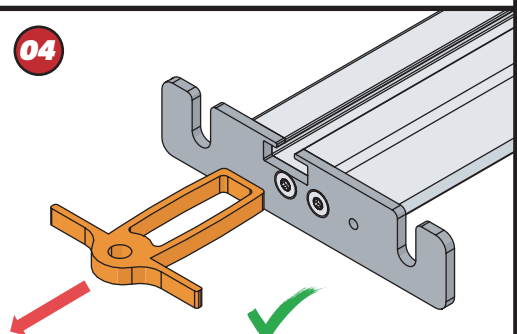

03



11Nm

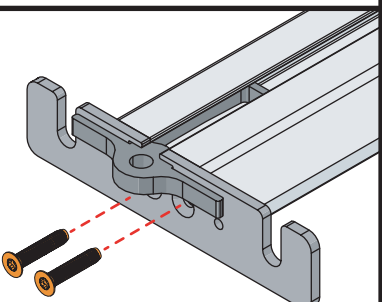


04




1

X3

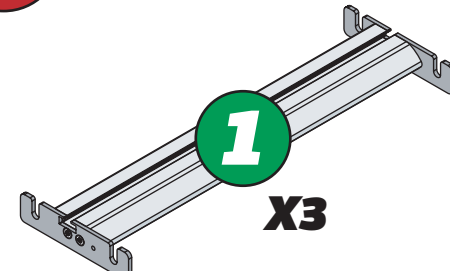


2

X2

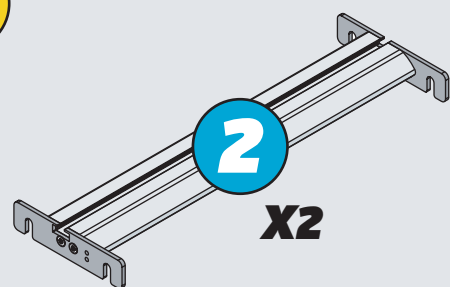


1


2

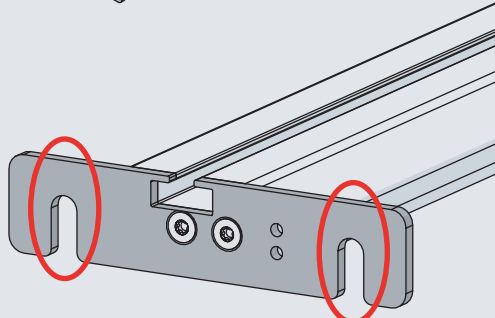


05

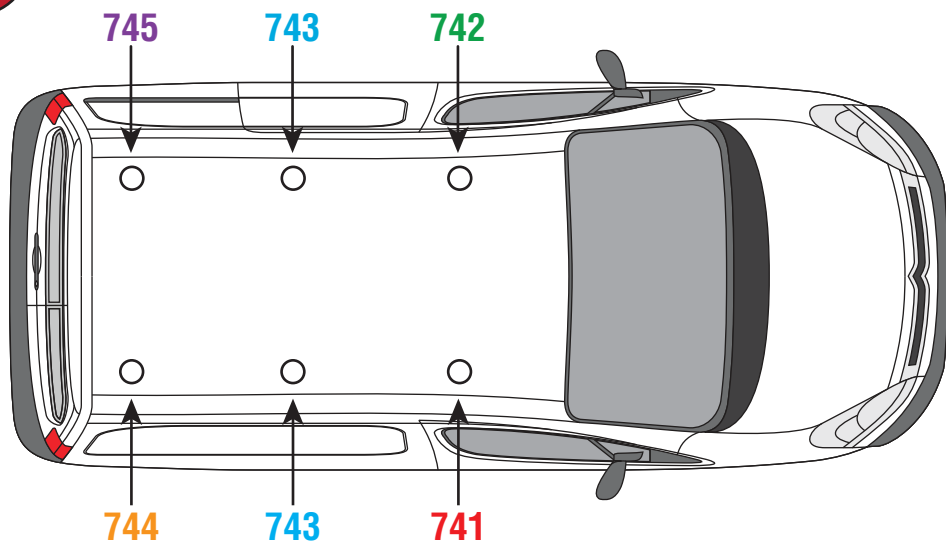


741

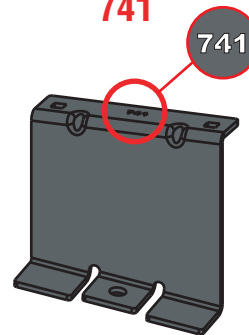


742

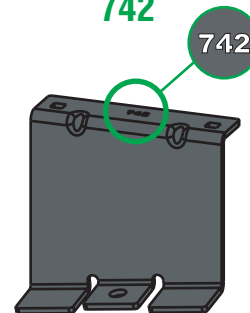


743

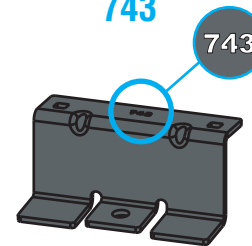



744

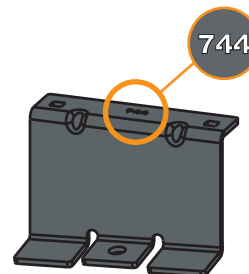

745

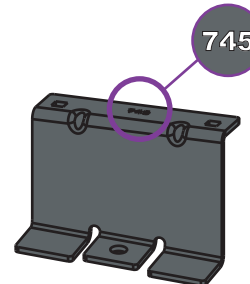



06

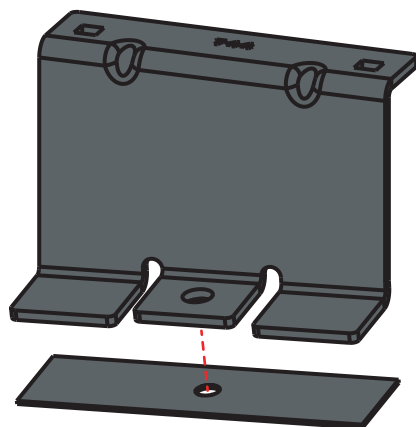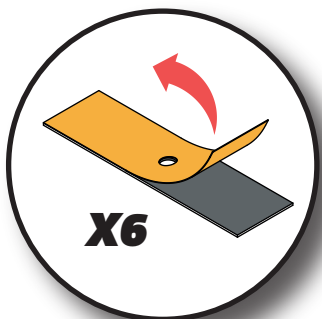


EN - STICK GASKETS TO ALL BRACKETS
 DE - KLEBEN SIE DIE DICHTUNG AN ALLEN HALTERUNGEN
 FR - COUSSINETS ADHÉSIFS À TOUS LES SUPPORTS
 NL - PLAK PAKKING OP ALLE BEUGELS
 ES - PEGA LAS ALMOHADILLAS A TODOS LOS SOPORTES
 IT - ADESIVI GUARNIZIONI A TUTTE LE STAFFE

SV - FÄST GUMMI PÅ ALLA FÄSTEN
 DA - KLÆB GUMMI PÅ ALLE BESLAG
 NO - PLIST GUMMI PÅ ALLE BRAKKETTER
 PL - NAKLEJ USZCZELKI DO WSZYSTKICH WSPORNIKÓW
 CS - PŘILEPTE TĚSNĚNÍ NA VŠECHNY DRŽÁKY


07

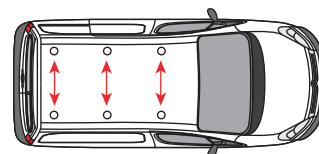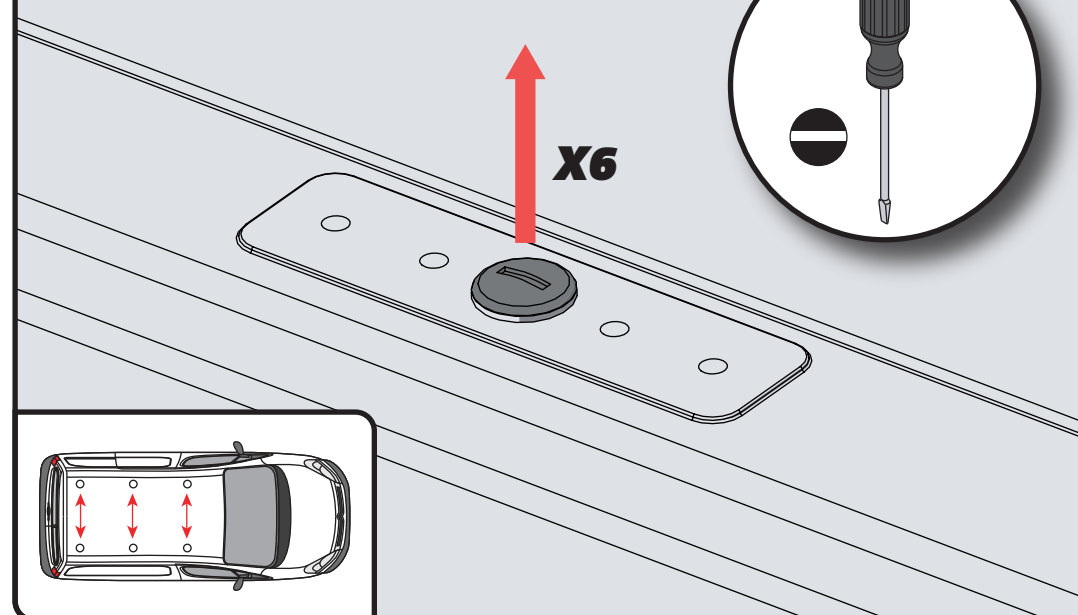


08

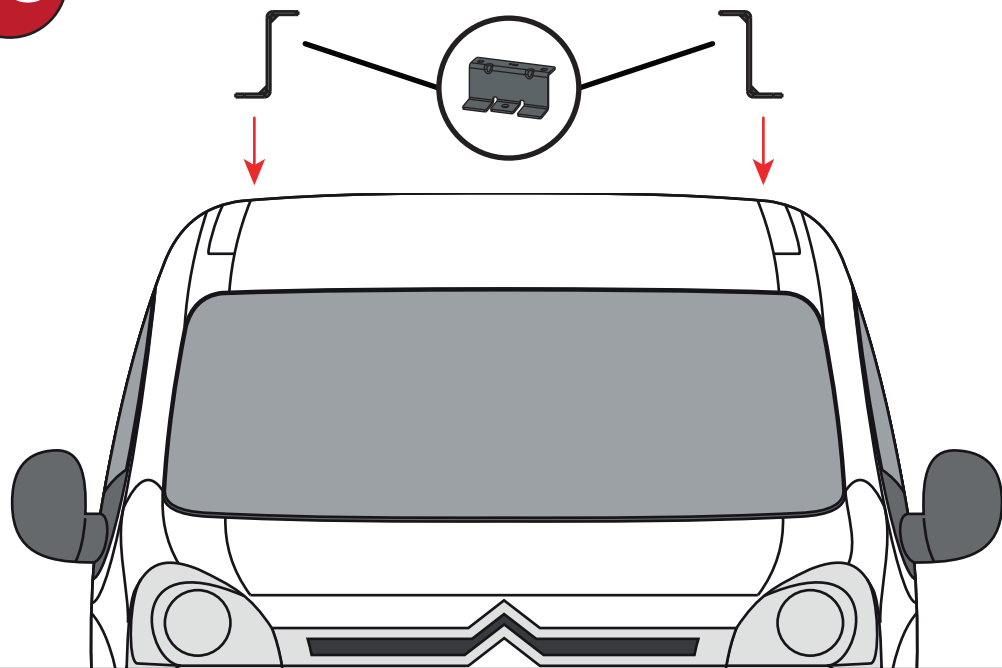


09

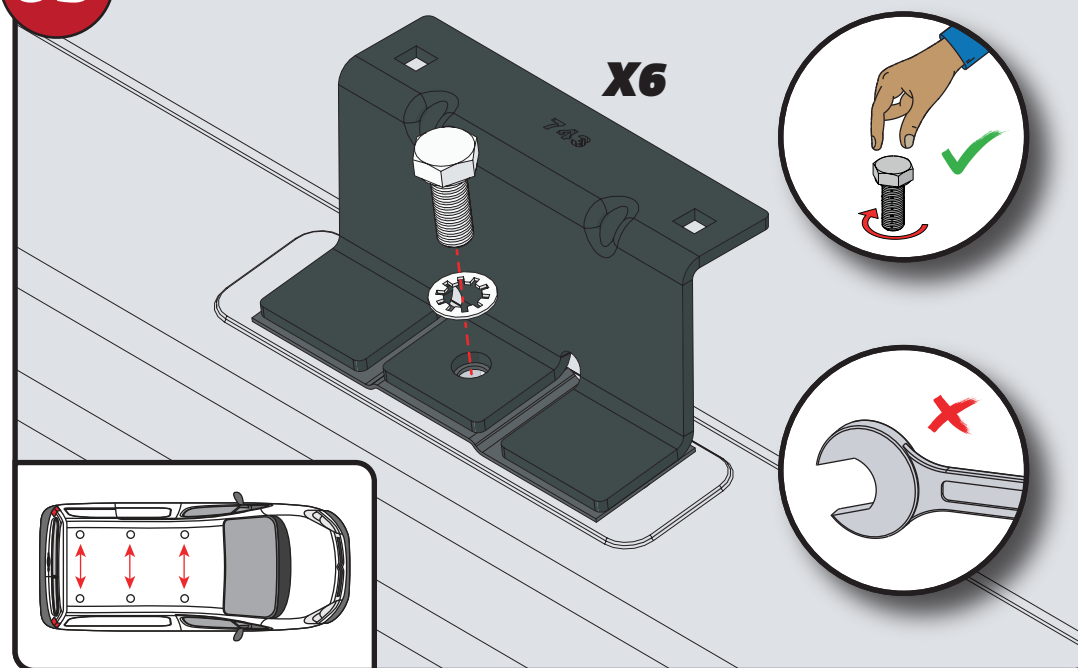

10

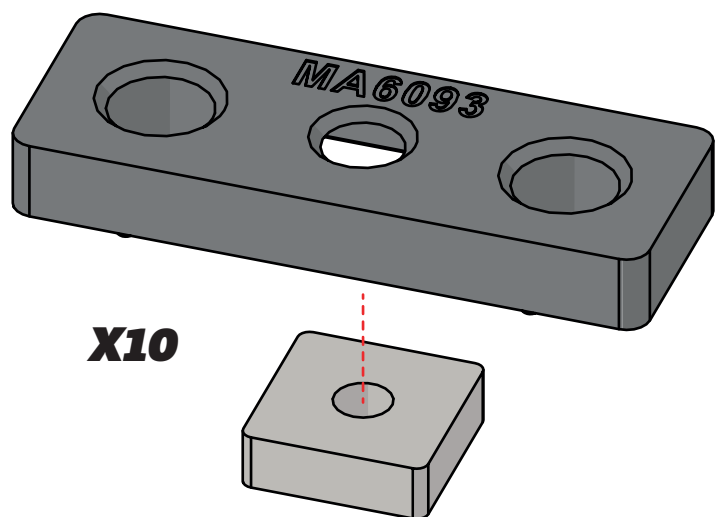


11

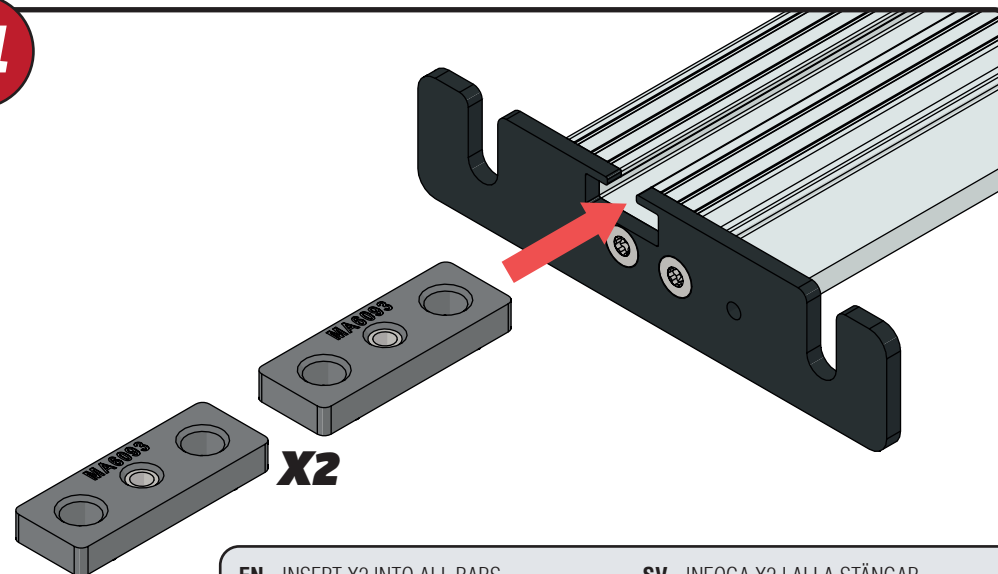





EN - INSERT X2 INTO ALL BARS
DE - X2 IN ALLE STANGEN EINFÜGEN
FR - INSÉRER X2 DANS TOUTES LES BARRES
NL - PLAATS X2 IN ALLE BARS
ES - INSERTAR X2 EN TODAS LAS BARRAS
IT - INSERIRE X2 IN TUTTE LE BARRE

SV - INFOGA X2 I ALLA STÄNGAR
DA - INDSÆT X2 I ALLE STÆNGER
NO - SETT X2 INN I ALLE TAKSTENGER
PL - WSTAW X2 DO WSZYSTKICH PRĘTÓW
CS - VLOŽTE X2 DO VŠECH TYČÍ


12

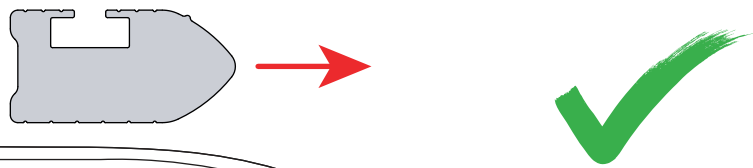


13

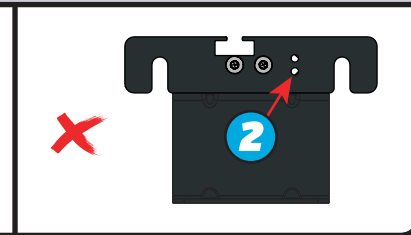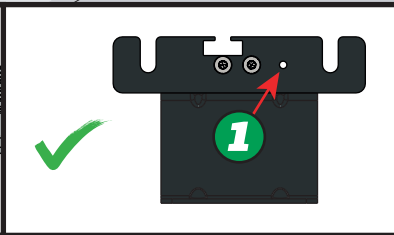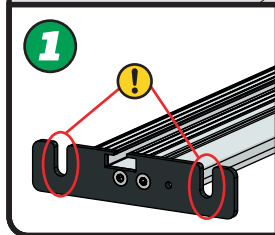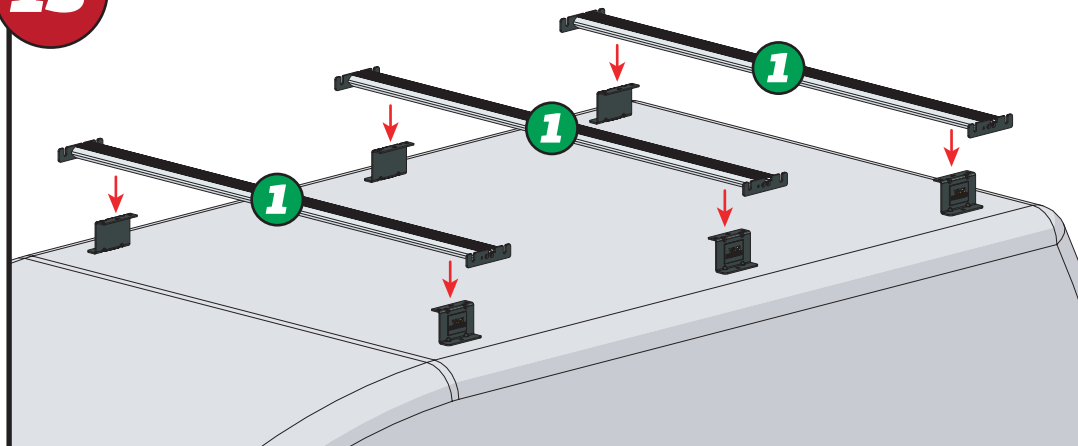


14

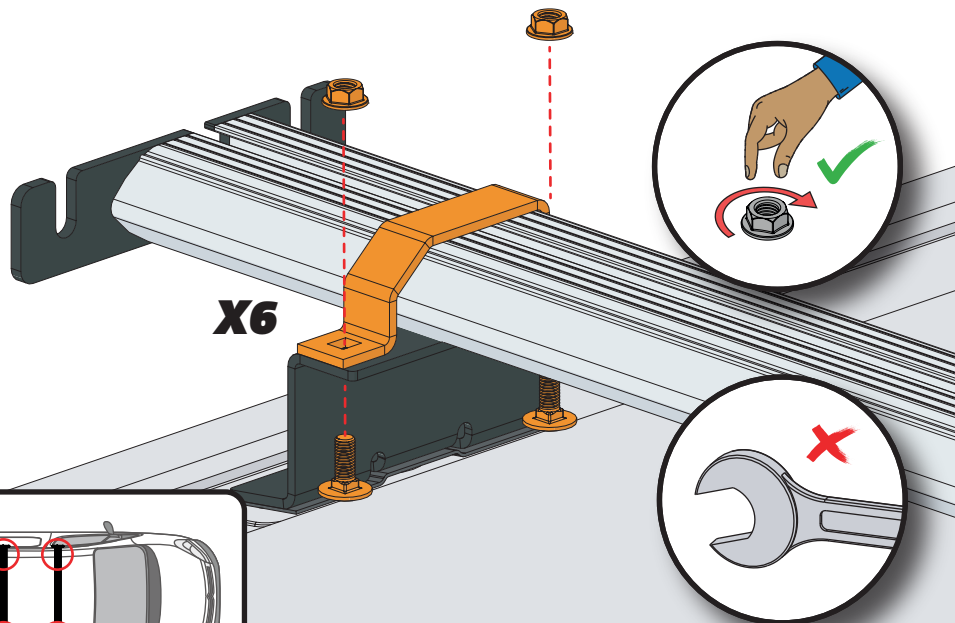


X6

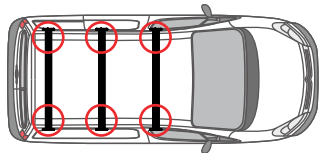


15

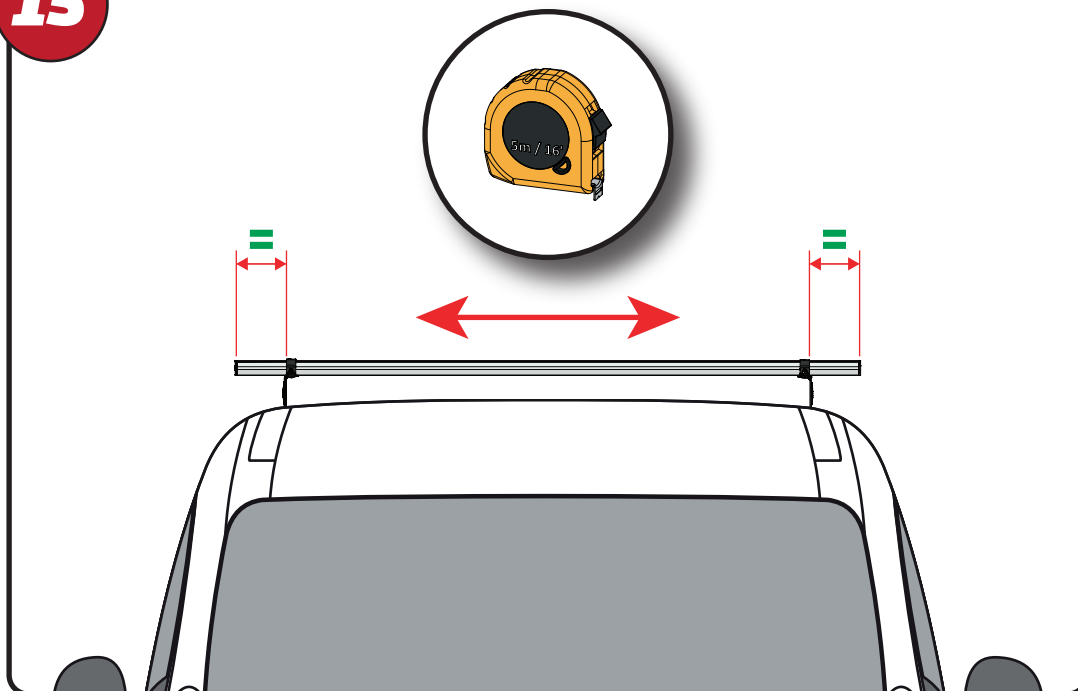


16

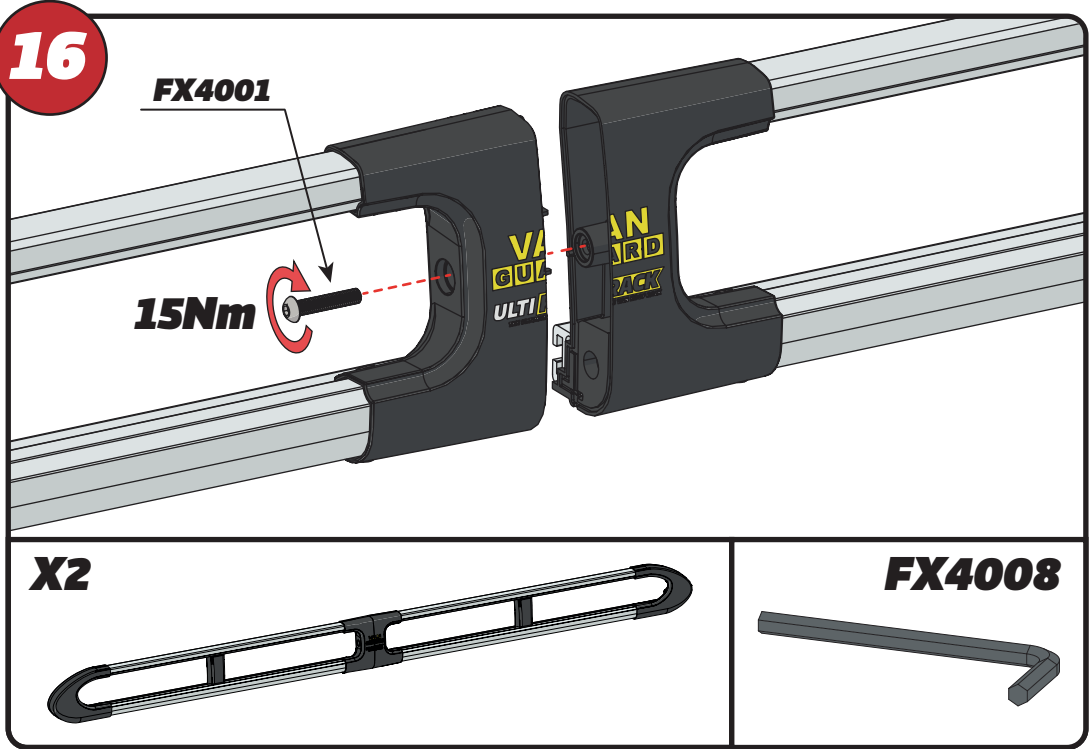


17

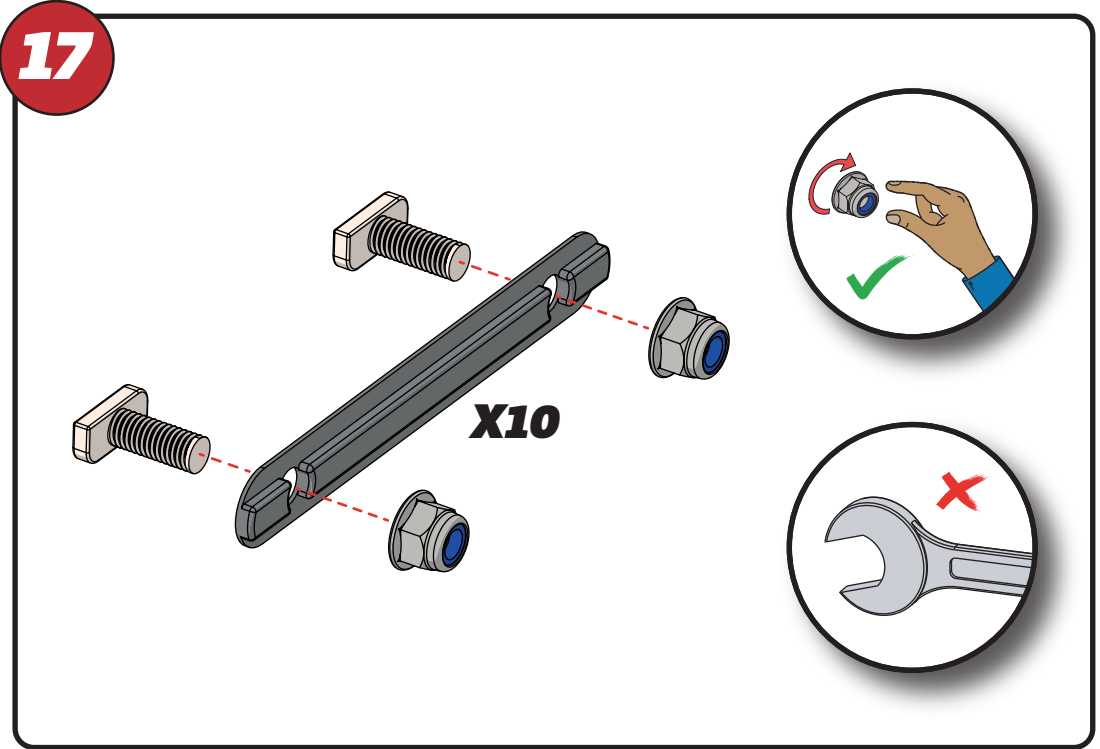




18

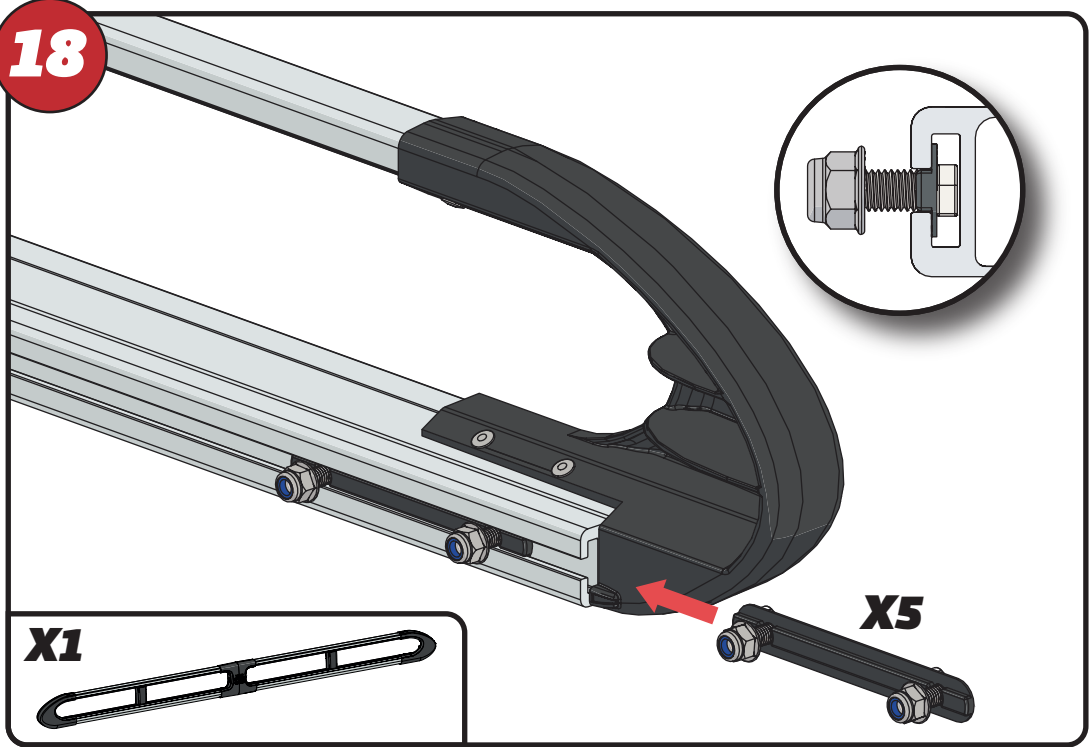


19

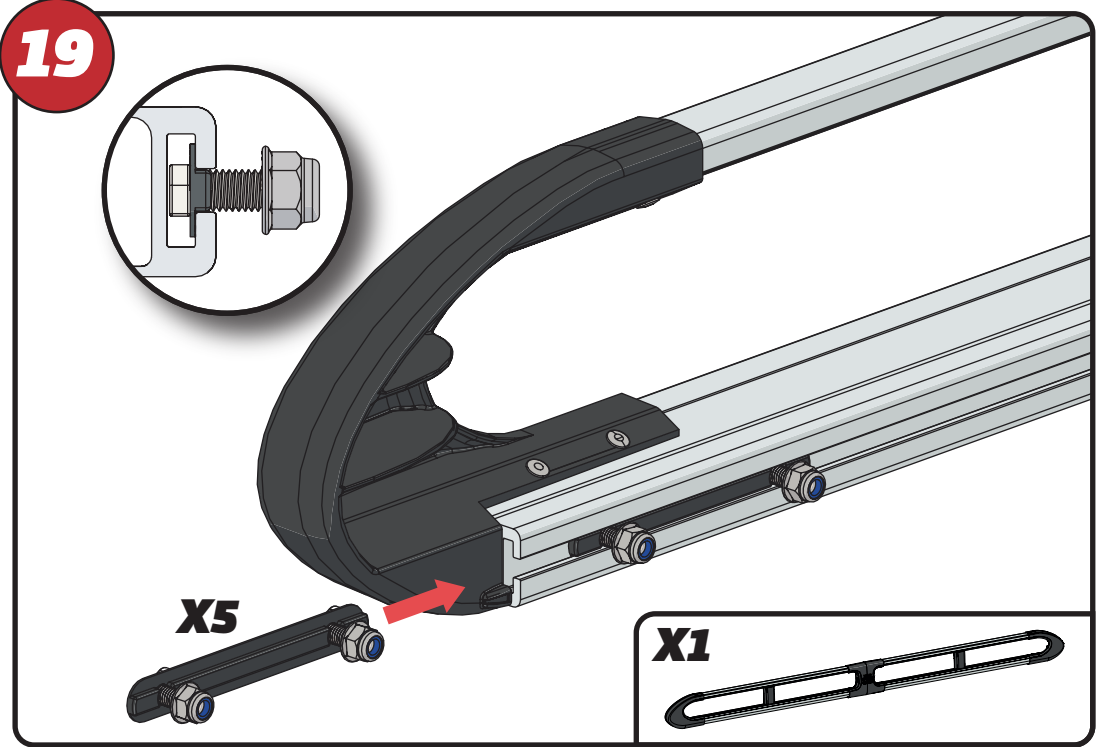


20

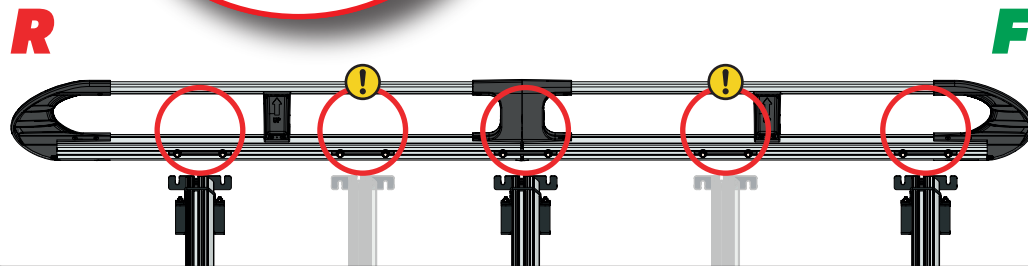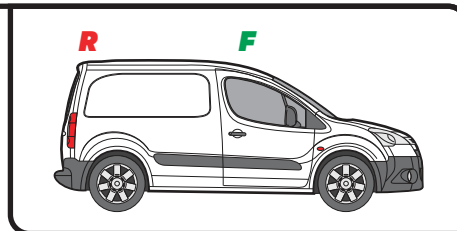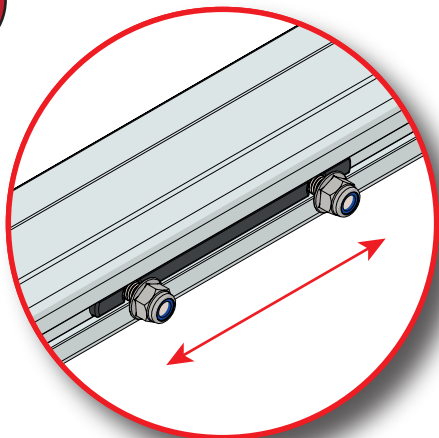


21

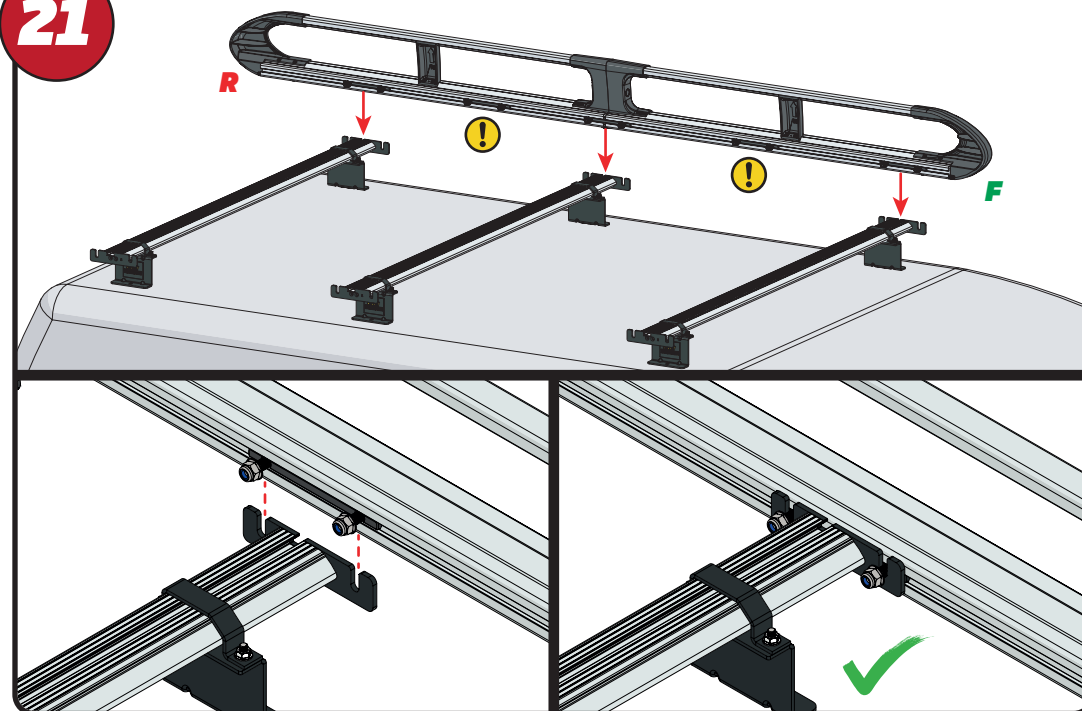


22

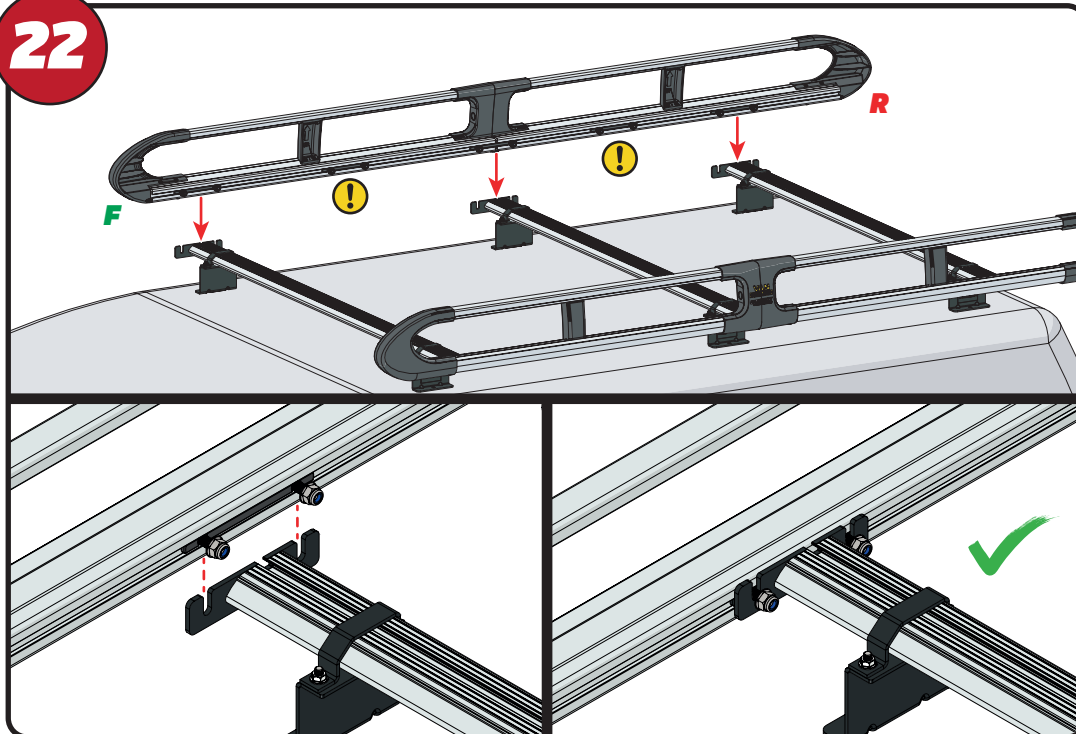


23

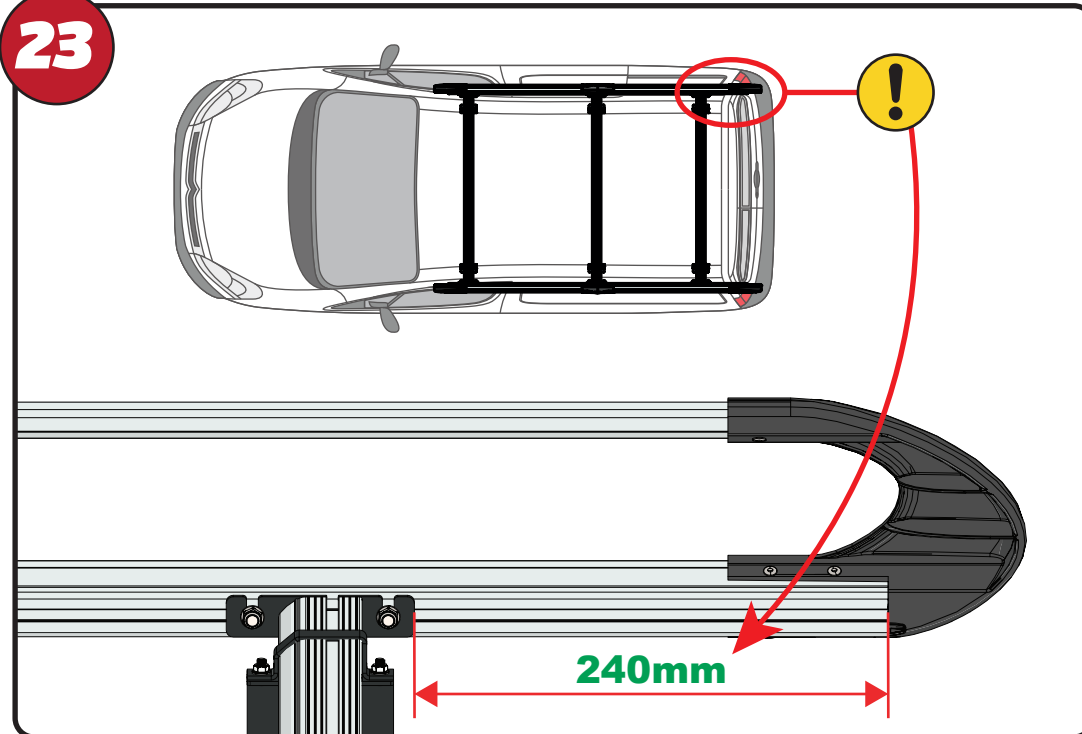

24


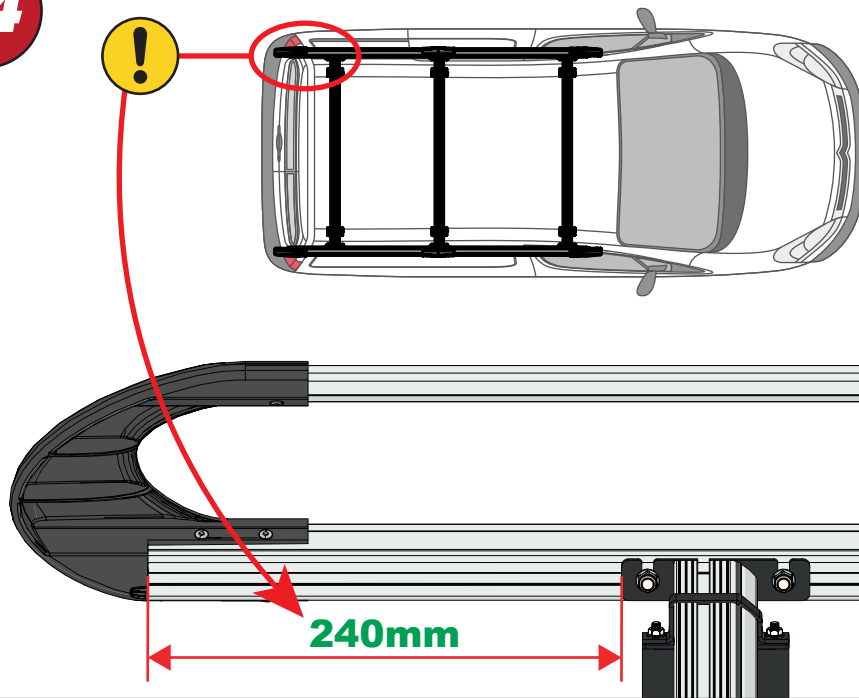


25

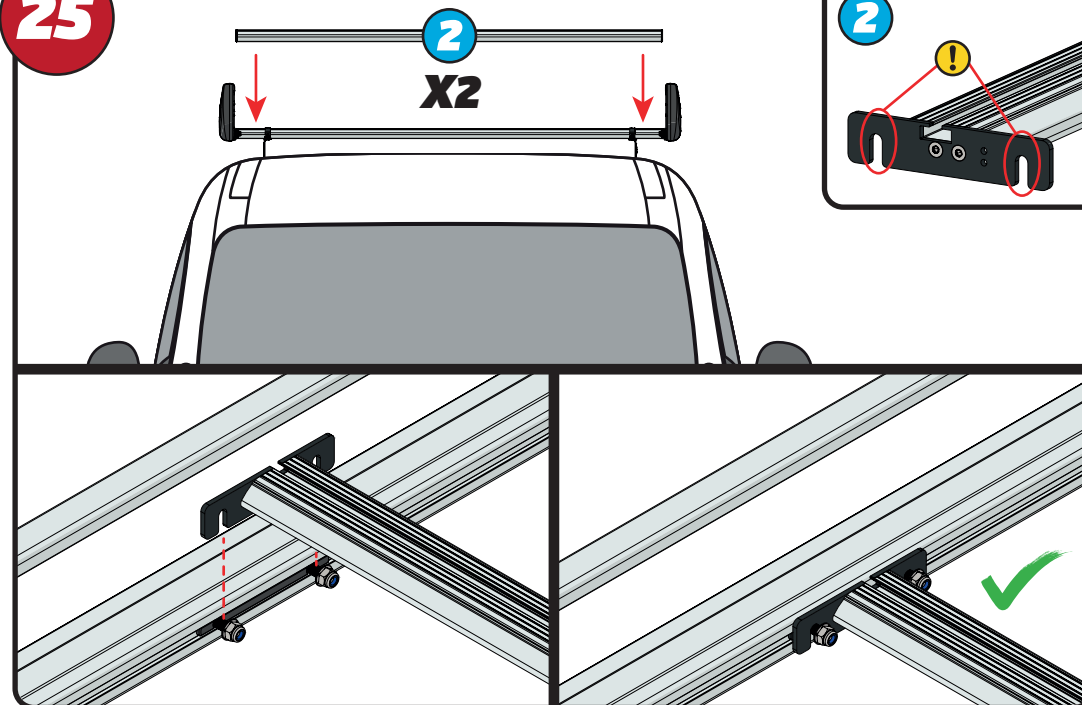


26

XXX =
PAGE 2 OF 14

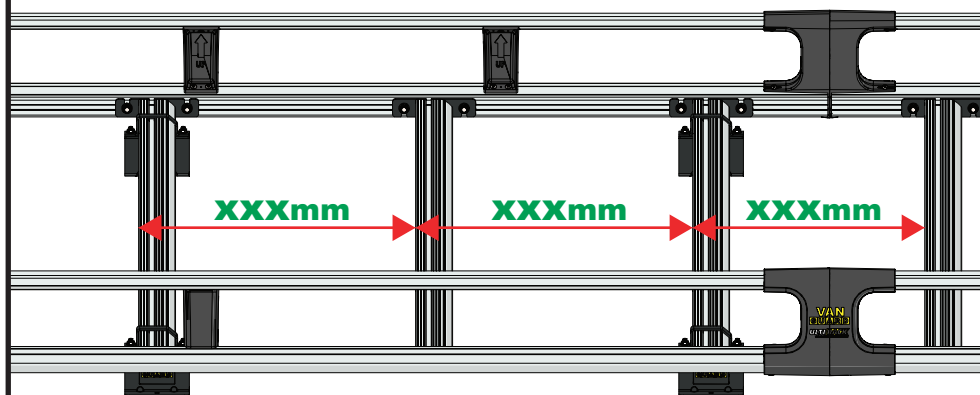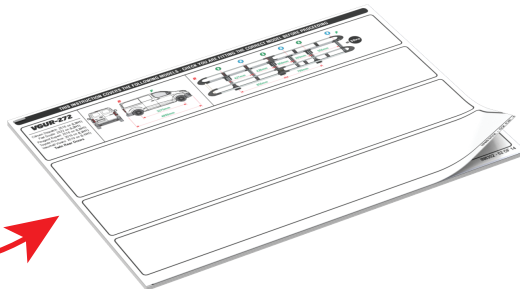


27

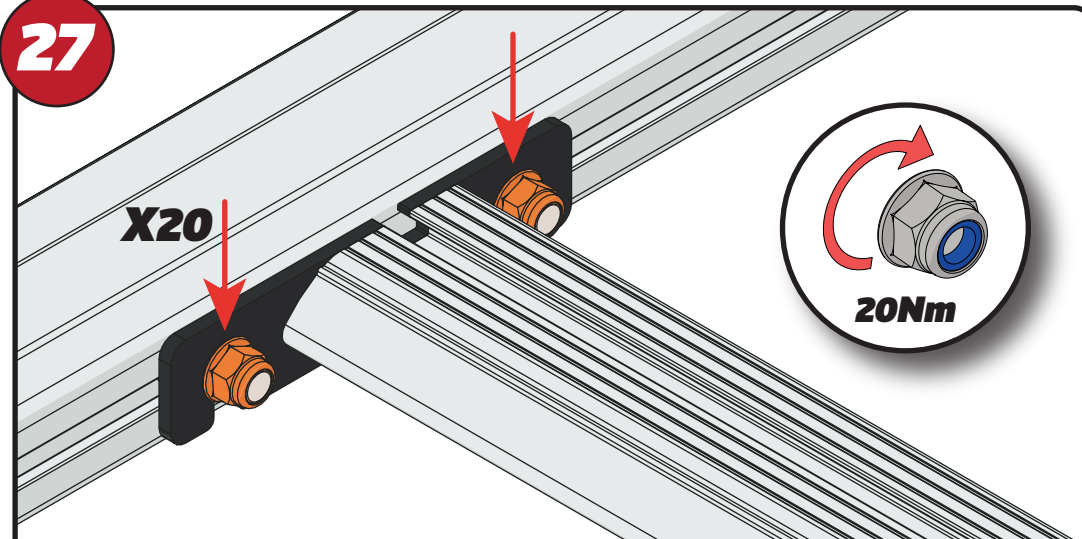



EN - TIGHTEN ALL OF THE CROSS BARS
DE - ALLE QUERSTANGEN FESTZIEHEN
FR - SERREZ TOUTES LES BARRES TRANSVERSALES
NL - DRAAI ALLE DWARSBALK VAN HET DAK AAN
ES - APIRIETE TODAS LAS BARRAS TRANSVERSALES
IT - STRINGERE TUTTE LE BARRE TRASVERSALI

SV - SKRU UPP ALLA KORSSTANGAR
DA - SKRU ALLE TAGBØJLER OP
NO - SKRU OPP ALLE TVERRSTENGER
PL - DOKRĘCIĆ WSZYSTKIE POPRZECZKI
CS - VŠECHNY PŘÍČNÉ TYČE SEŠROUJTE


28

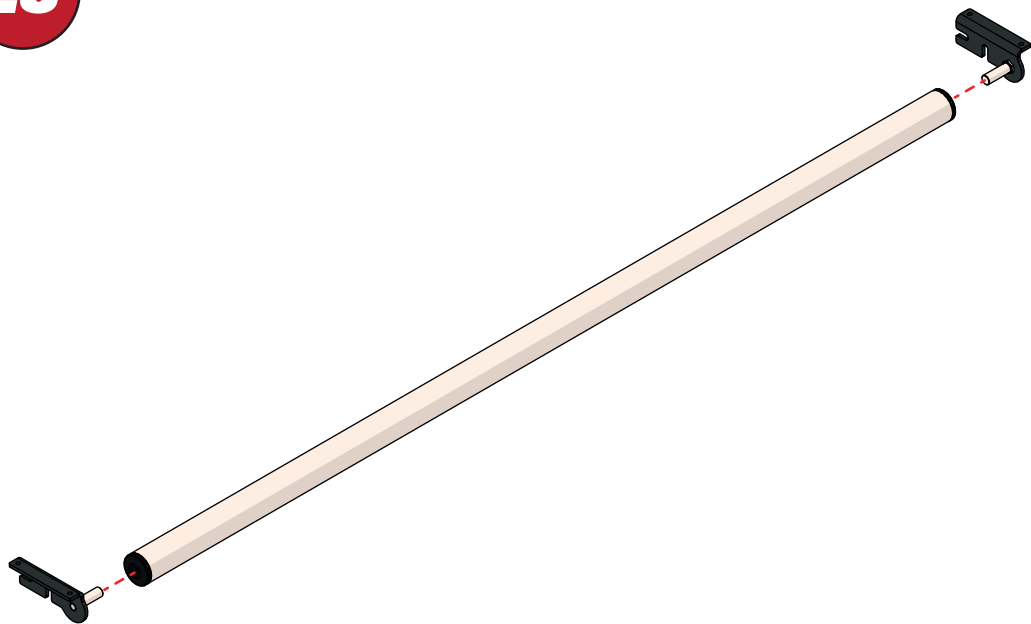


29

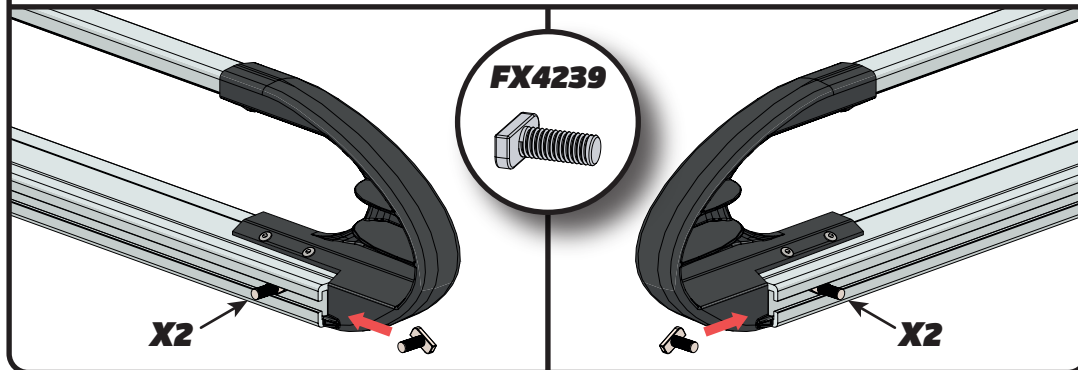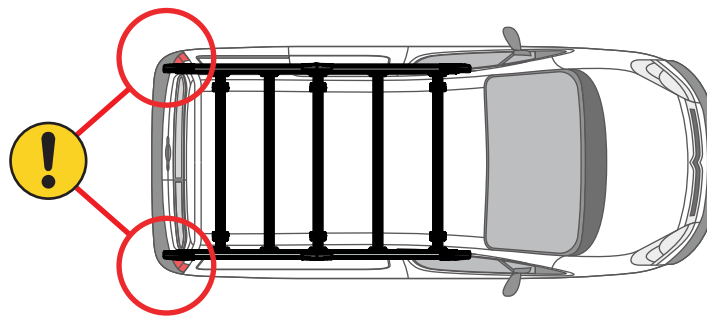


30

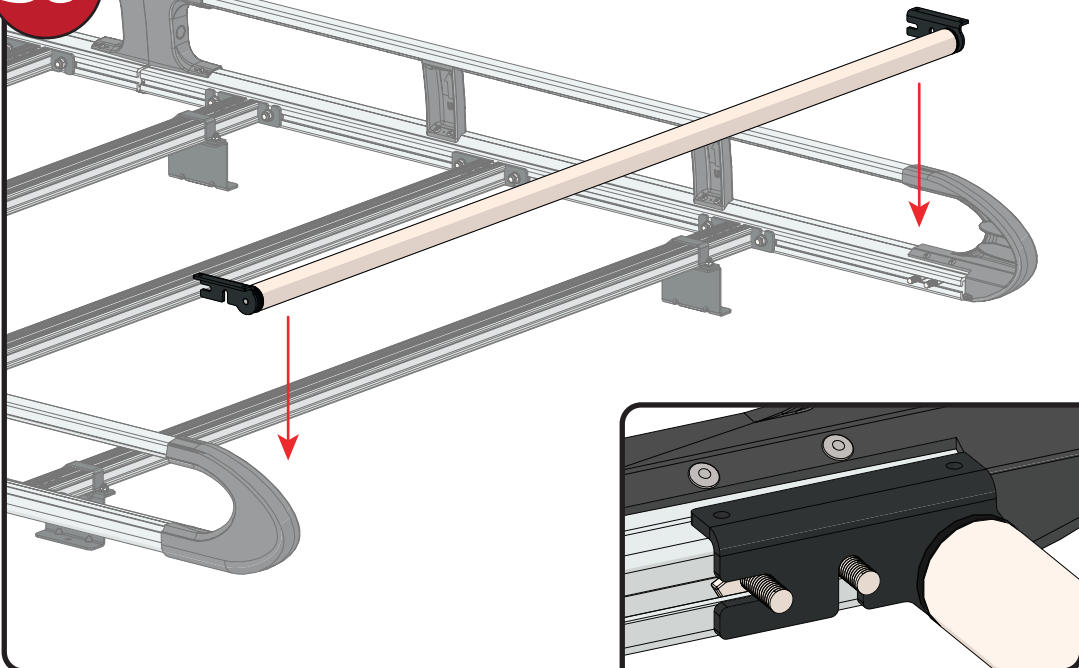


31

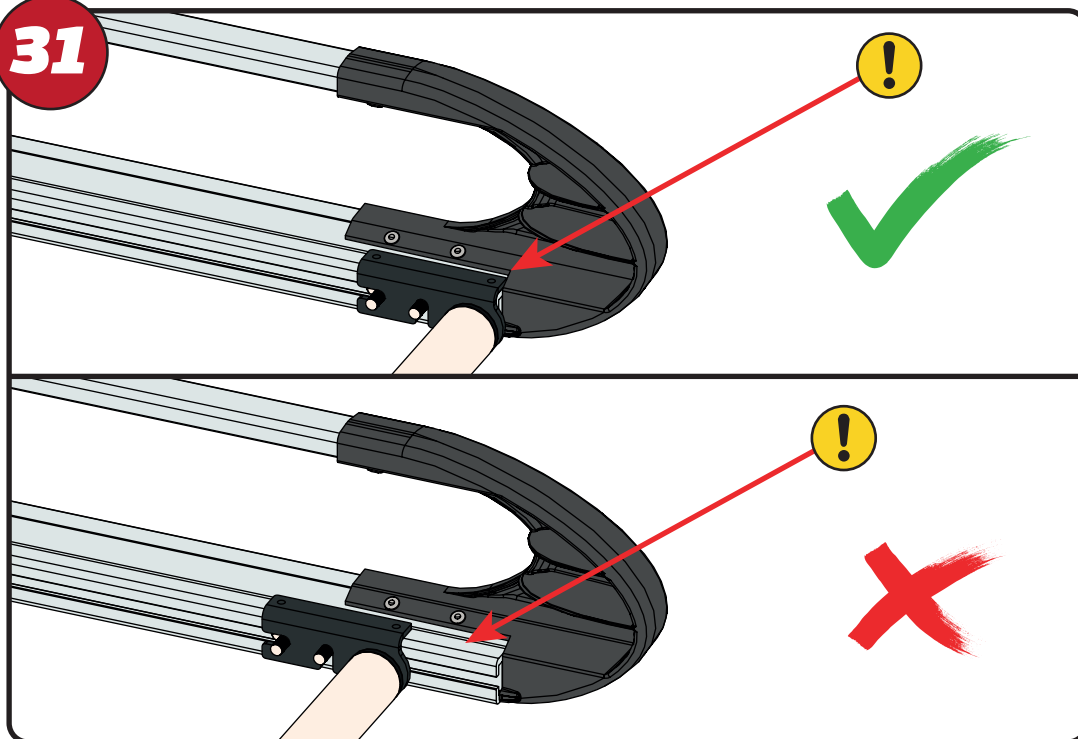


32

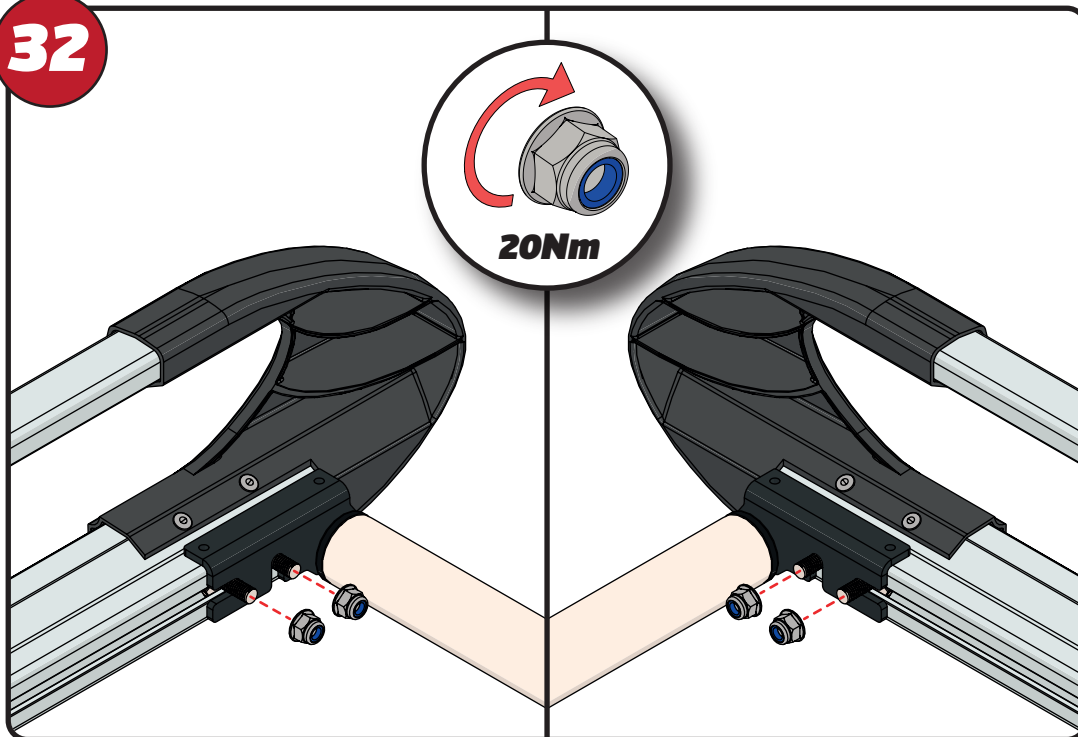


33

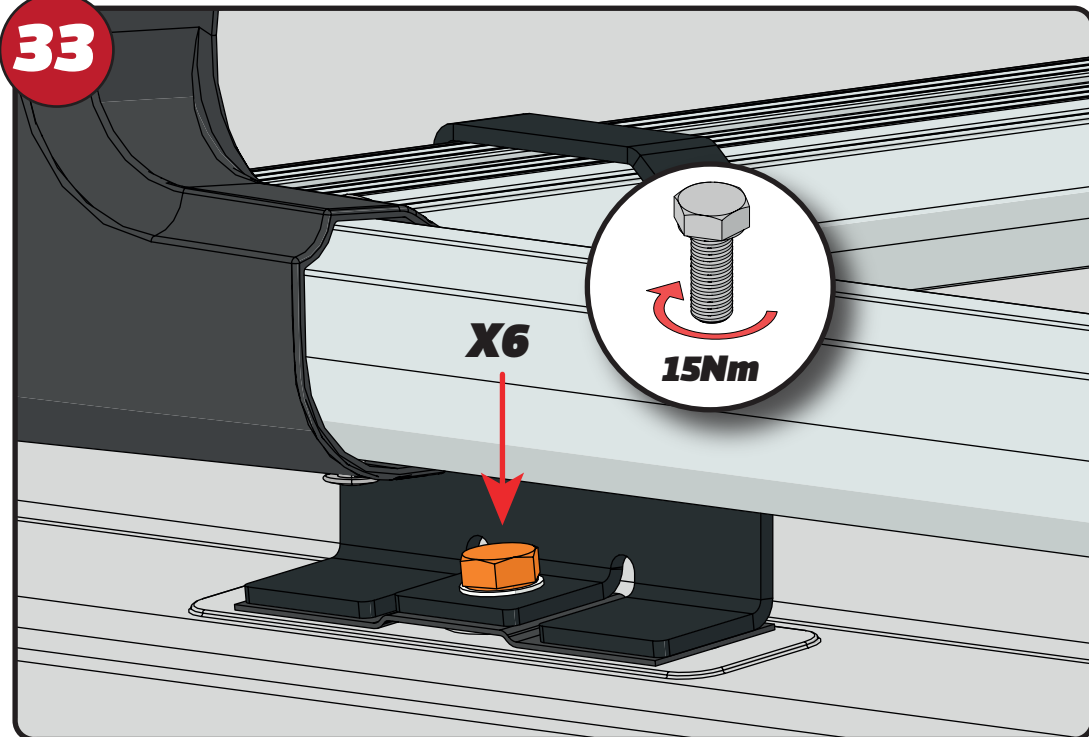


34

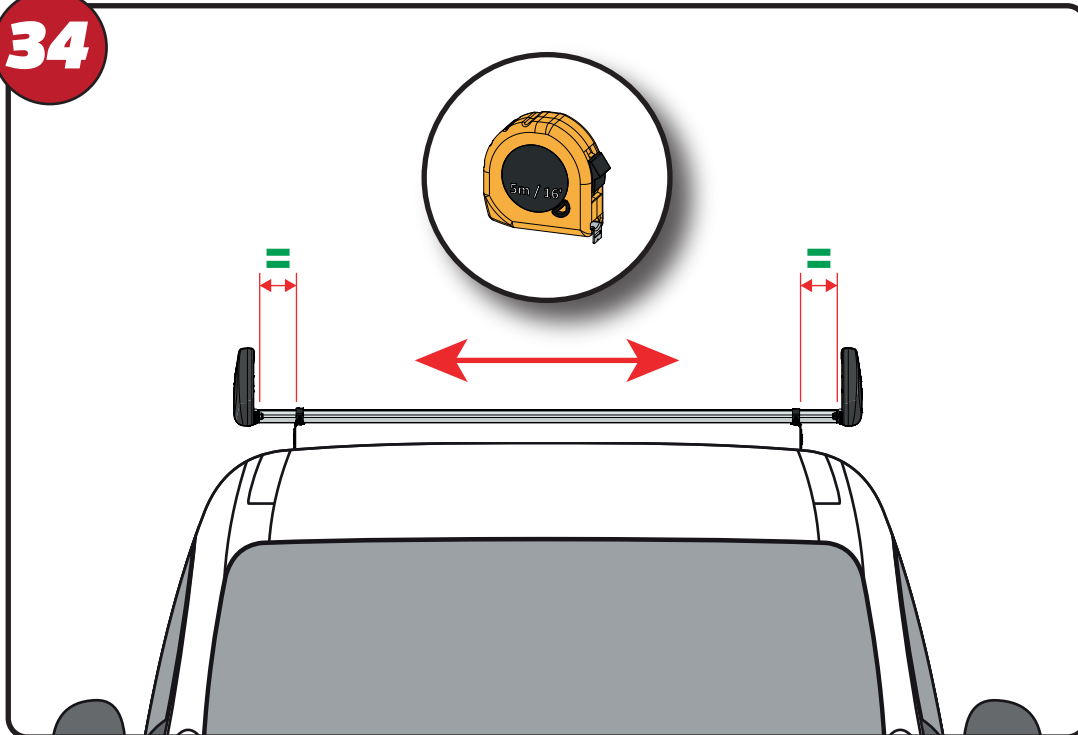


35

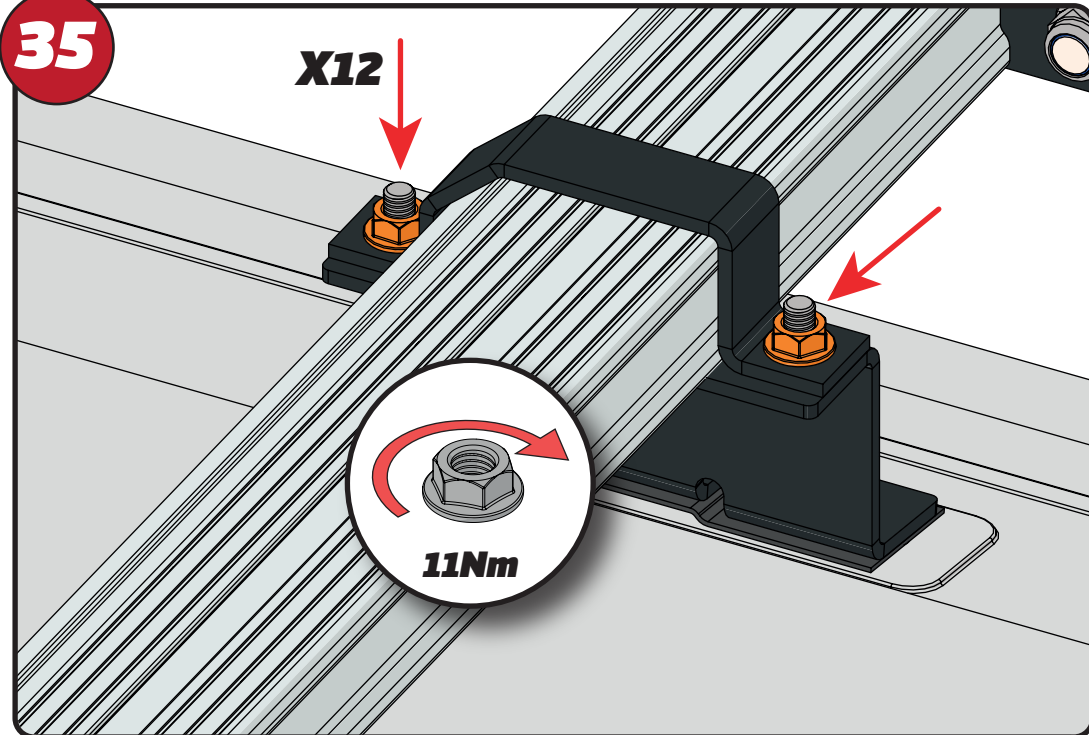


36

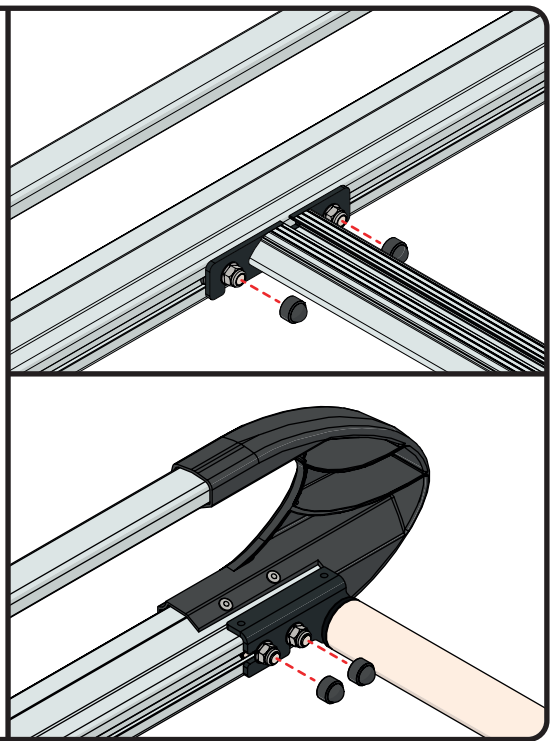

37

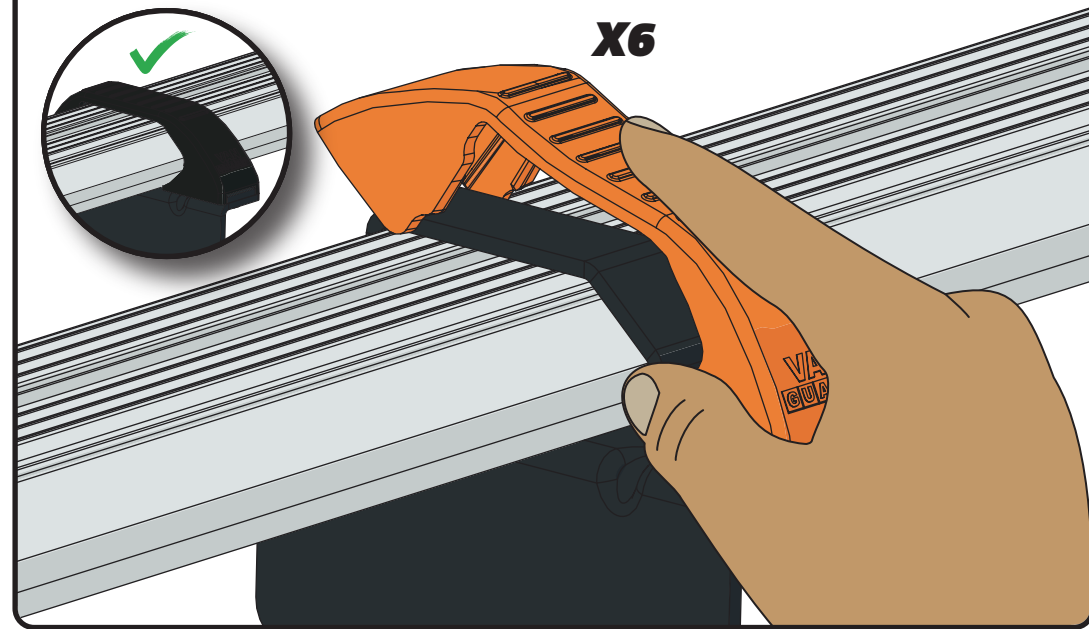

38

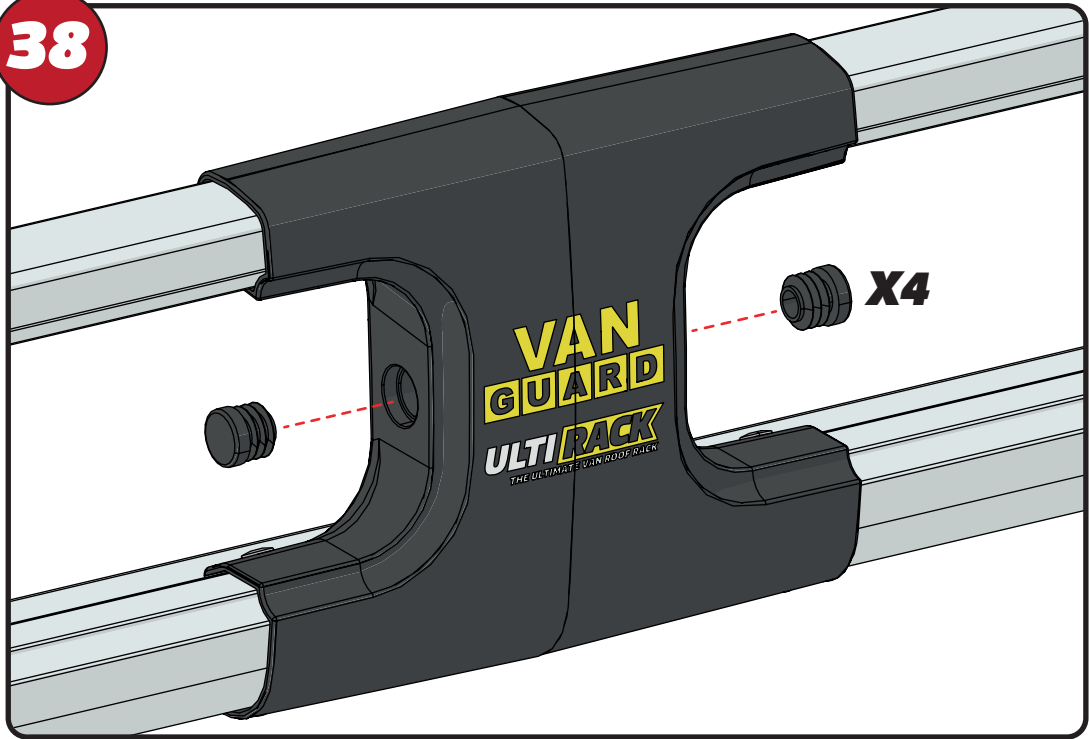

39

