
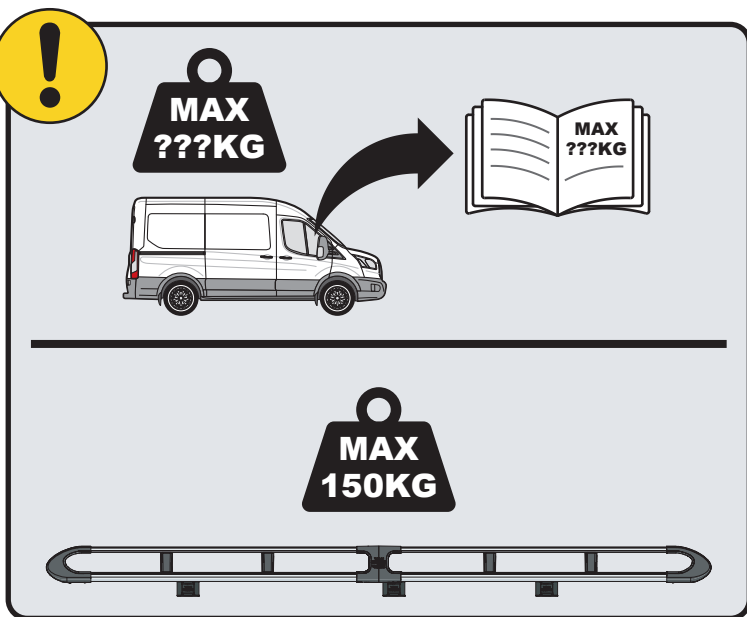


IN8327

ULTI Rack+

2

**VAN
GUARD**


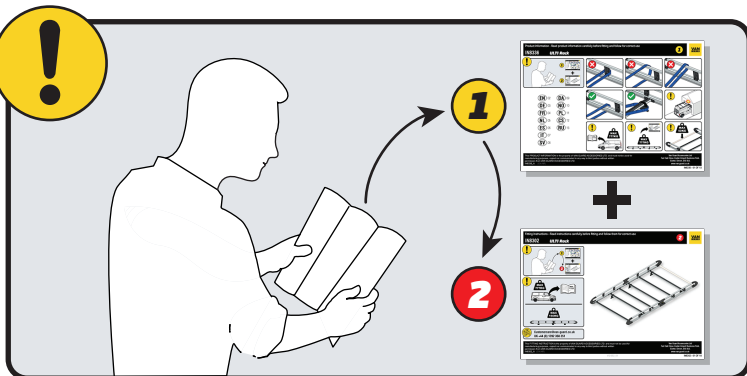


This FITTING INSTRUCTION is the property of VAN GUARD ACCESSORIES LTD. and must not be used for manufacturing purposes, copied nor communicated in any way to third parties without written permission from VAN GUARD ACCESSORIES LTD.
IN8327_B (CN:00356)

Van Guard Accessories Ltd
Fair Oak Close, Exeter Airport Business Park,
Exeter, Devon, EX5 2UL
www.van-guard.co.uk

VGUR-256


Ford Transit: 2014 on
L2H2 (MWB)
Twin Rear Doors

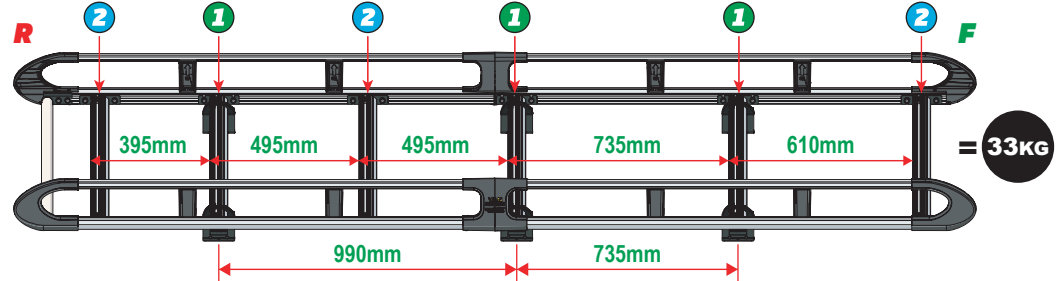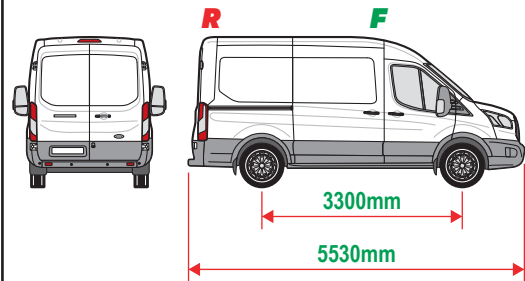



SUPPLIED COMPONENTS - CHECK ALL PARTS ARE PRESENT AND CORRECT BEFORE PROCEEDING (1 OF 2)

TOOLS REQUIRED


10MM X1

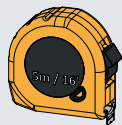

13MM X1

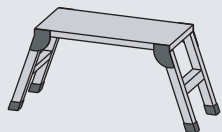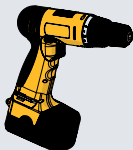

AS3541 X2
(3000 / A)

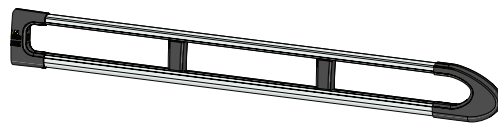


MA6118 X12




FX4241 X28



ME1622 X3




AS3540 X2
(3000 / B)




FX4008 X1




MA6145 X1



ME1623 X3



ME1628 X6
(1554mm)




FX4001 X2
(M8X40)




FX4235 X24
(M5X25)




ME0203 X6




AS3160 X1
(1540mm)




MA6007 X4




FX4248 X1
(T25)




MA6065 X6




AS3590 X1

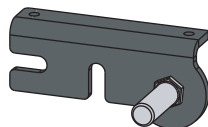


MA6093 X12



FX4239 X28
(M8X20)




ME1620 X3




FX4016 X12
(M6)



AS3591 X1




ME0316 X12




FX4240 X28
(M8)




ME1621 X3



FX4042 X12
(M6X16)



ME0786 X6

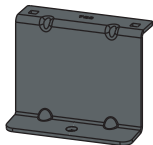

FX4019 X6

(M8)




FX4020 X6

(M8)




FX4028 X6

(M8X25)




MA6018 X6




01

1L



X3

1R



X3




2L



X3


2R



X3

02


1R

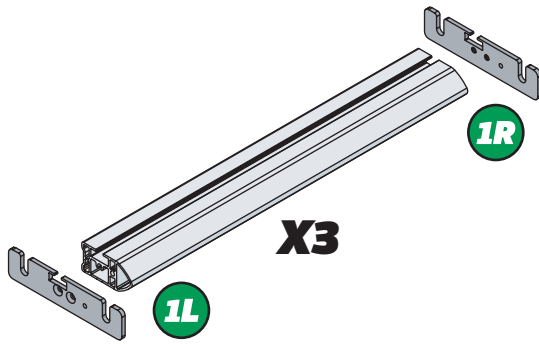

1L

X3

2R

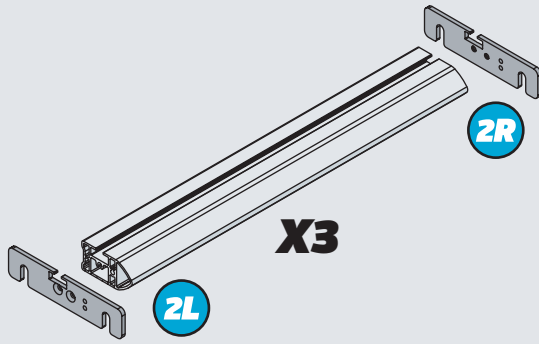

2L

X3




03

01


FX4248




+

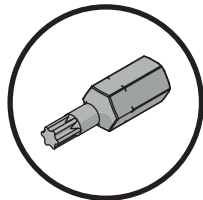


02

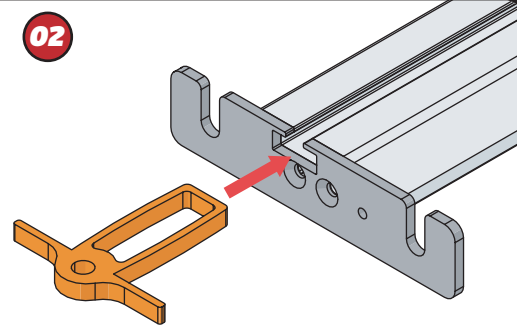

04

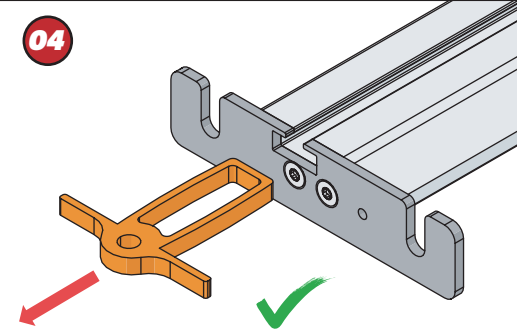


03



11Nm


04

1

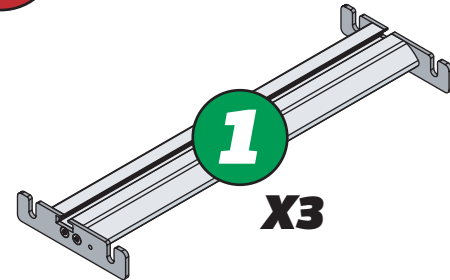

X3



2

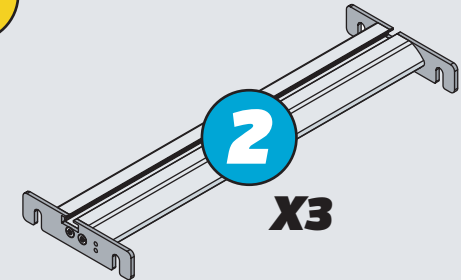

X3




05

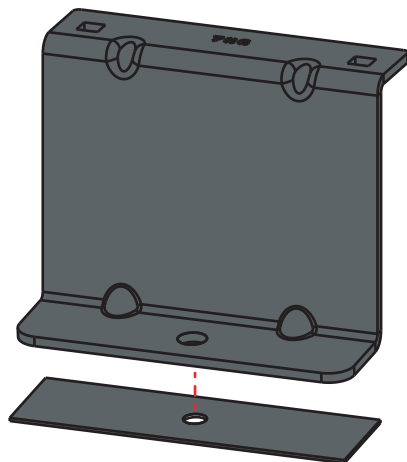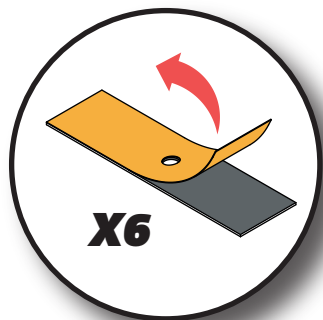


EN - STICK GASKETS TO ALL BRACKETS
 DE - KLEBEN SIE DIE DICHTUNG AN ALLEN HALTERUNGEN
 FR - COUSSINETS ADHÉSIFS À TOUS LES SUPPORTS
 NL - PLAK PAKKING OP ALLE BEUGELS
 ES - PEGA LAS ALMOHADILLAS A TODOS LOS SOPORTES
 IT - ADESIVI GUARNIZIONI A TUTTE LE STAFFE

SV - FÄST GUMMI PÅ ALLA FÄSTEN
 DA - KLÆB GUMMI PÅ ALLE BESLAG
 NO - PLIST GUMMI PÅ ALLE BRAKKETTER
 PL - NAKLEJ USZCZELKI DO WSZYSTKICH WSPORNIKÓW
 CS - PŘILEPTE TĚSNĚNÍ NA VŠECHNY DRŽÁKY


06

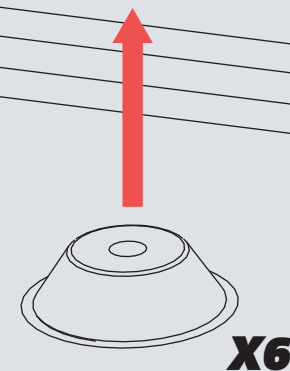


07

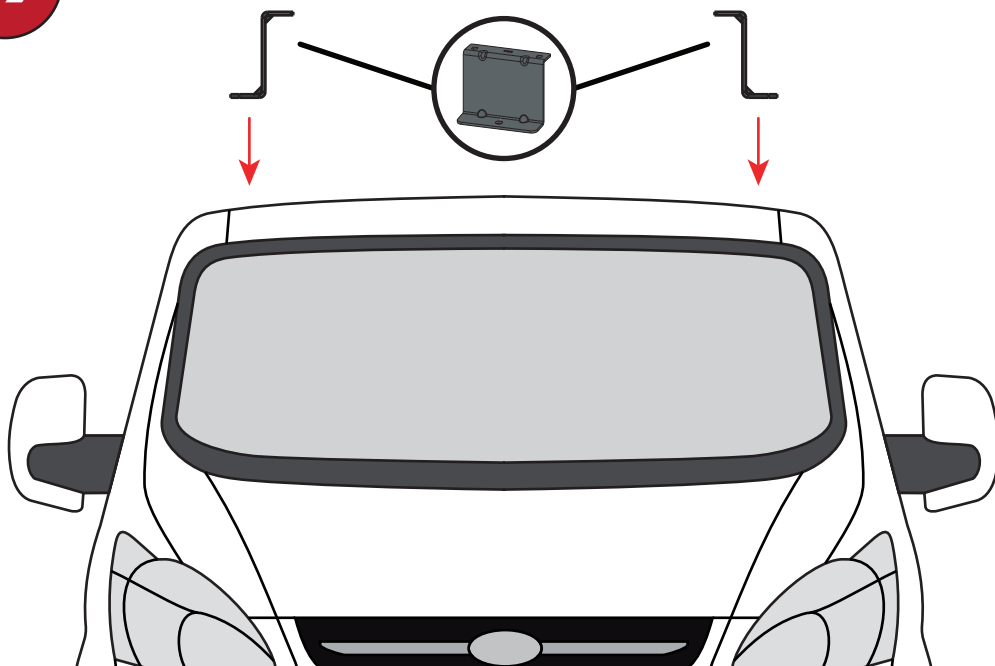

08

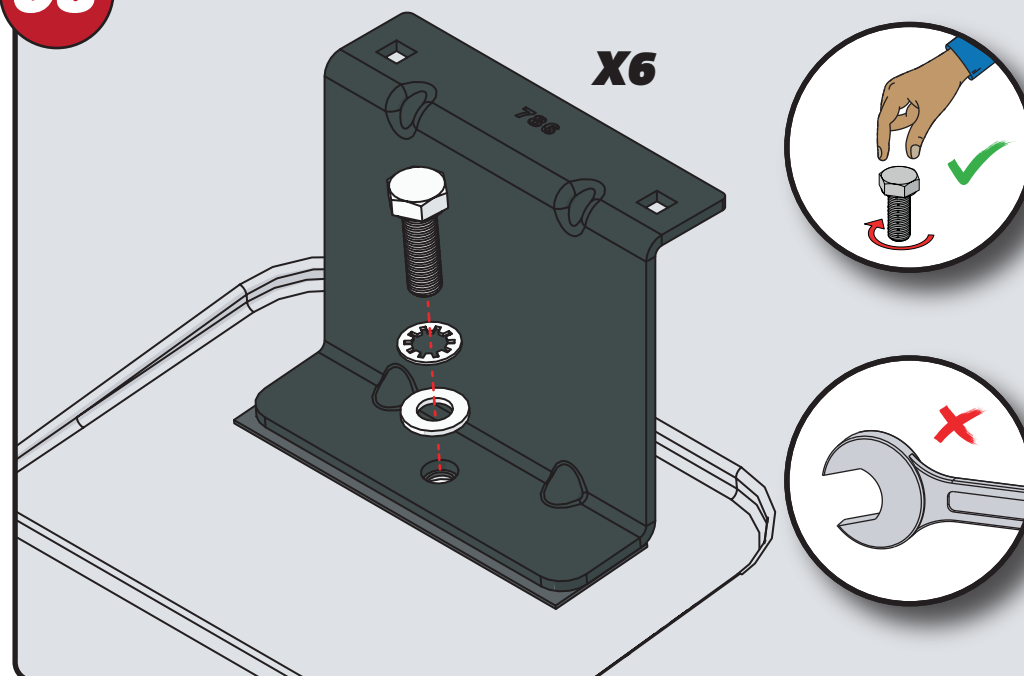


09

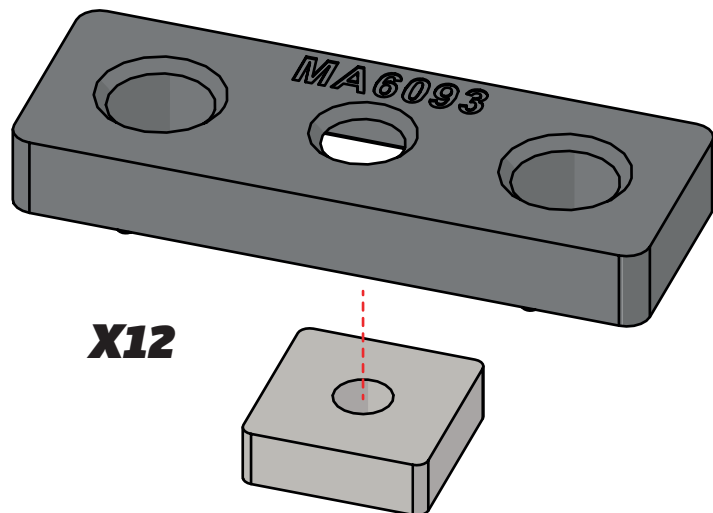

X12


10

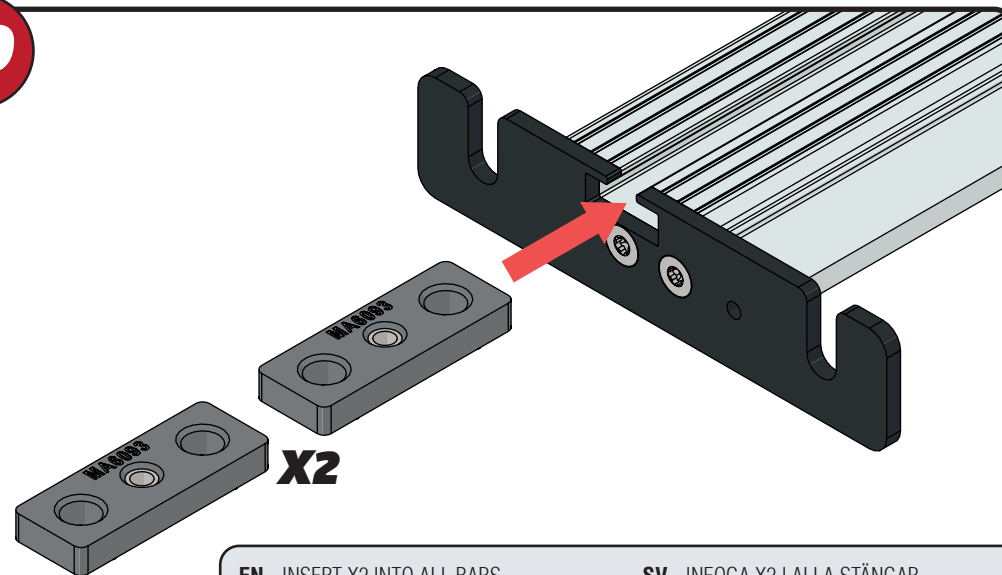


EN - INSERT X2 INTO ALL BARS
DE - X2 IN ALLE STANGEN EINFÜGEN
FR - INSÉRER X2 DANS TOUTES LES BARRES
NL - PLAATS X2 IN ALLE BARS
ES - INSERTAR X2 EN TODAS LAS BARRAS
IT - INSERIRE X2 IN TUTTE LE BARRE

SV - INFOGA X2 I ALLA STÄNGAR
DA - INDSÆT X2 I ALLE STÆNGER
NO - SETT X2 INN I ALLE TAKSTENGER
PL - WSTAW X2 DO WSZYSTKICH PRĘTÓW
CS - VLOŽTE X2 DO VŠECH TYČÍ


11

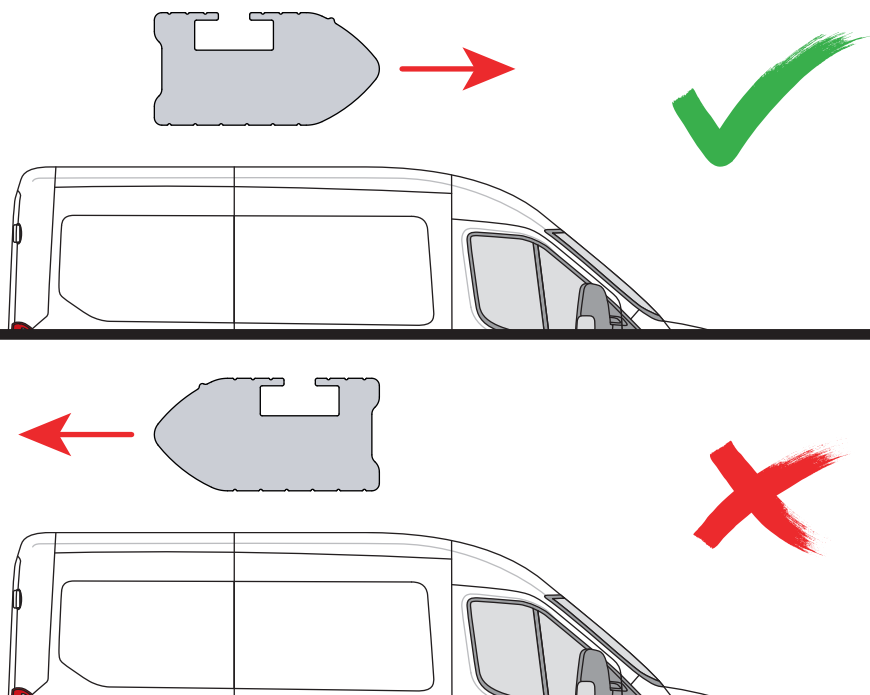


12

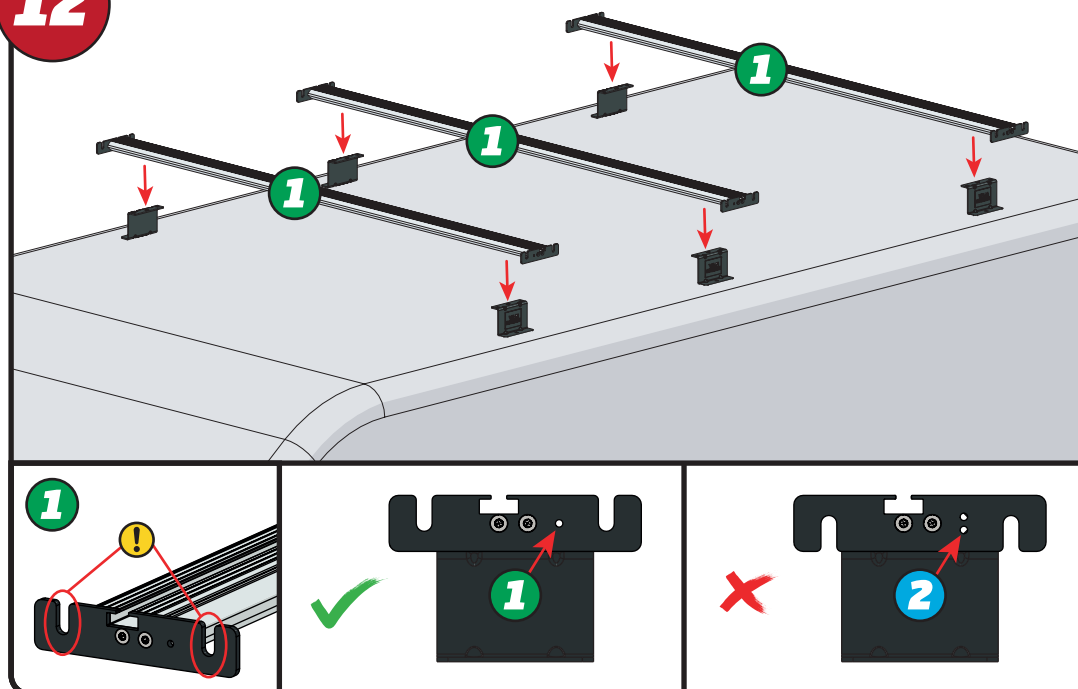


13

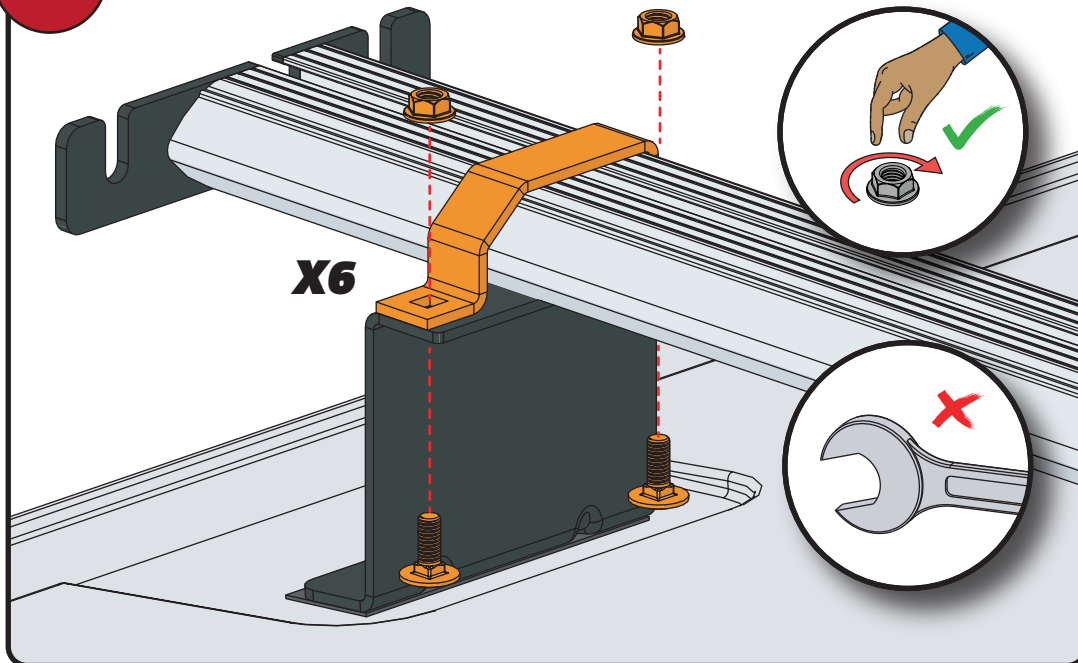


14

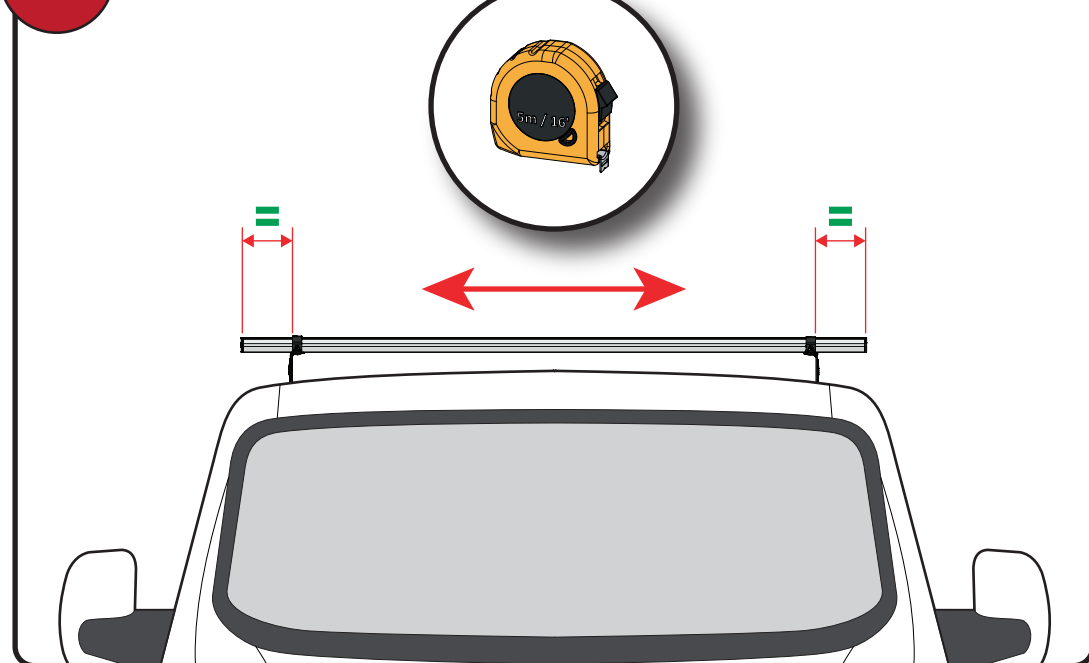


15

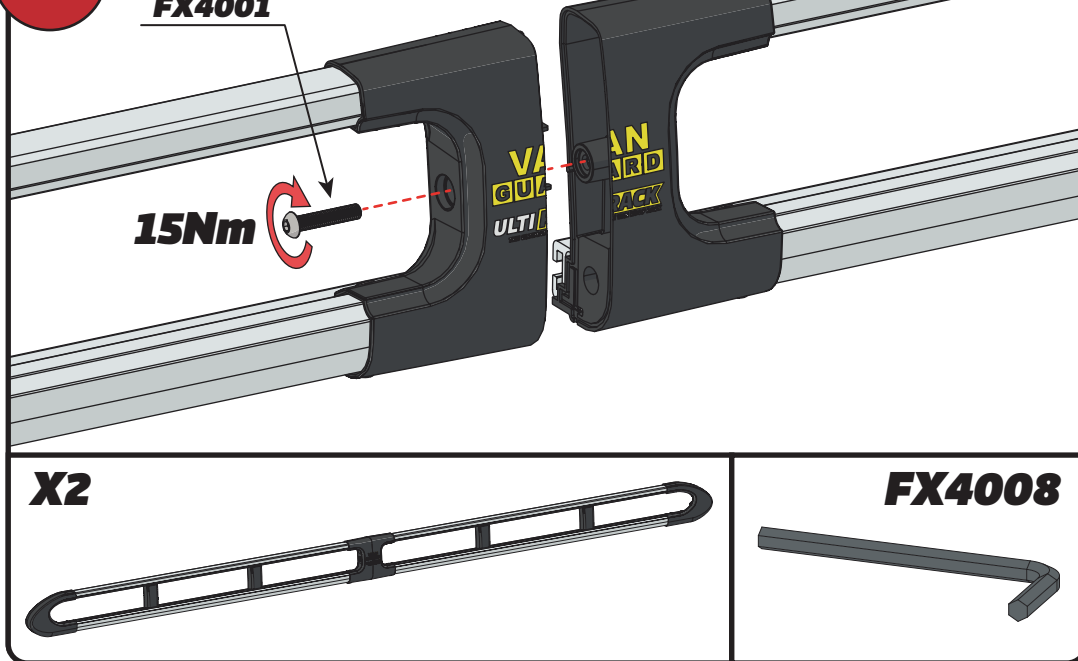


16

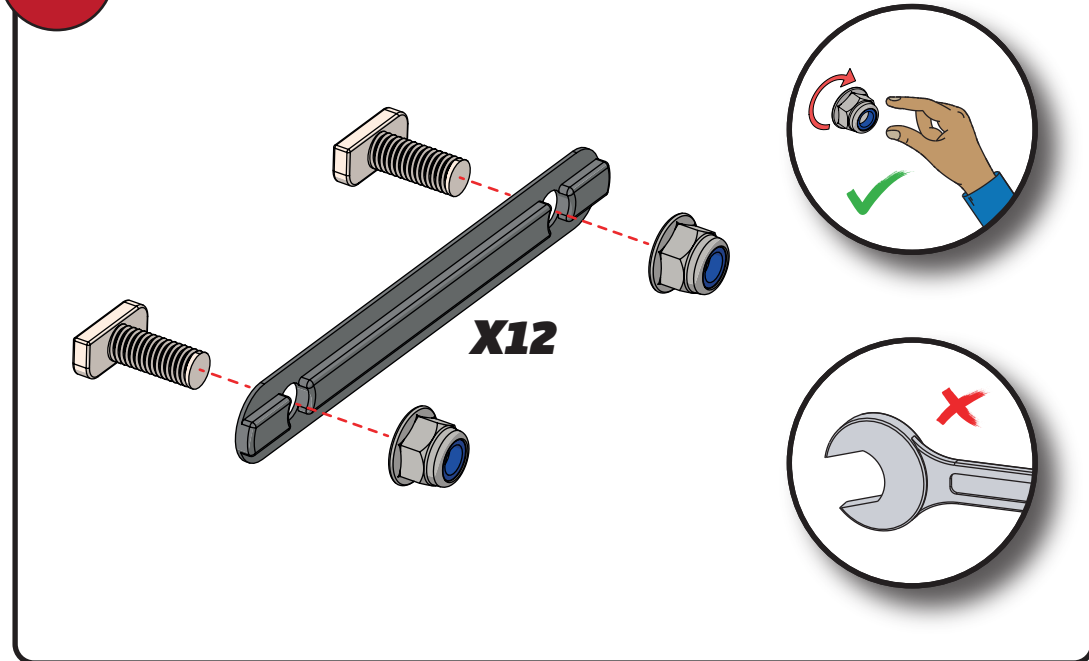


17

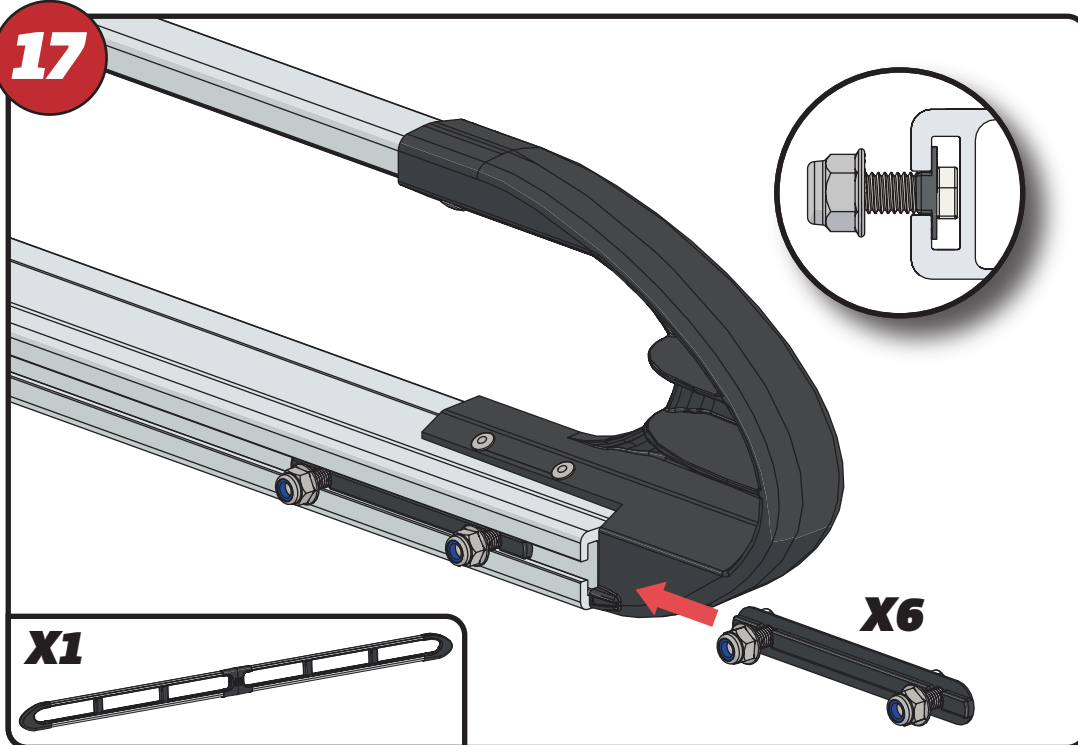


18

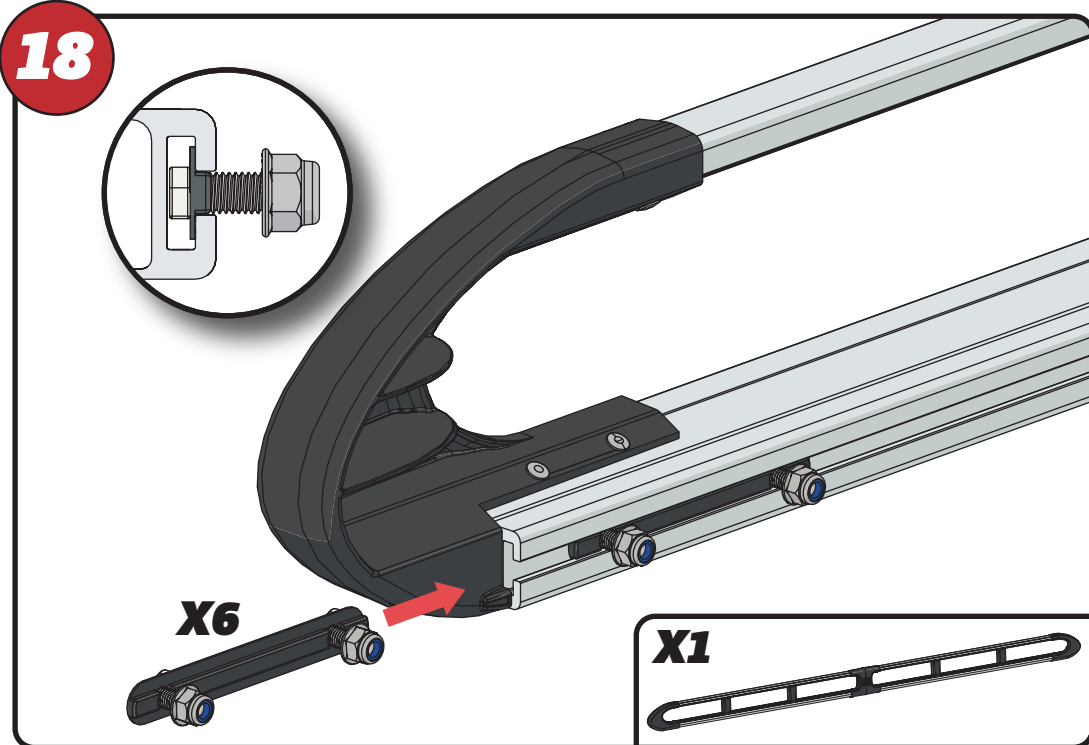


19

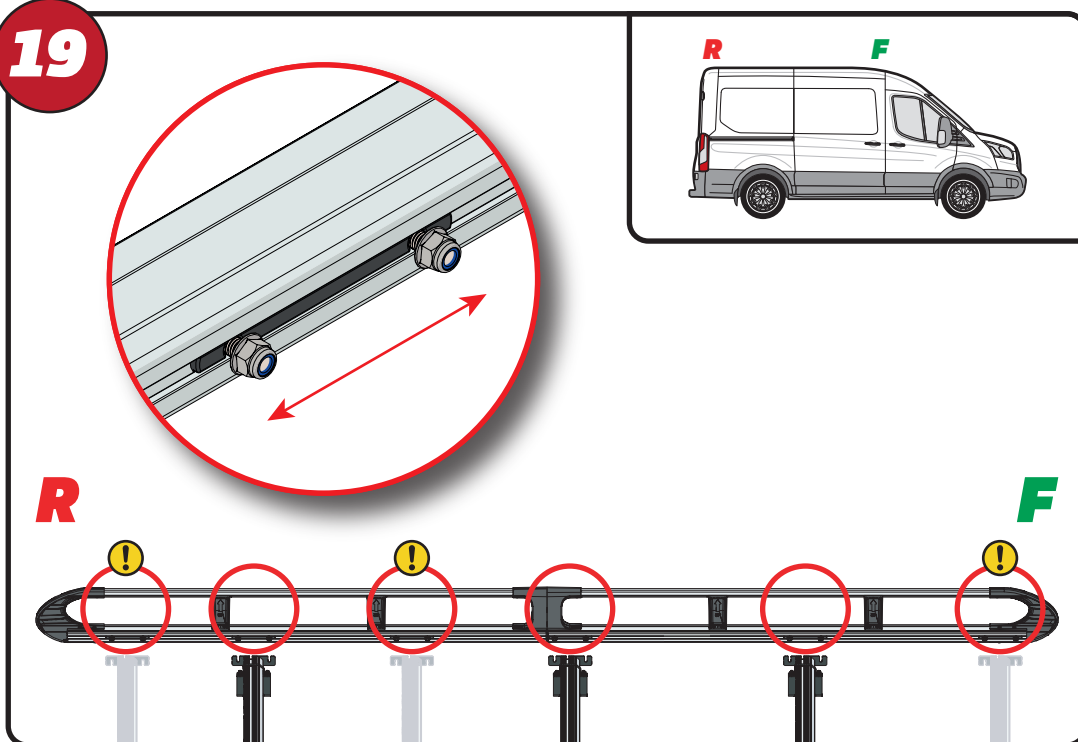


20

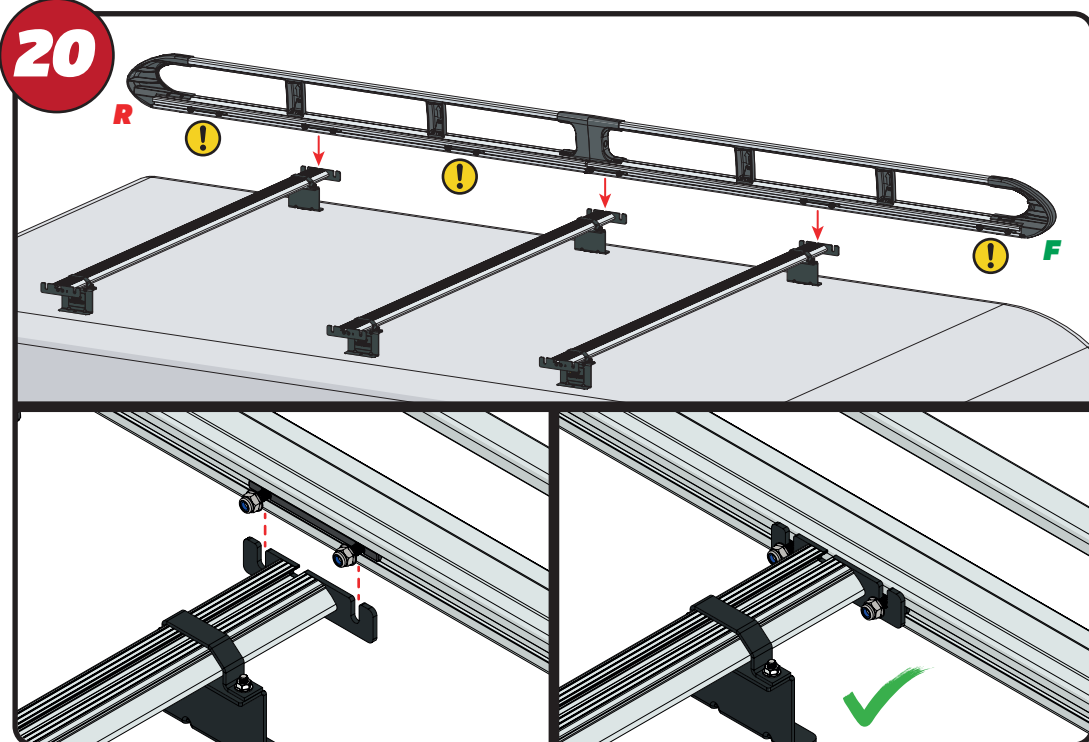


21

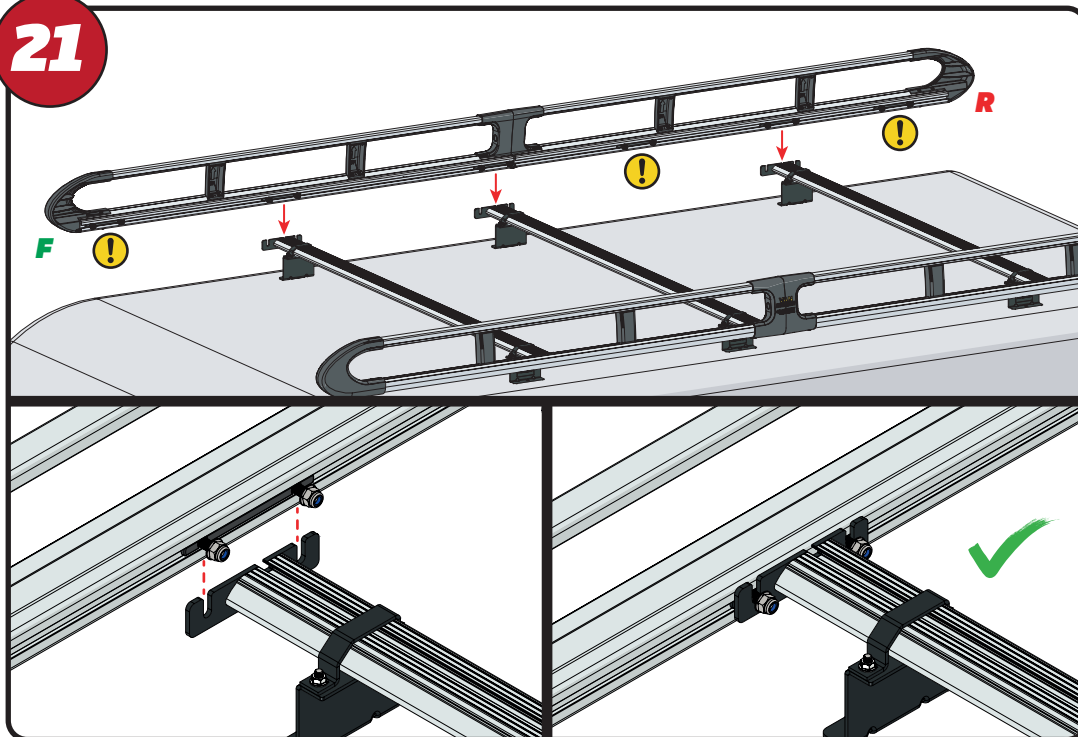


22

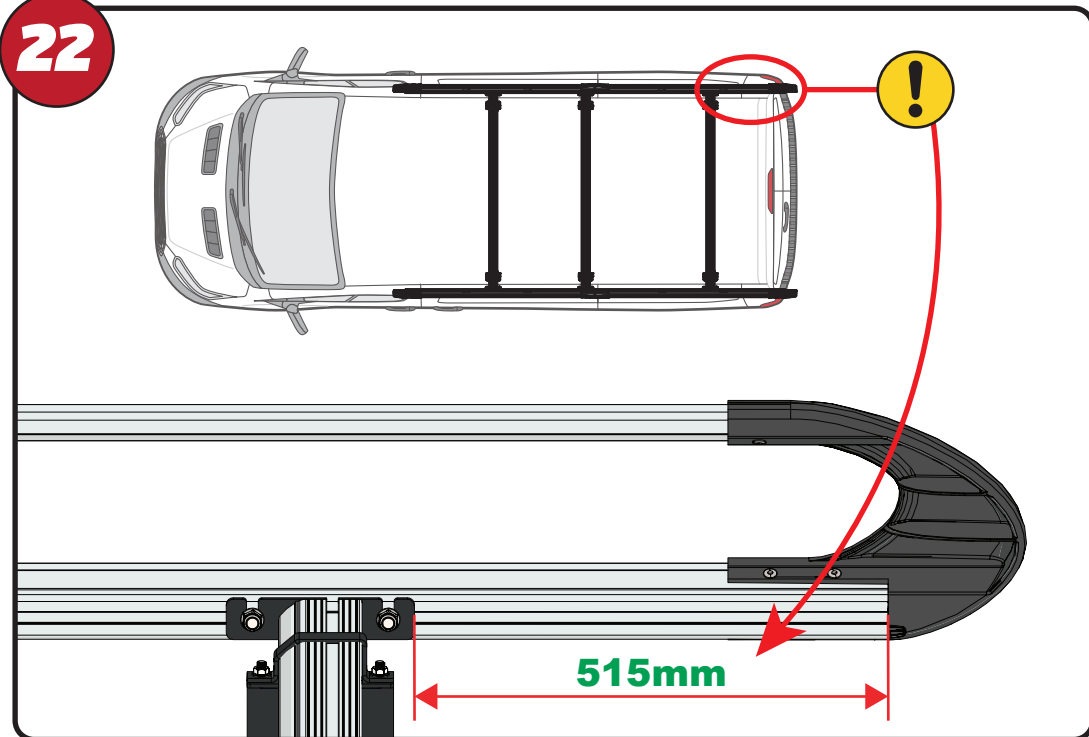

23

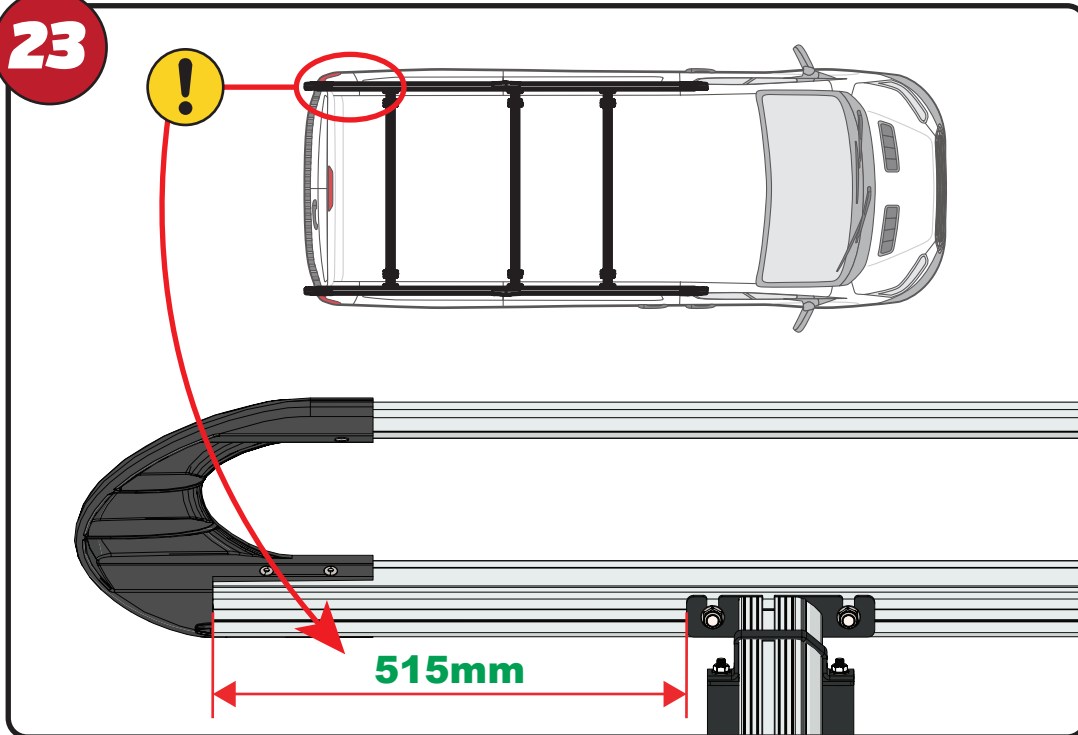


24

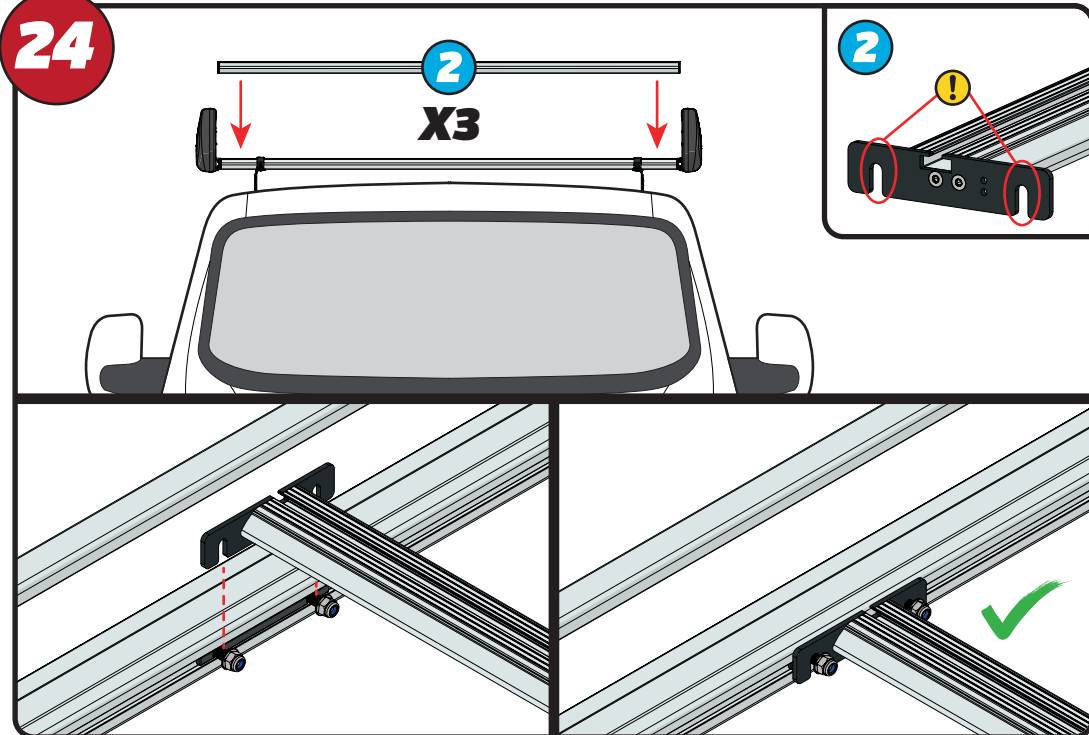

25

XXX =
PAGE 2 OF 14

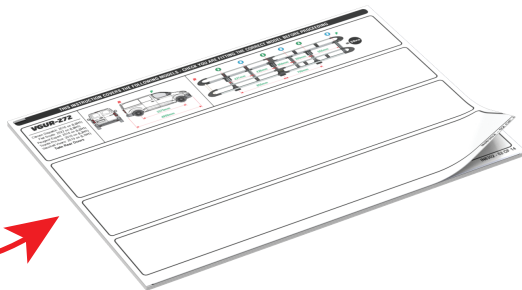


XXXmm

XXXmm

XXXmm

26

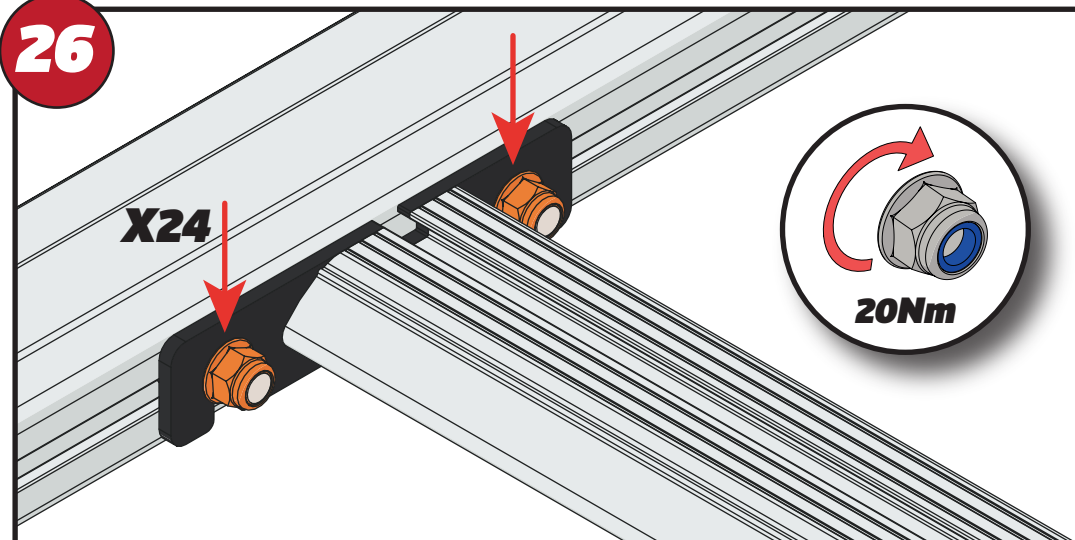


X24

20Nm


EN - TIGHTEN ALL OF THE CROSS BARS
DE - ALLE QUERSTANGEN FESTZIEHEN
FR - SERREZ TOUTES LES BARRES TRANSVERSALES
NL - DRAAI ALLE DWARSBALK VAN HET DAK AAN
ES - APRIETE TODAS LAS BARRAS TRANSVERSALES
IT - STRINGERE TUTTE LE BARRE TRASVERSALI

SV - SKRU UPP ALLA KORSSTANGAR
DA - SKRU ALLE TAGBØJLER OP
NO - SKRU OPP ALLE TVERRSTENGER
PL - DOKRĘCIĆ WSZYSTKIE POPRZECZKI
CS - VŠECHNY PŘÍČNÉ TYČE SEŠROUJTE

27

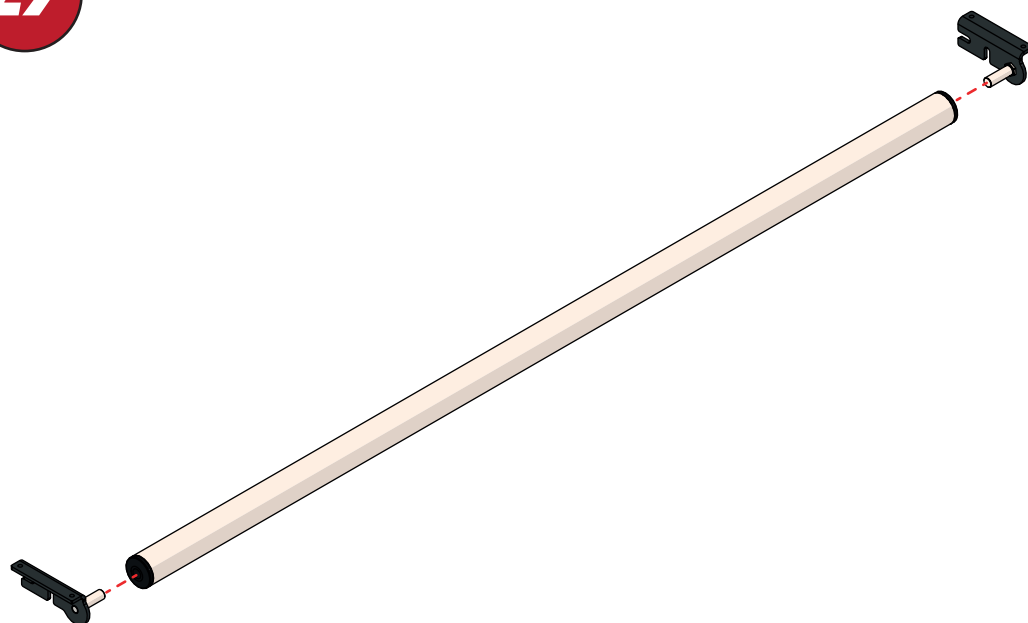

28

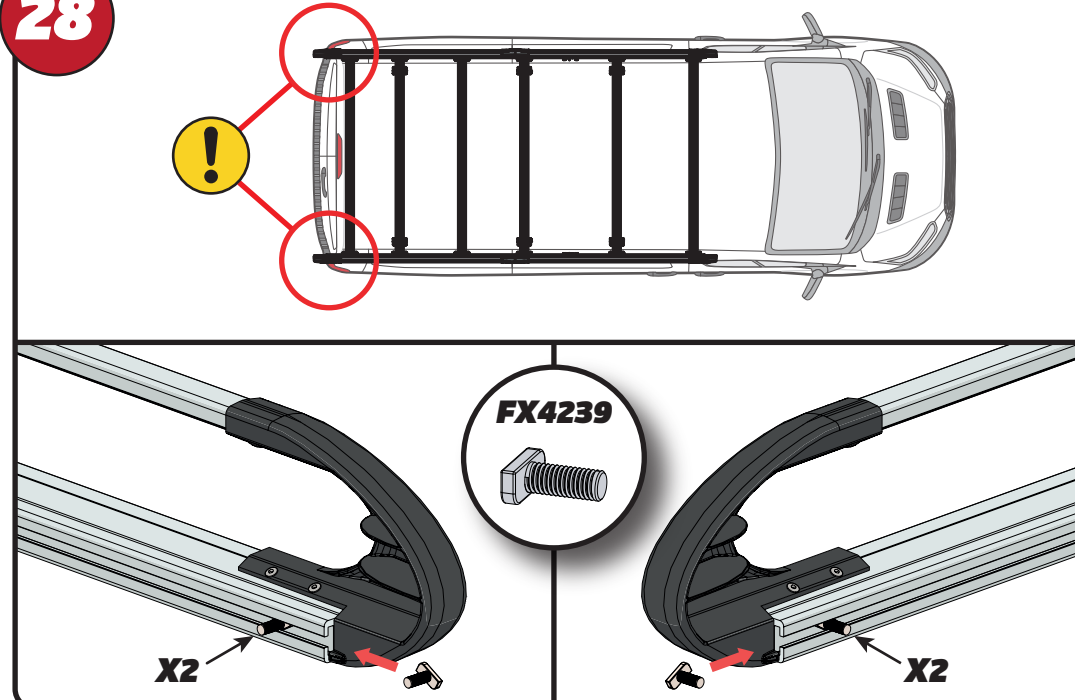


FX4239


X2

X2


29

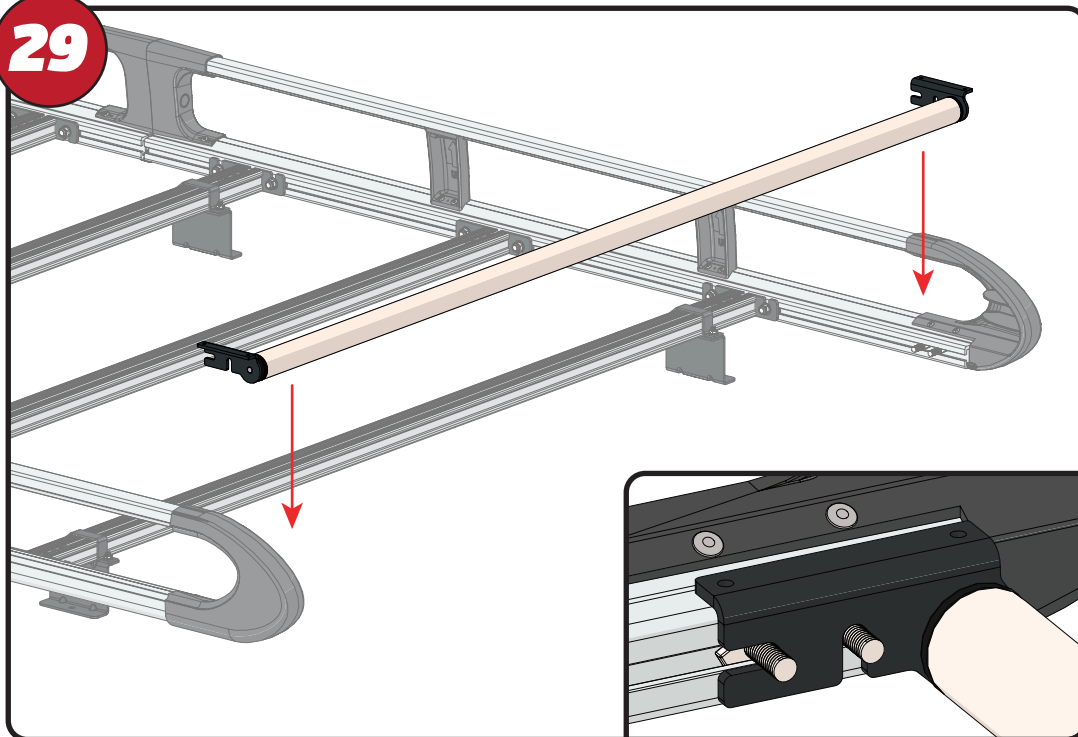


30

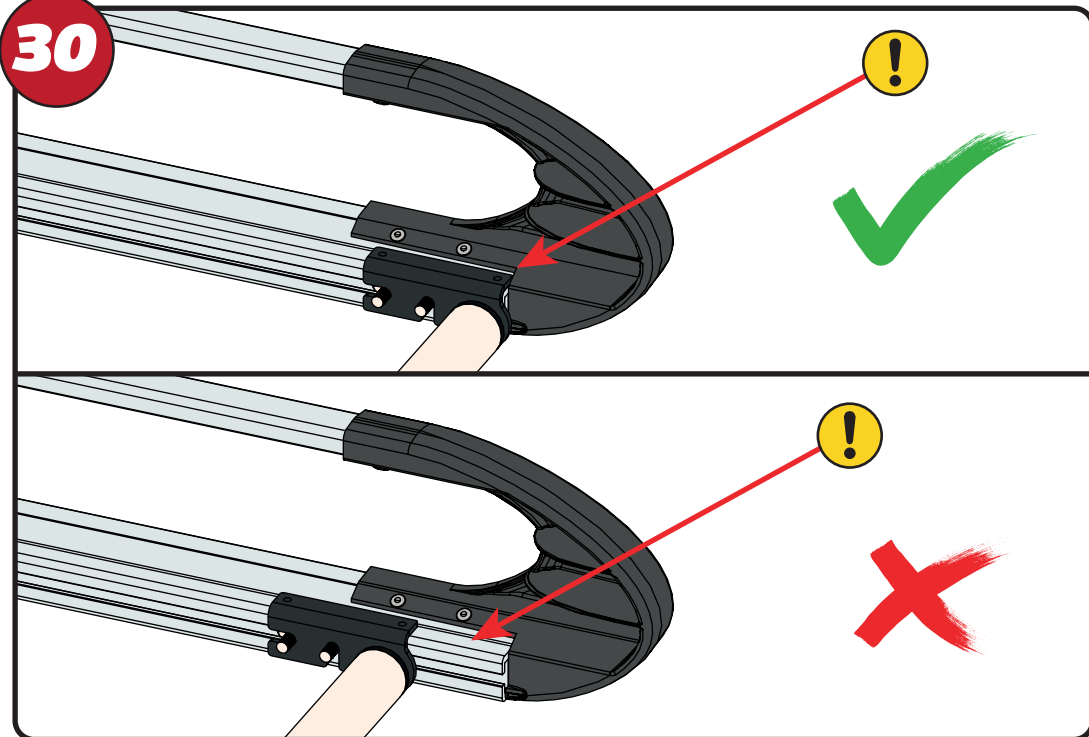


31

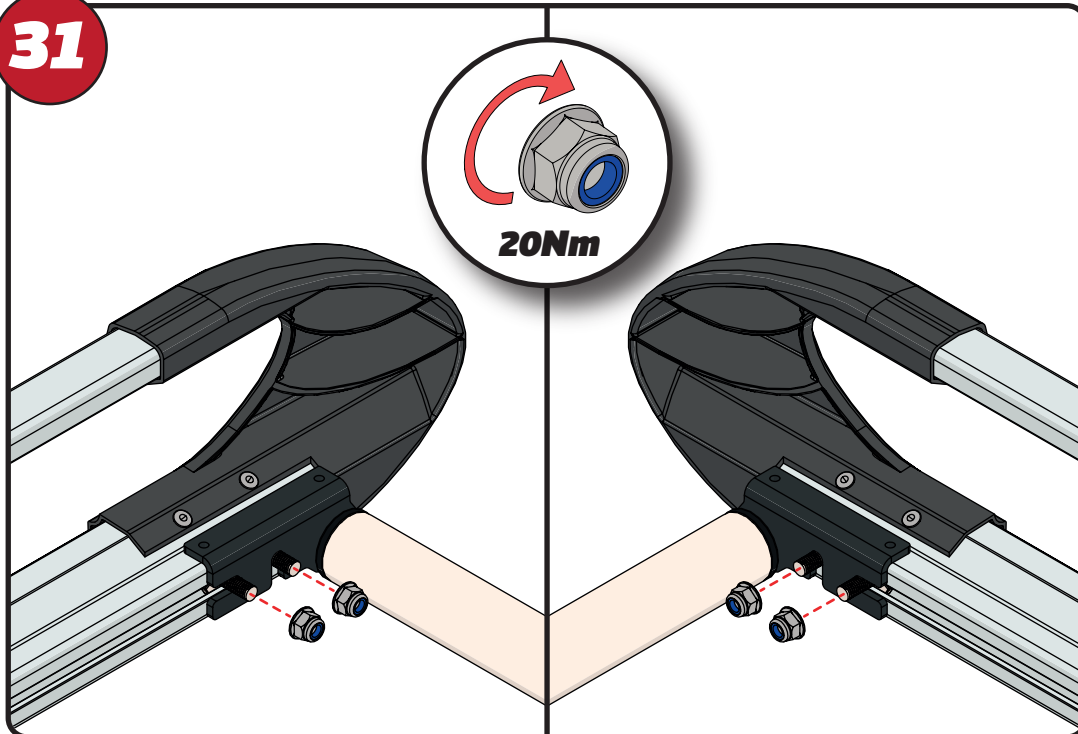


32

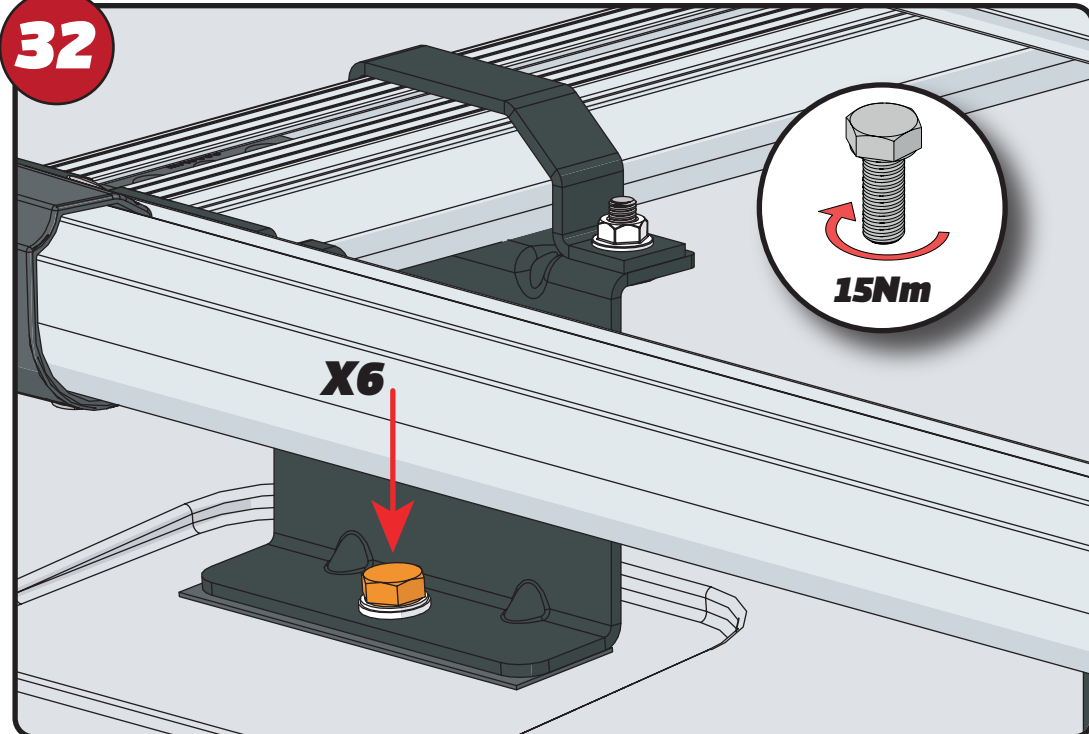


33

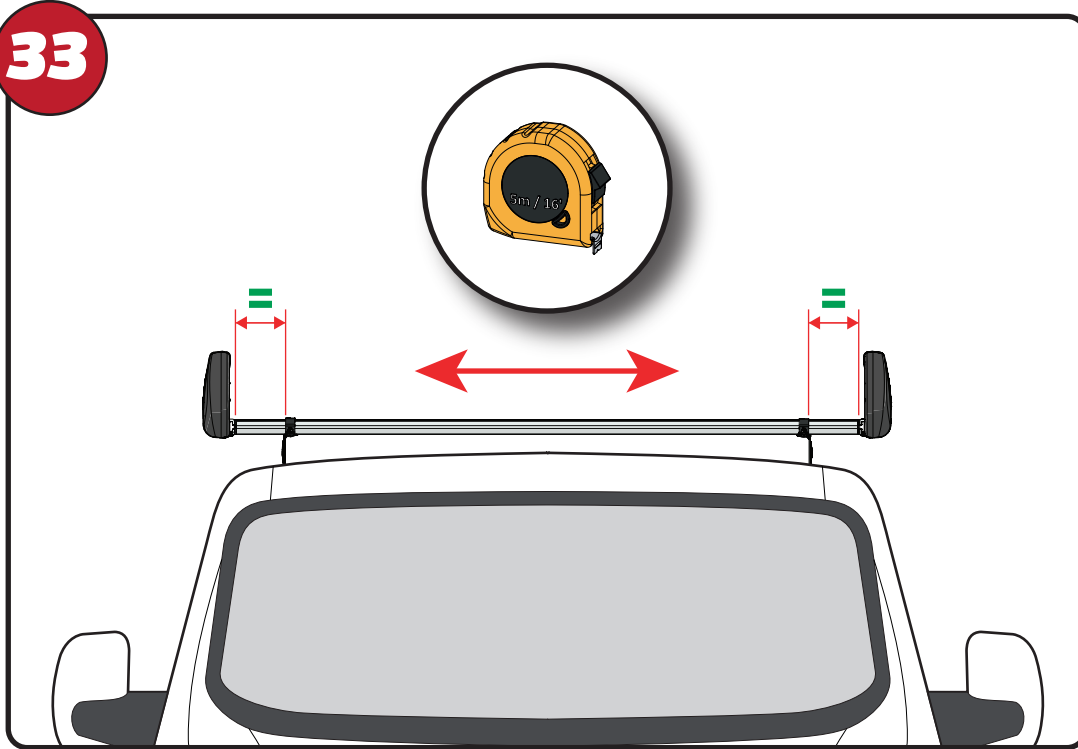


34

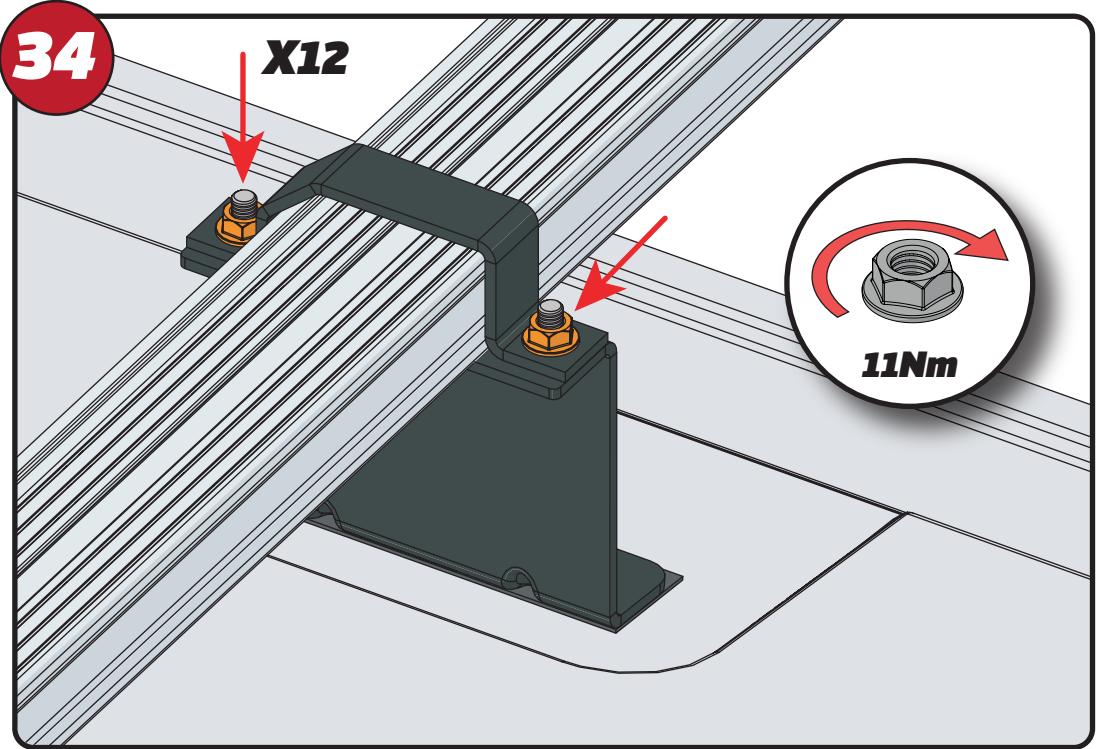


35

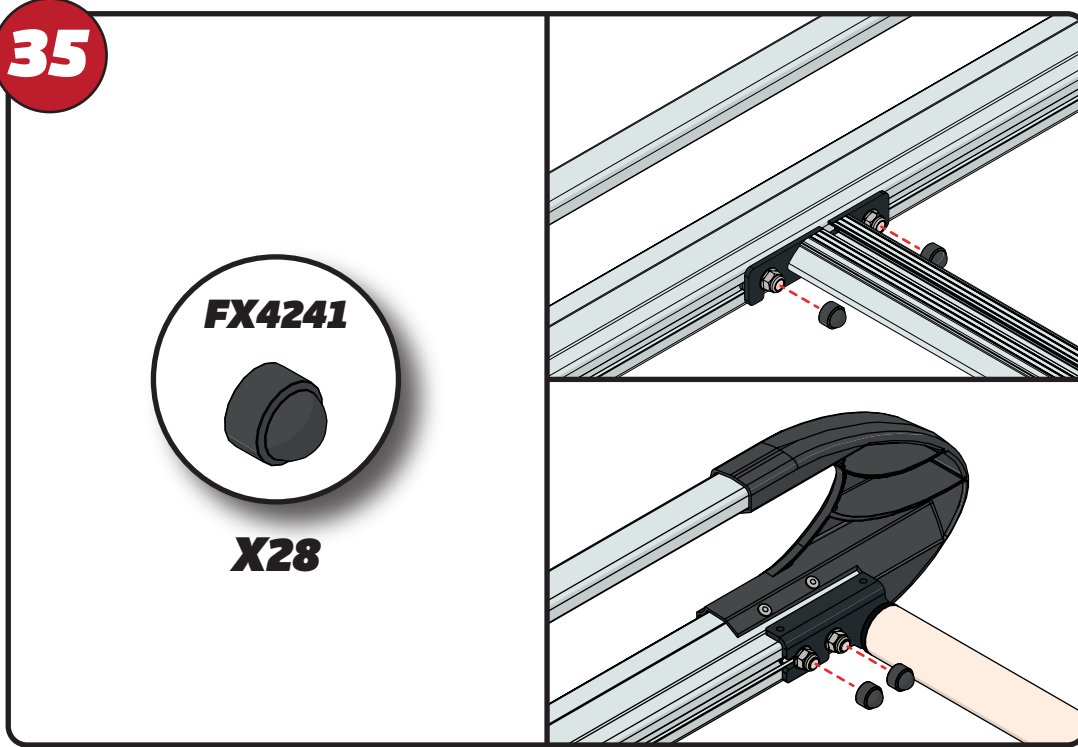

36

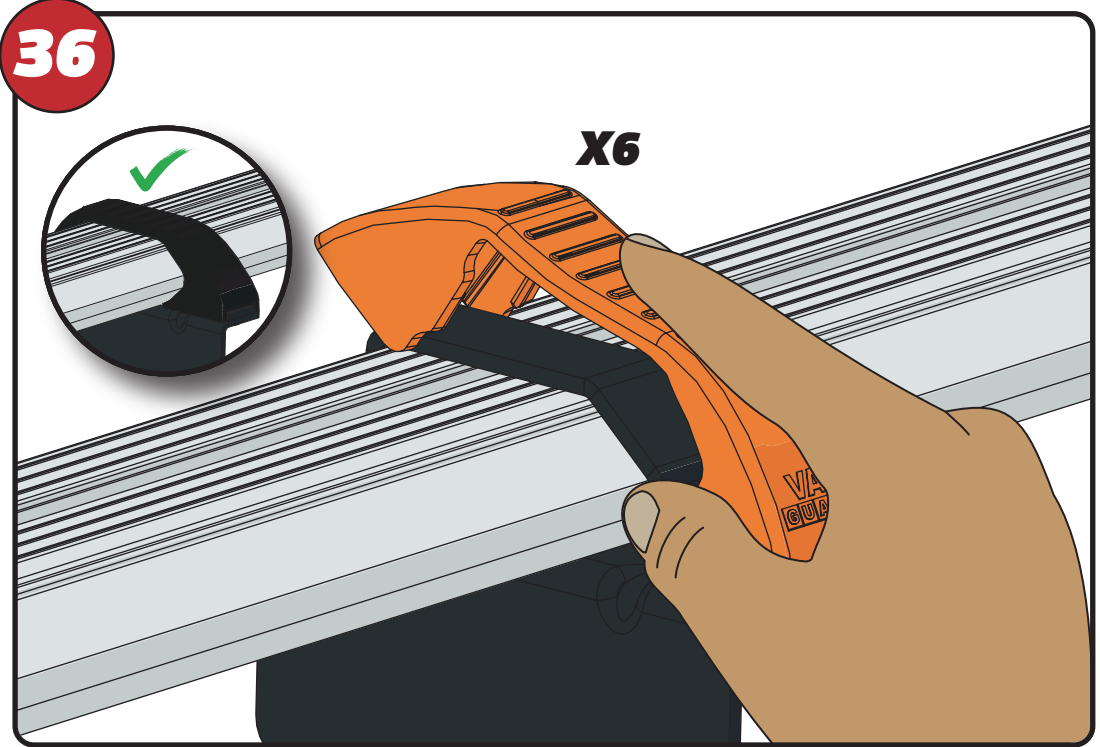

37

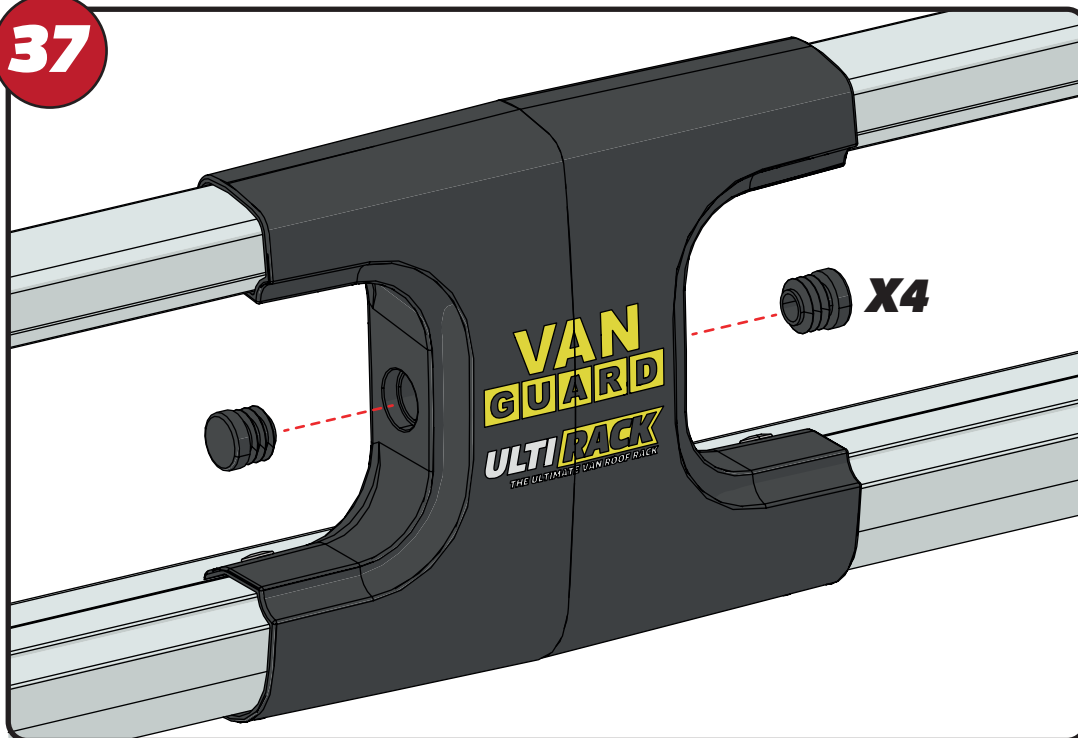

38

