
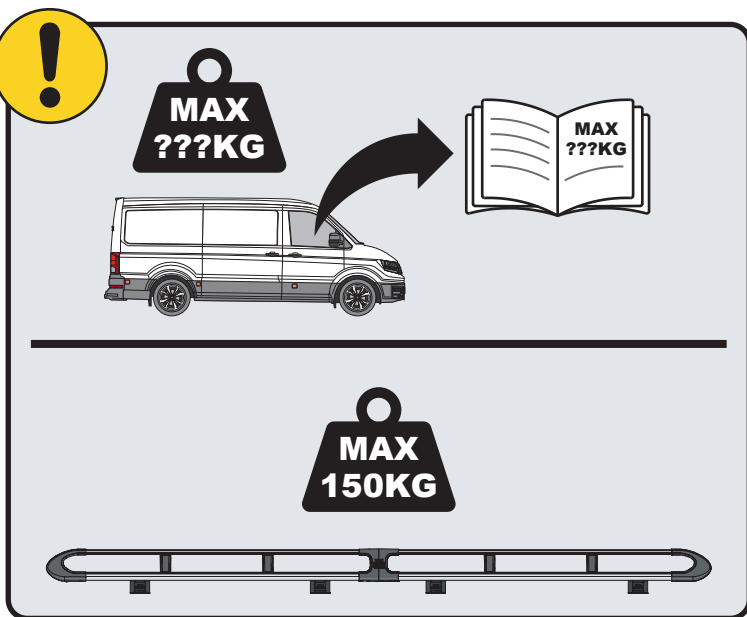


IN8358

ULTI Rack+

2

**VAN
GUARD**


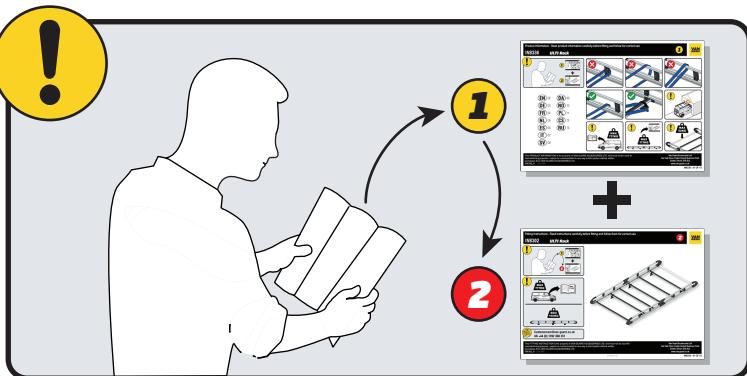


This FITTING INSTRUCTION is the property of VAN GUARD ACCESSORIES LTD. and must not be used for manufacturing purposes, copied nor communicated in any way to third parties without written permission from VAN GUARD ACCESSORIES LTD.
IN8358_A (CN:NR)

Van Guard Accessories Ltd
Fair Oak Close, Exeter Airport Business Park,
Exeter, Devon, EX5 2UL
www.van-guard.co.uk



VGUR-279

MAN TGE: 2017 on
Volkswagen Crafter: 2017 on
L3H2
Twin Rear Doors

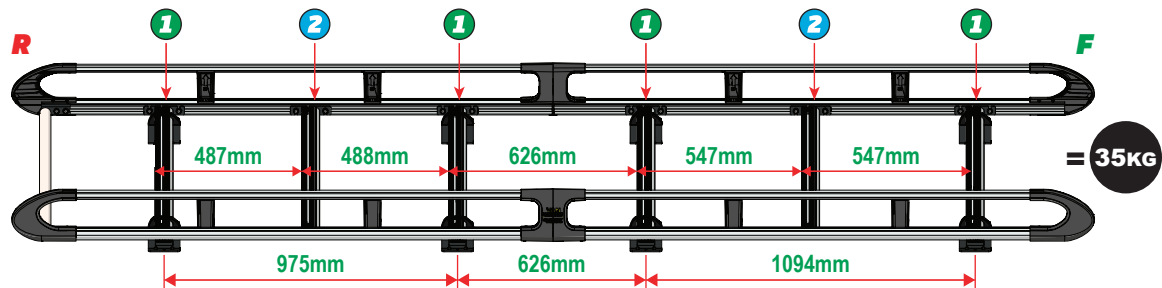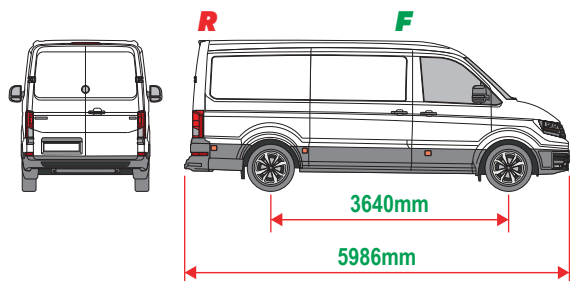

VGUR-280


MAN TGE: 2017 on
Volkswagen Crafter: 2017 on
L3H3
Twin Rear Doors

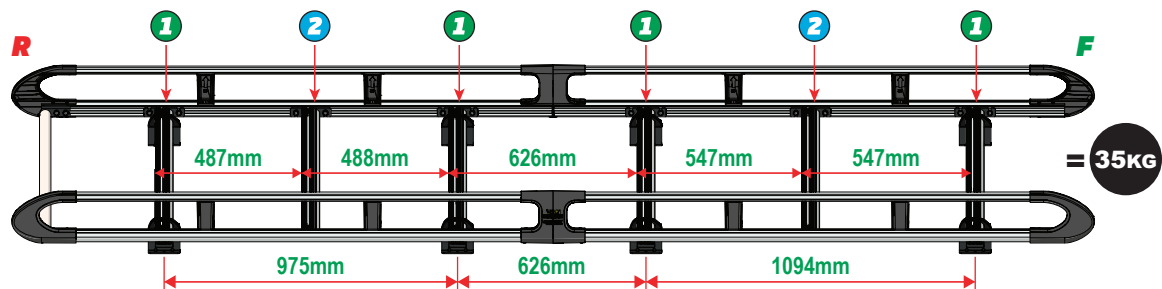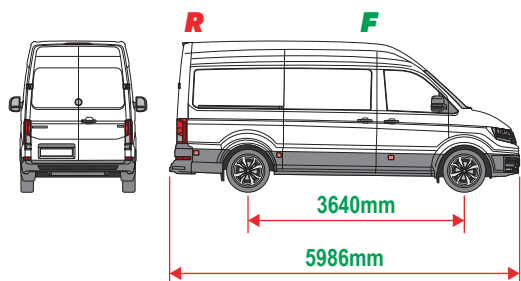



SUPPLIED COMPONENTS - CHECK ALL PARTS ARE PRESENT AND CORRECT BEFORE PROCEEDING (1 OF 2)

TOOLS REQUIRED

10MM X1

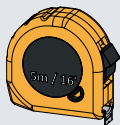


13MM X1

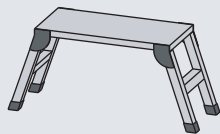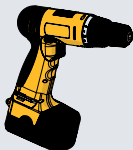


AS3545 X2


(3400 / A)

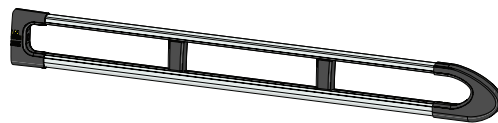


MA6118 X12



FX4241 X28




ME1622 X2



AS3544 X2


(3400 / B)




FX4008 X1



MA6145 X1




ME1623 X2



ME1628 X6

(1554mm)



FX4001 X2

(M8X40)




FX4235 X24

(M5X25)




ME0203 X8




AS3160 X1

(1540mm)




MA6007 X4




FX4248 X1


(T25)




MA6065 X8



AS3590 X1

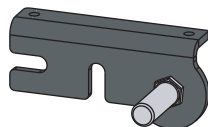


MA6093 X12




FX4239 X28

(M8X20)



ME1620 X4




FX4016 X24


(M6)



AS3591 X1



ME0316 X12




FX4240 X28

(M8)




ME1621 X4




FX4042 X16


(M6X16)




ME0717 X4




FX4022 X8
(M6X25)




ME0922 X1




FX4023 X8

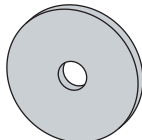


ME0923 X1




MA6091 X8



ME0924 X1

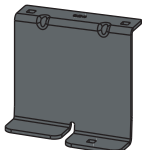

ME0925 X1

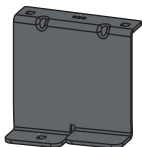


FX4014 X8




01

1L



X4

1R



X4




2L





X2

2R



X2


02

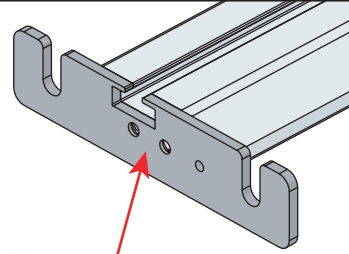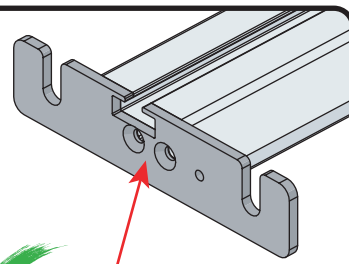


03

01


FX4248

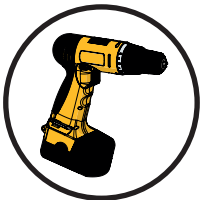


+

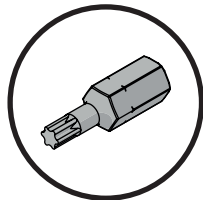

02

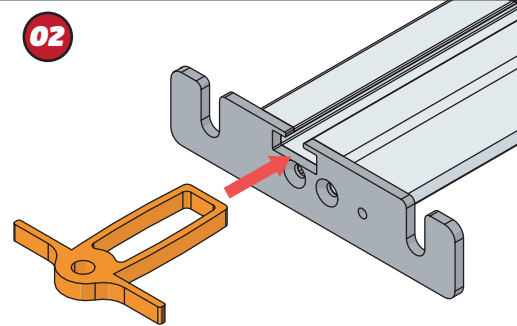


04

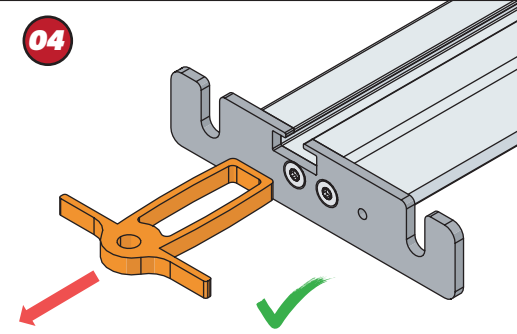

04


1

X4

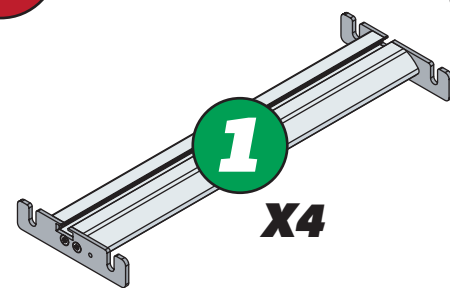


2




X2

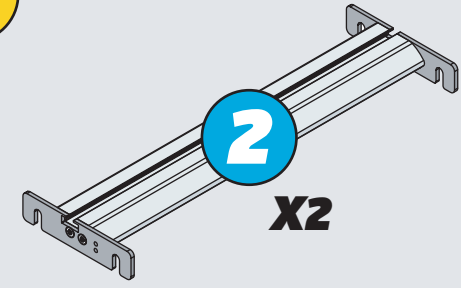


03




11Nm

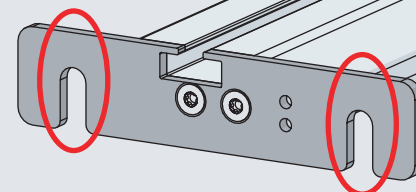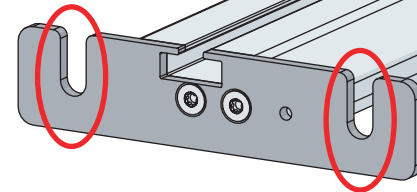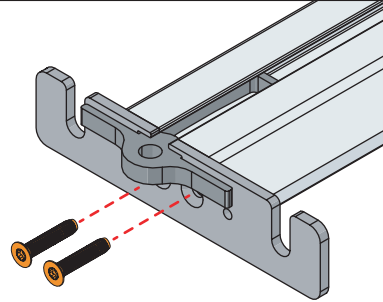


05

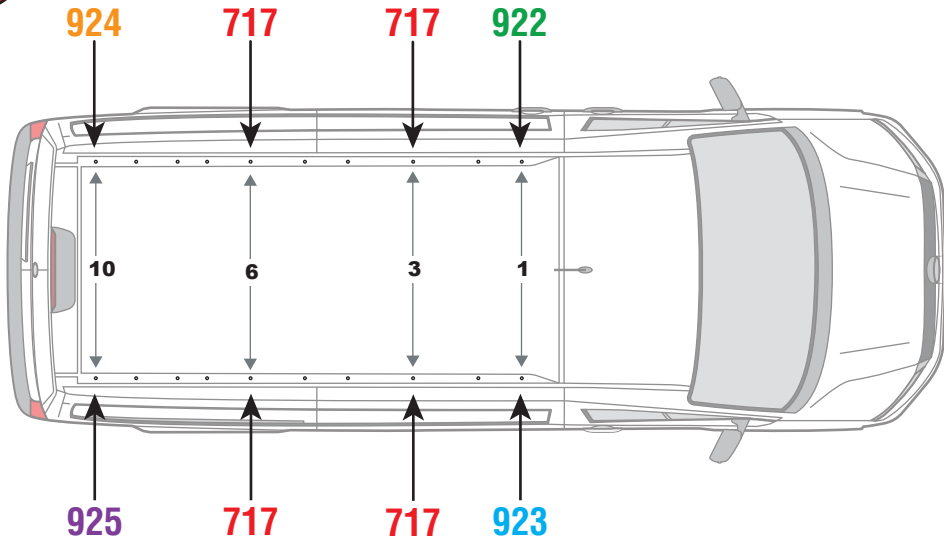


717

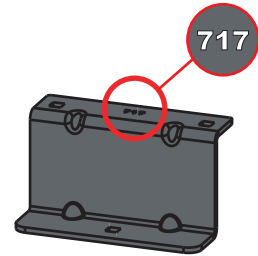


922

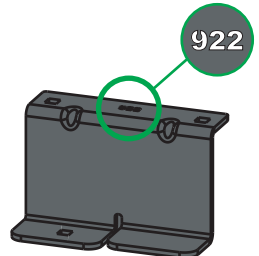


923

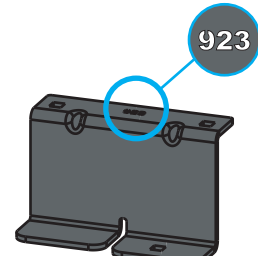



924

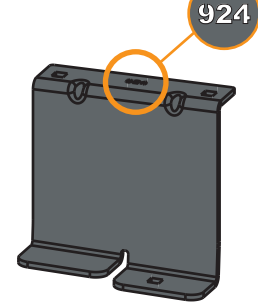







925

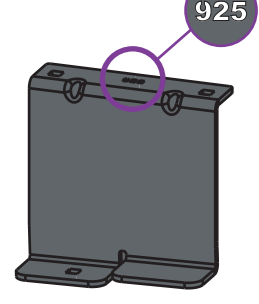

06

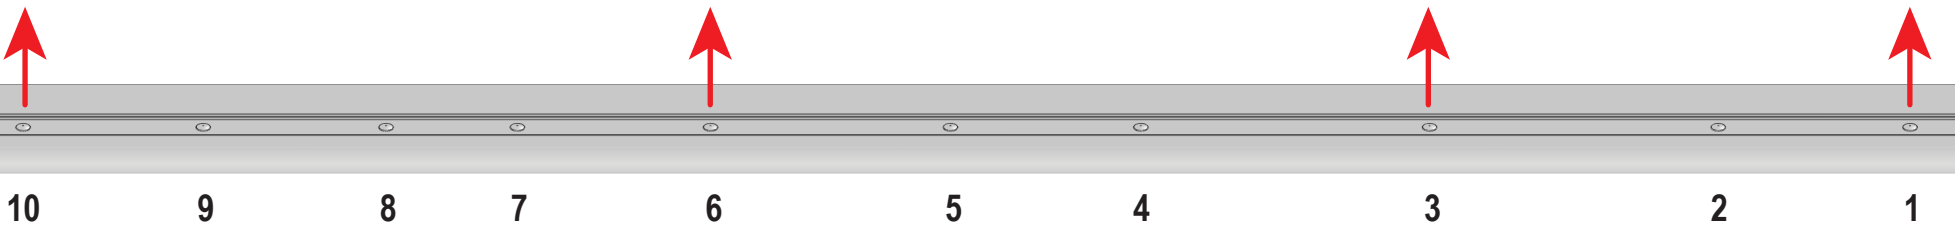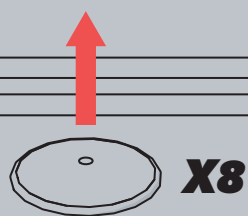


07

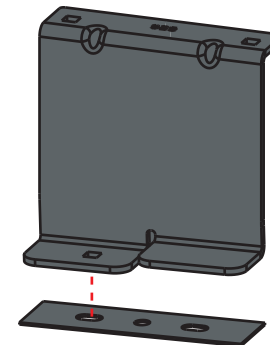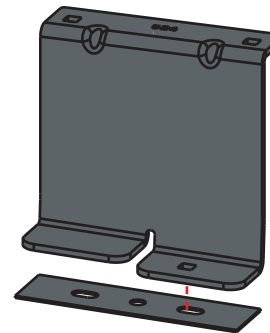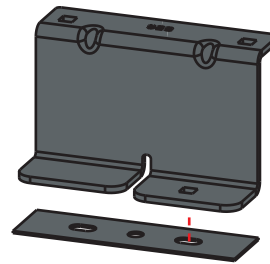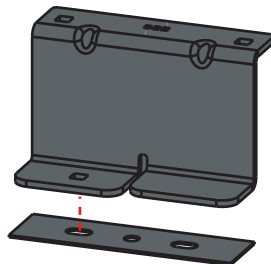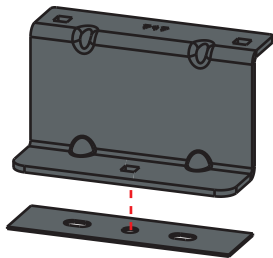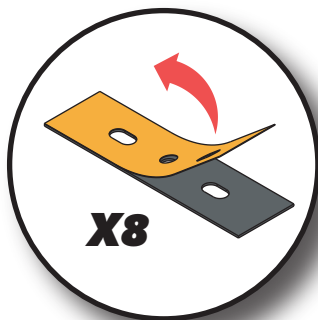



EN - STICK GASKETS TO ALL BRACKETS
 DE - KLEBEN SIE DIE DICHTUNG AN ALLEN HALTERUNGEN
 FR - COUSSINETS ADHÉSIFS À TOUS LES SUPPORTS
 NL - PLAK PAKKING OP ALLE BEUGELS
 ES - PEGA LAS ALMOHADILLAS A TODOS LOS SOPORTES
 IT - ADESIVI GUARNIZIONI A TUTTE LE STAFFE



SV - FÄST GUMMI PÅ ALLA FÄSTEN
 DA - KLÆB GUMMI PÅ ALLE BESLAG
 NO - PLIST GUMMI PÅ ALLE BRACKETTER
 PL - NAKLEJ USZCZELKI DO WSZYSTKICH WSPORNIKÓW
 CS - PŘILEPTE TĚSNĚNÍ NA VŠECHNY DRŽÁKY

08

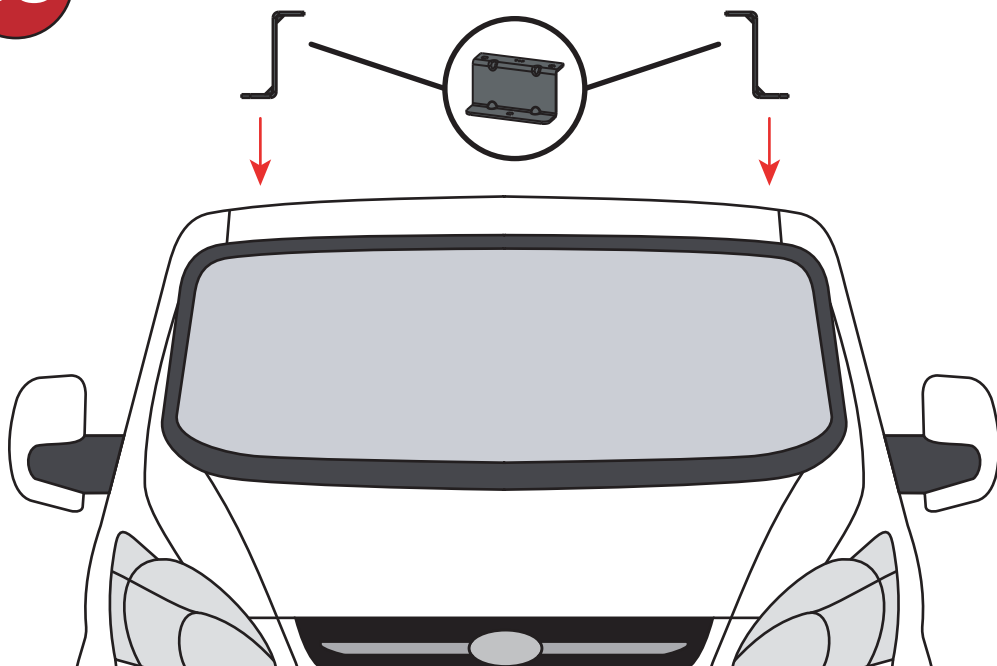







09

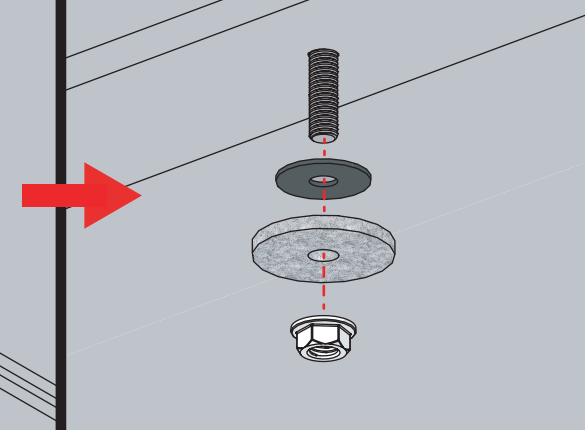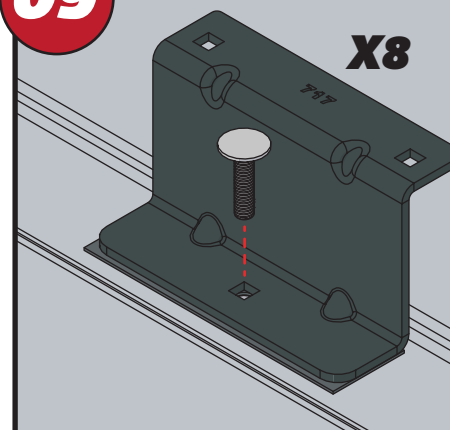

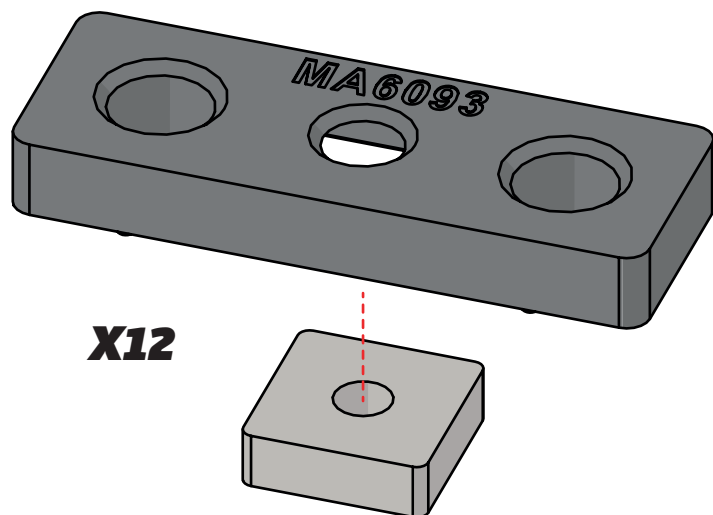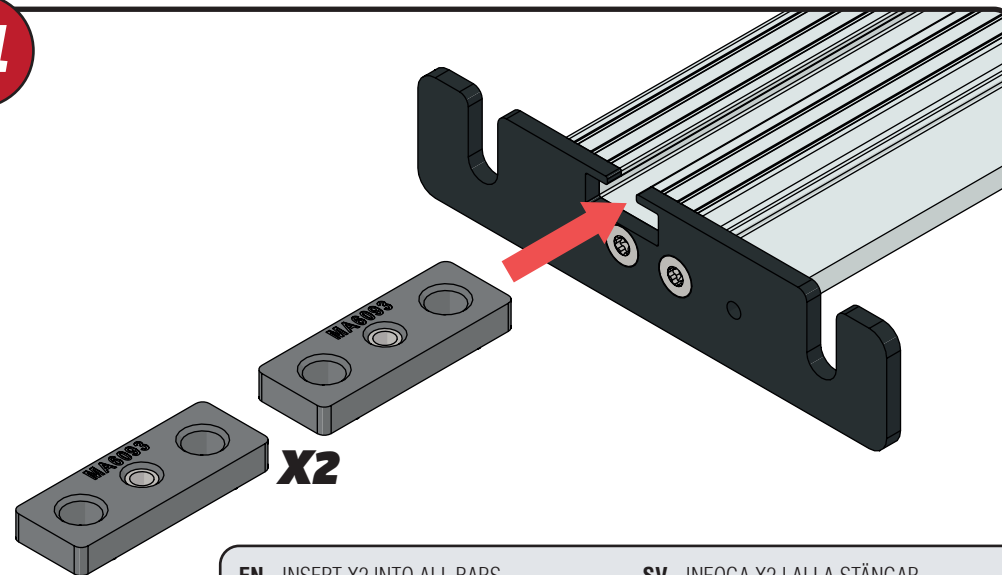
10**11**

EN - INSERT X2 INTO ALL BARS
 DE - X2 IN ALLE STANGEN EINFÜGEN
 FR - INSÉRER X2 DANS TOUTES LES BARRES
 NL - PLAATS X2 IN ALLE BARS
 ES - INSERTAR X2 EN TODAS LAS BARRAS
 IT - INSERIRE X2 IN TUTTE LE BARRE


SV - INFOGA X2 I ALLA STÄNGAR
 DA - INDSÆT X2 I ALLE STÆNGER
 NO - SETT X2 INN I ALLE TAKSTENGER
 PL - WSTAW X2 DO WSZYSTKICH PRĘTÓW
 CS - VLOŽTE X2 DO VŠECH TYČÍ

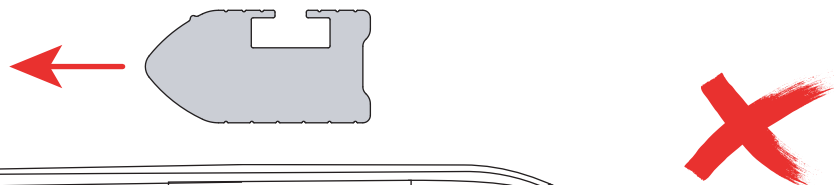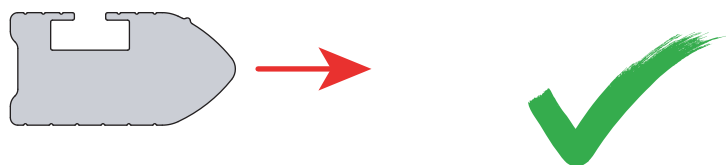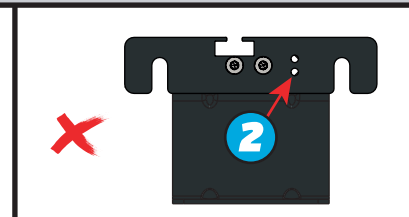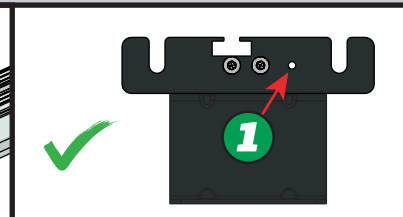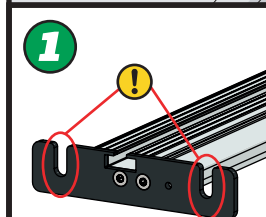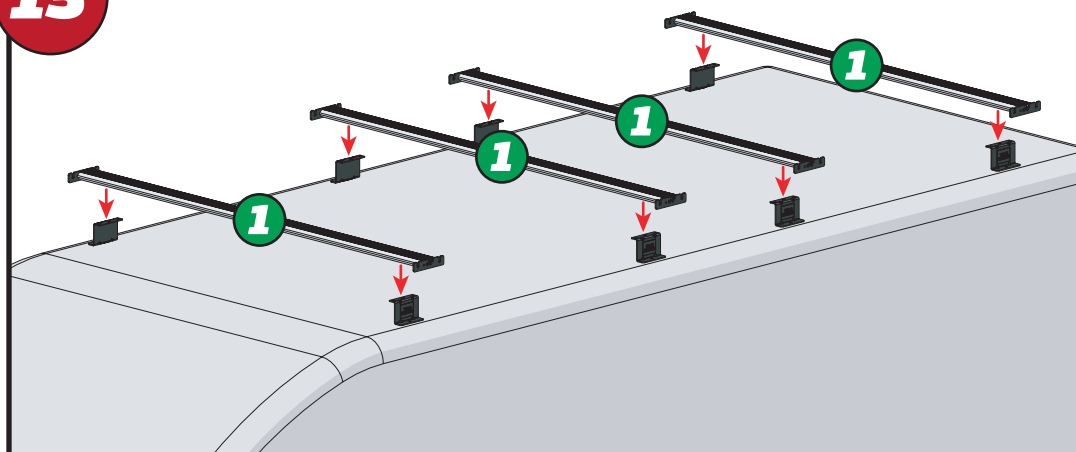12**13**


14

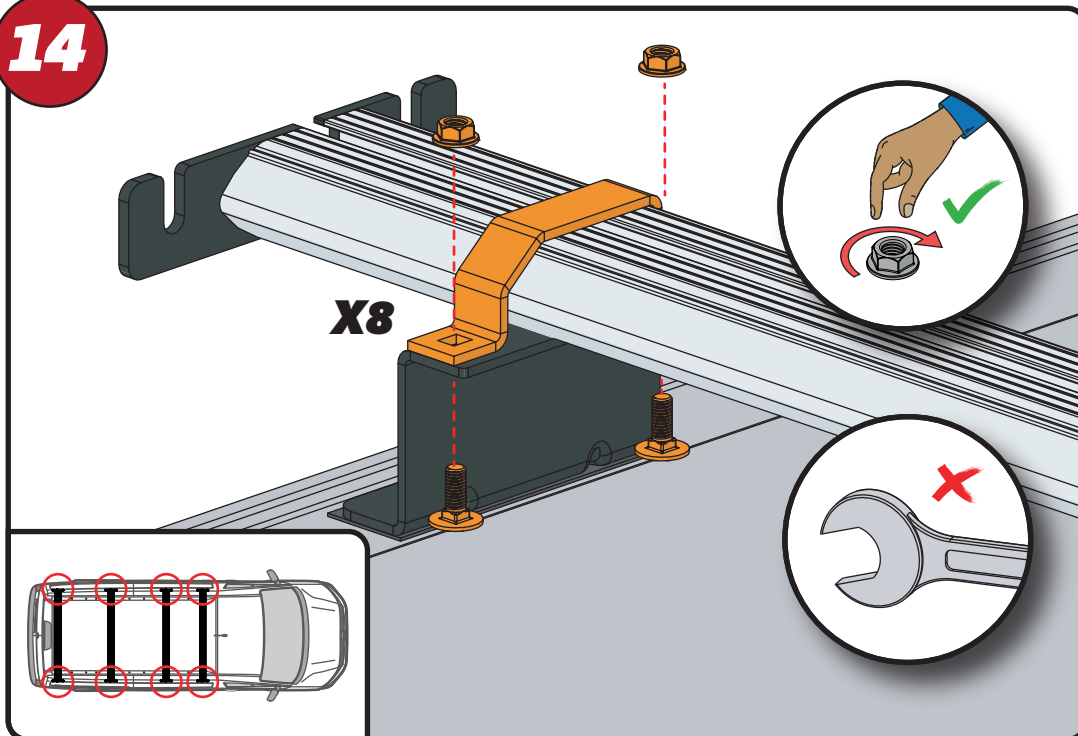


15

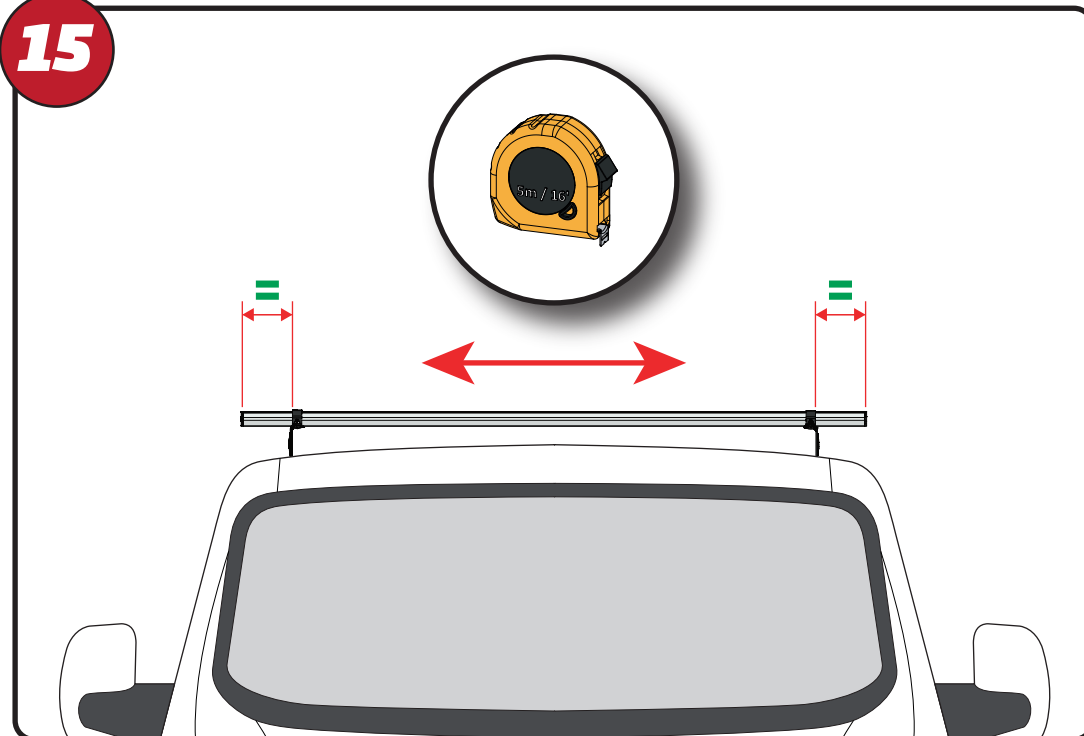


16

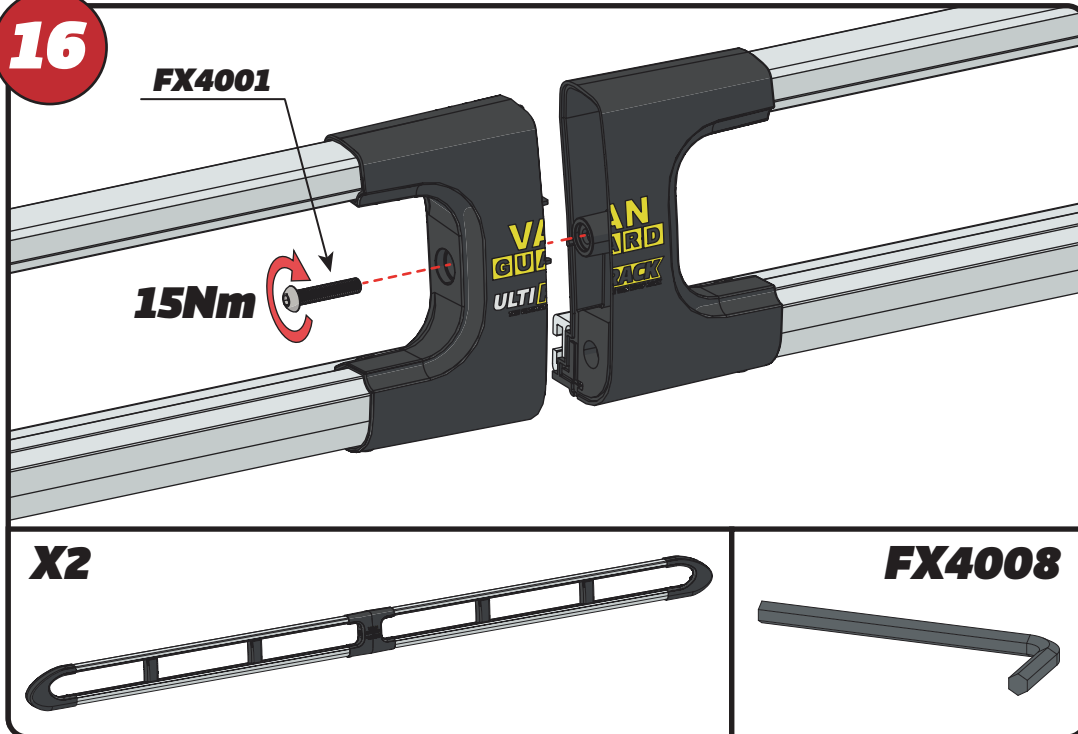


17

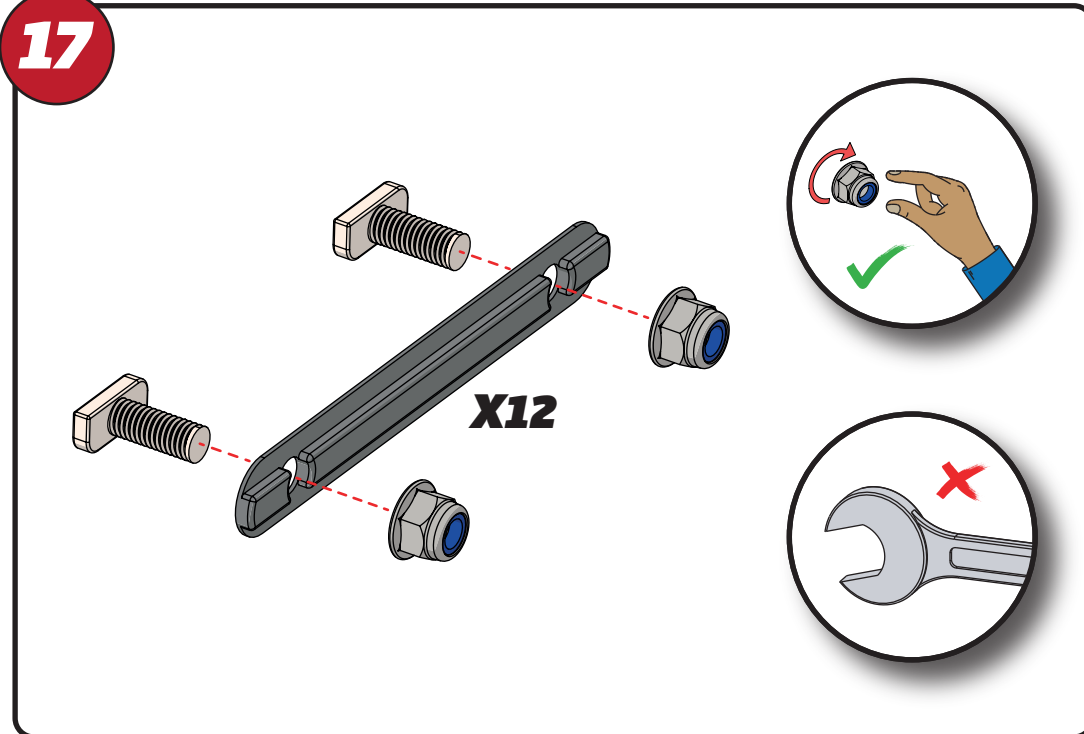


18

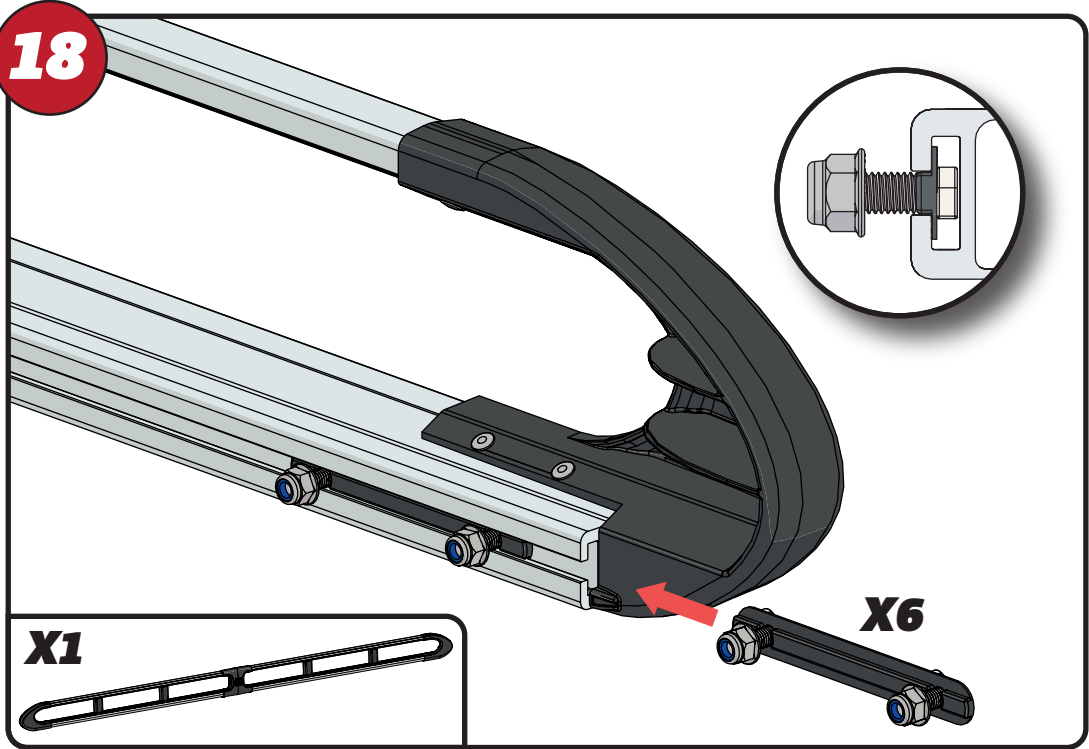


19

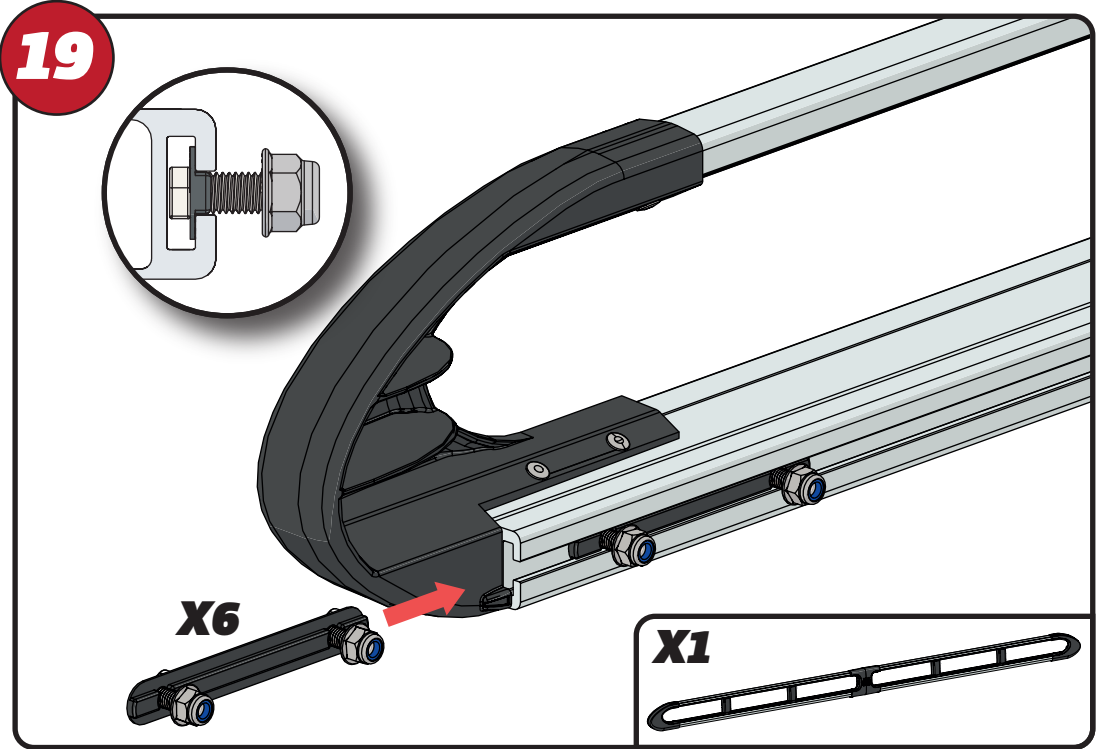


20

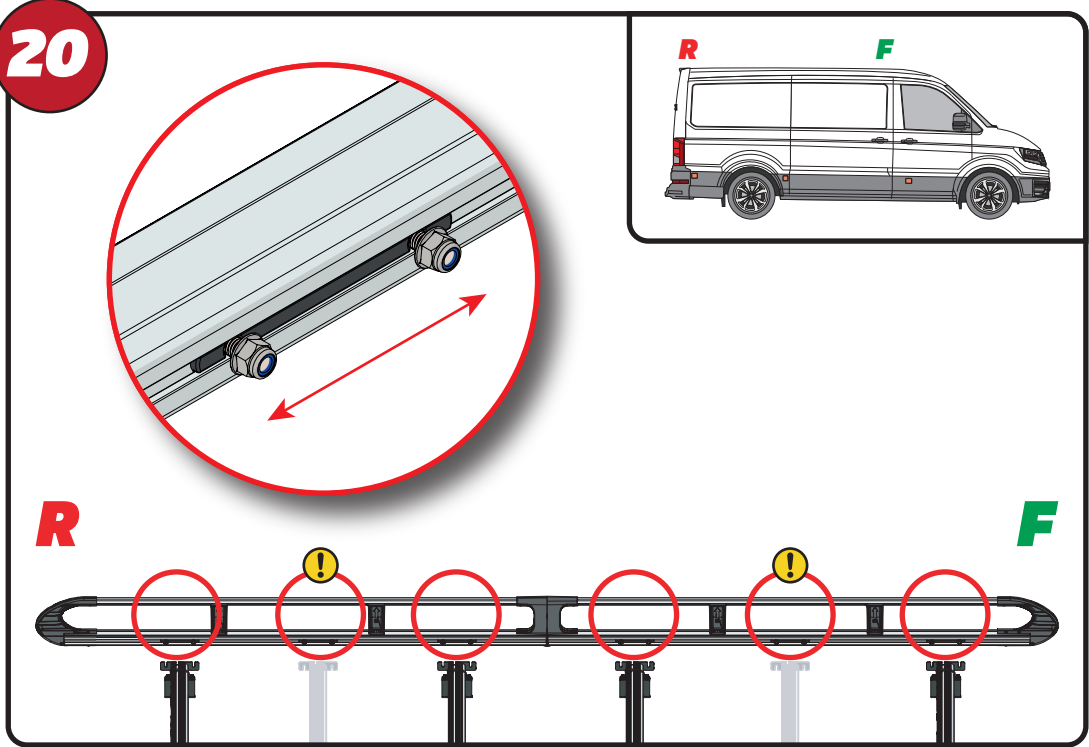


21

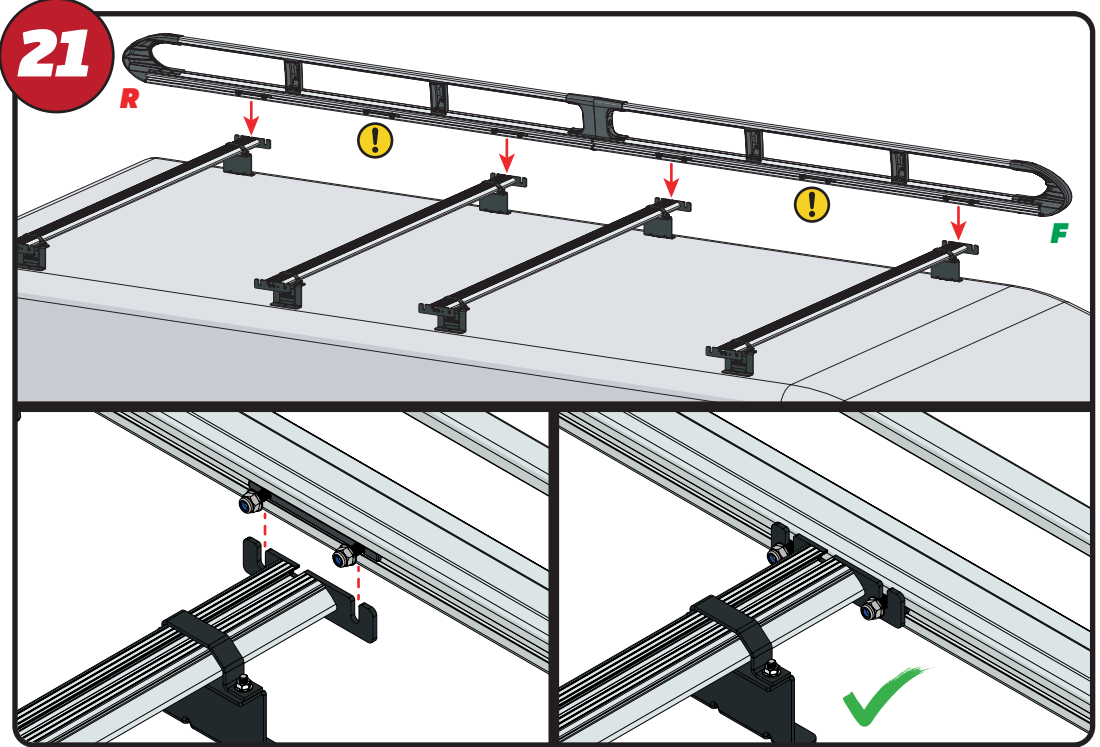


22

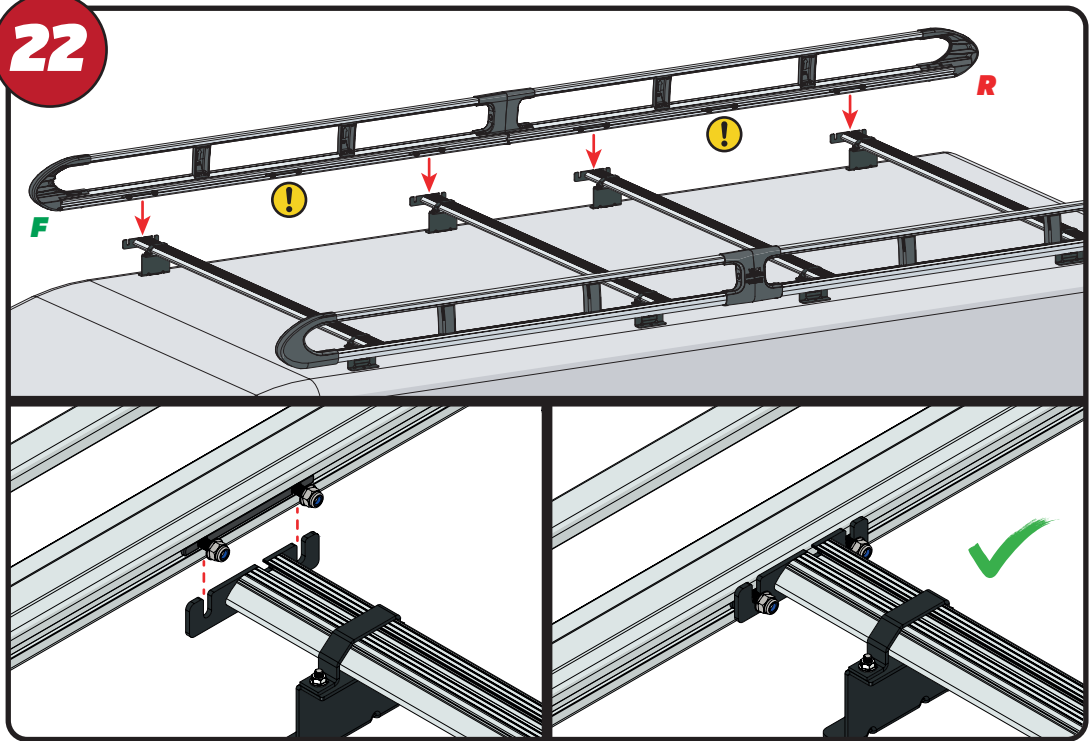


23

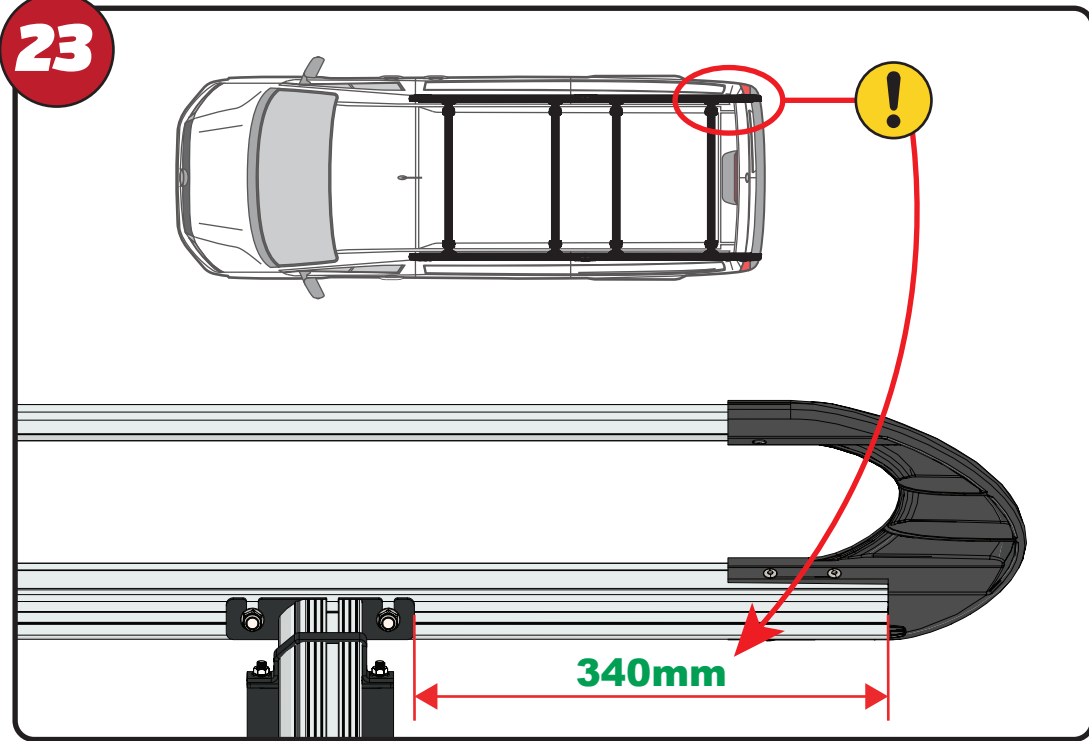

24

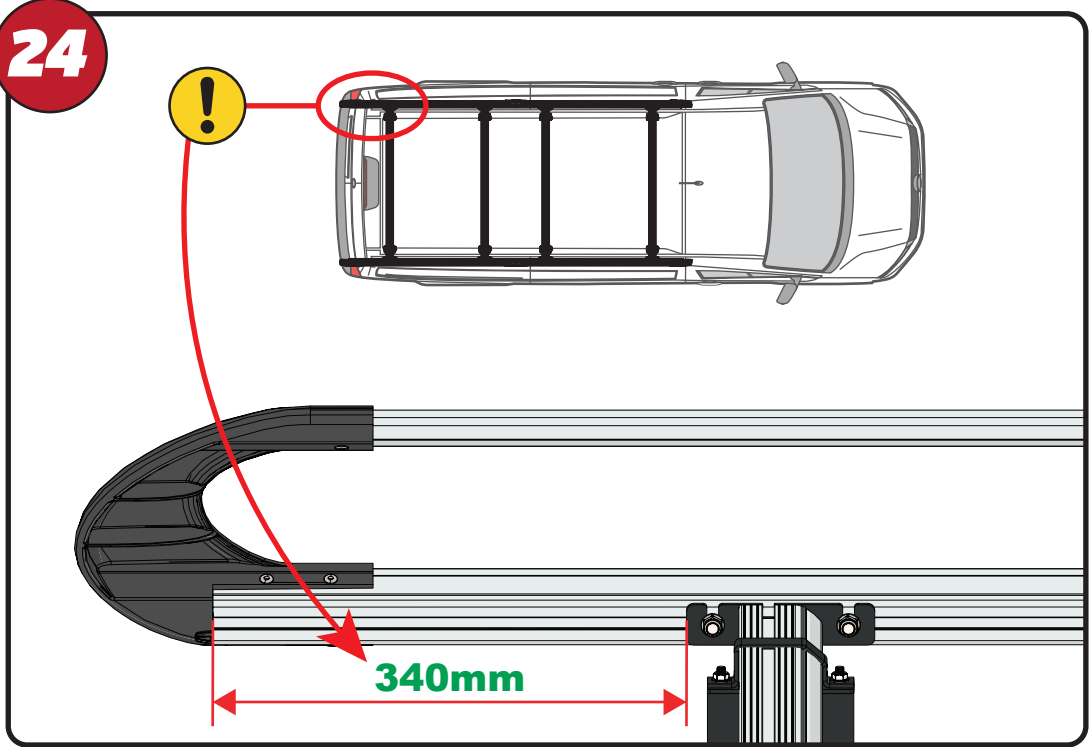


25

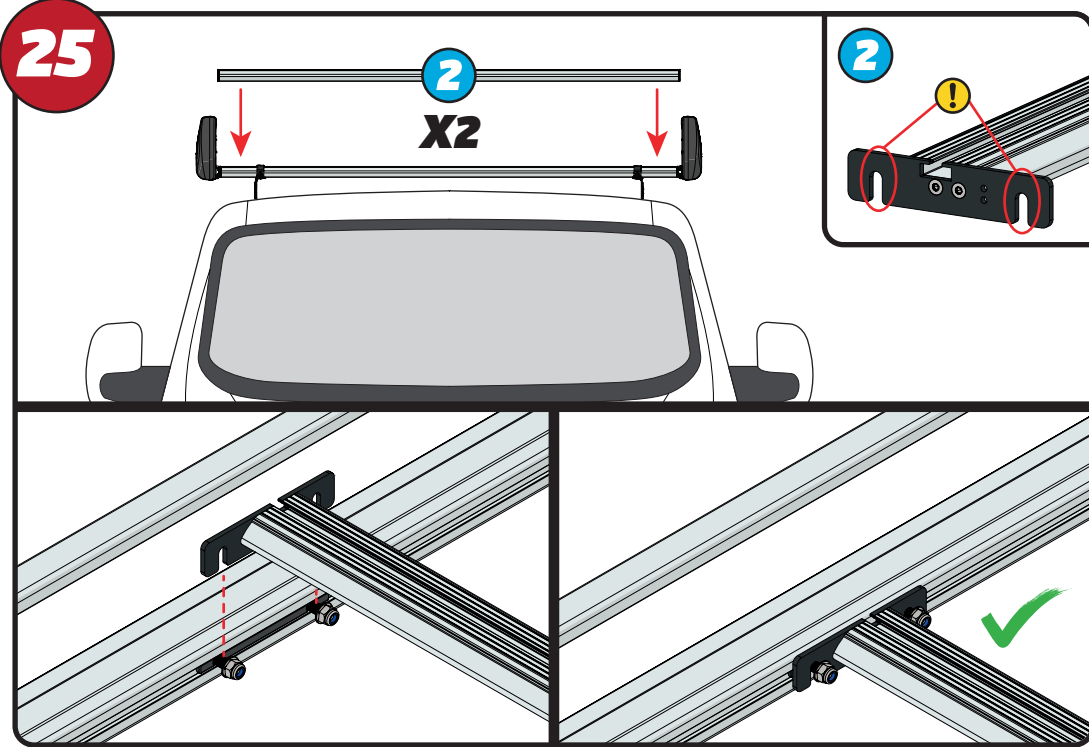

26

XXX =
PAGE 2 OF 15

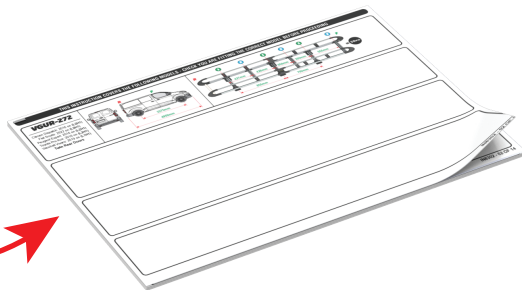


XXXmm

XXXmm

XXXmm

27

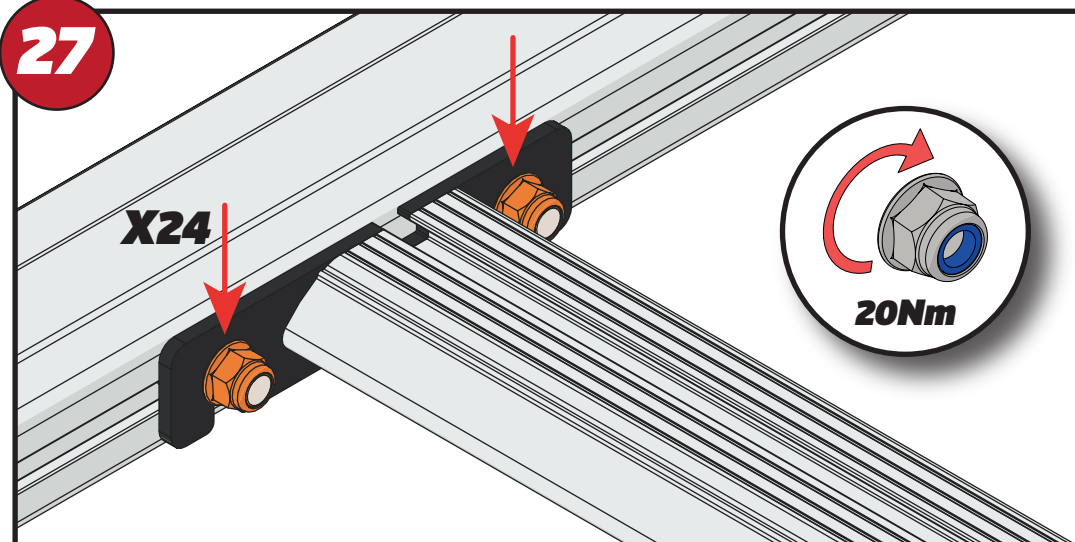


X24

20Nm


EN - TIGHTEN ALL OF THE CROSS BARS
DE - ALLE QUERSTANGEN FESTZIEHEN
FR - SERREZ TOUTES LES BARRES TRANSVERSALES
NL - DRAAI ALLE DWARSBALK VAN HET DAK AAN
ES - APRIETE TODAS LAS BARRAS TRANSVERSALES
IT - STRINGERE TUTTE LE BARRE TRASVERSALI

SV - SKRU UPP ALLA KORSSTANGAR
DA - SKRU ALLE TAGBØJLER OP
NO - SKRU OPP ALLE TVERRSTENGER
PL - DOKRĘCIĆ WSZYSTKIE POPRZECZKI
CS - VŠECHNY PŘÍČNÉ TYČE SEŠROUJTE

28

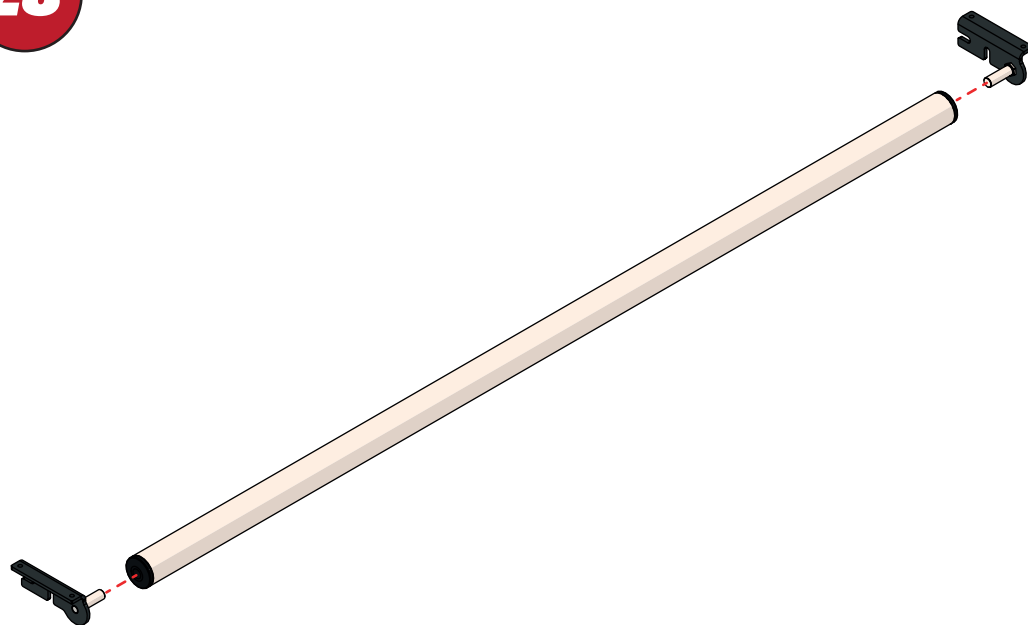

29

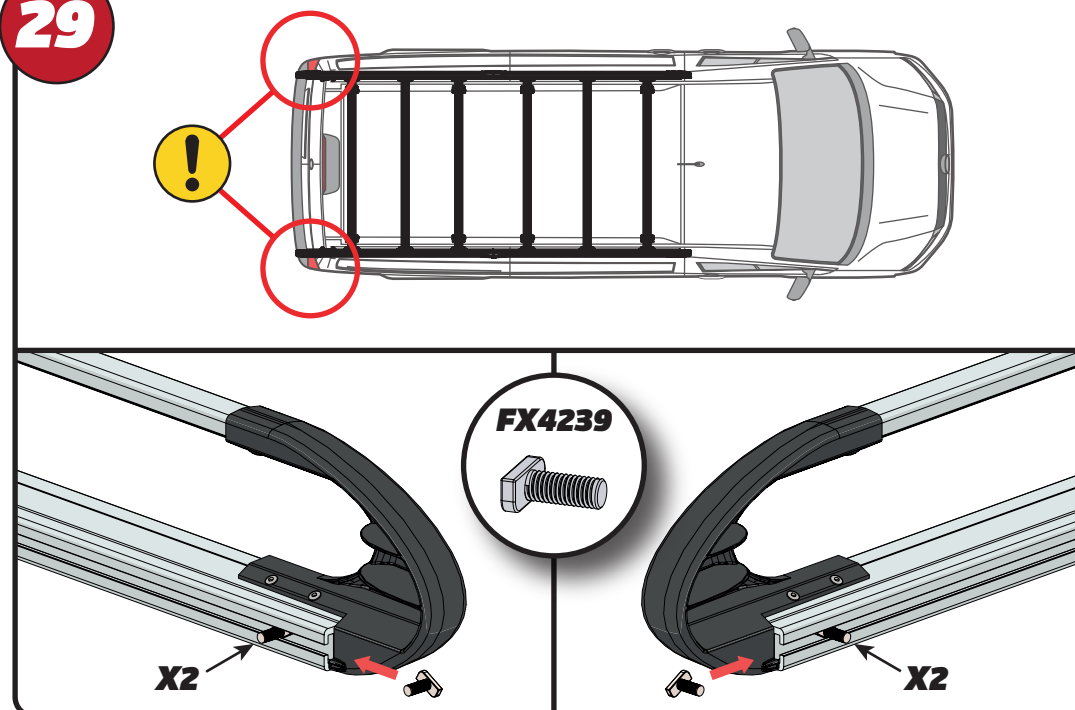


X2


FX4239

X2


30

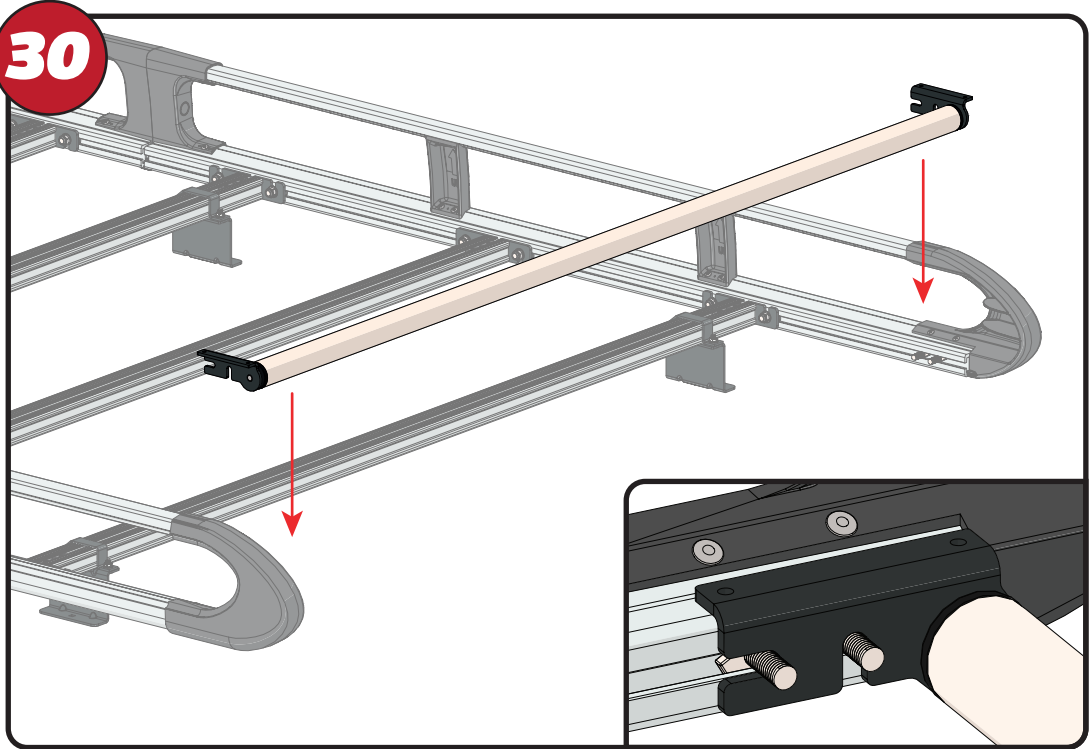


31

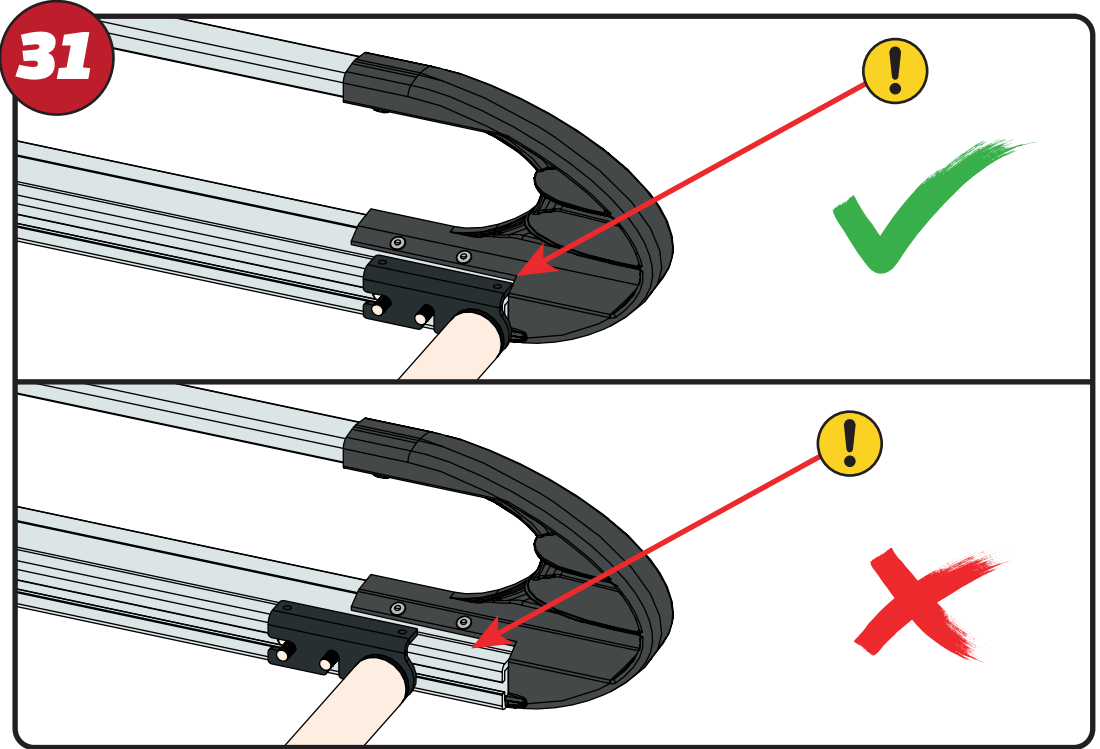


32

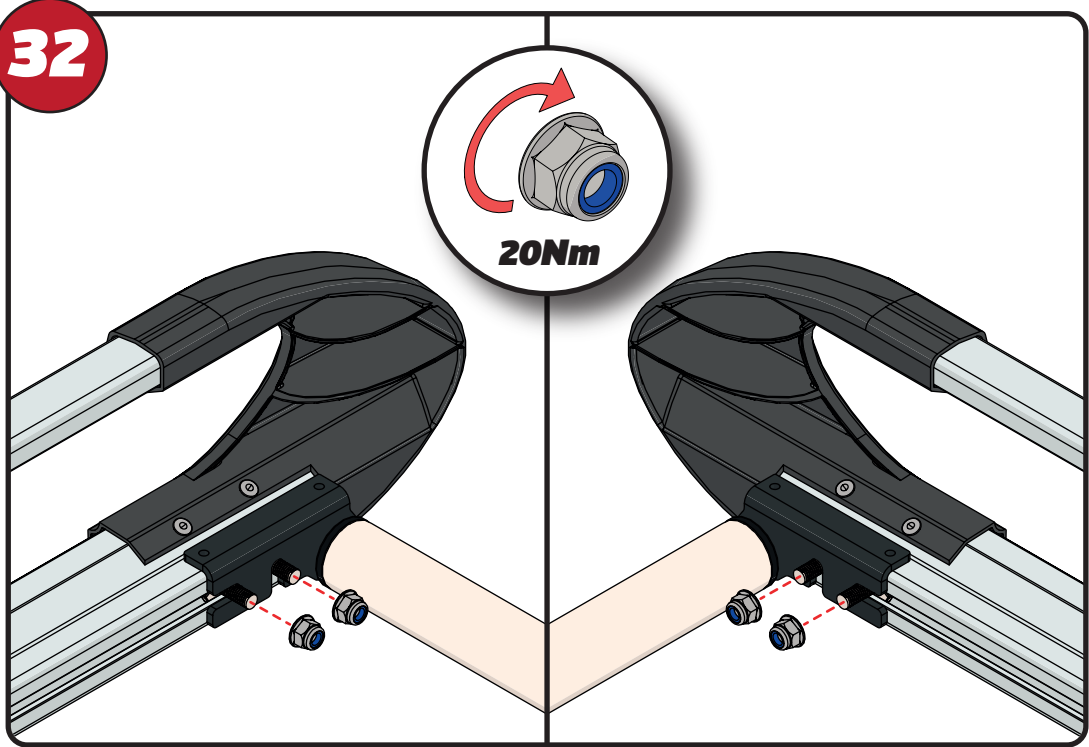


33

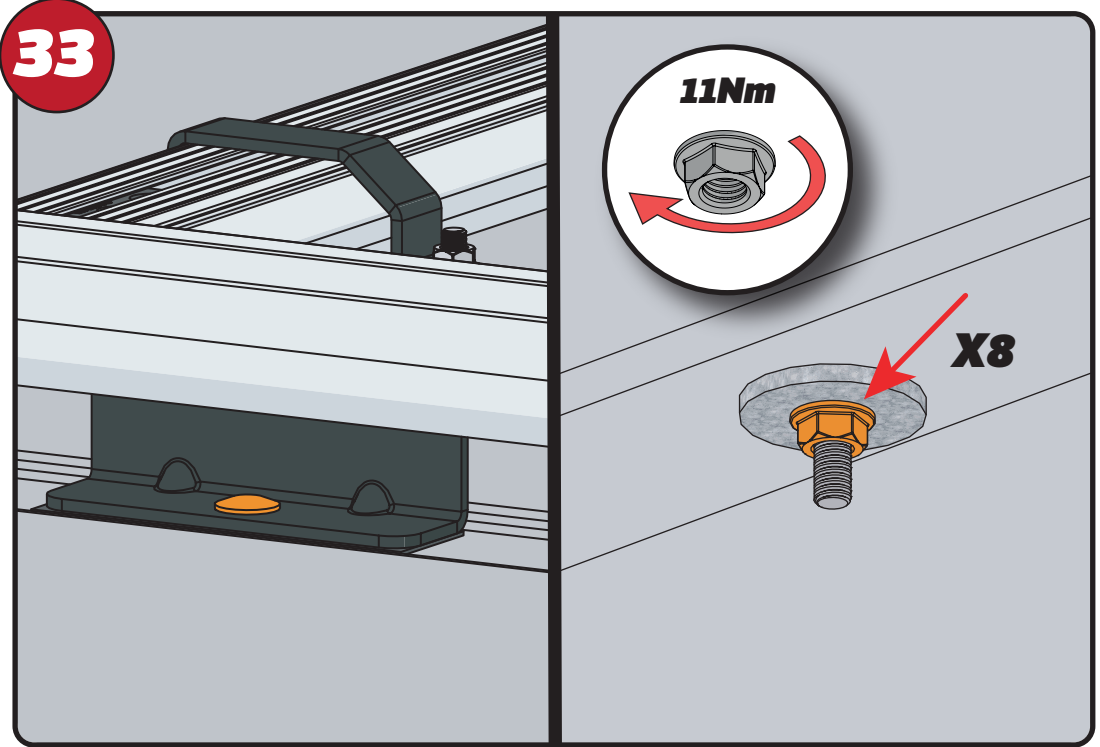


34

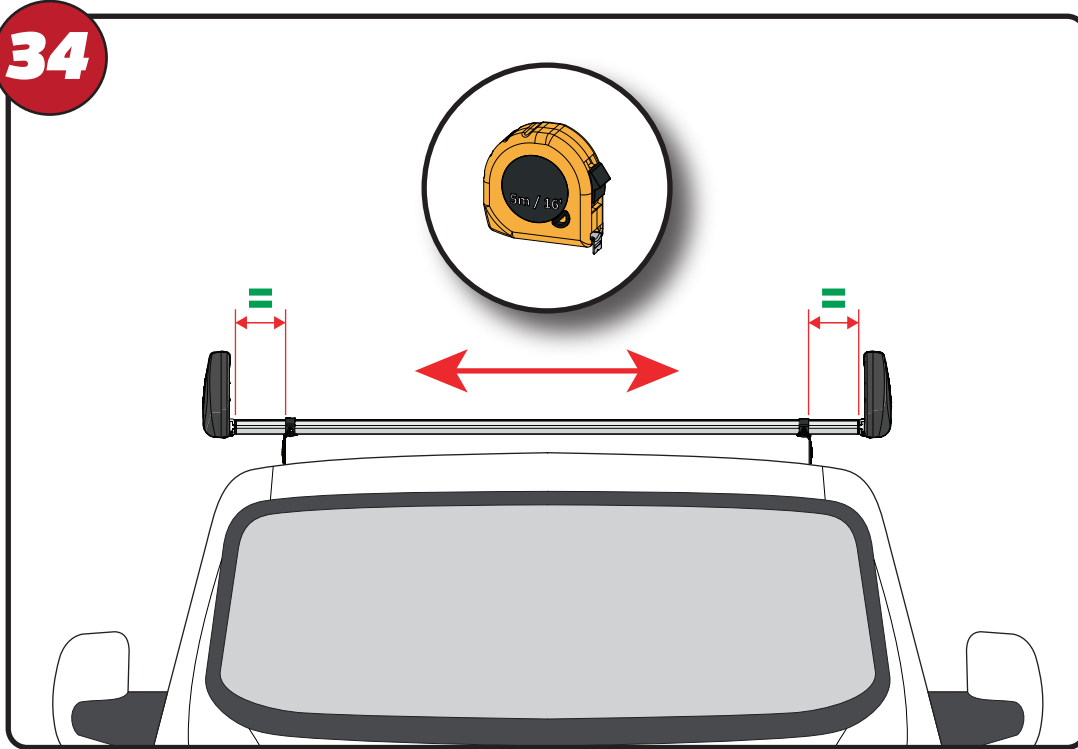


35

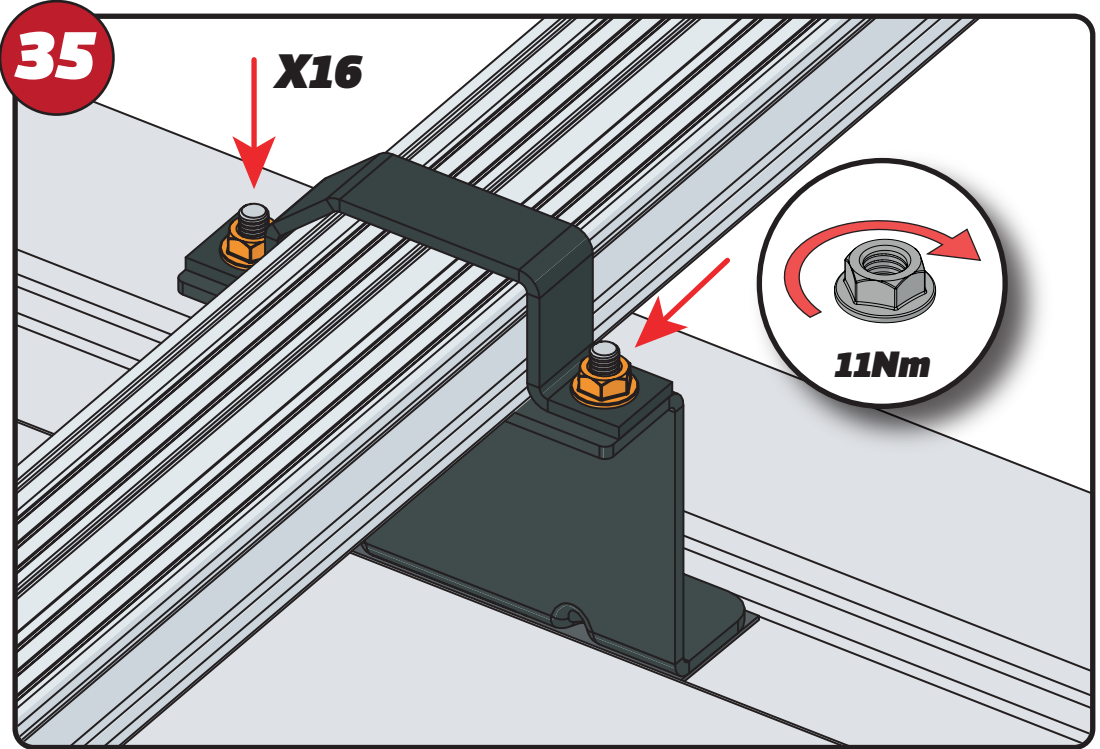


36

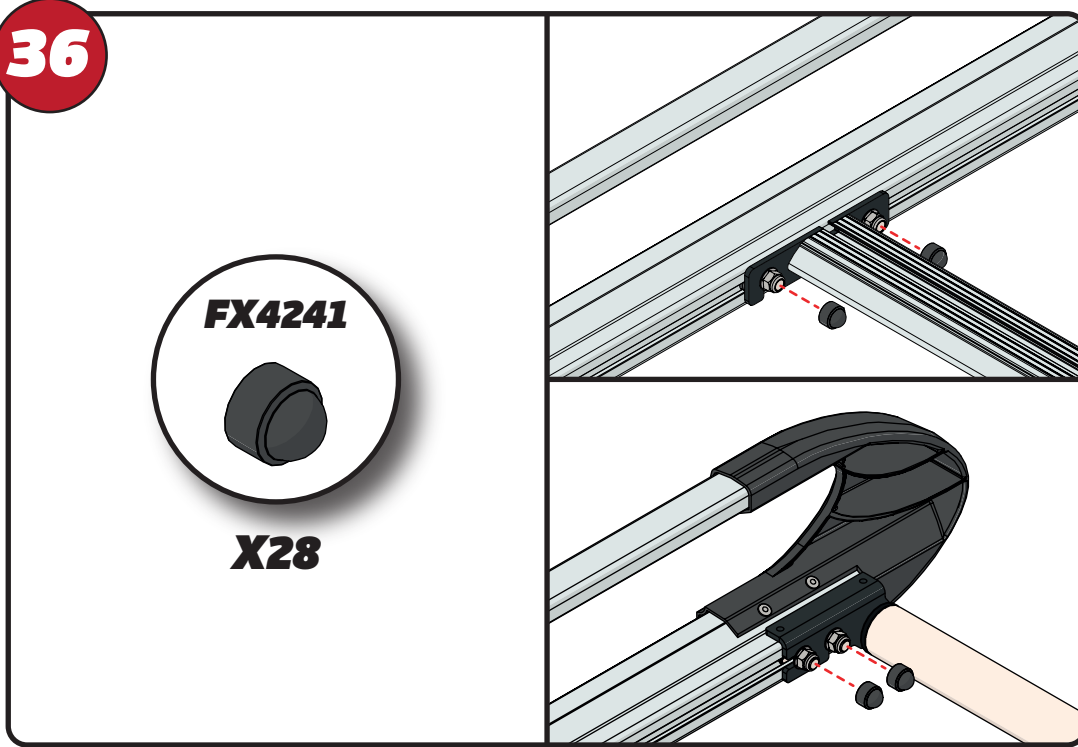

37

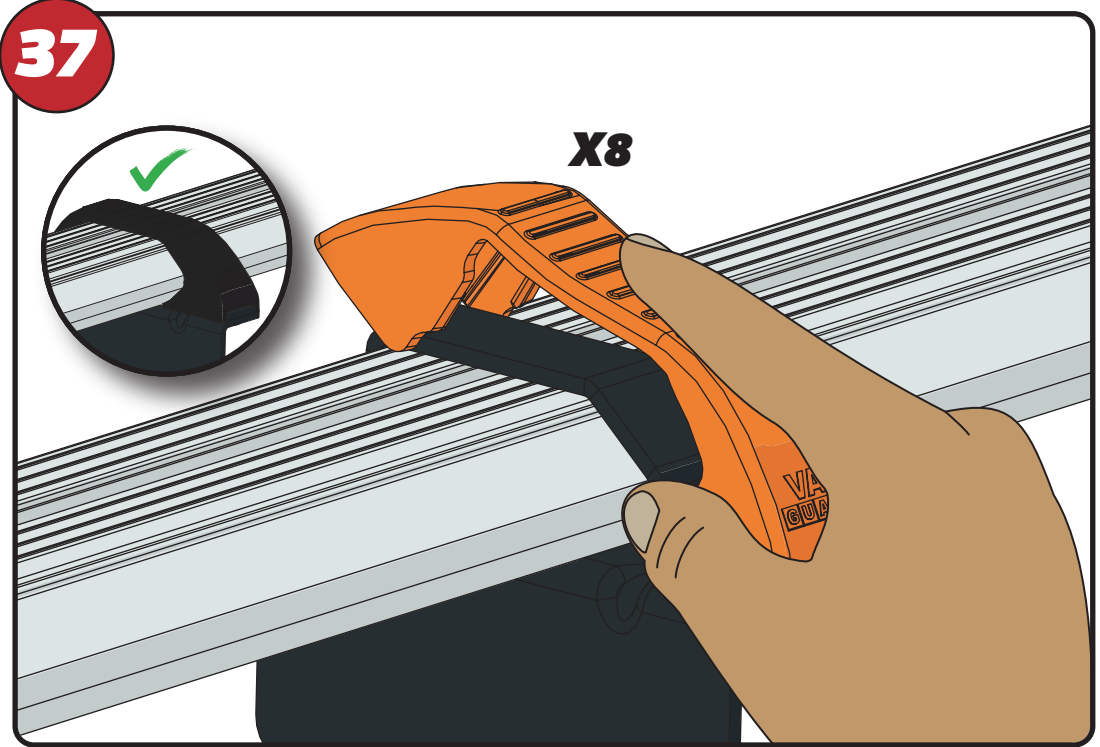

38

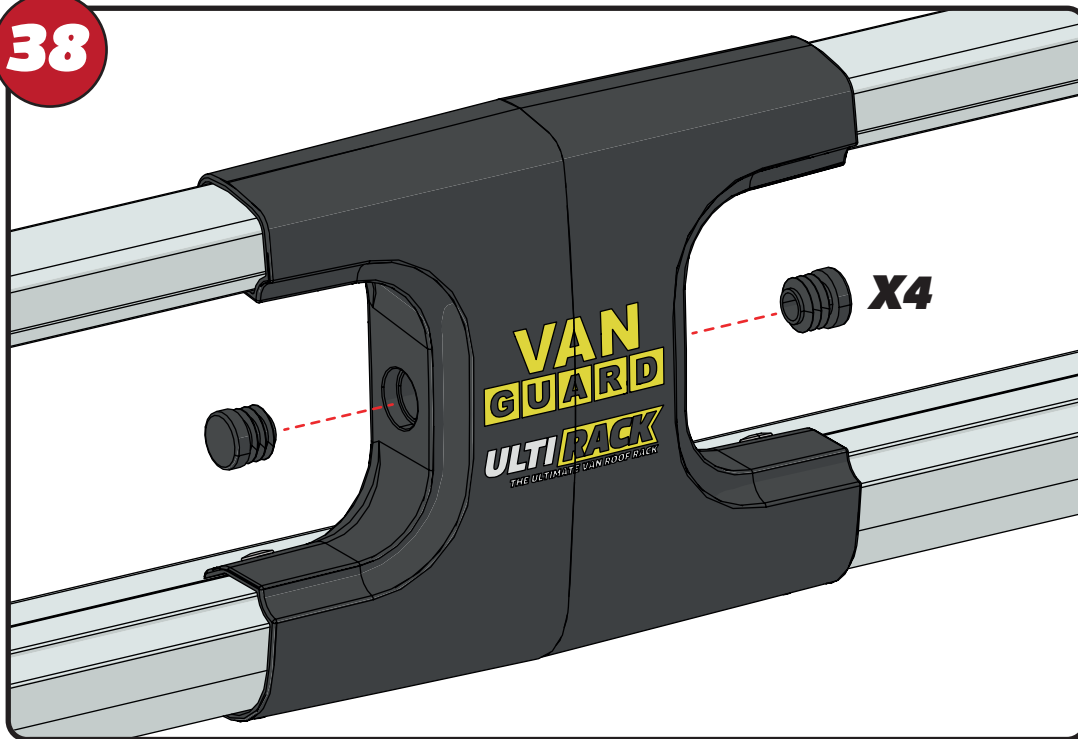

39

