


# IN8403


## ULTI Ladder

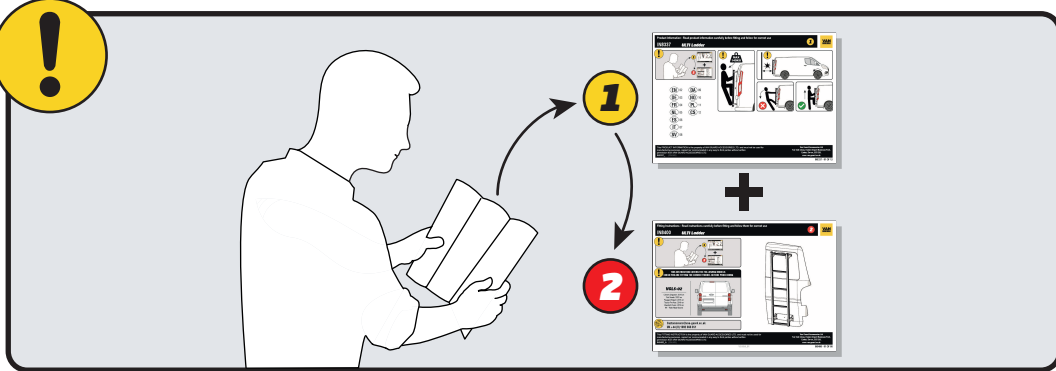


**THIS INSTRUCTION COVERS THE FOLLOWING MODELS  
CHECK YOU ARE FITTING THE CORRECT MODEL BEFORE PROCEEDING**

### **VGL5-05**

Ford Transit Custom: 2012 on  
H1 - Twin Rear Doors

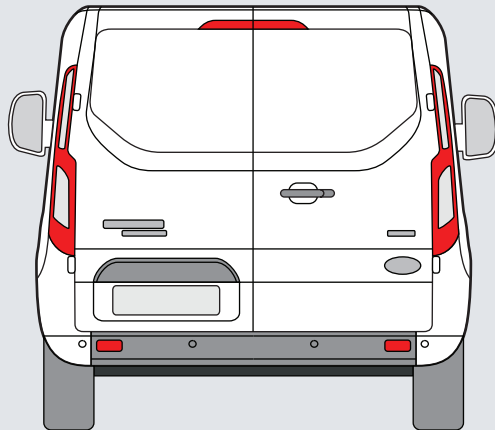


**Customercare@van-guard.co.uk**  
**UK +44 (0) 1392 368 351**

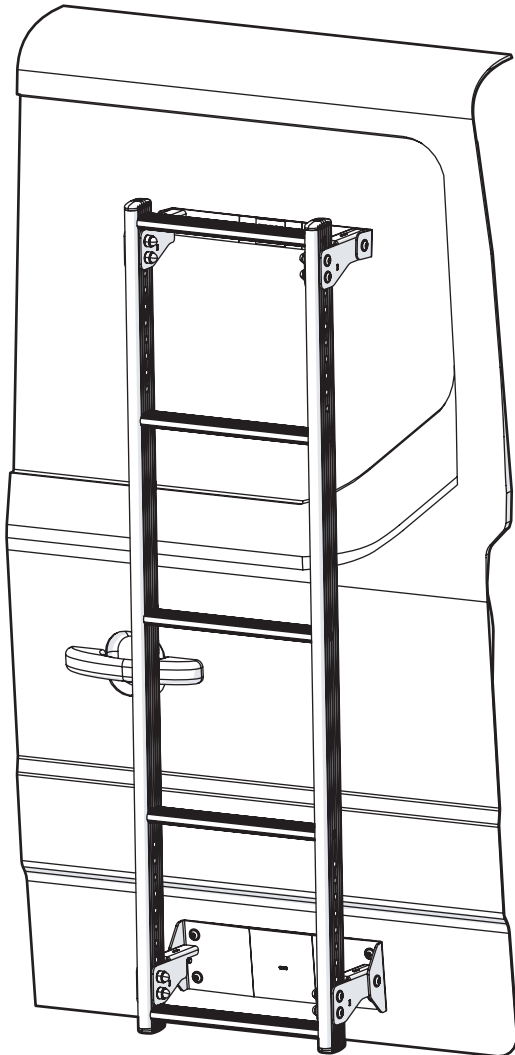


**SUPPLIED COMPONENTS - CHECK ALL PARTS ARE PRESENT AND CORRECT BEFORE PROCEEDING**

**TOOLS REQUIRED**


**13MM X1**

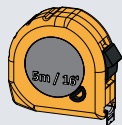

**4MM X1**

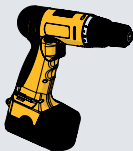


**9MM X1**

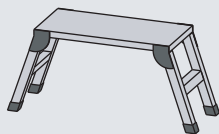

**X1**




**AS3592 X1**

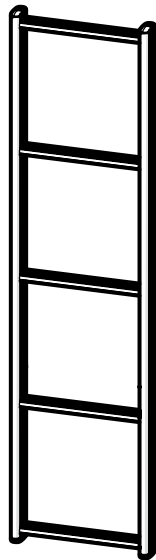


**FX4249 X8**

(M8X40)



**FX4250 X10**

(M8X25)



**ME1911 X1**



**FX4240 X18**


(M8)




**FX4241 X8**




**ME1910 X1**

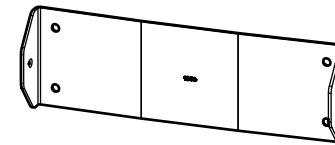


**MA6200 X3**



**FX4252 X2**

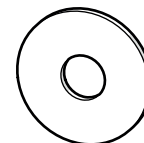


**ME1918 X1**

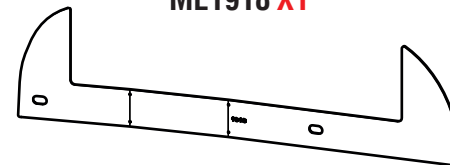


**FX4008 X1**




**ME1906 X2**

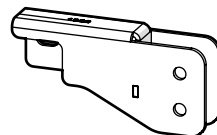


**ME1905 X2**

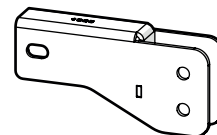


**ME1917 X1**

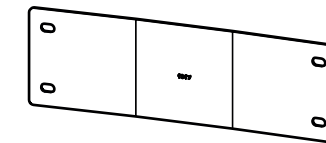


01

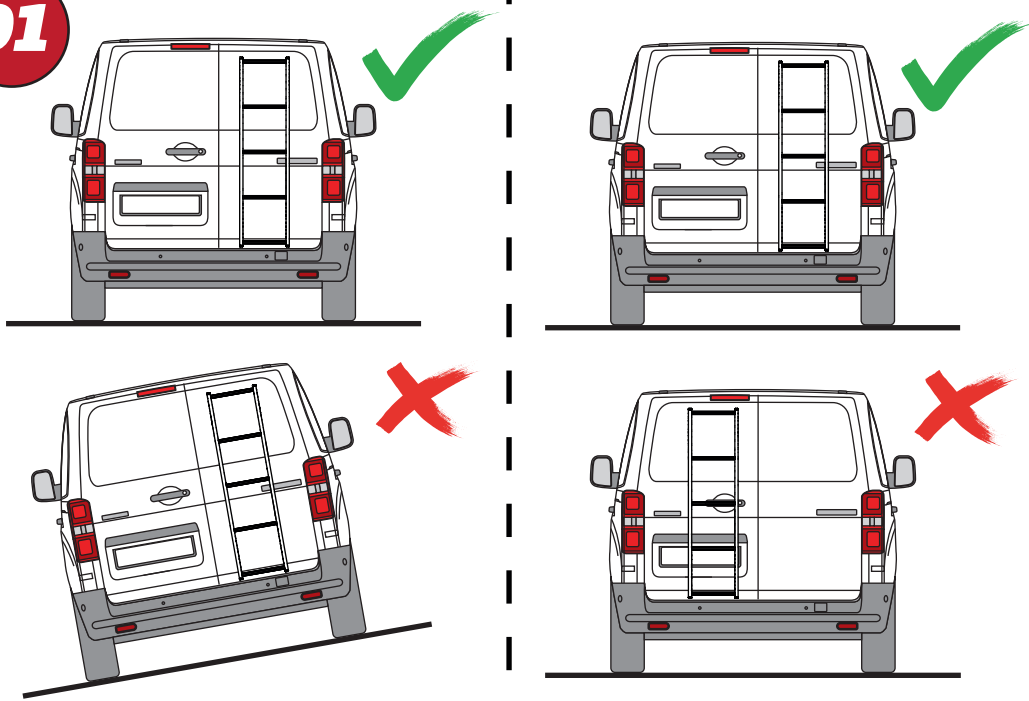


02

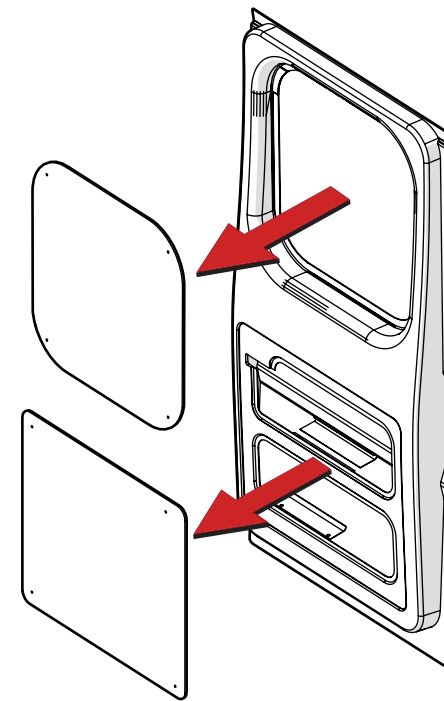

03

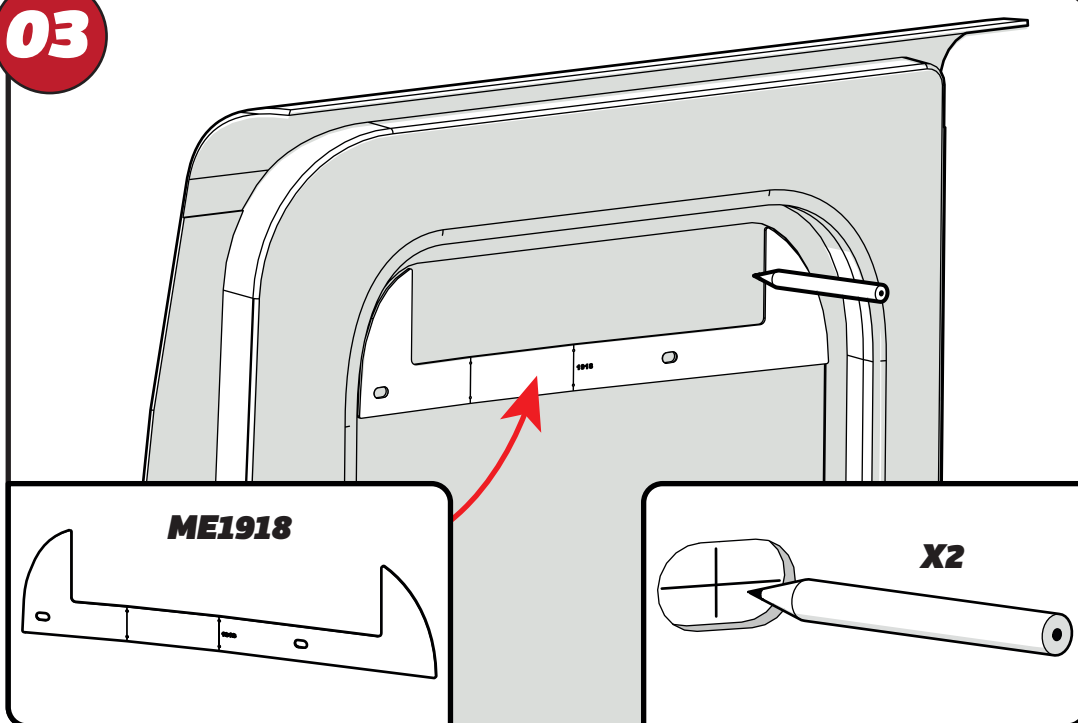


04

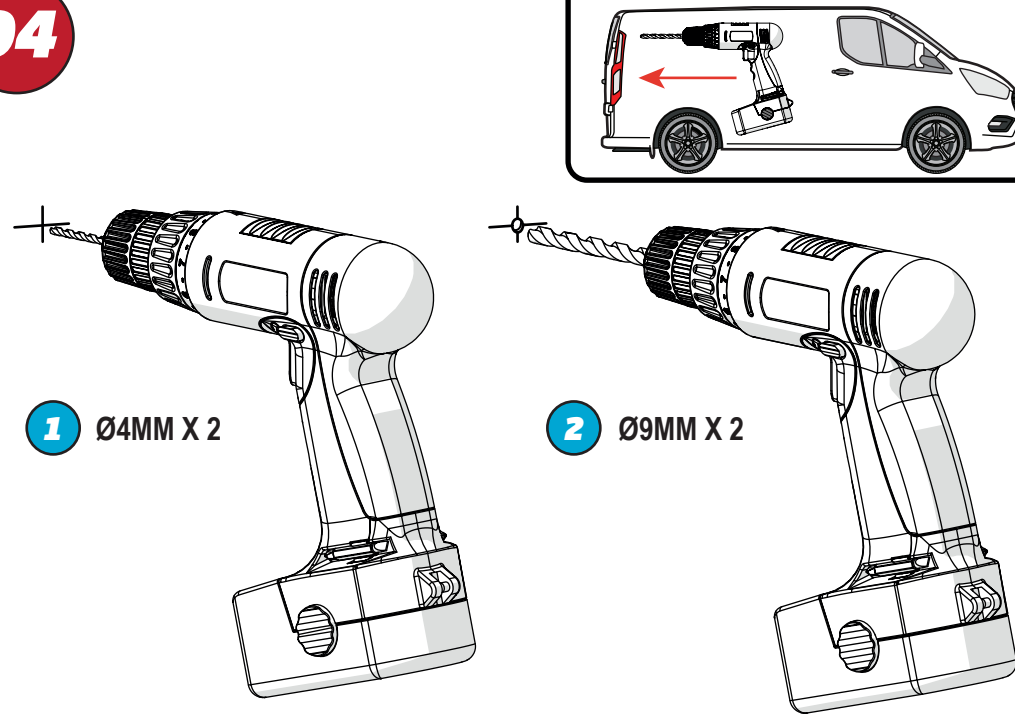

05

MA6200



VAN  
GUARD

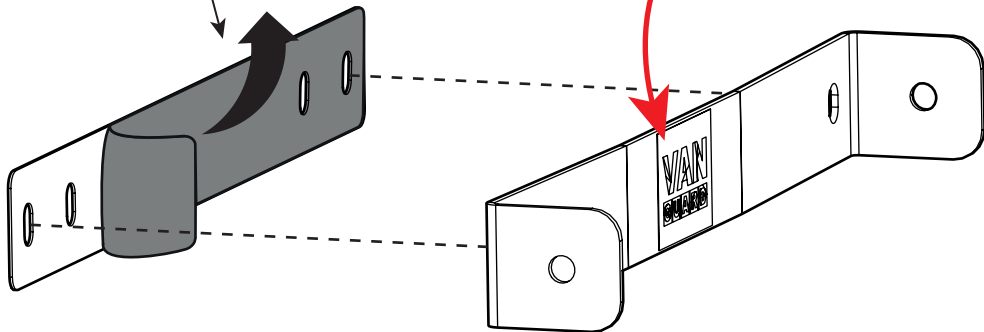

06

FX4250


FX4252

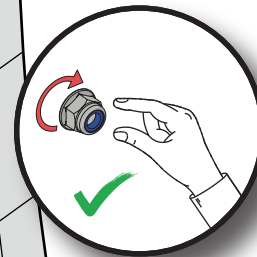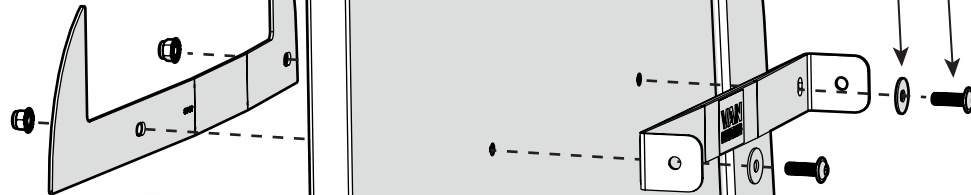

07



MA6200

1910

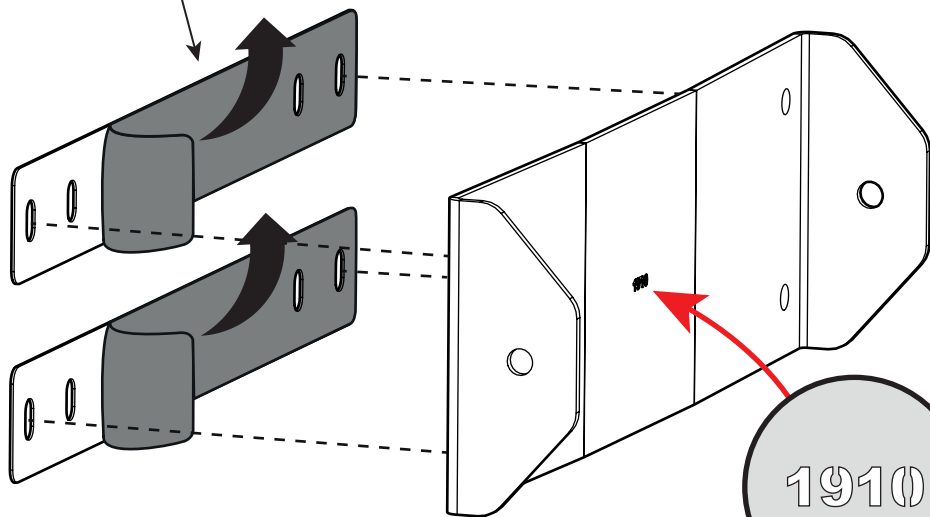



08

1910


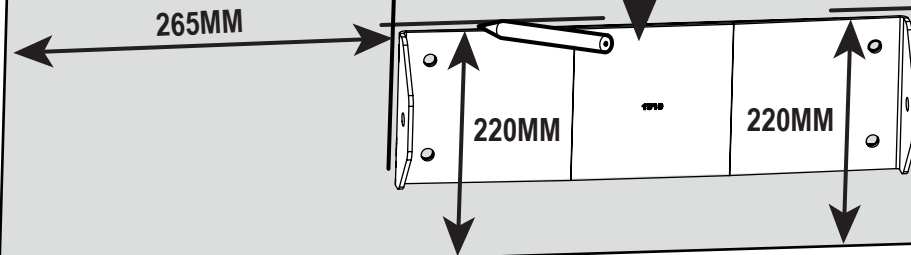
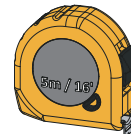






09

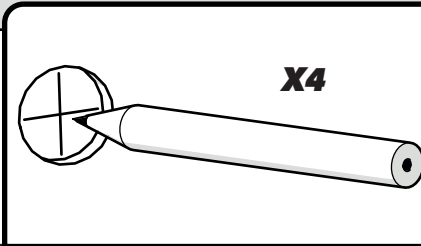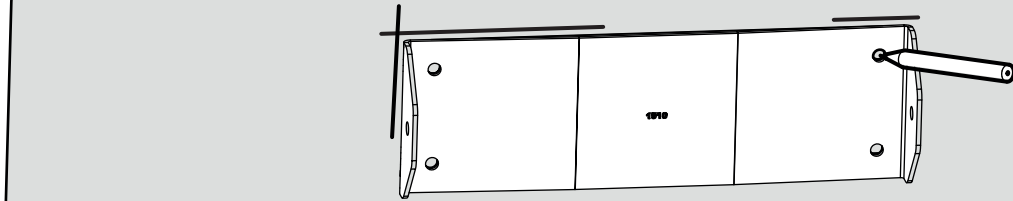


10

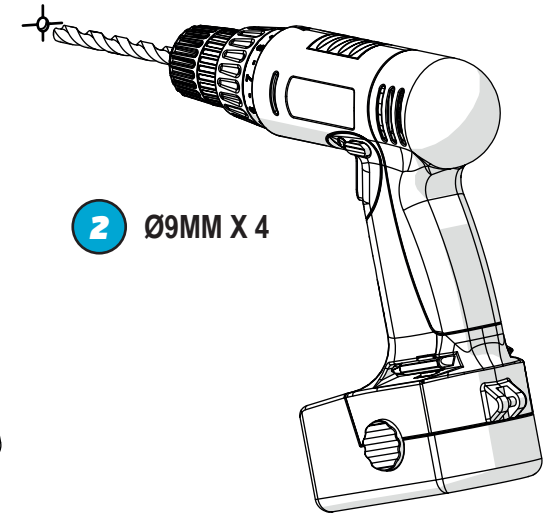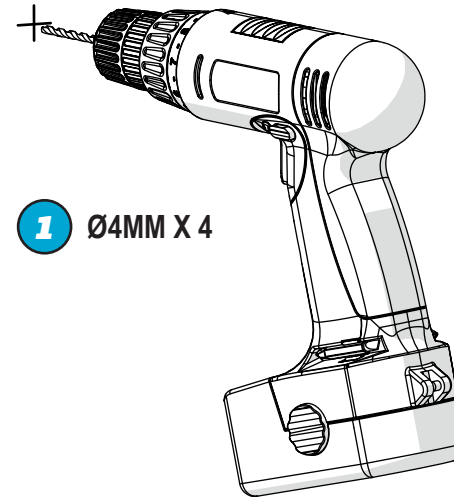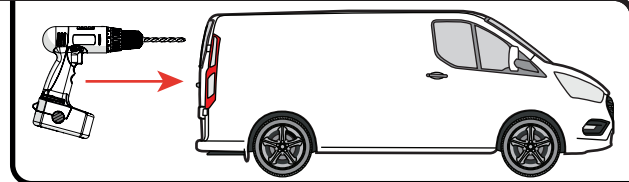


11

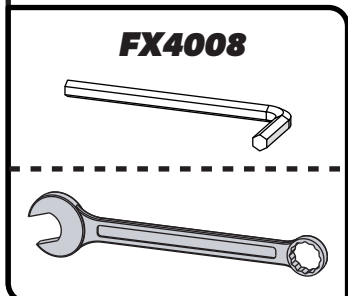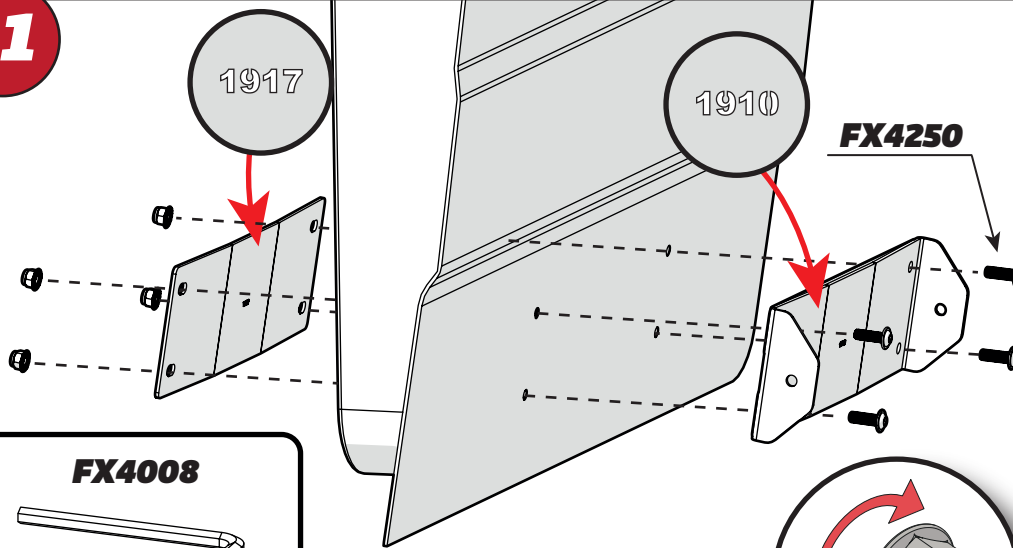


12

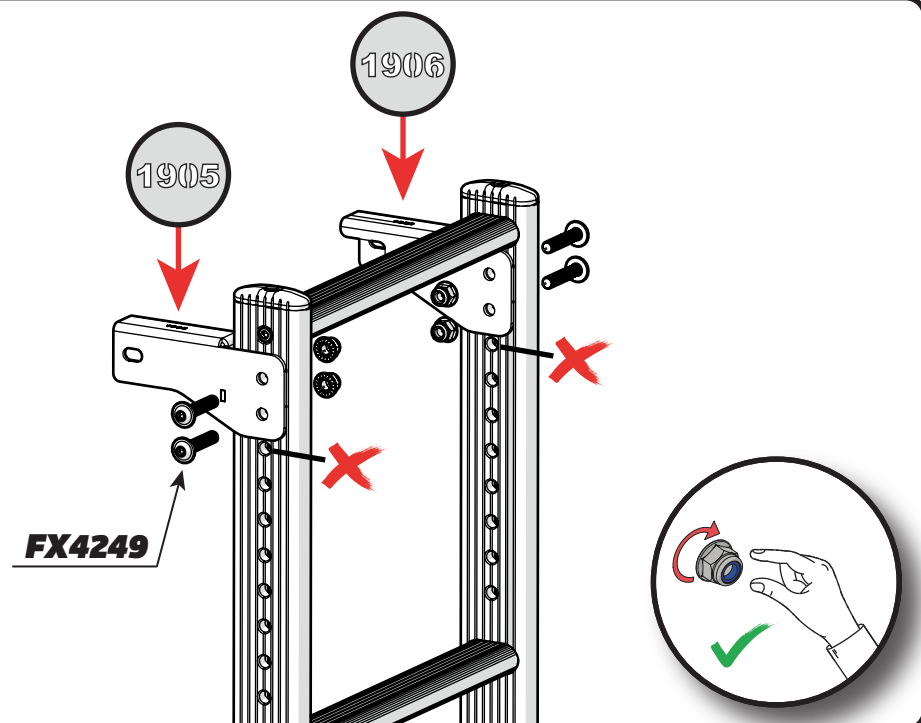


13

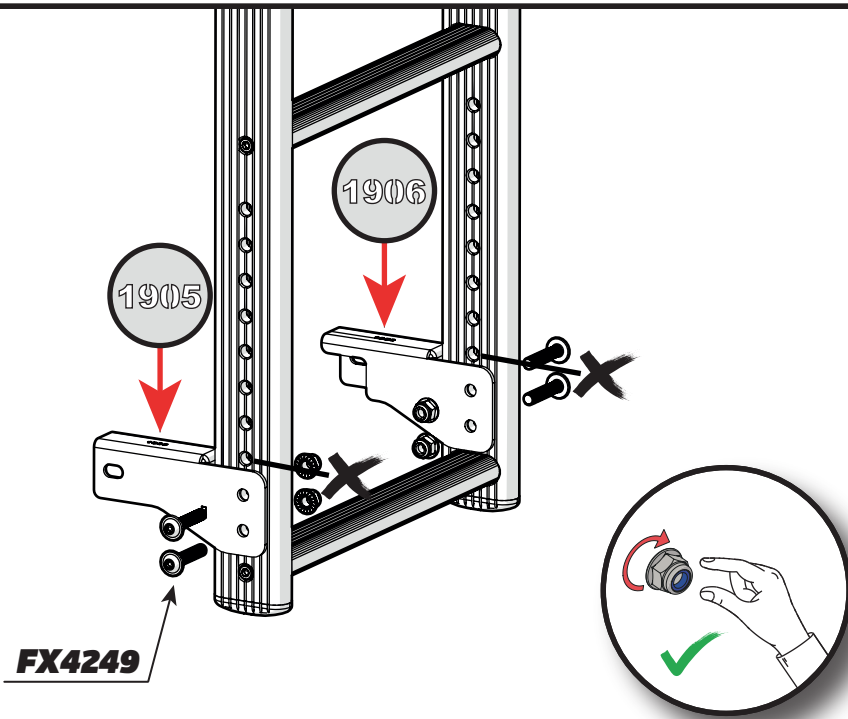


14

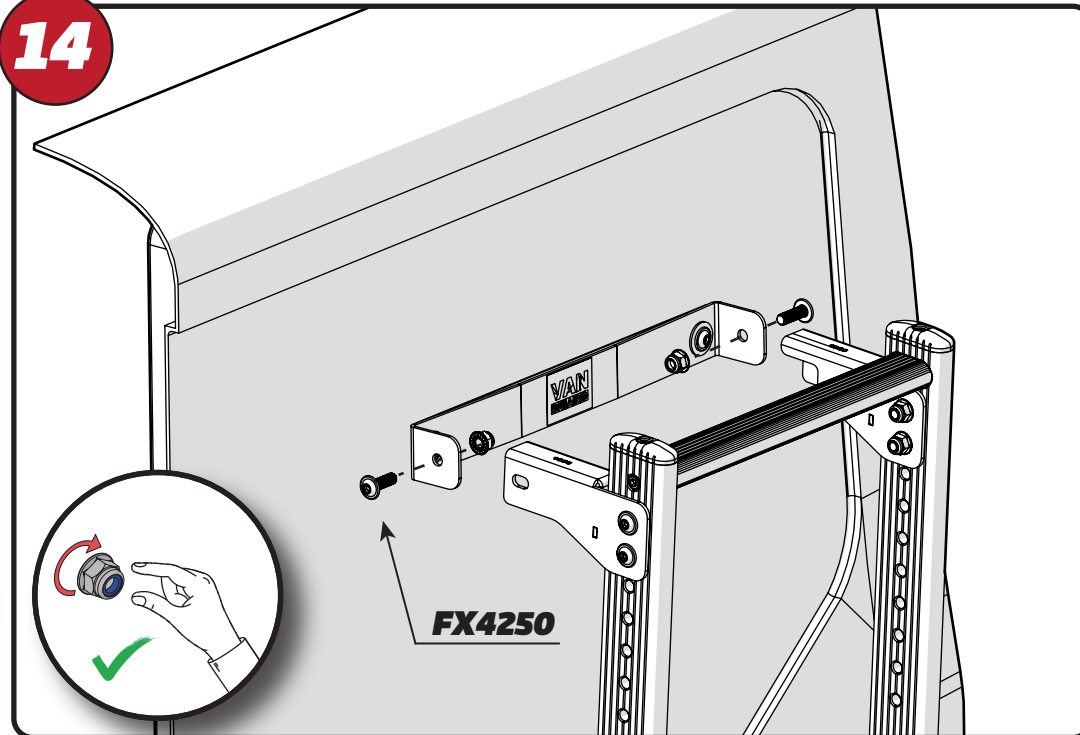


15

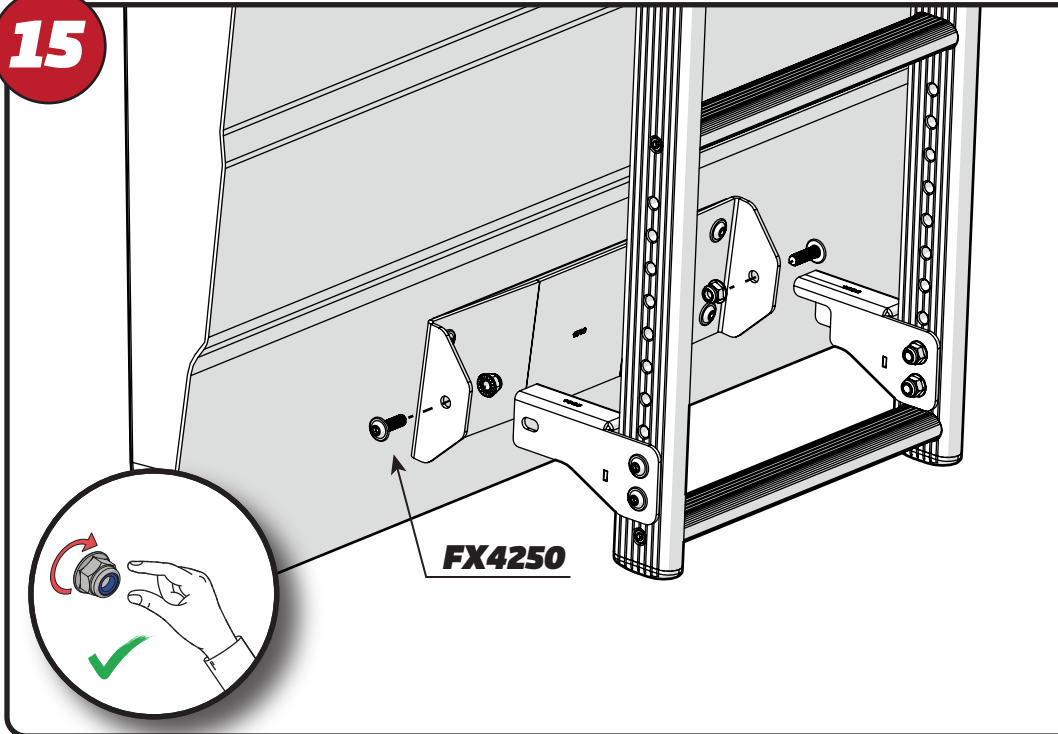


16

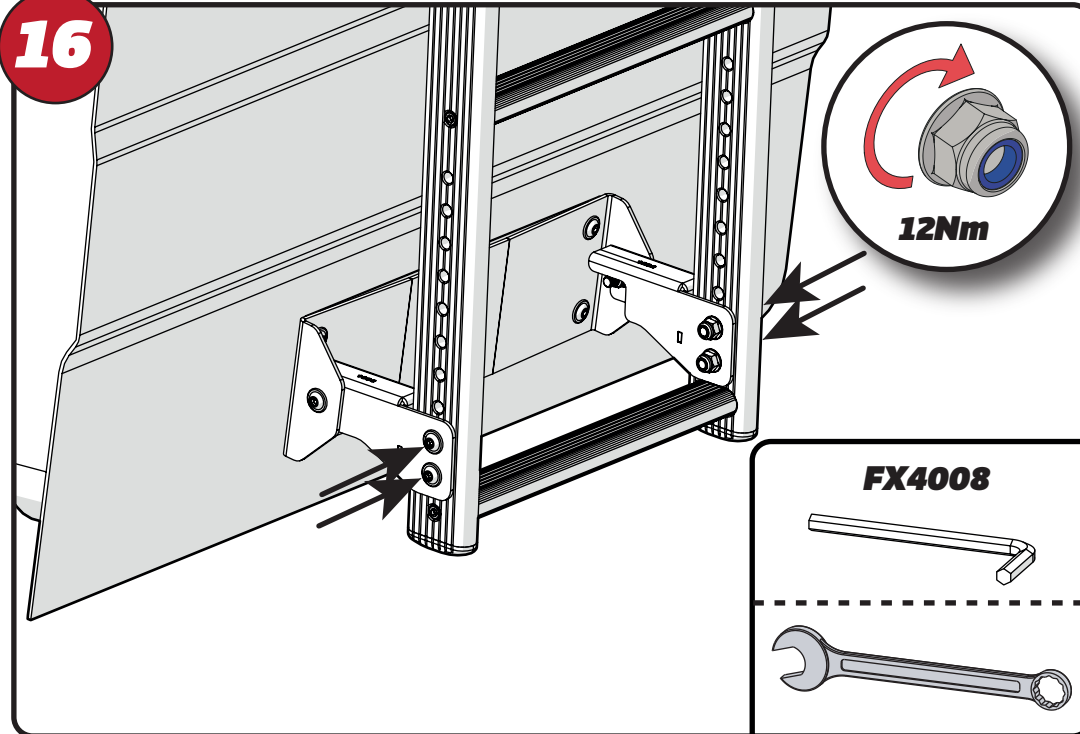


17

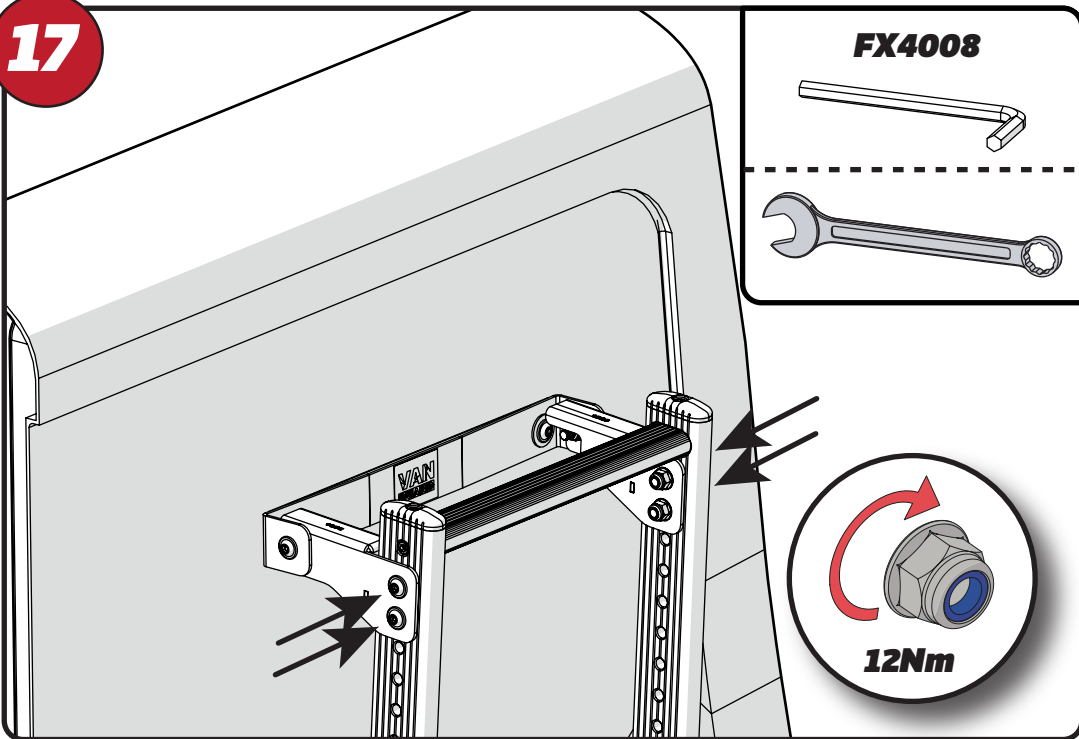


18

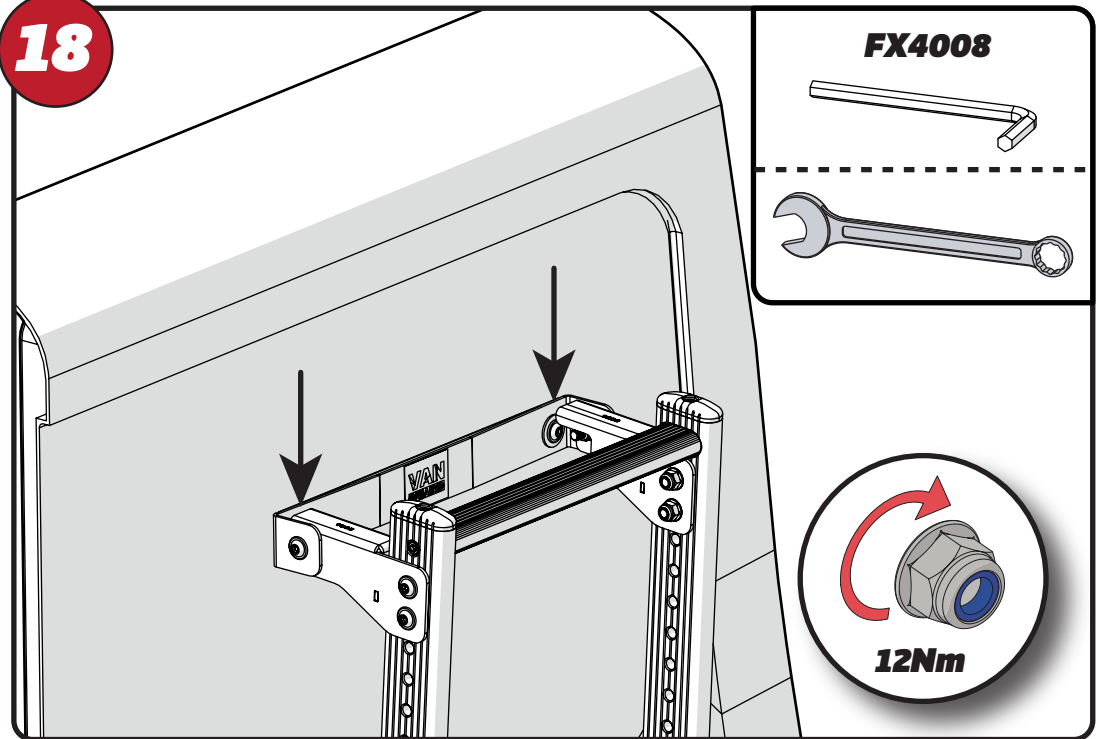


19

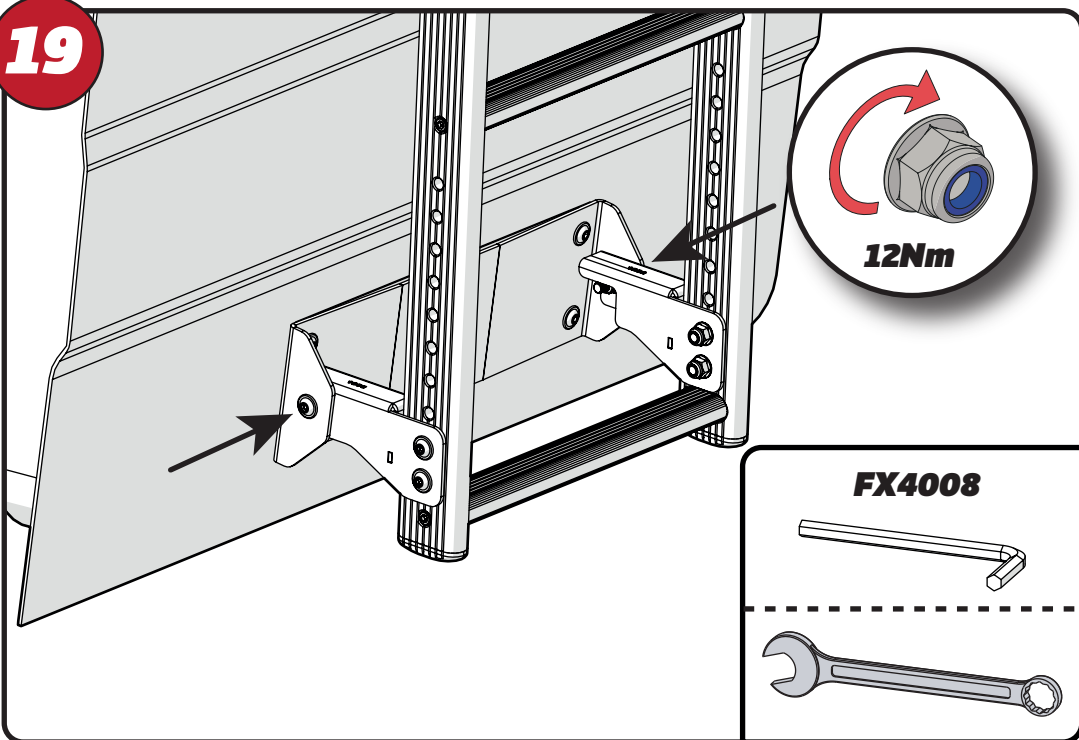


20

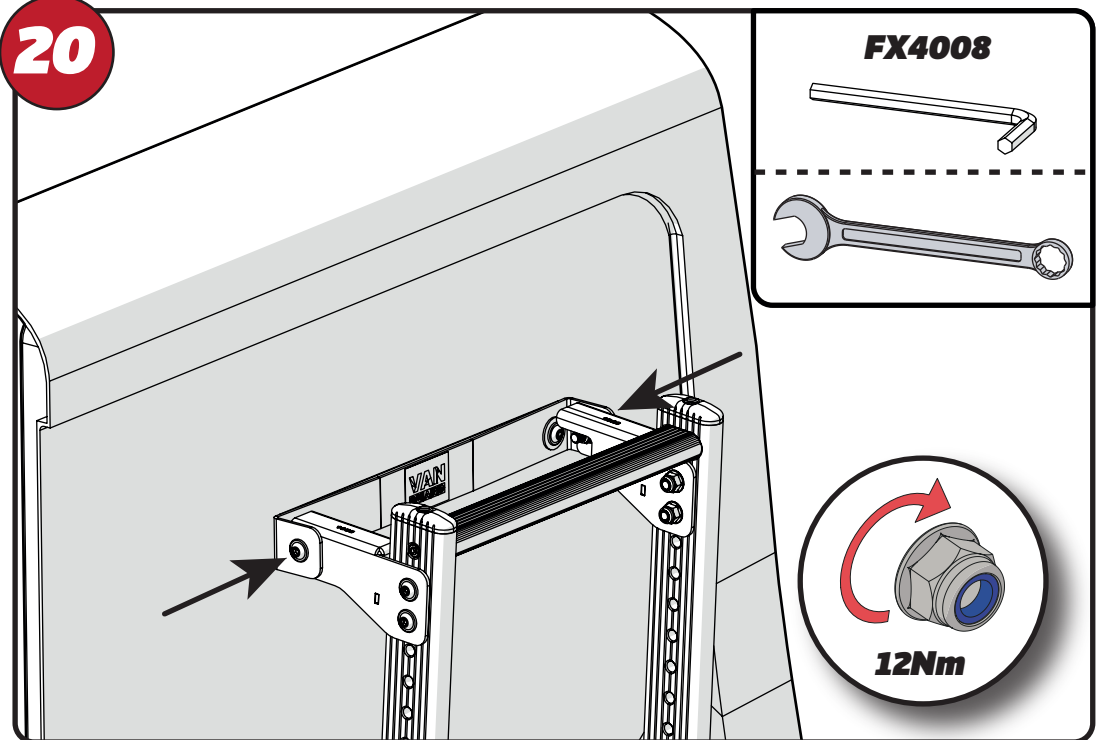

21

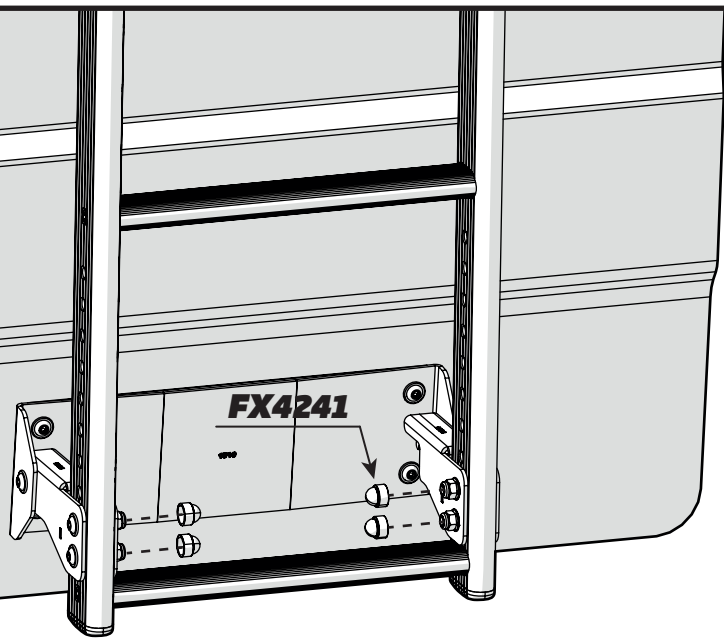

22

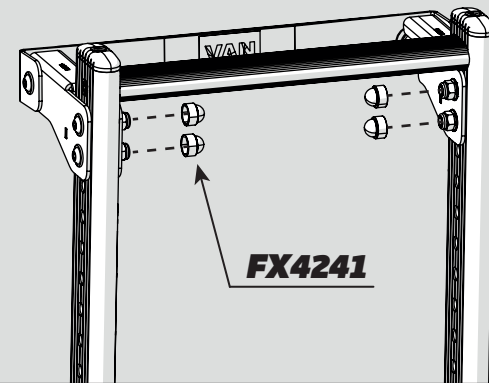

23

