


IN8410


ULTI Ladder

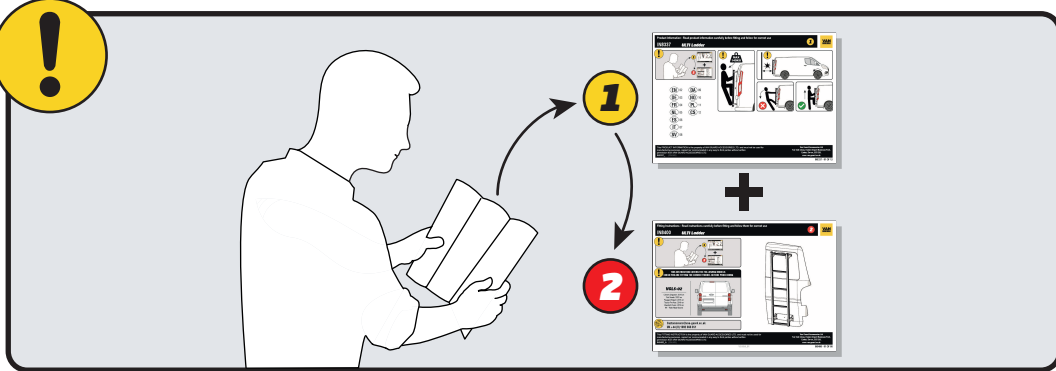


**THIS INSTRUCTION COVERS THE FOLLOWING MODELS
CHECK YOU ARE FITTING THE CORRECT MODEL BEFORE PROCEEDING**

VGL6-06

Ford Transit: 2014 on
H2 - Twin Rear Doors

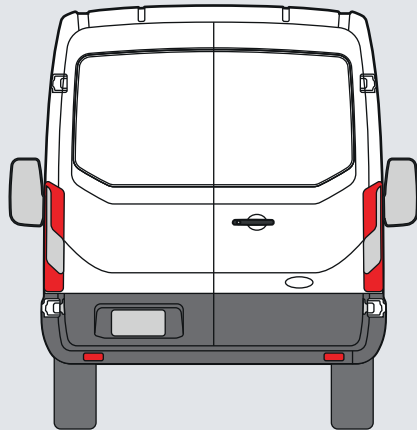


 **Customercare@van-guard.co.uk**
UK +44 (0) 1392 368 351

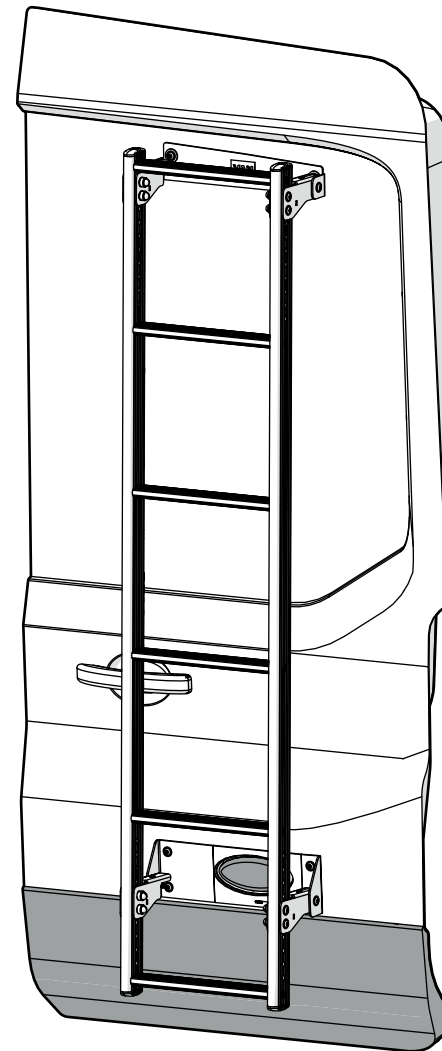


SUPPLIED COMPONENTS - CHECK ALL PARTS ARE PRESENT AND CORRECT BEFORE PROCEEDING

TOOLS REQUIRED


13MM X1

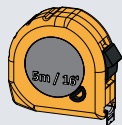

4MM X1

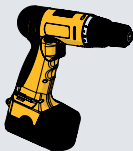

9MM X1

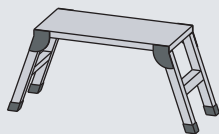


X1



FX4008 X1




AS3593 X1

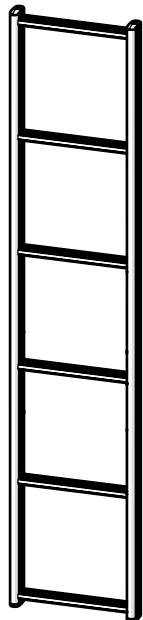


FX4249 X8

(M8X40)



FX4250 X10

(M8X25)



FX4240 X18


(M8)




FX4241 X8




MA6202 X1




MA6201 X1




ME1945 X1

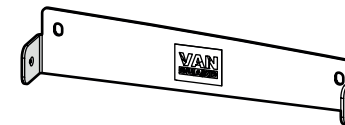


ME1933 X1

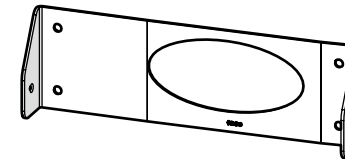


ME1941 X1

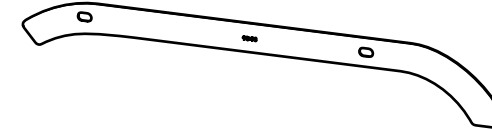


ME1905 X2

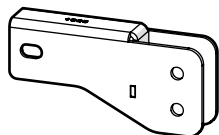


ME1906 X2

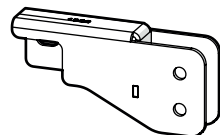


FX4252 X2

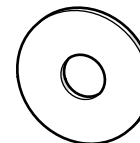


ME1934 X1

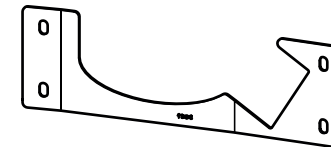


01

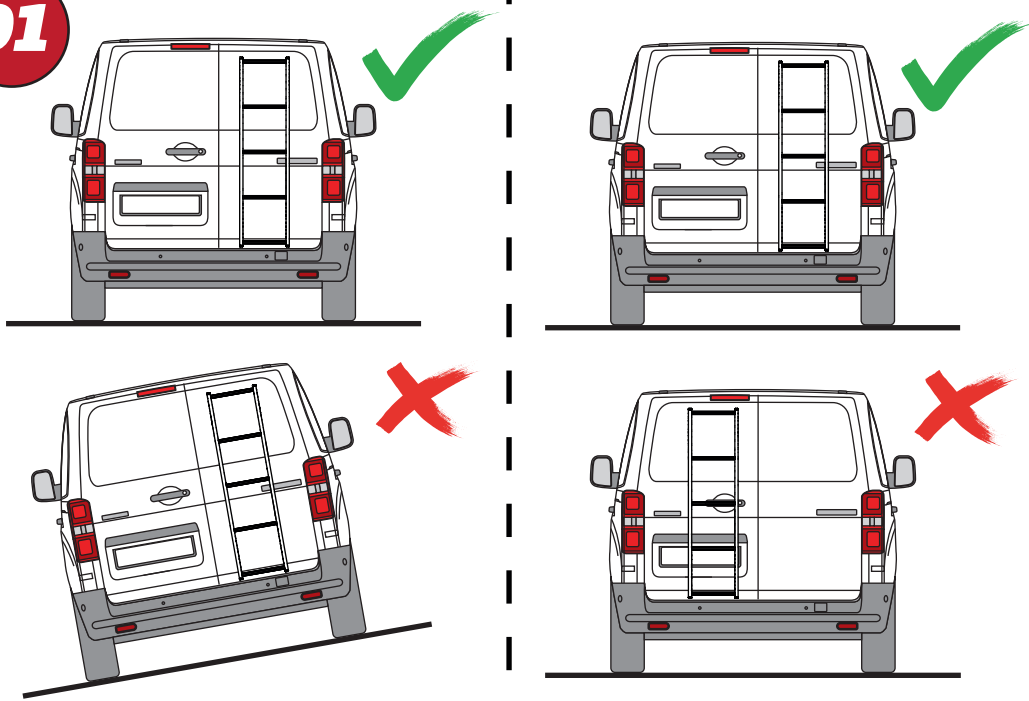


02

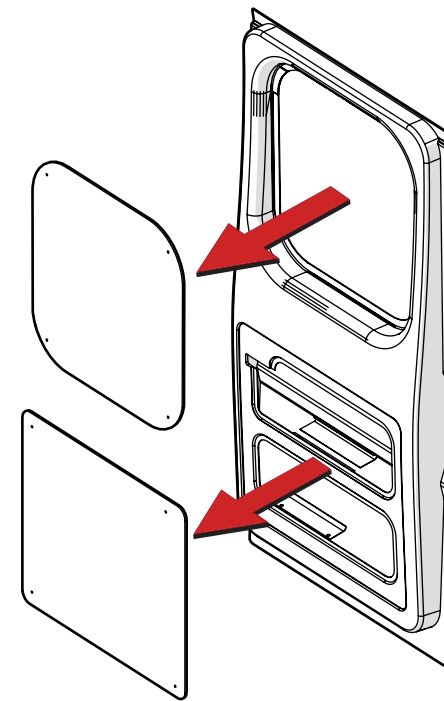

03

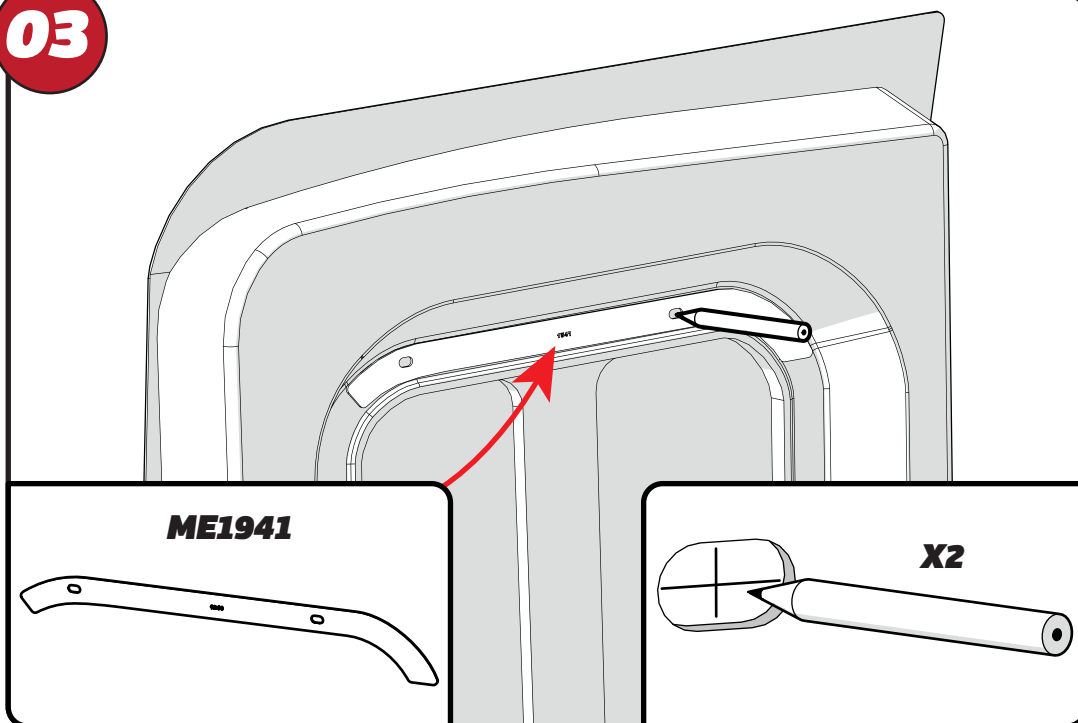


04

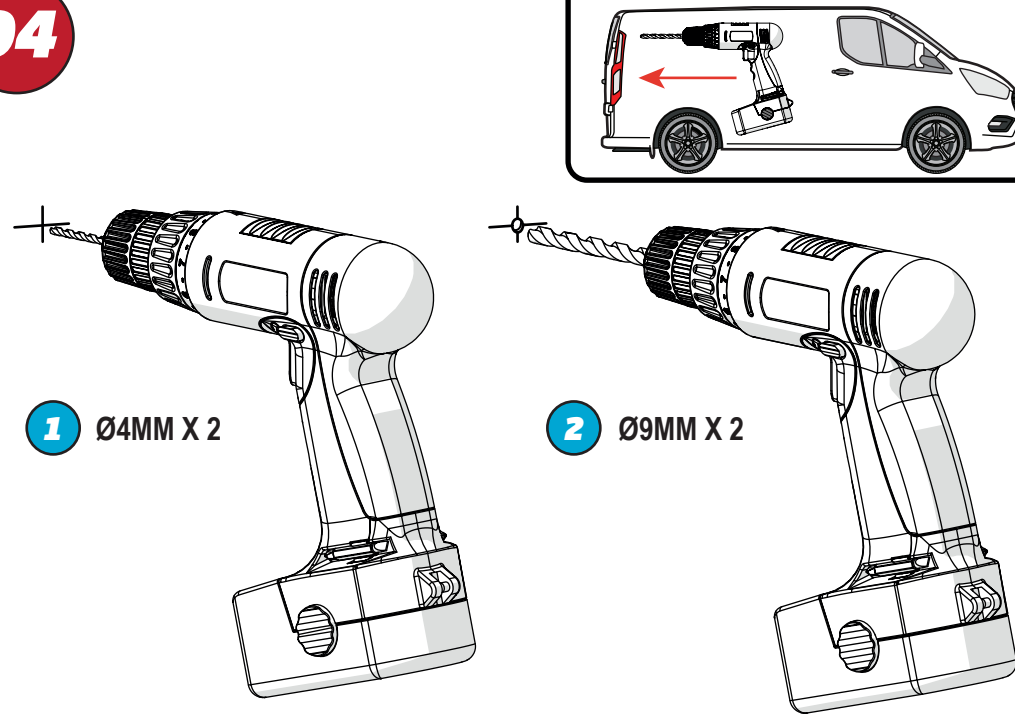


05



MA6201

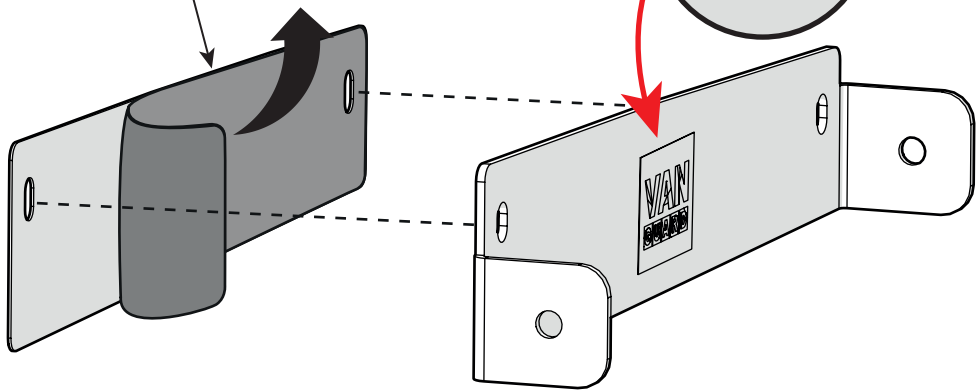

06

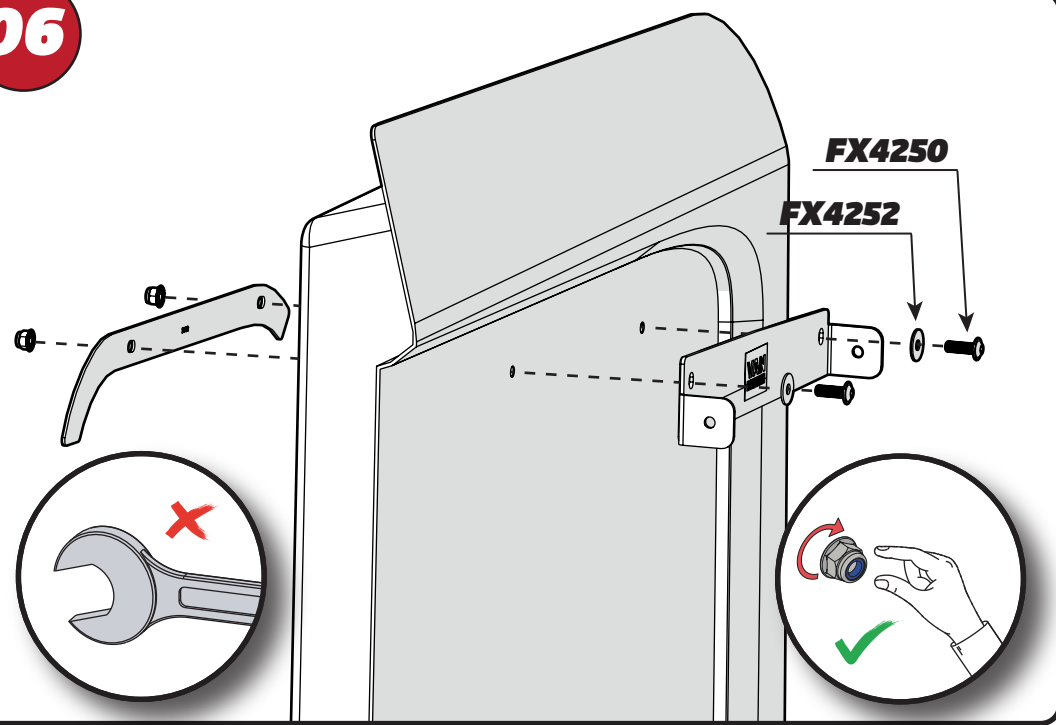


FX4250

FX4252


07

MA6200

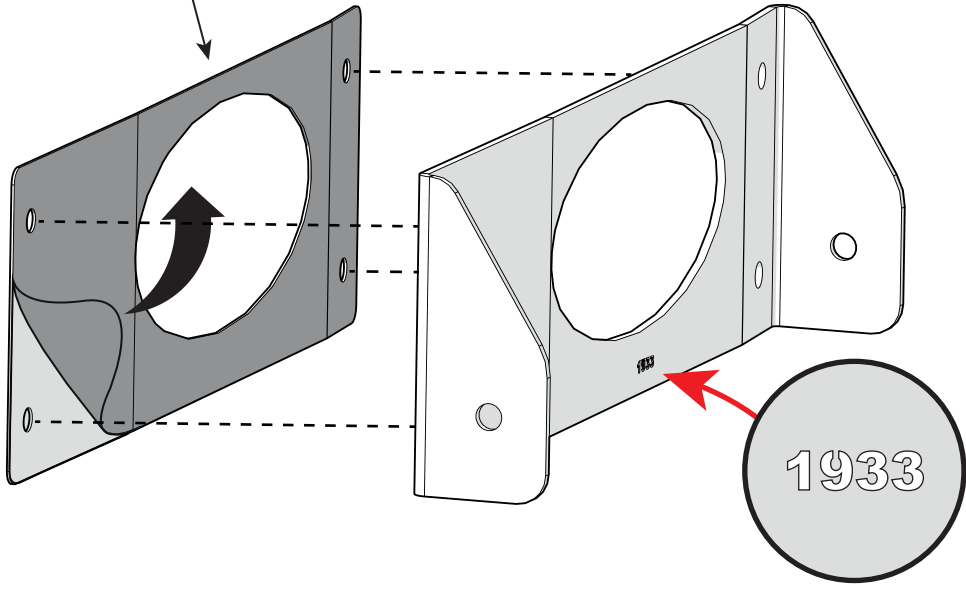

1933



08

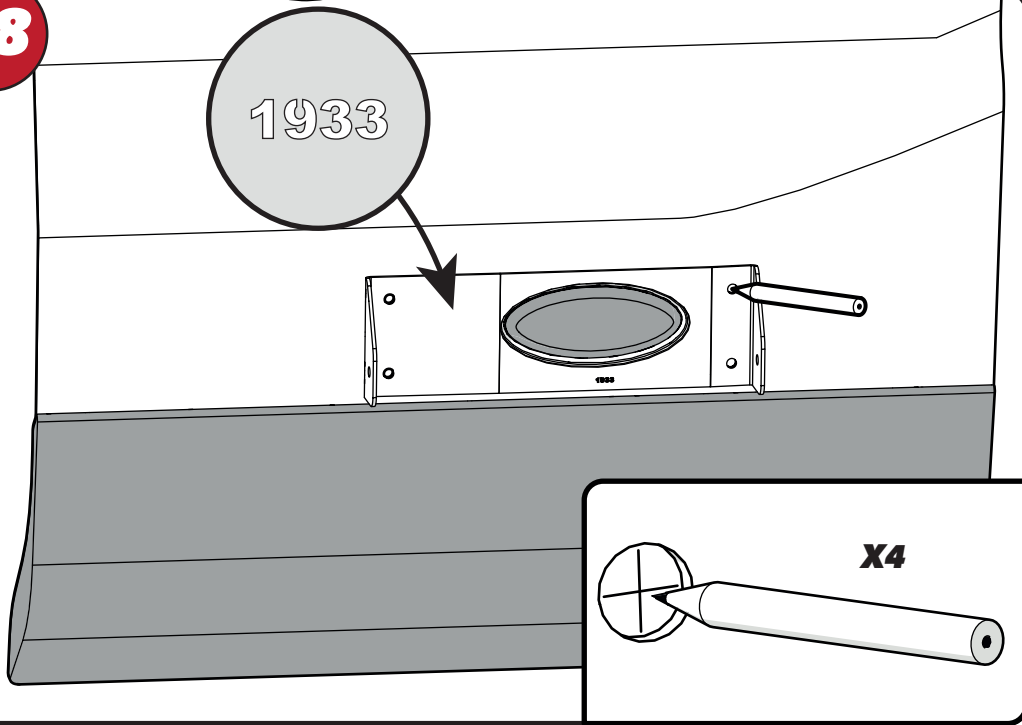


1933

X4

09

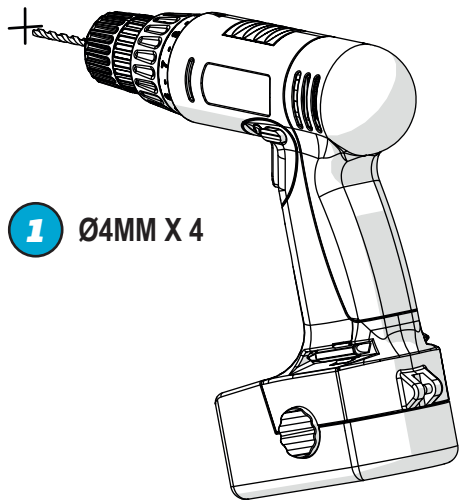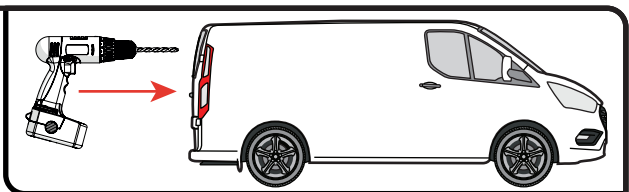

1 Ø4MM X 4

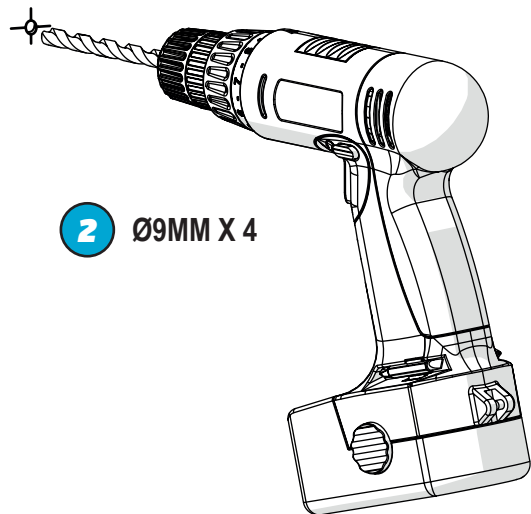


2 Ø9MM X 4


10




12Nm

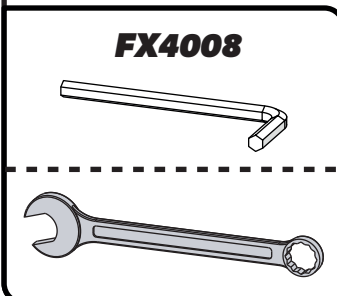

FX4008

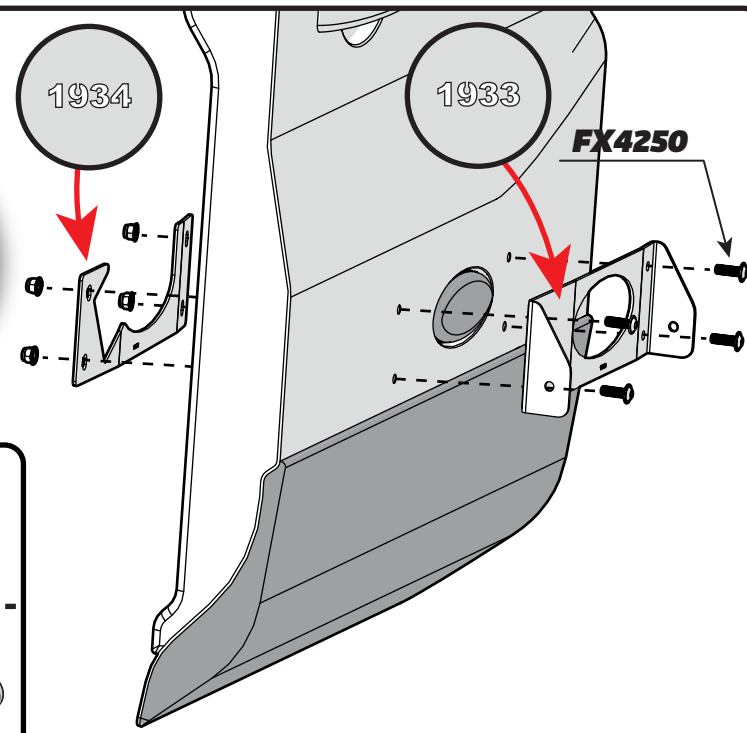


11

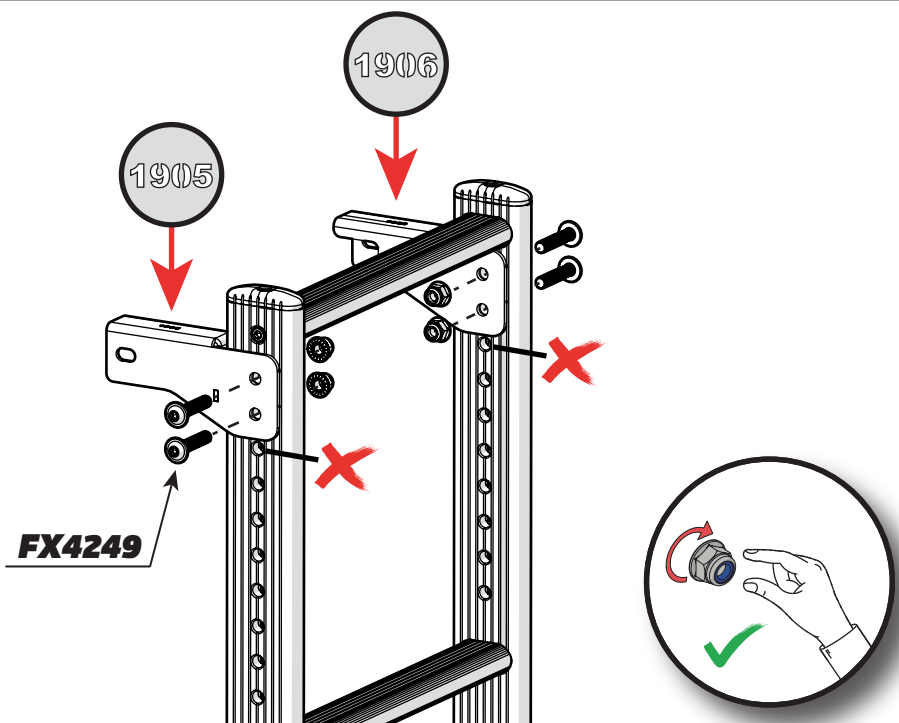


FX4249

12

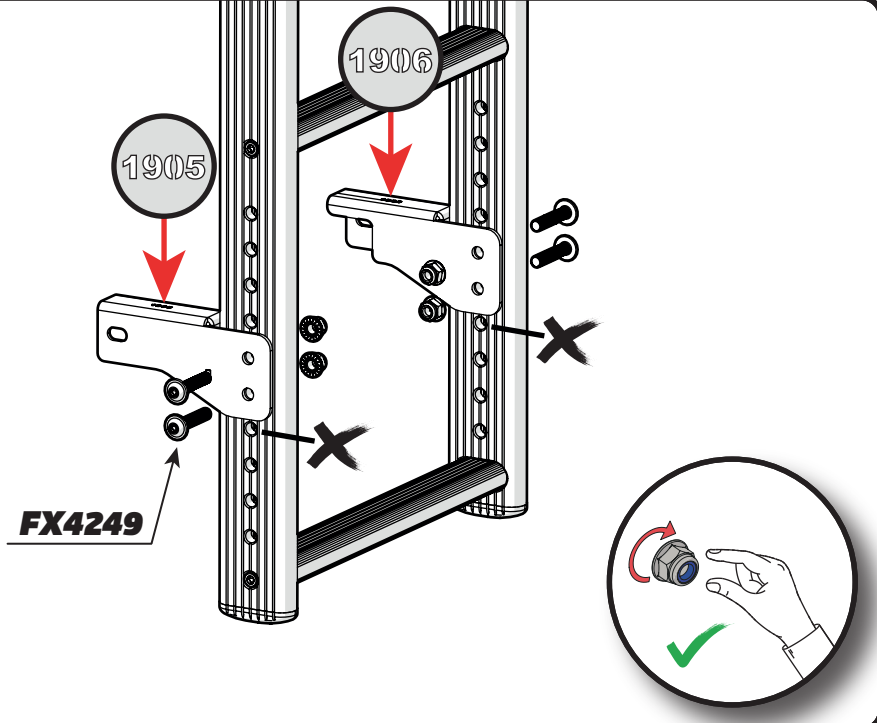


FX4249


13

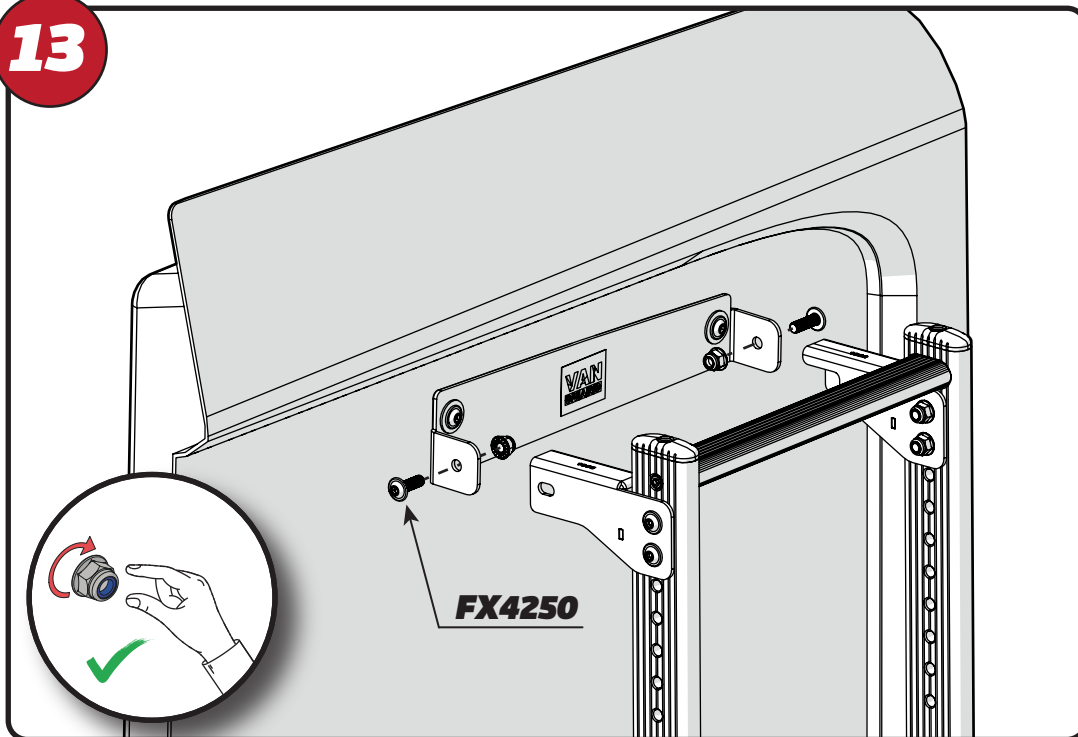


14

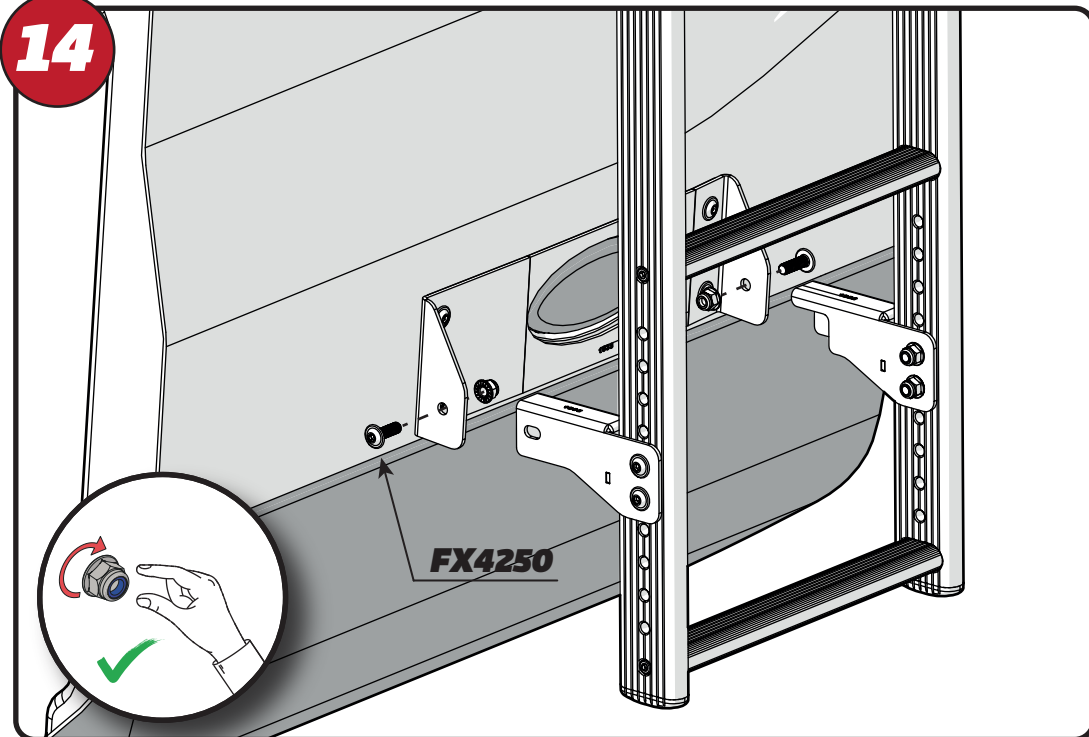


15

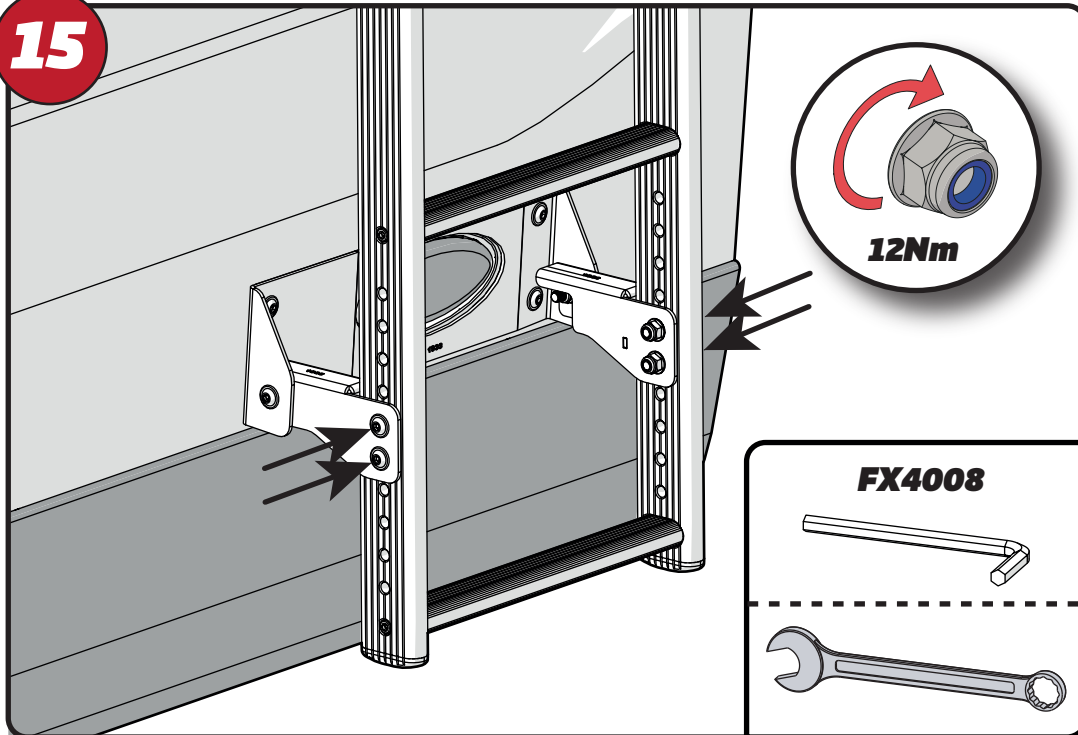



16

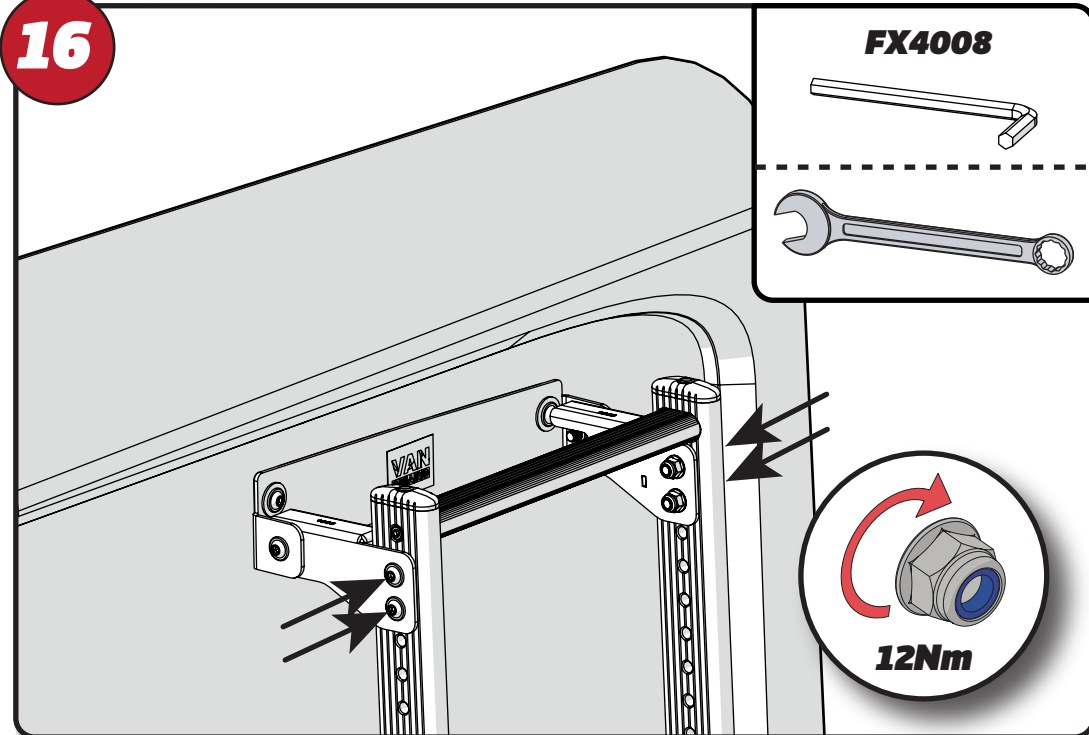


17

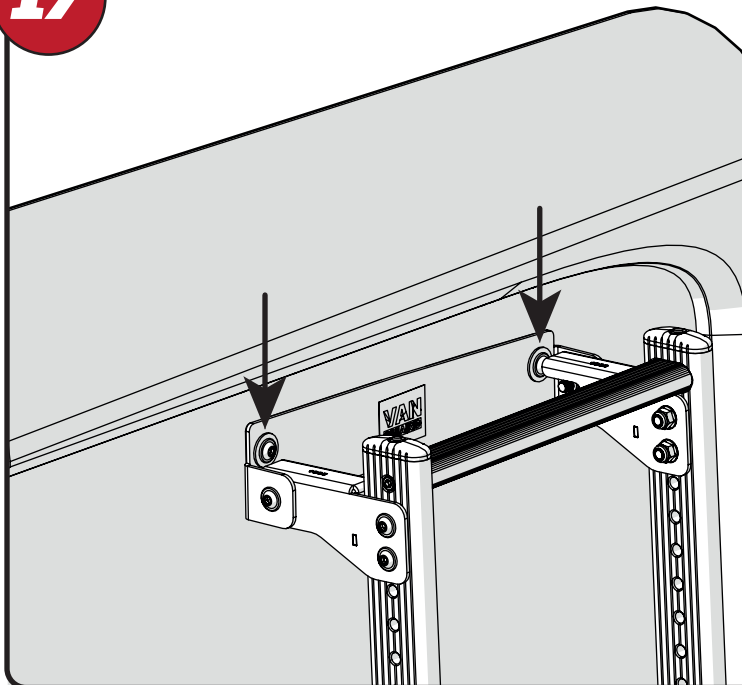


FX4008

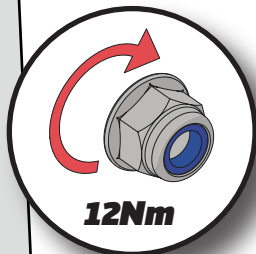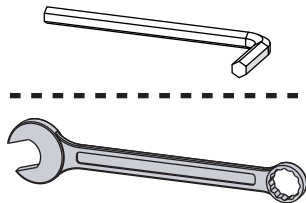


18

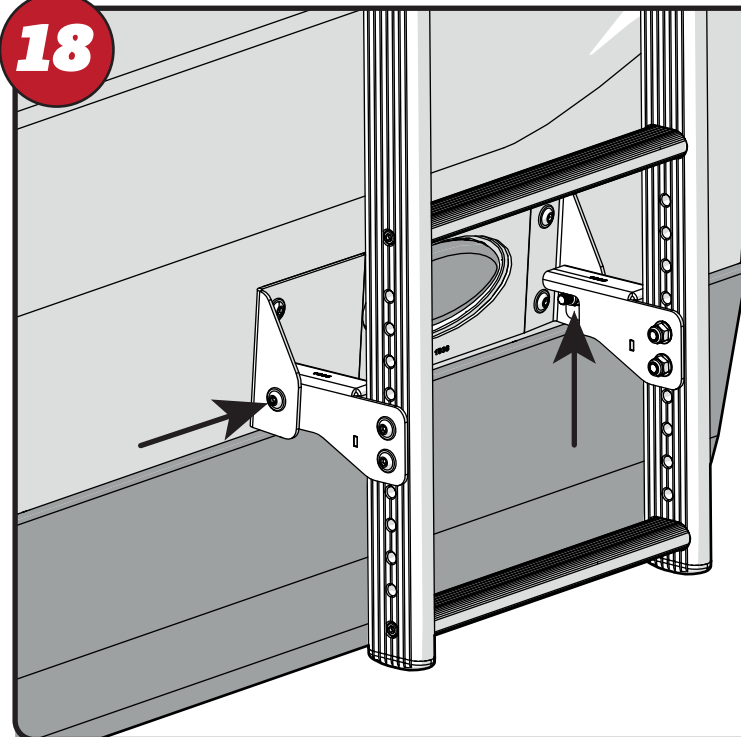



FX4008

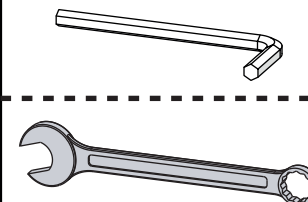


19

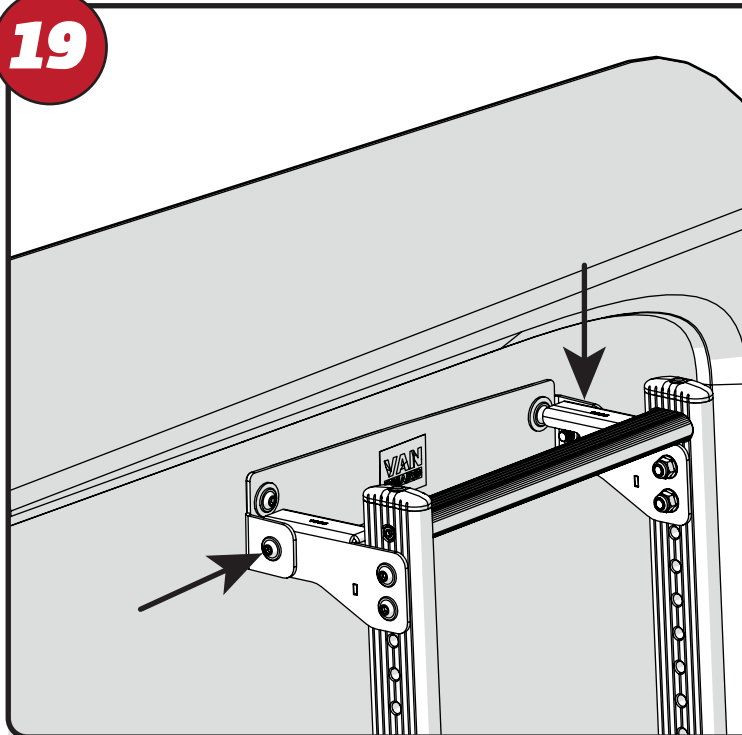

FX4008

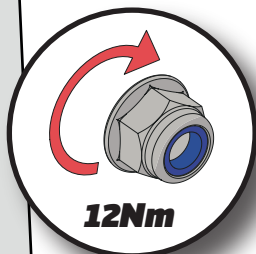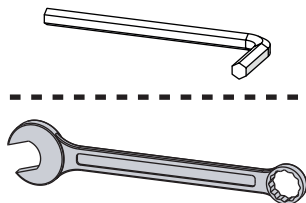


20

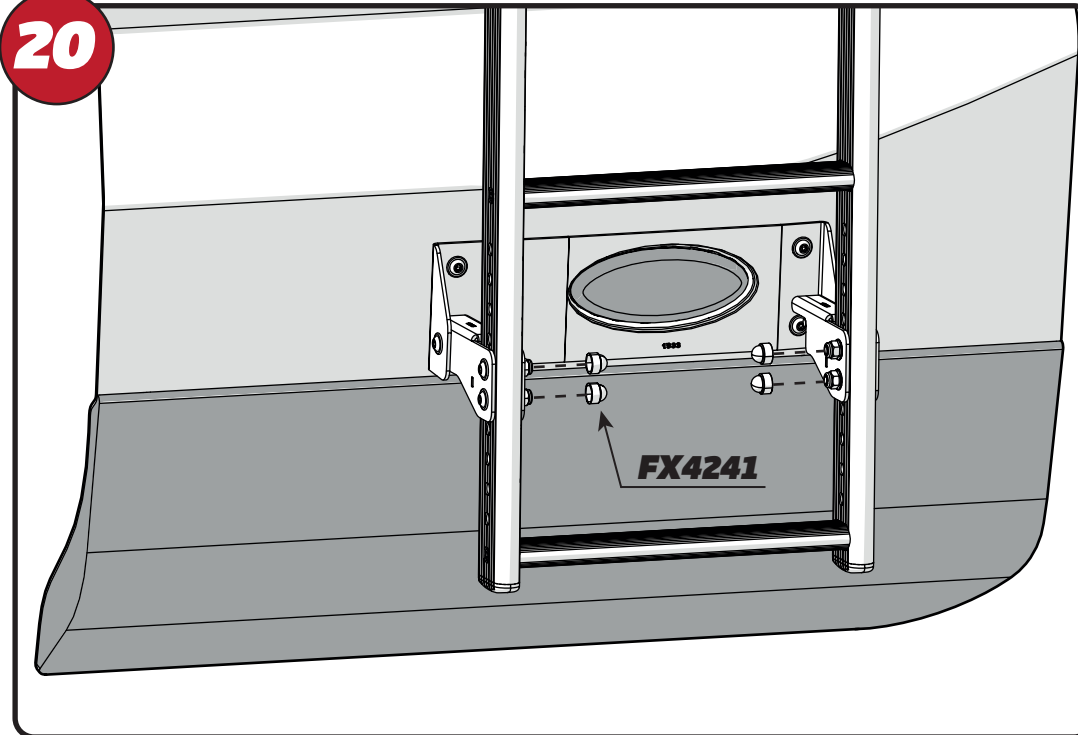

FX4241

21

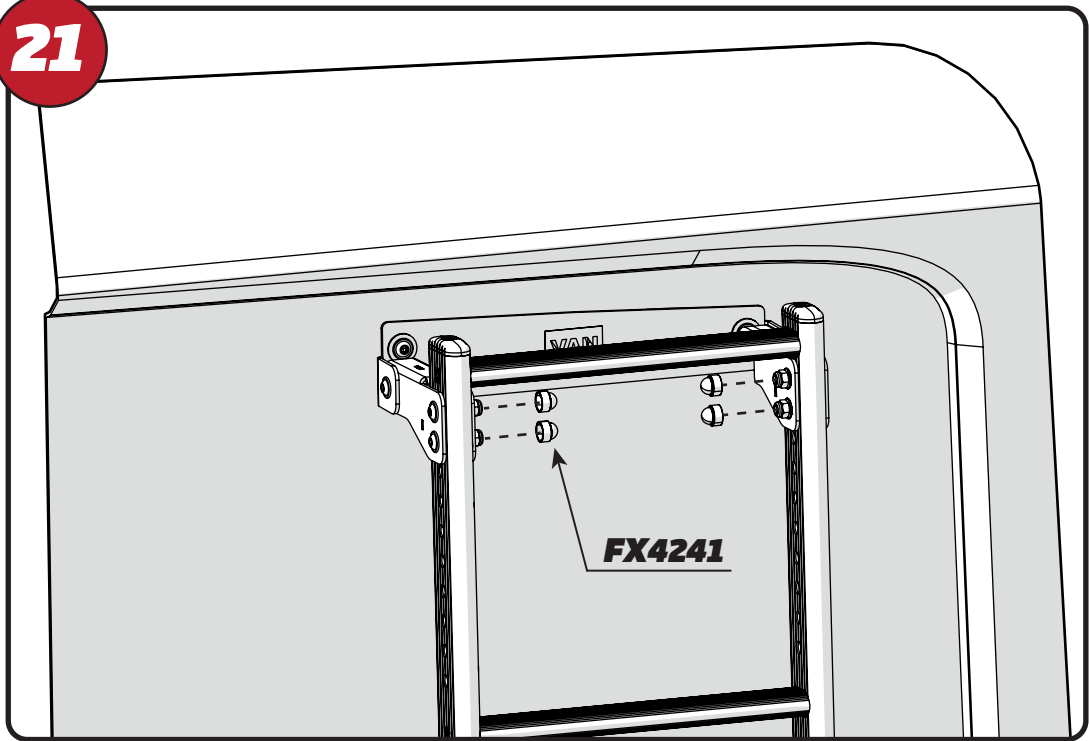

22

