


IN8419

ULTI Ladder

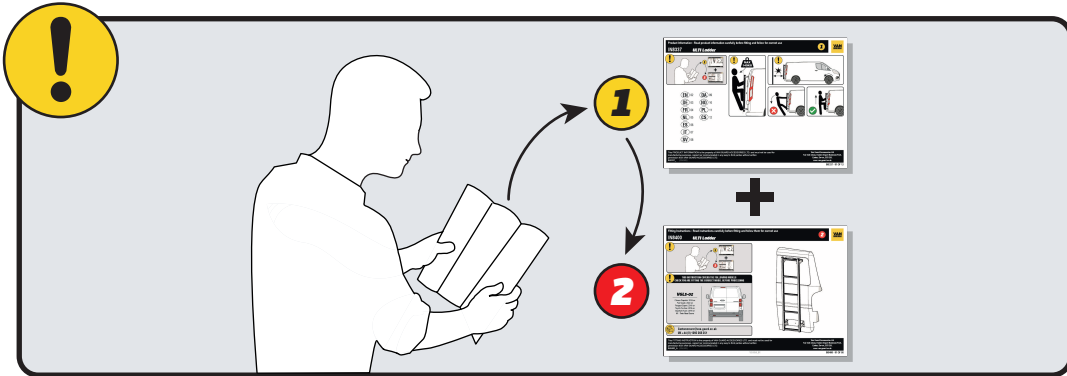


**! THIS INSTRUCTION COVERS THE FOLLOWING MODELS
CHECK YOU ARE FITTING THE CORRECT MODEL BEFORE PROCEEDING**

VGL5-08

Mercedes Vito: 2015 on
H1 - Twin Rear Doors




**? Customercare@van-guard.co.uk
UK +44 (0) 1392 368 351**

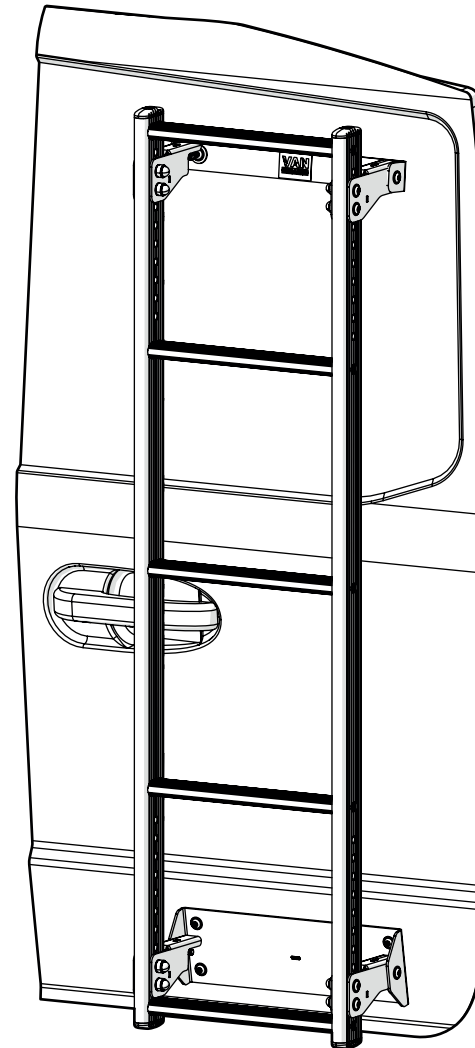


SUPPLIED COMPONENTS - CHECK ALL PARTS ARE PRESENT AND CORRECT BEFORE PROCEEDING

TOOLS REQUIRED


13MM X1

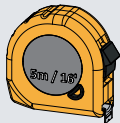

4MM X1

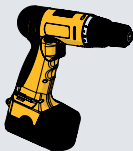


9MM X1

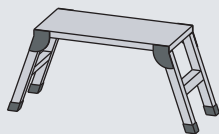

X1




AS3592 X1

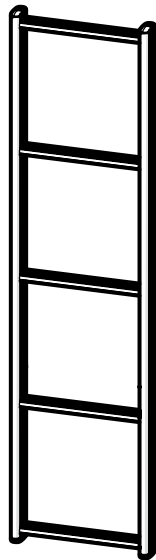


FX4249 X8

(M8X40)



FX4250 X10

(M8X25)




ME1944 X1




FX4240 X18


(M8)




FX4241 X8




ME1920 X1

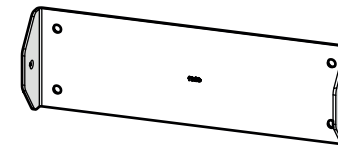


MA6200 X3



FX4252 X2

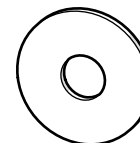


ME1951 X1




FX4008 X1




ME1906 X2

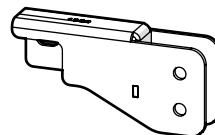


ME1905 X2

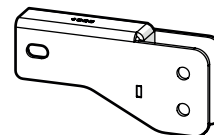


ME1924 X1

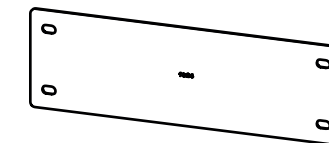


01

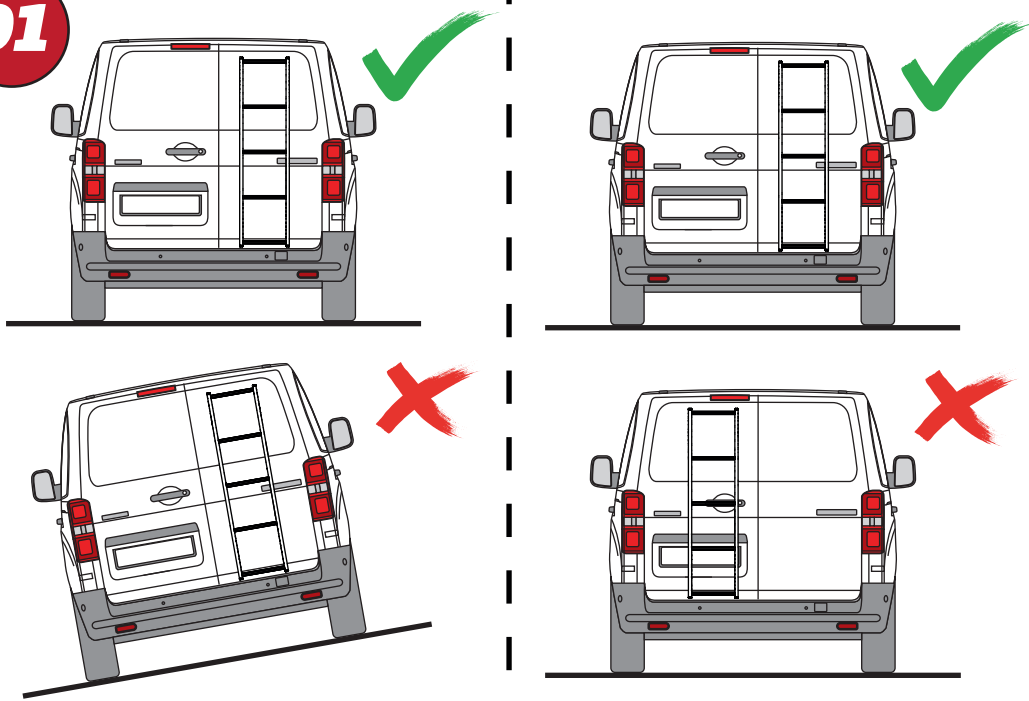


02

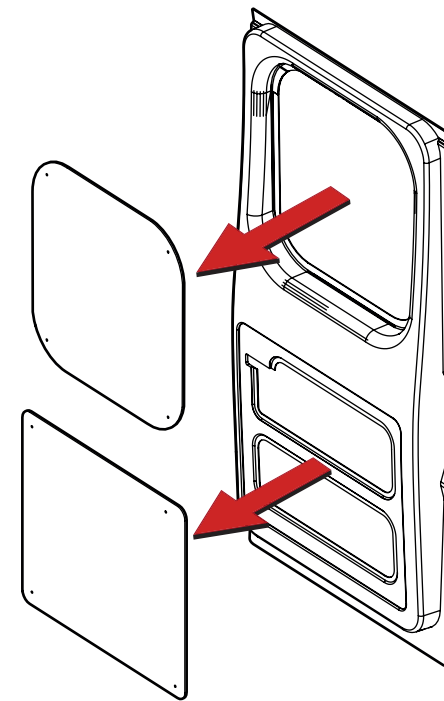

03

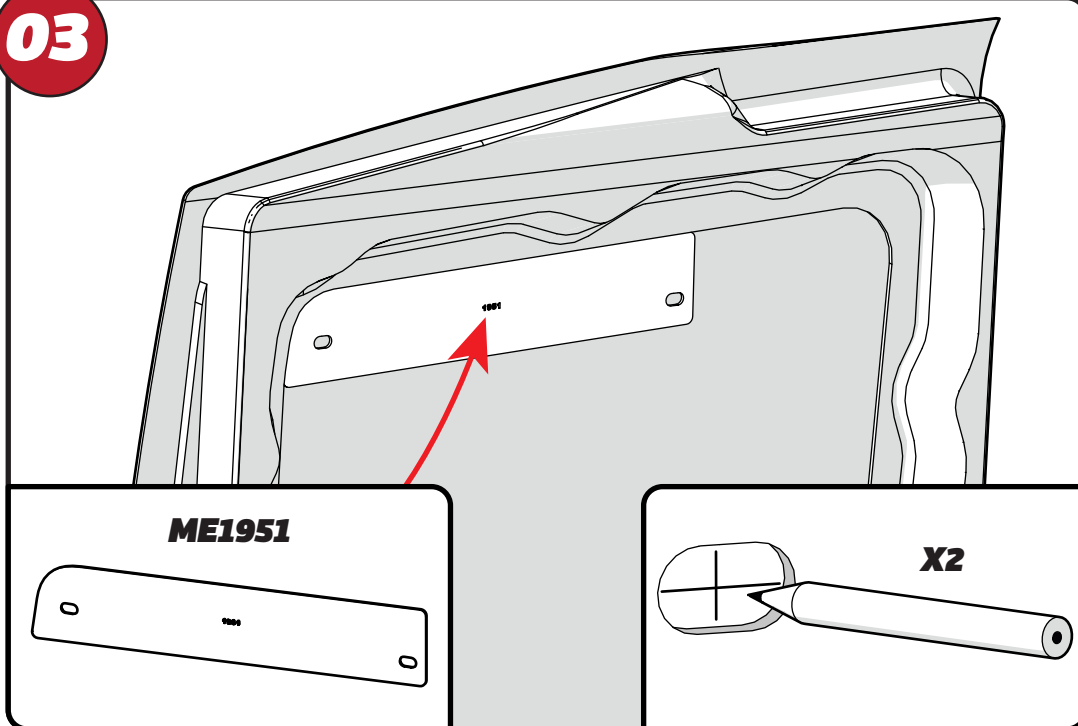


04

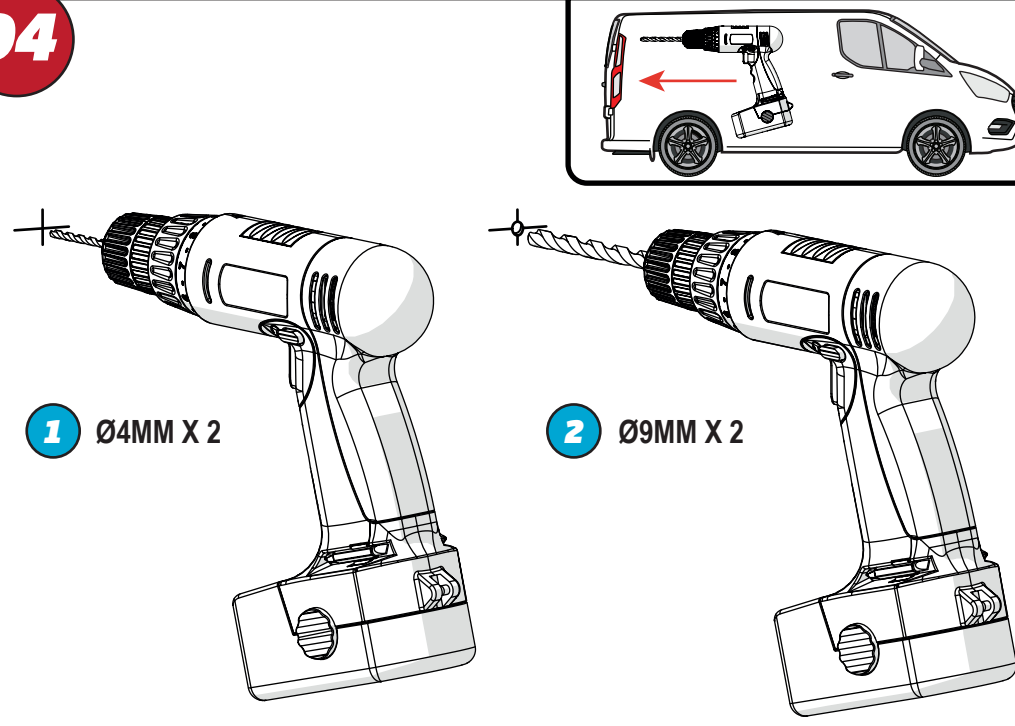

05


MA6200

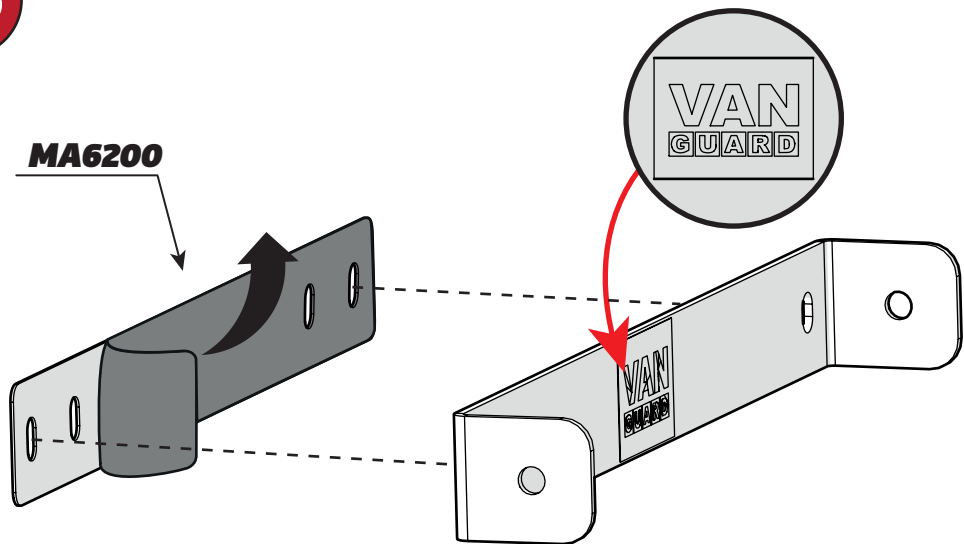

06


FX4250

FX4252

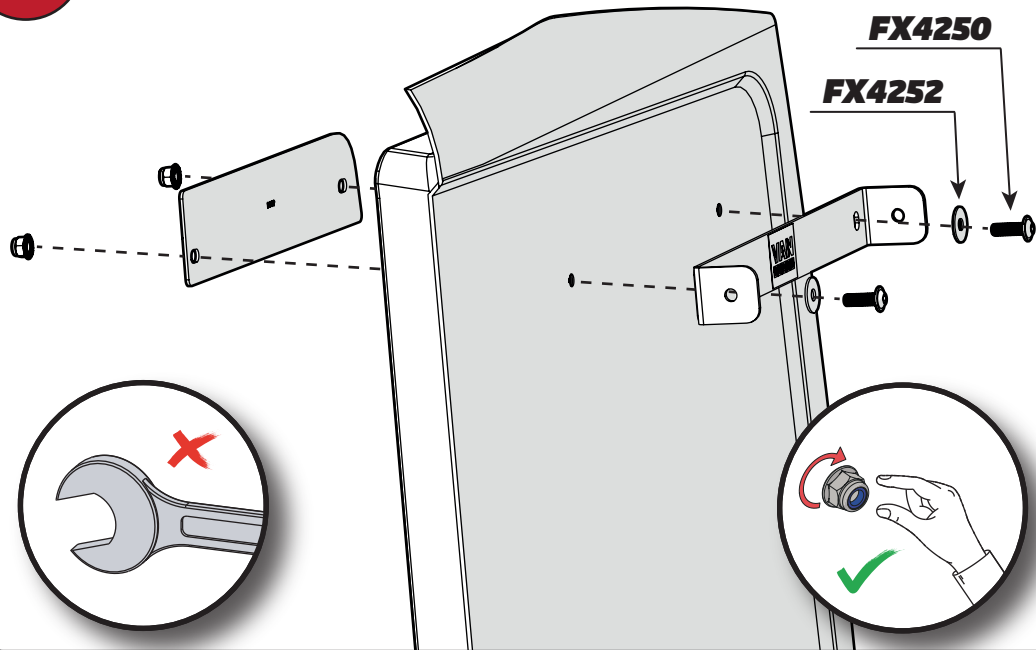



07

MA6200


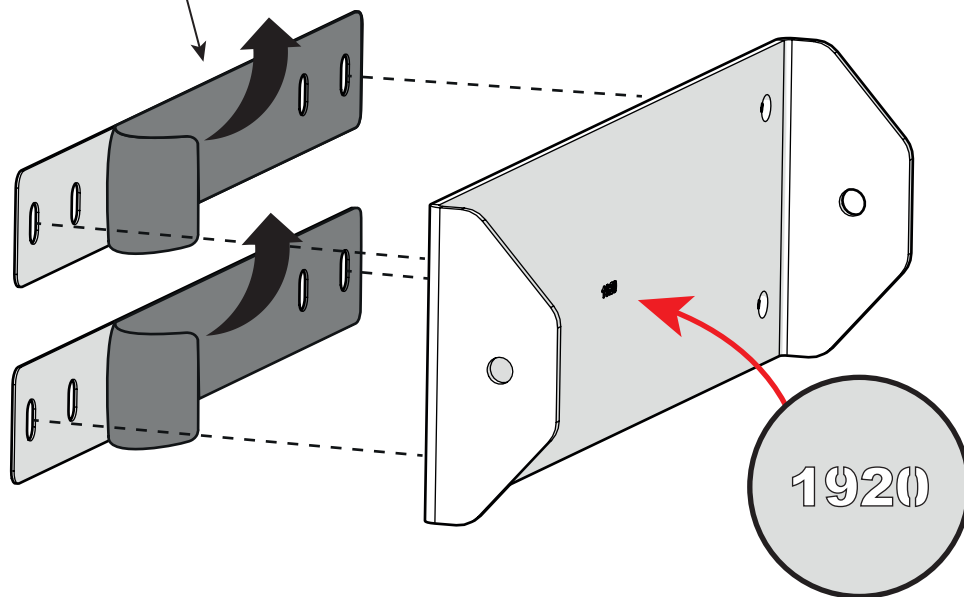


08




1920

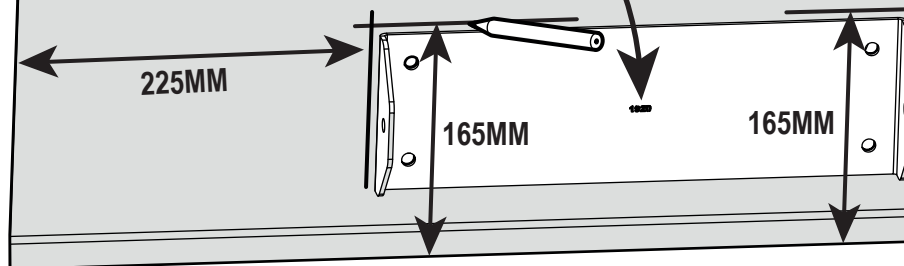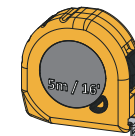


09

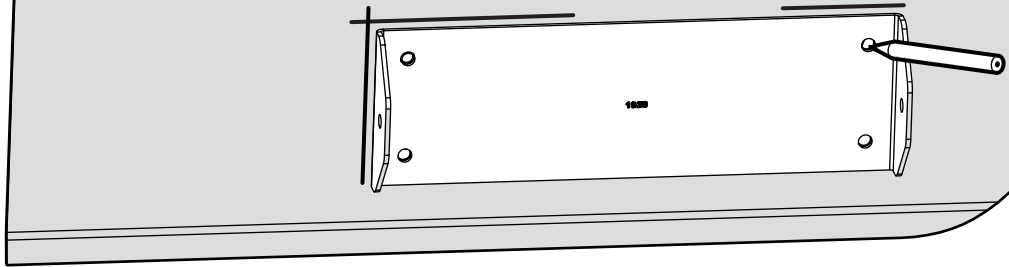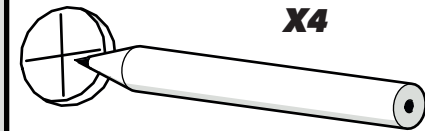


10

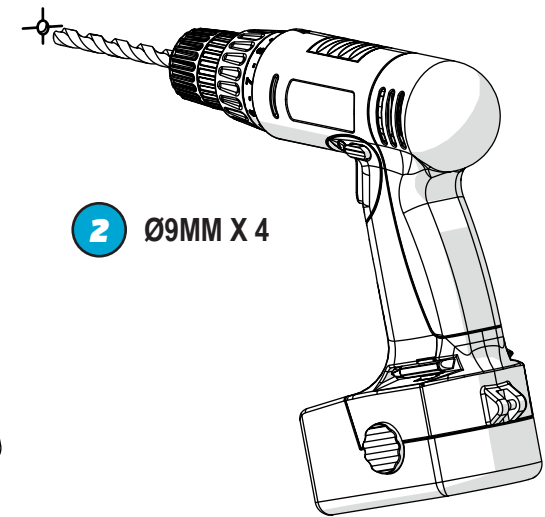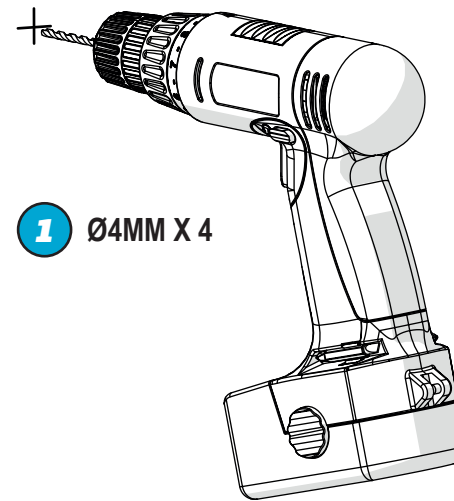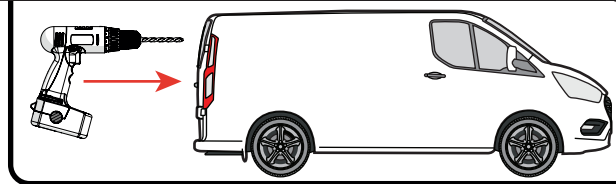


11

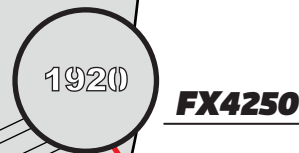

FX4250

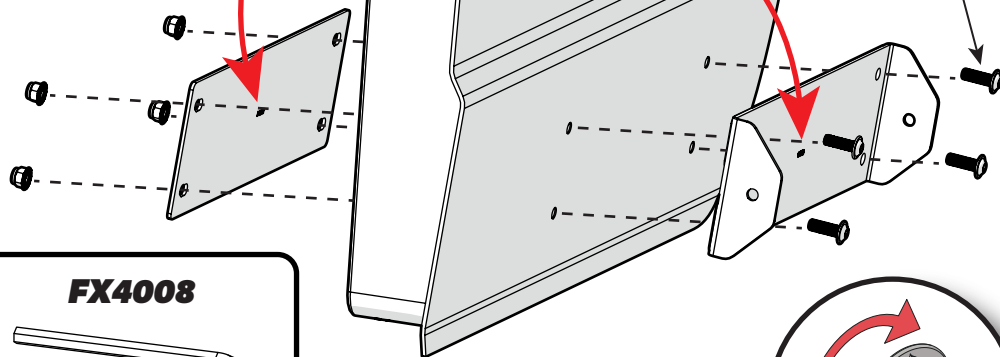



FX4008




12




FX4249

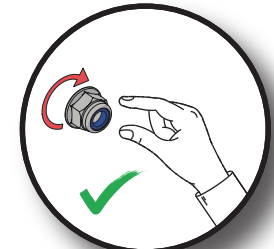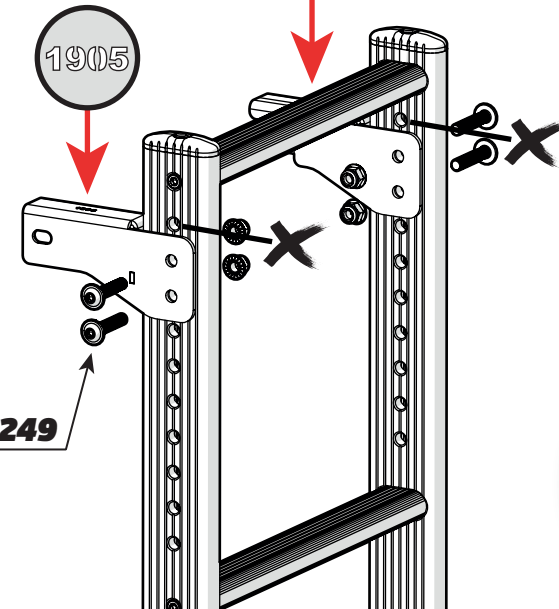


13

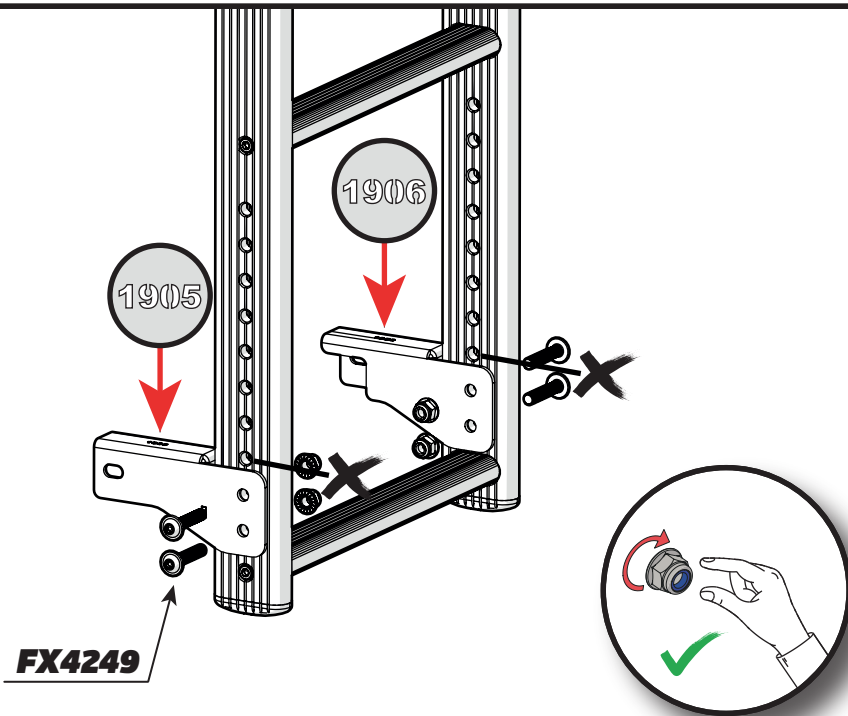


14

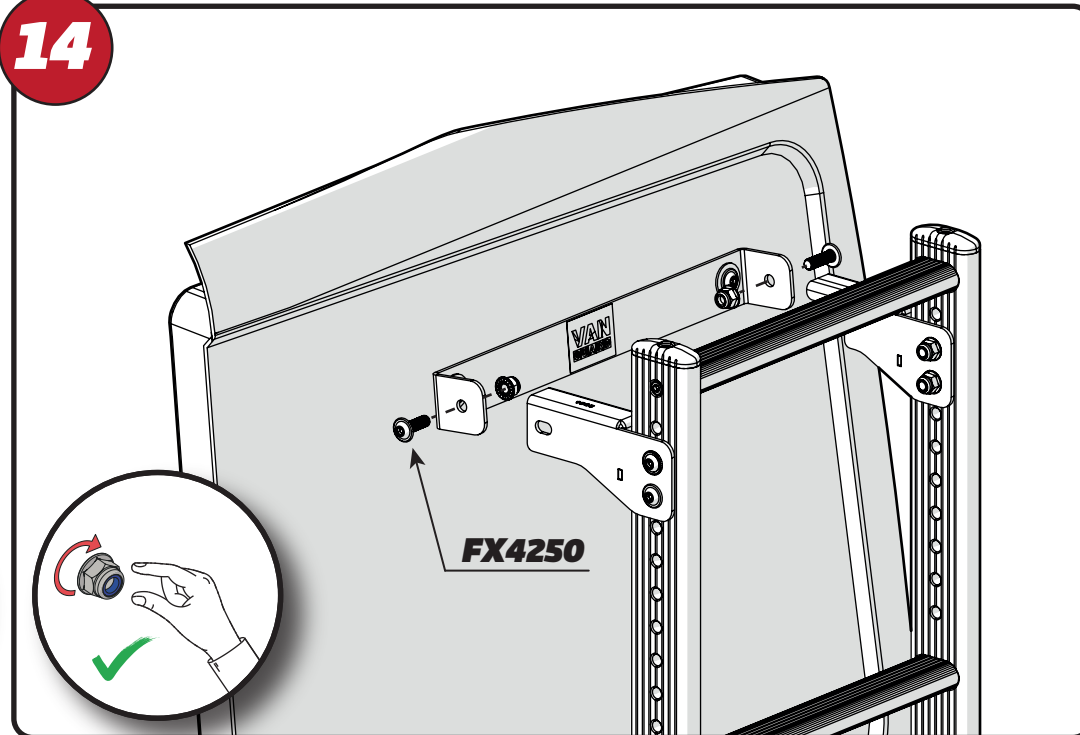




15

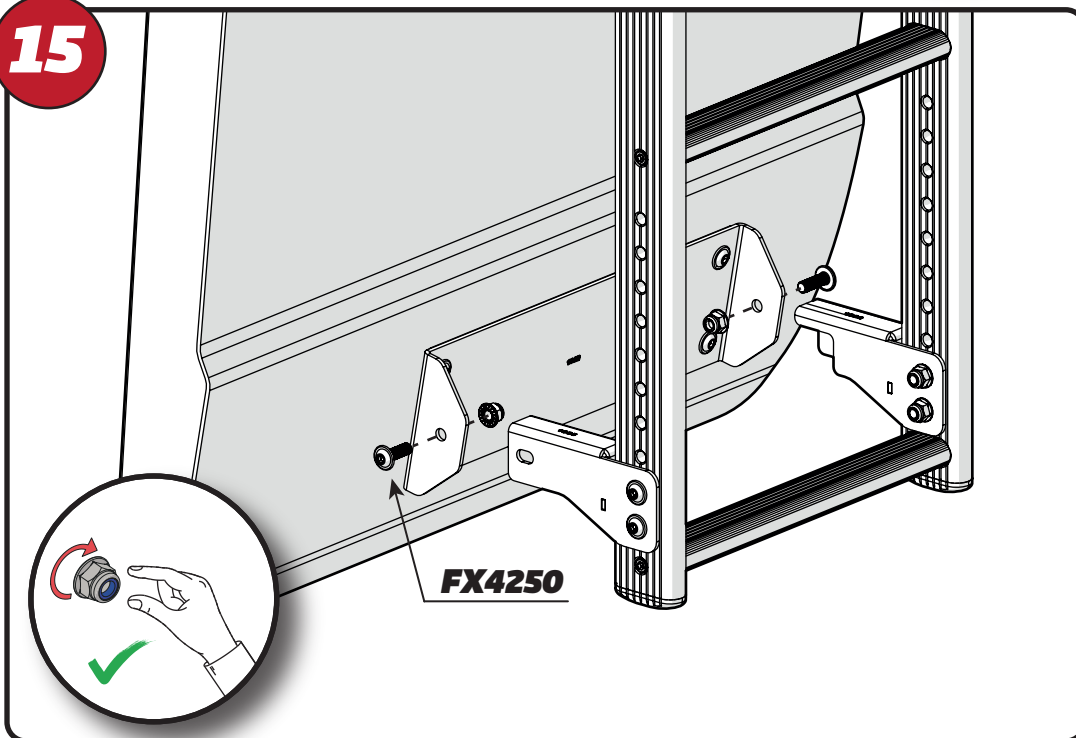



16

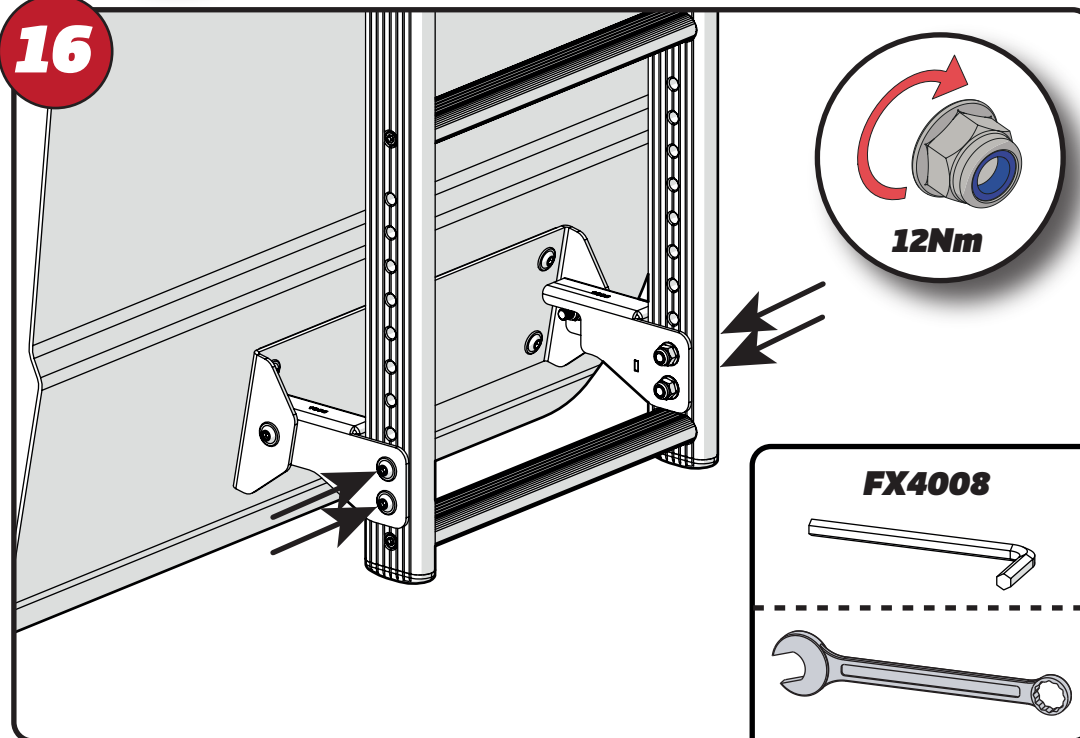




17

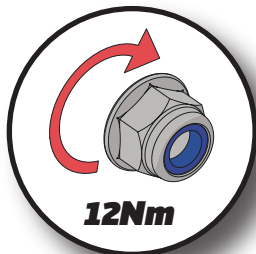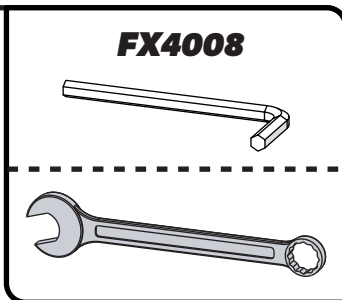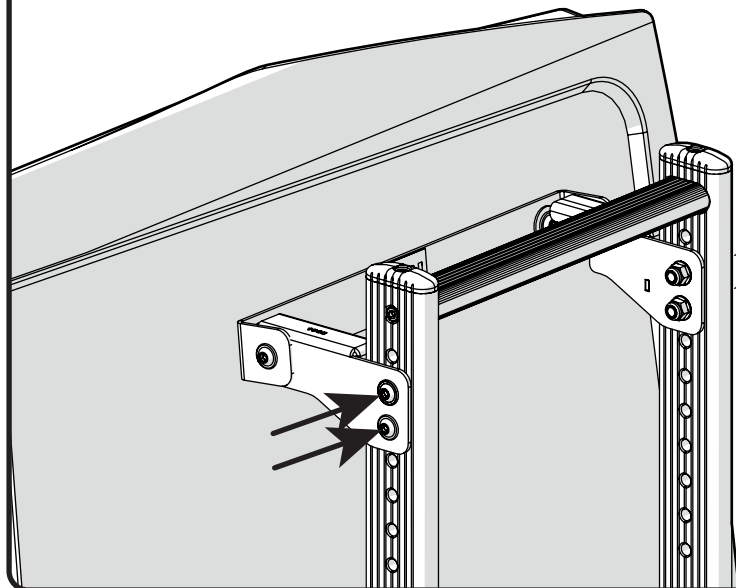



18

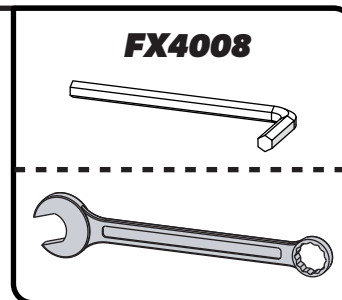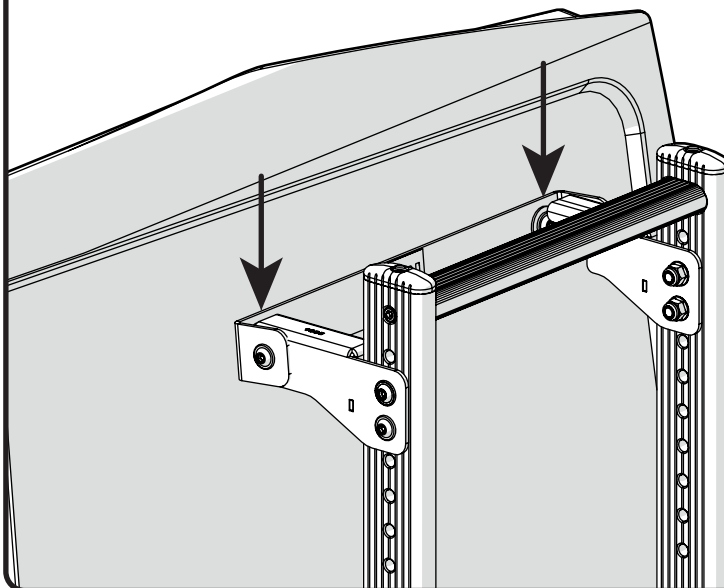


19

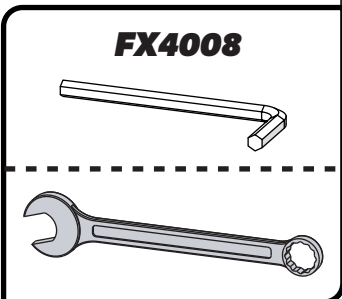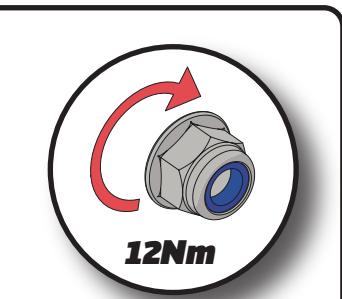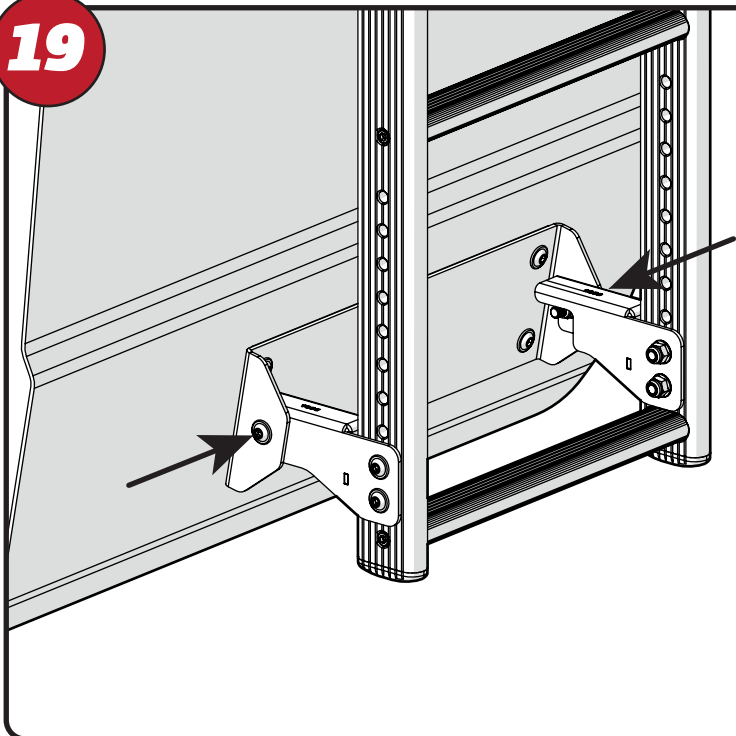


20

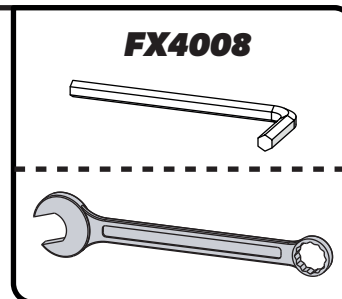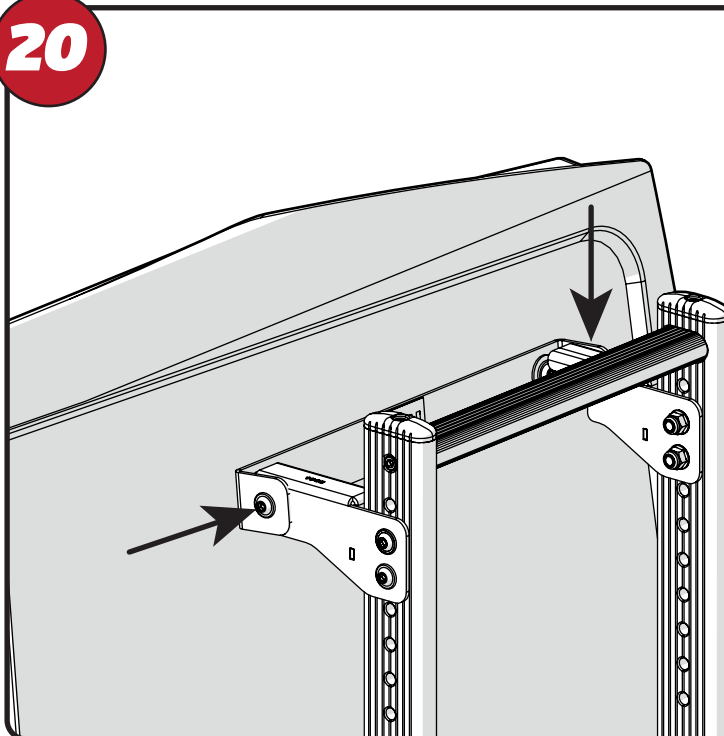

21

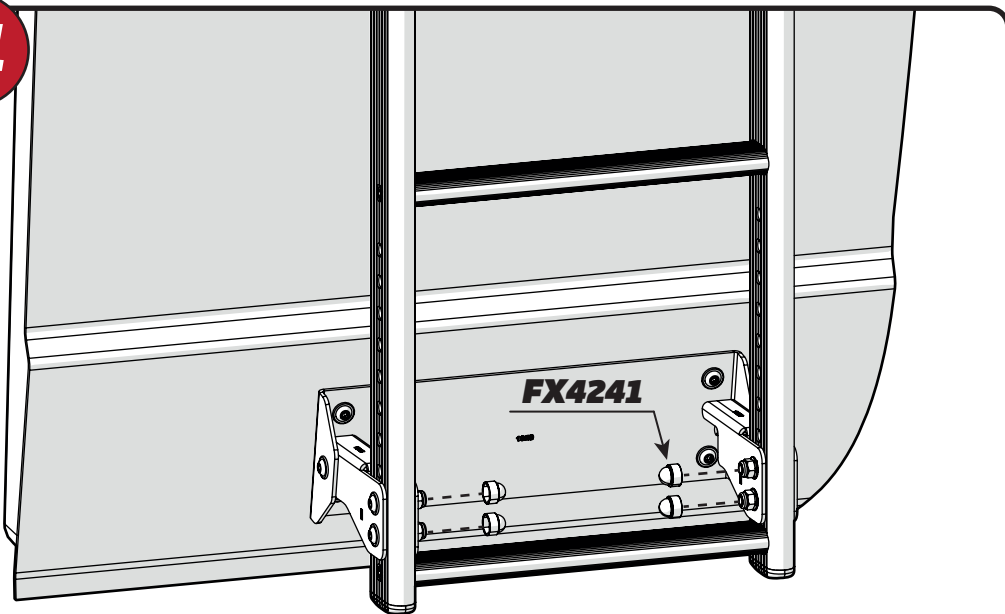

22

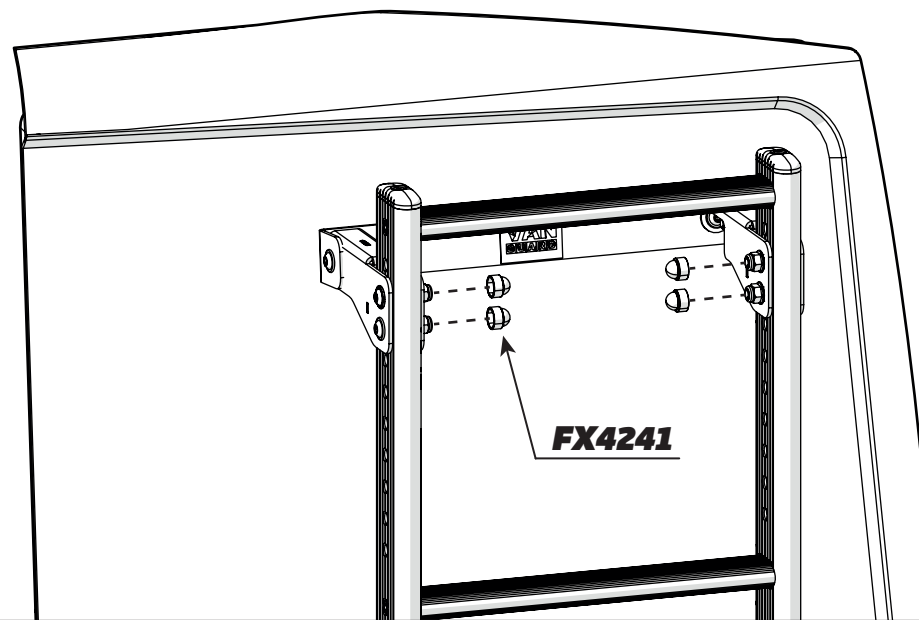

23

