

IN8280 ULTI Rack+

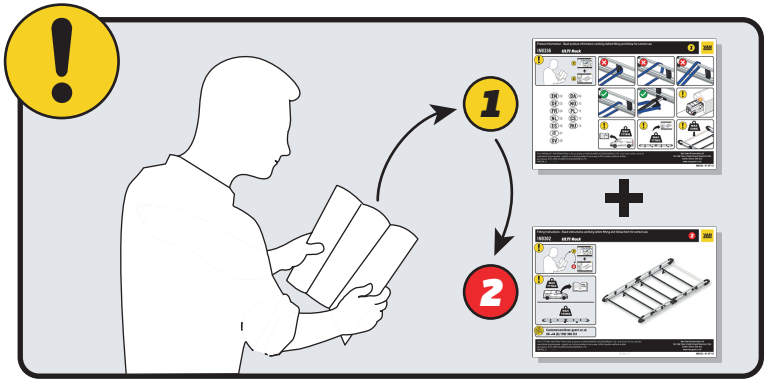

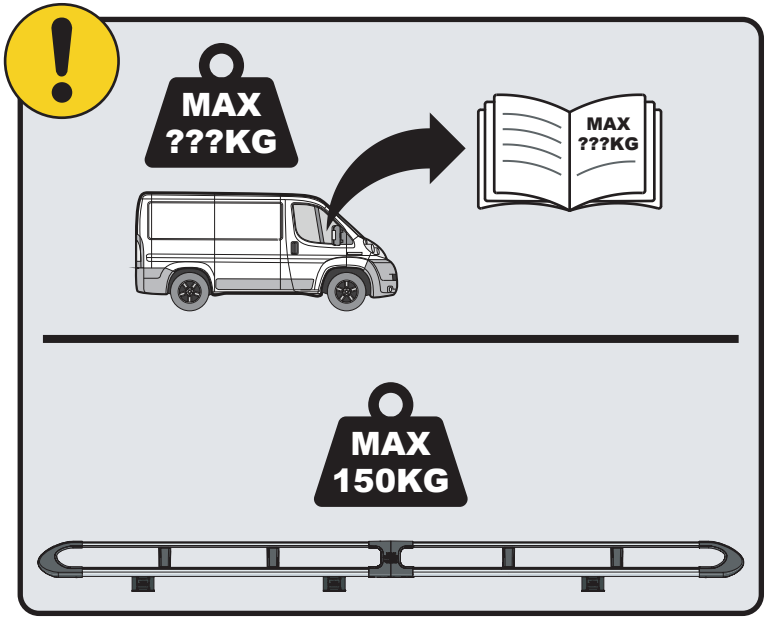



Customercare@van-guard.co.uk
UK +44 (0) 1392 368 351


This FITTING INSTRUCTION is the property of VAN GUARD ACCESSORIES LTD. and must not be used for manufacturing purposes, copied nor communicated in any way to third parties without written permission from VAN GUARD ACCESSORIES LTD.
IN8280_B (CN:00356)


Van Guard Accessories Ltd
Fair Oak Close, Exeter Airport Business Park,
Exeter, Devon, EX5 2UL
www.van-guard.co.uk

THIS INSTRUCTION COVERS THE FOLLOWING MODELS - CHECK YOU ARE FITTING THE CORRECT MODEL BEFORE PROCEEDING

VGUR-209

Citroen Relay: 2006 on
Fiat Ducato: 2006 on
Peugeot Boxer: 2006 on
Vauxhall Movano: 2022 on
L1H1
Twin Rear Doors

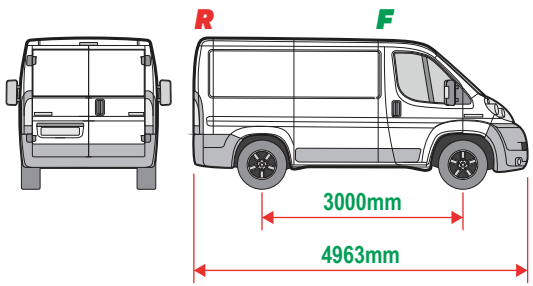

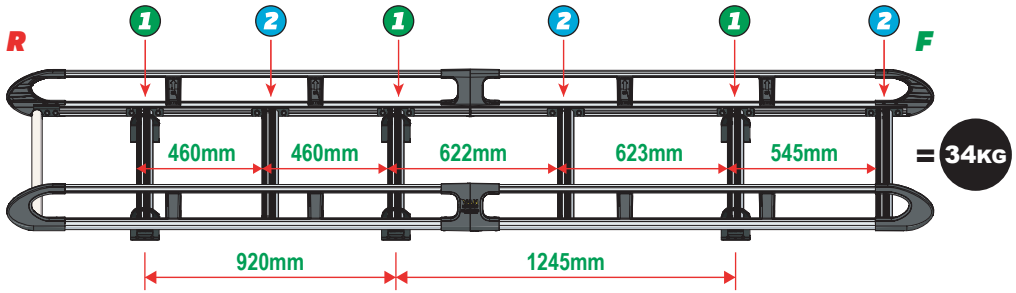

SUPPLIED COMPONENTS - CHECK ALL PARTS ARE PRESENT AND CORRECT BEFORE PROCEEDING (1 OF 2)

TOOLS REQUIRED


10MM X2






13MM X1



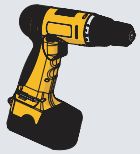


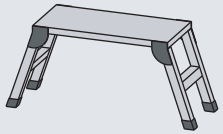






AS3543 X2
(3200 / A)

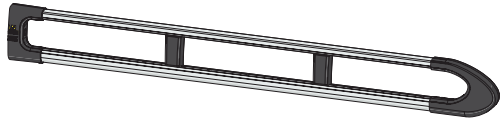


MA6118 X12




FX4241 X28



ME1622 X3




AS3542 X2
(3200 / B)

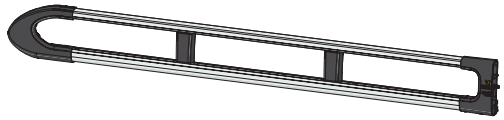


FX4008 X1




MA6145 X1




ME1623 X3



ME1628 X6
(1554mm)




FX4001 X2
(M8X40)




FX4235 X24
(M5X25)



ME0203 X6




AS3160 X1
(1540mm)




MA6007 X4




FX4248 X1
(T25)




MA6065 X6

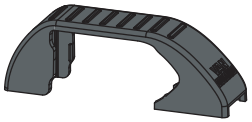


AS3590 X1

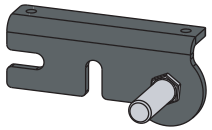


MA6093 X12



FX4239 X28
(M8X20)




ME1620 X3




FX4016 X18
(M6)



AS3591 X1




ME0316 X14




FX4240 X28
(M8)



ME1621 X3




FX4042 X12
(M6X16)



SUPPLIED COMPONENTS - CHECK ALL PARTS ARE PRESENT AND CORRECT BEFORE PROCEEDING (2 OF 2)

ME0671 X6

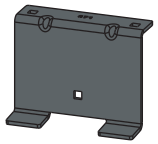

ME0010 X6




FX4015 X6
(M6X30)




MA6016 X12

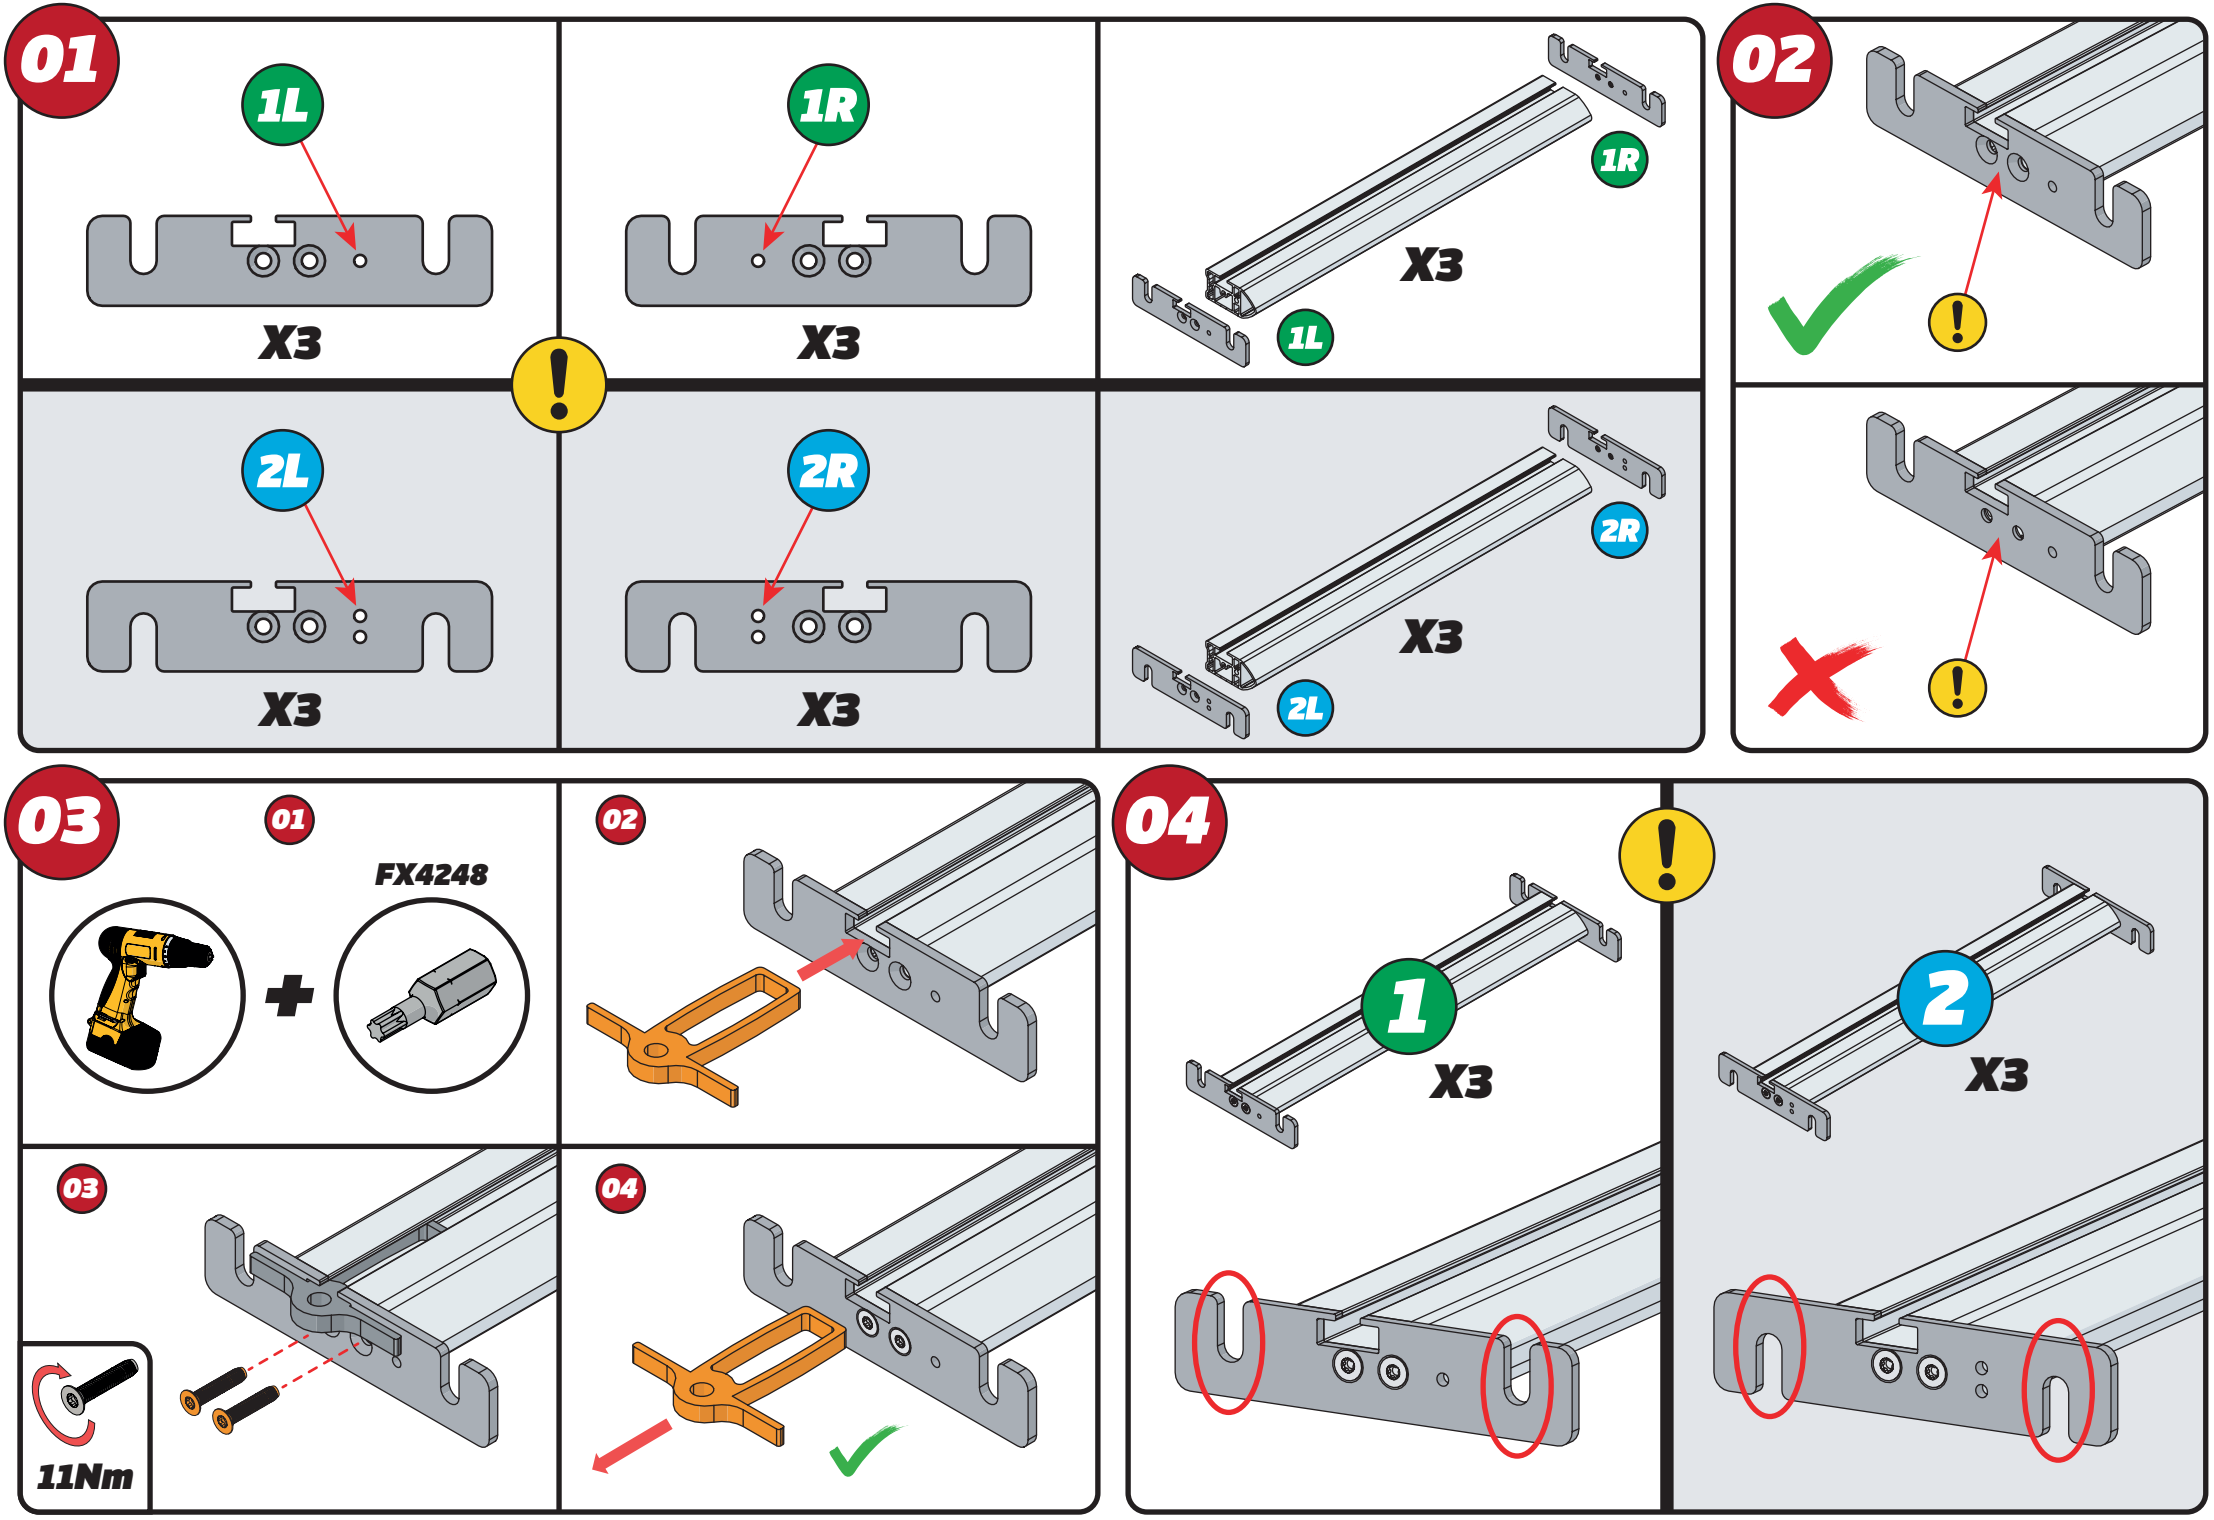



01
1L
X3
1R
X3
1R
X3
1L
2L
X3
2R
X3
2R
X3
2L
02
03
01
FX4248
02
03
11Nm
04
04
1
X3
2
X3

05

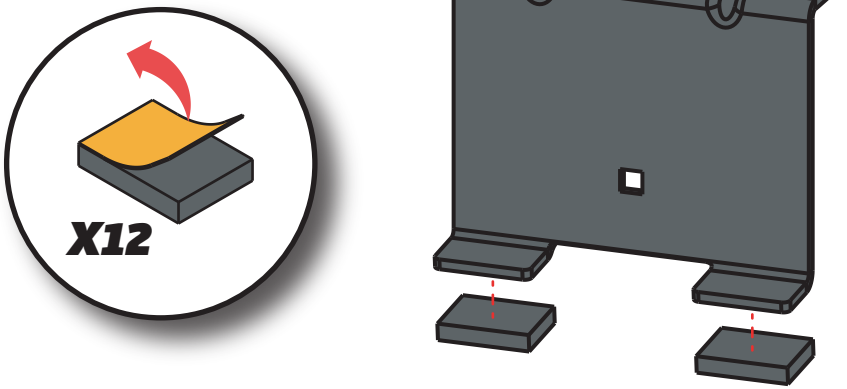


EN - STICK GASKETS TO ALL BRACKETS
DE - KLEBEN SIE DIE DICHTUNG AN ALLEN HALTERUNGEN
FR - COUSSINETS ADHÉSIFS À TOUS LES SUPPORTS
NL - PLAK PAKKING OP ALLE BEUGELS
ES - PEGA LAS ALMOHADILLAS A TODOS LOS SOPORTES
IT - ADESIVI GUARNIZIONI A TUTTE LE STAFFE
SV - FÄST GUMMI PÅ ALLA FÄSTEN
DA - KLÆB GUMMI PÅ ALLE BESLAG
NO - PLIST GUMMI PÅ ALLE BRAKKETTER
PL - NAKLEJ USZCZELKI DO WSZYSTKICH WSPORNIKÓW
CS - PŘILEPTE TĚSNĚNÍ NA VŠECHNY DRŽÁKY


06

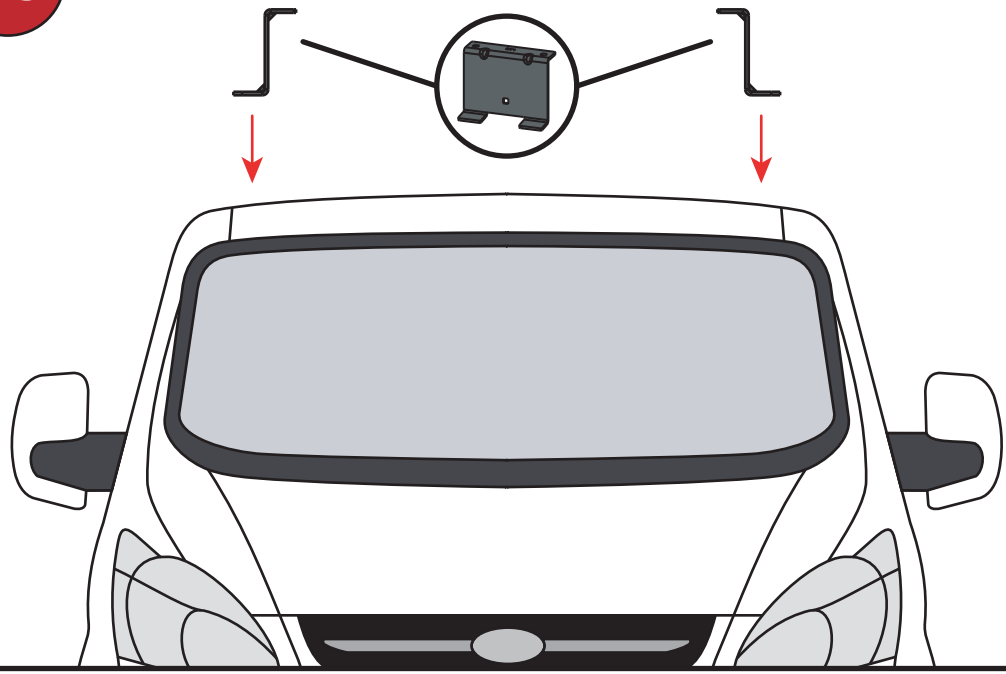


07

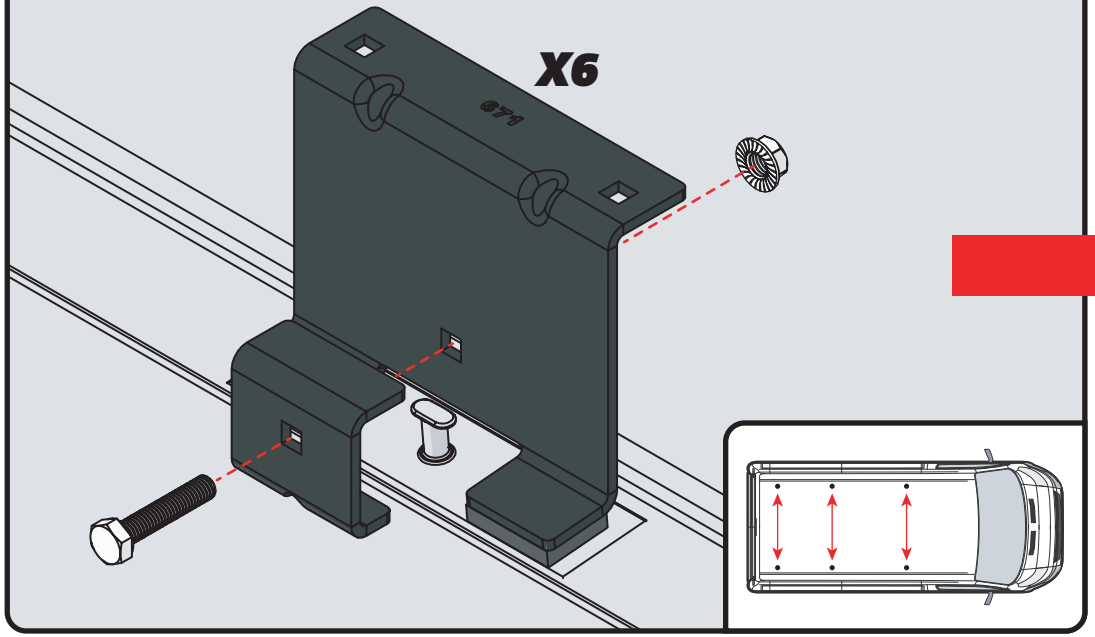


08

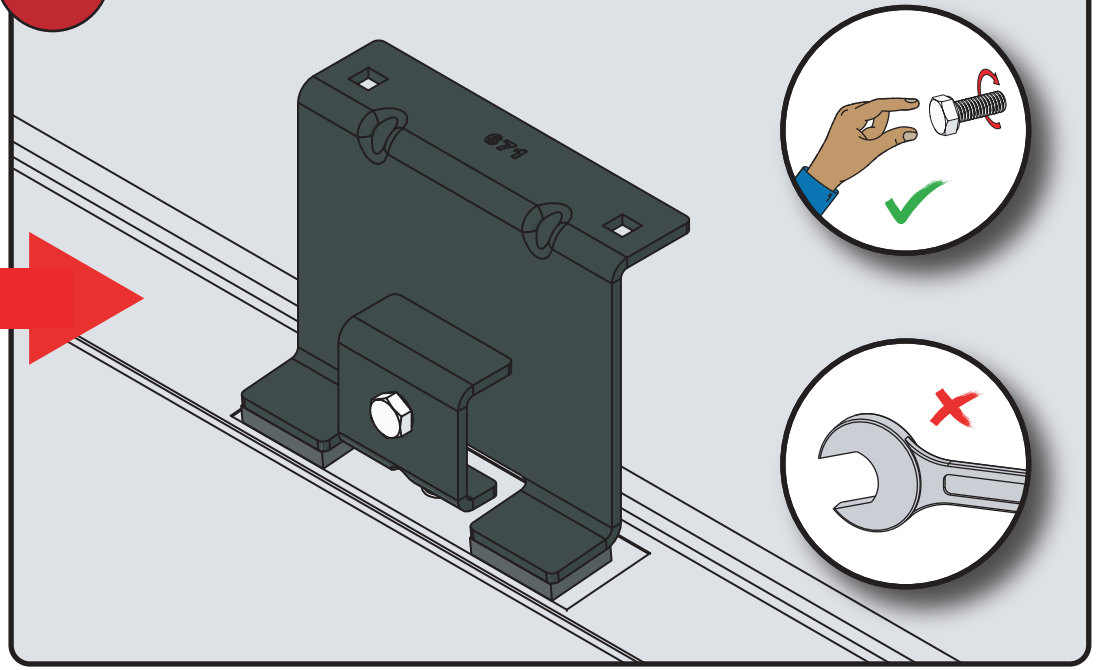

09

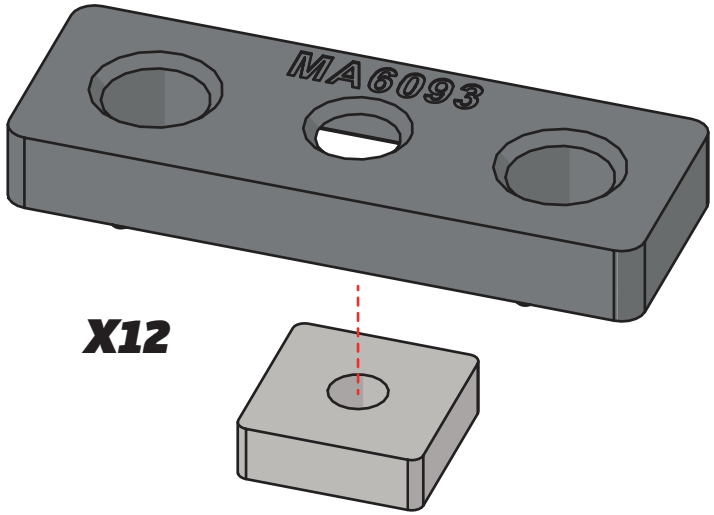


10

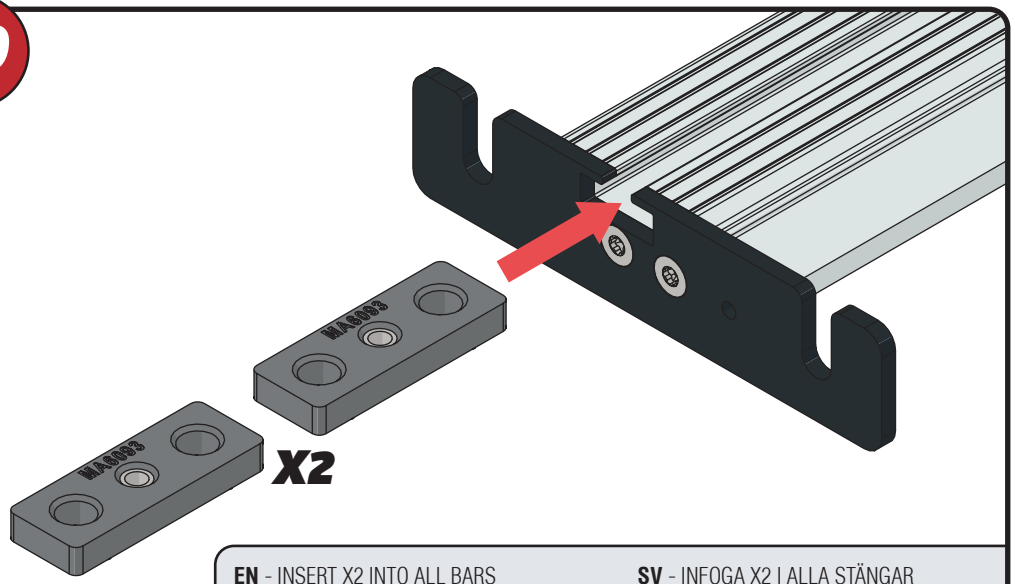


EN - INSERT X2 INTO ALL BARS
DE - X2 IN ALLE STANGEN EINFÜGEN
FR - INSÉRER X2 DANS TOUTES LES BARRES
NL - PLAATS X2 IN ALLE BARS
ES - INSERTAR X2 EN TODAS LAS BARRAS
IT - INSERIRE X2 IN TUTTE LE BARRE
SV - INFOGA X2 I ALLA STÄNGAR
DA - INDSÆT X2 I ALLE STÆNGER
NO - SETT X2 INN I ALLE TAKSTENGER
PL - WSTAW X2 DO WSZYSTKICH PRĘTÓW
CS - VLOŽTE X2 DO VŠECH TYČÍ


11

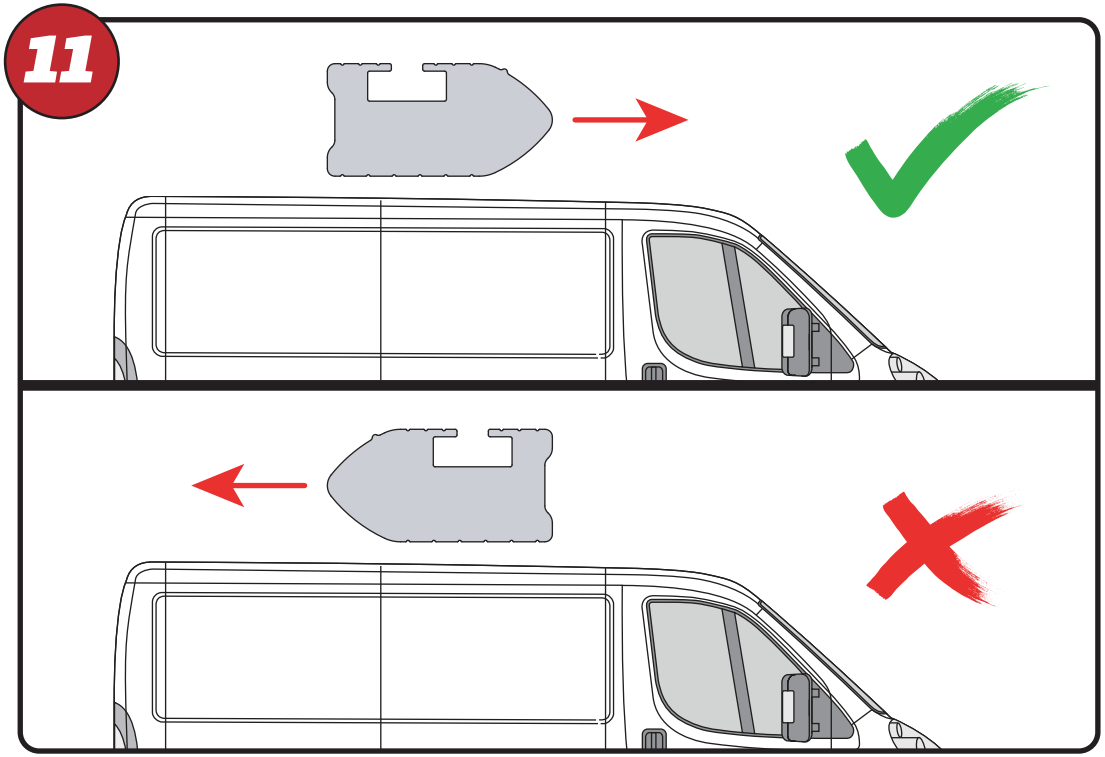


12

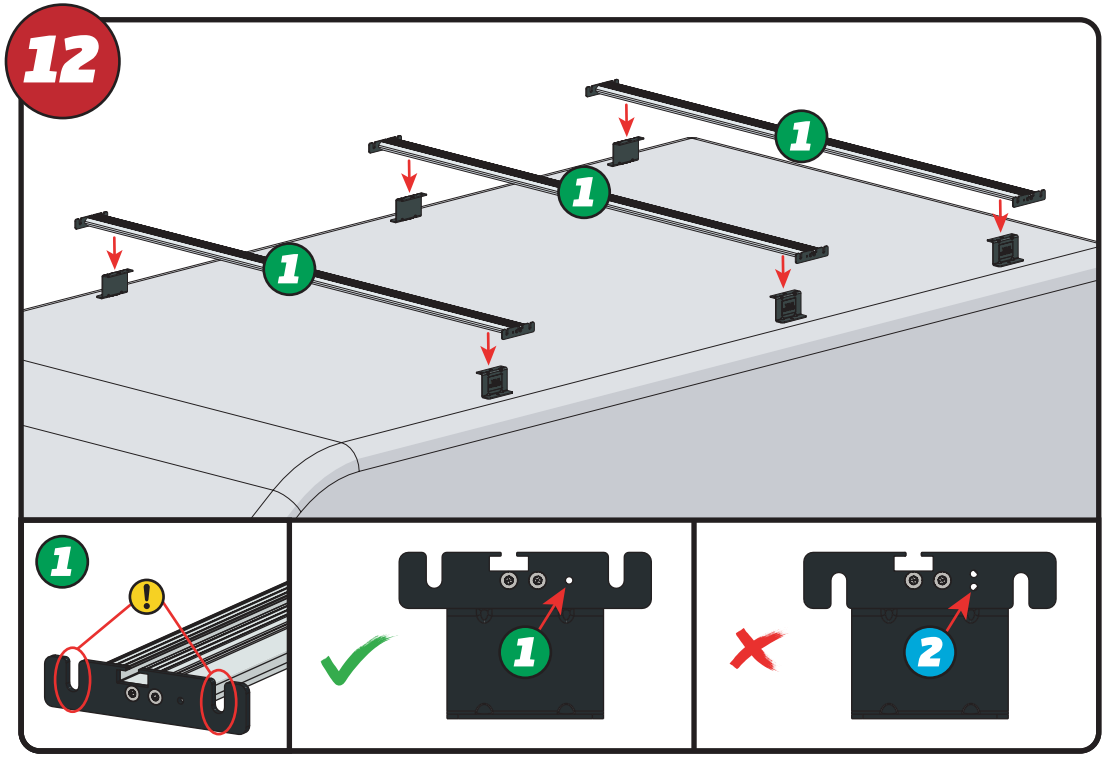


13

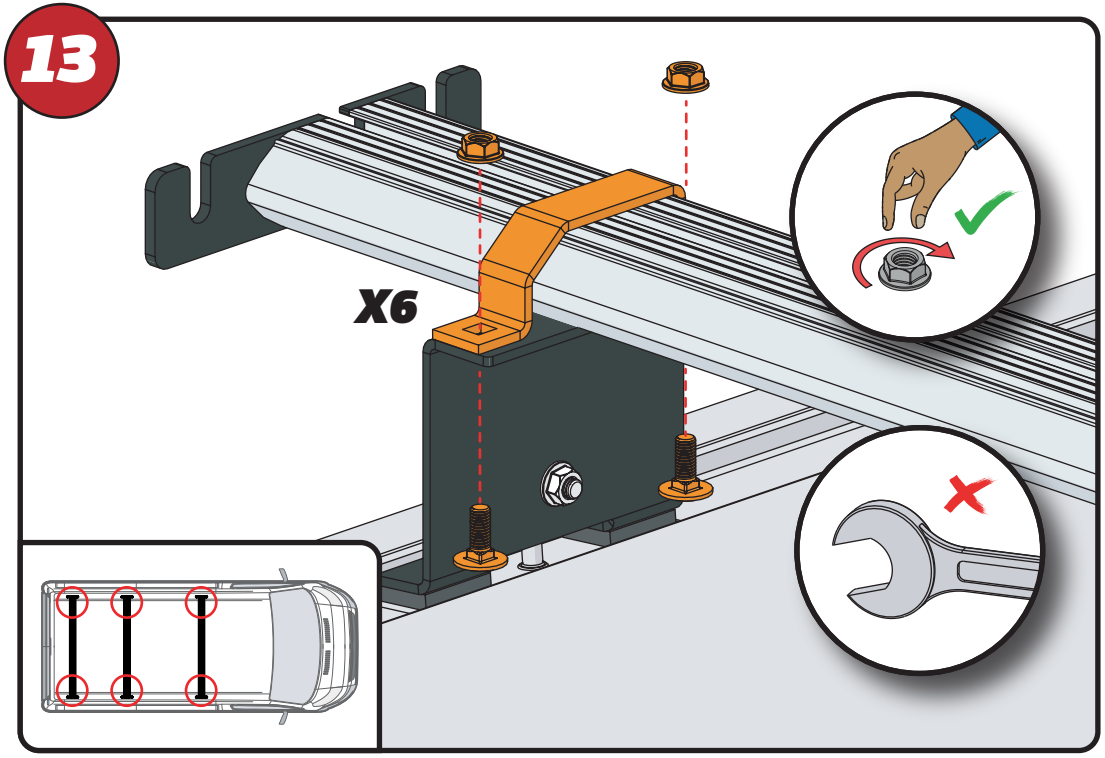


14

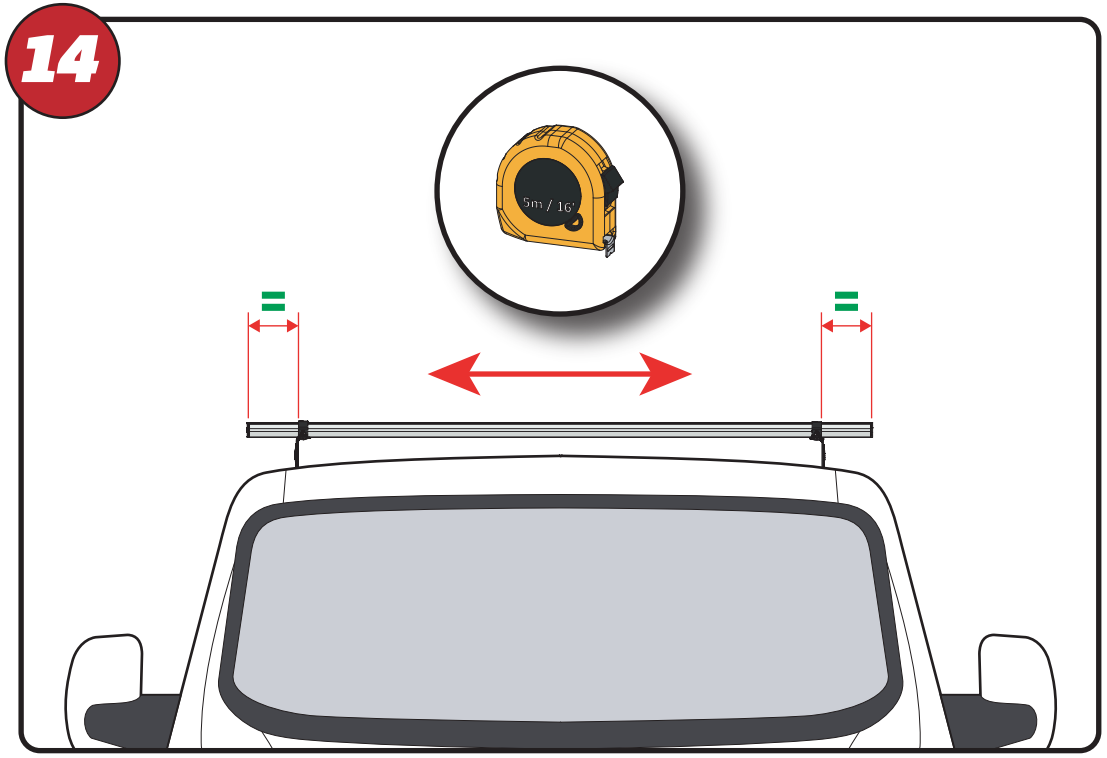


15

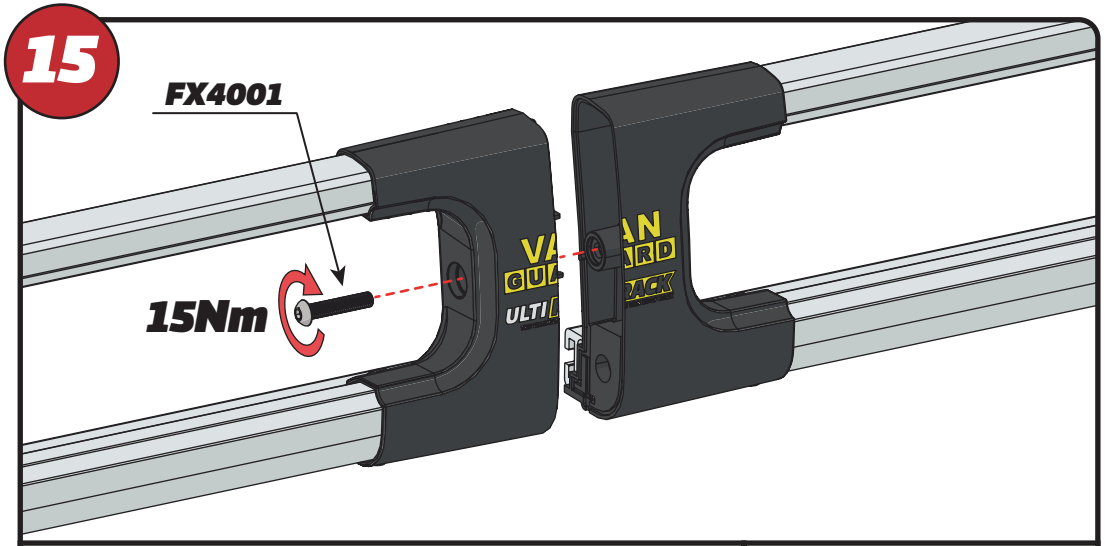


X2

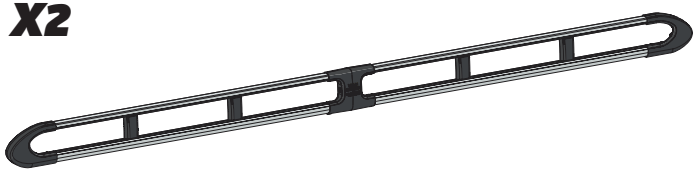


FX4008




16

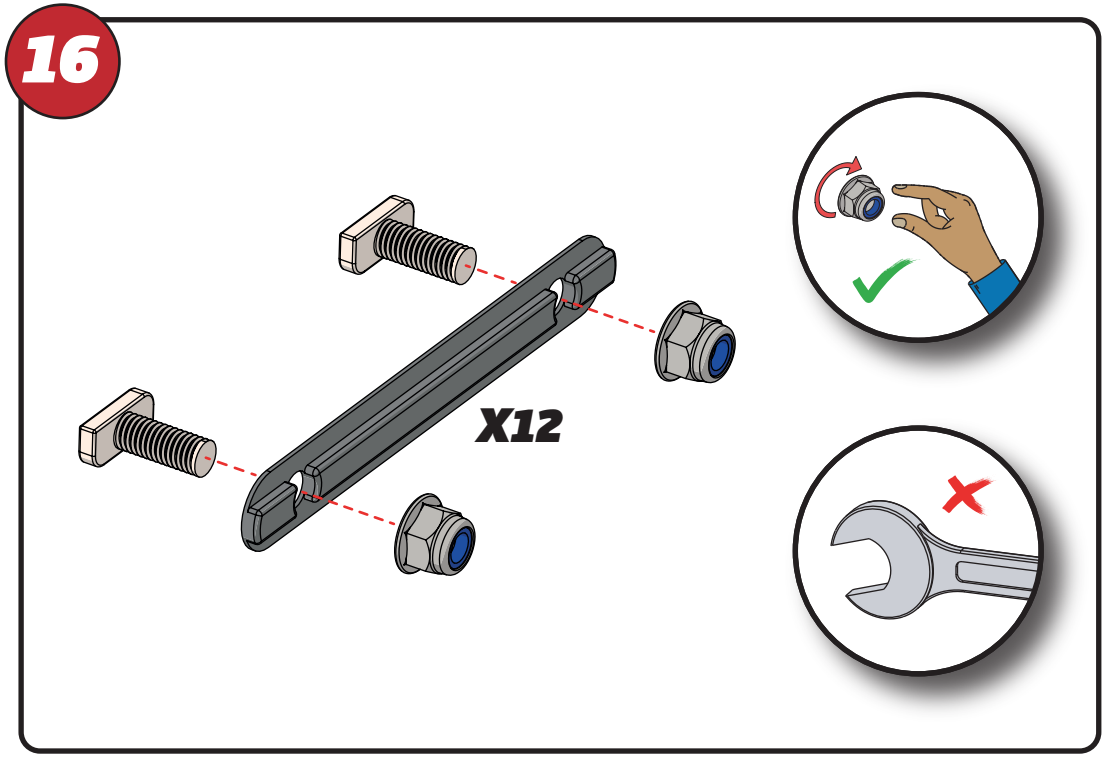


17

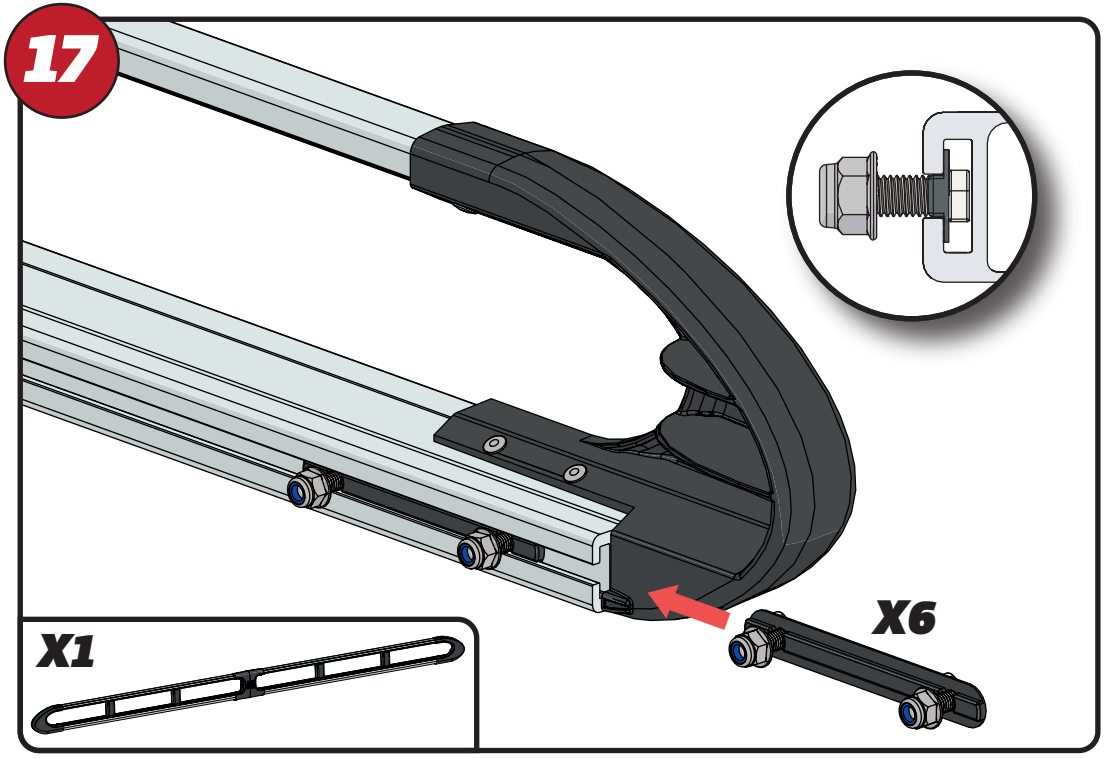


18

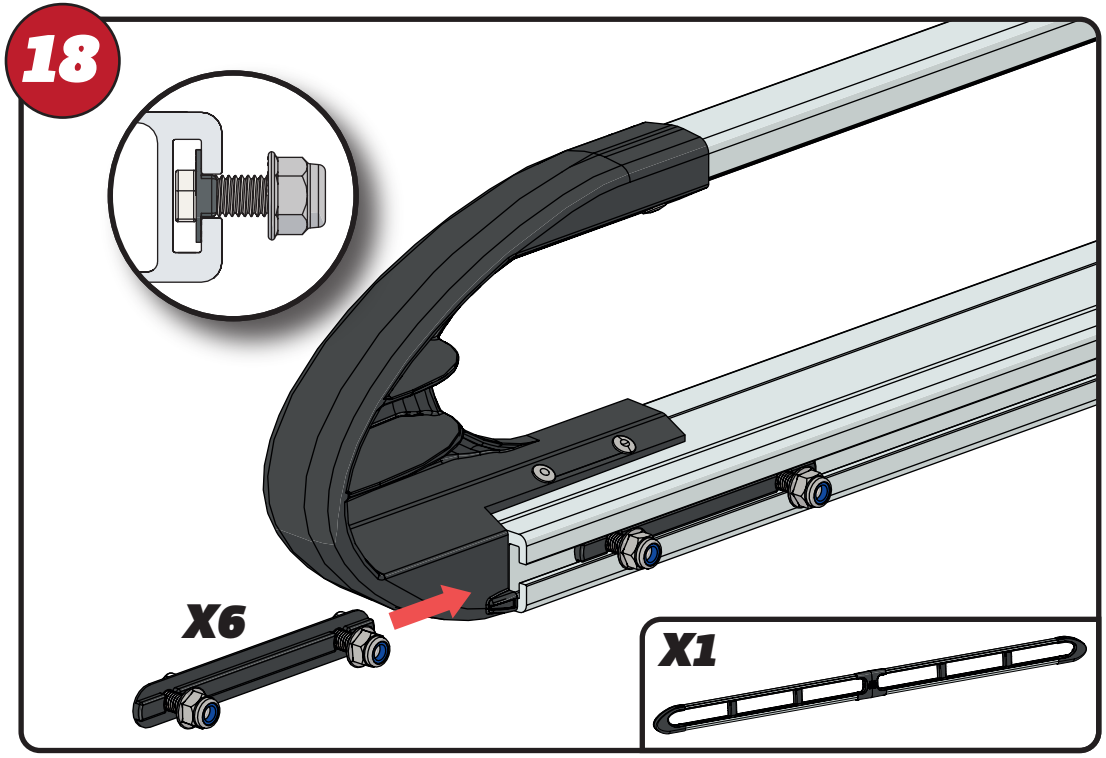


19

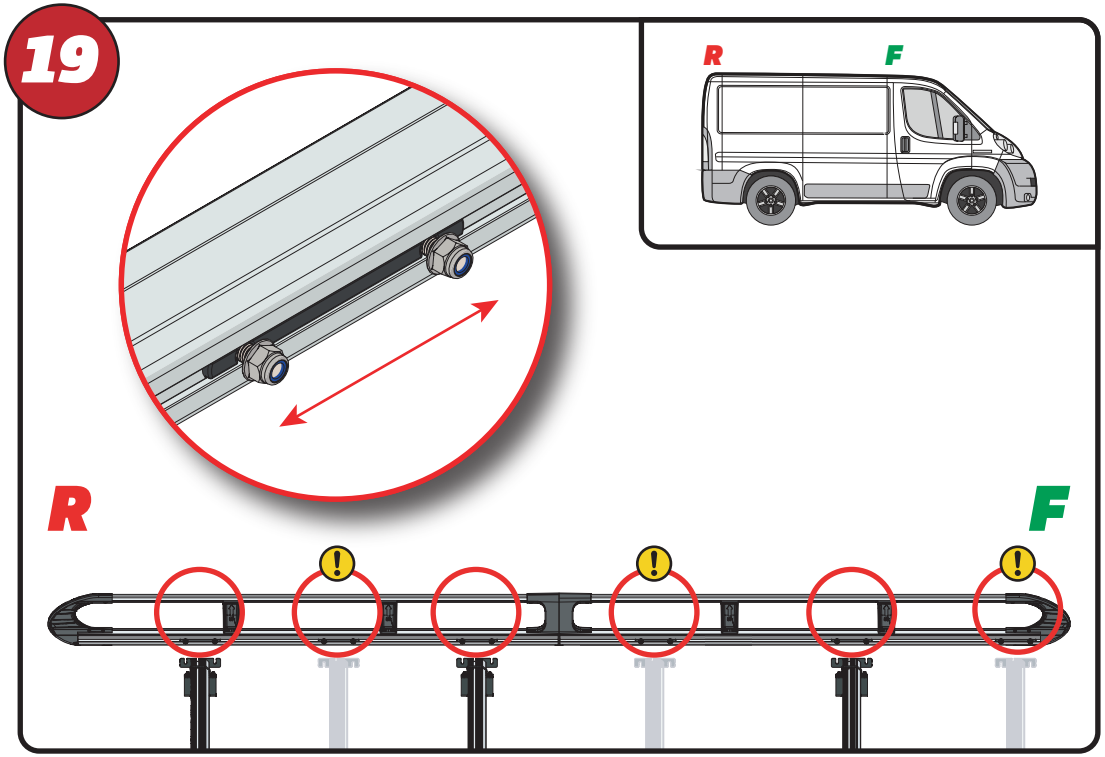


20

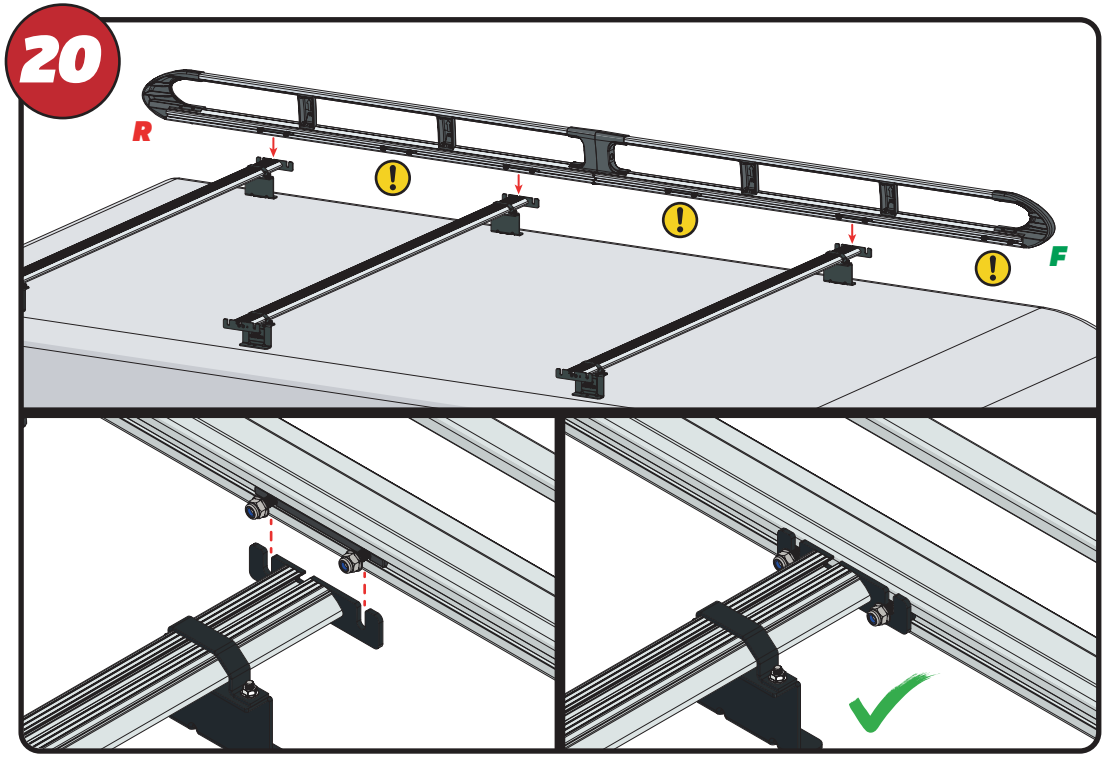


21

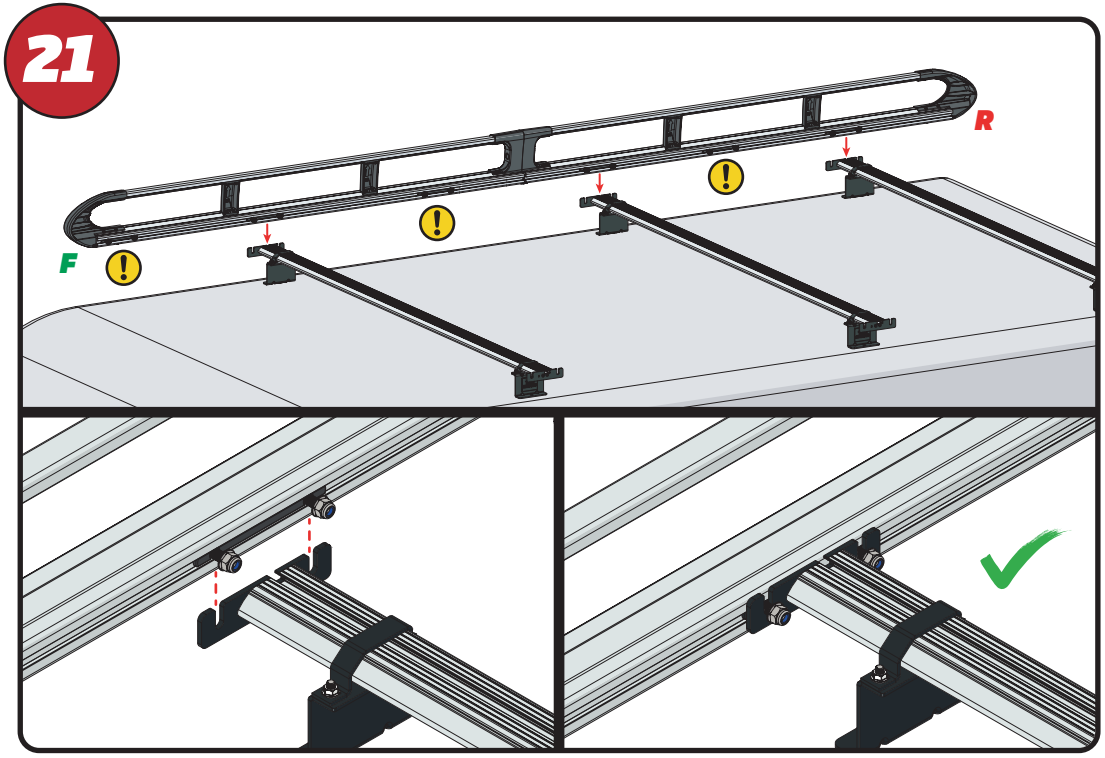


22

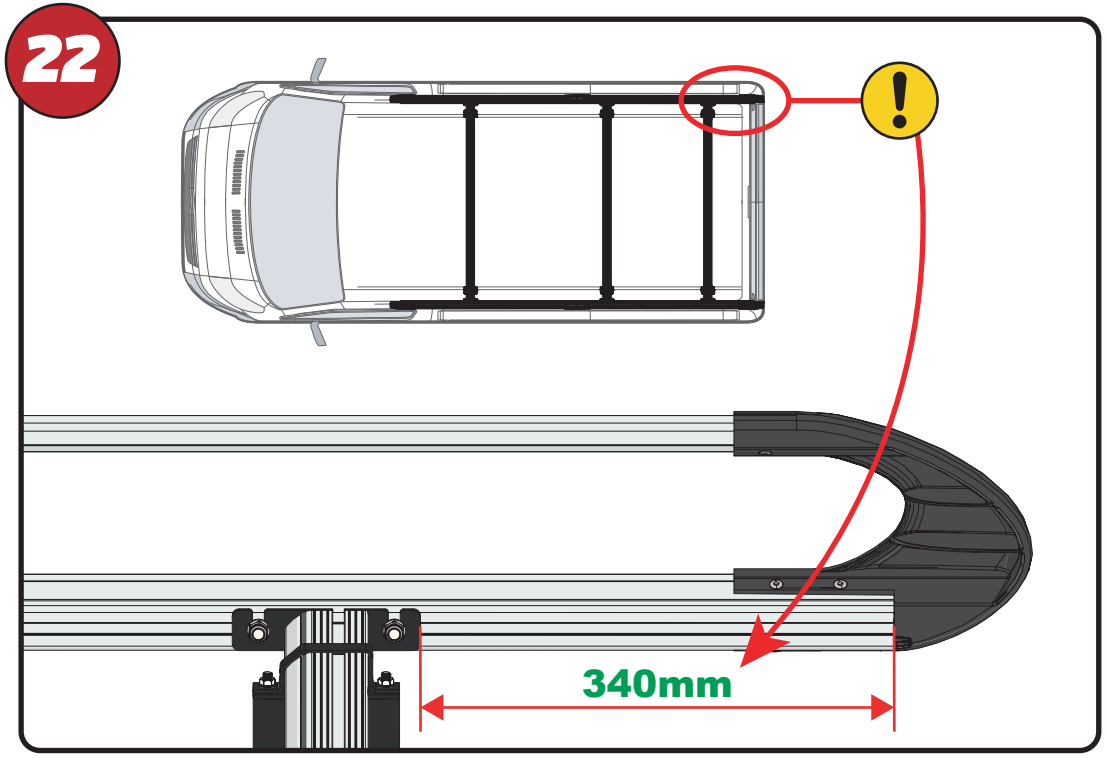

23

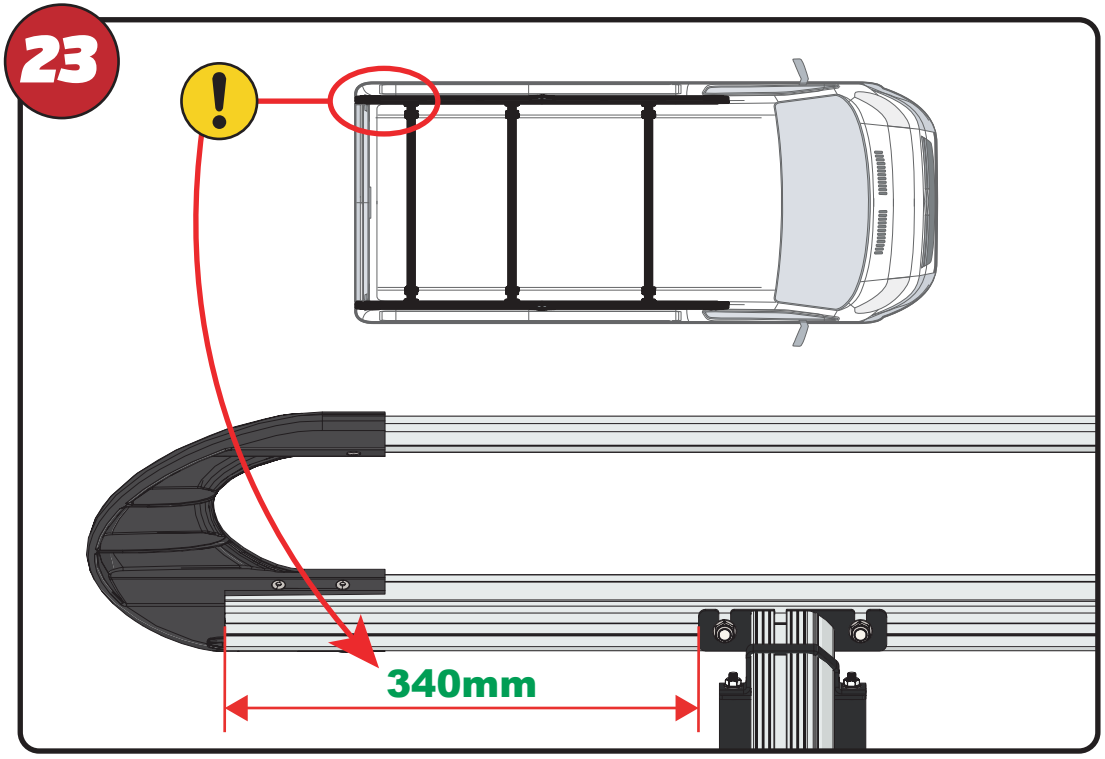



24

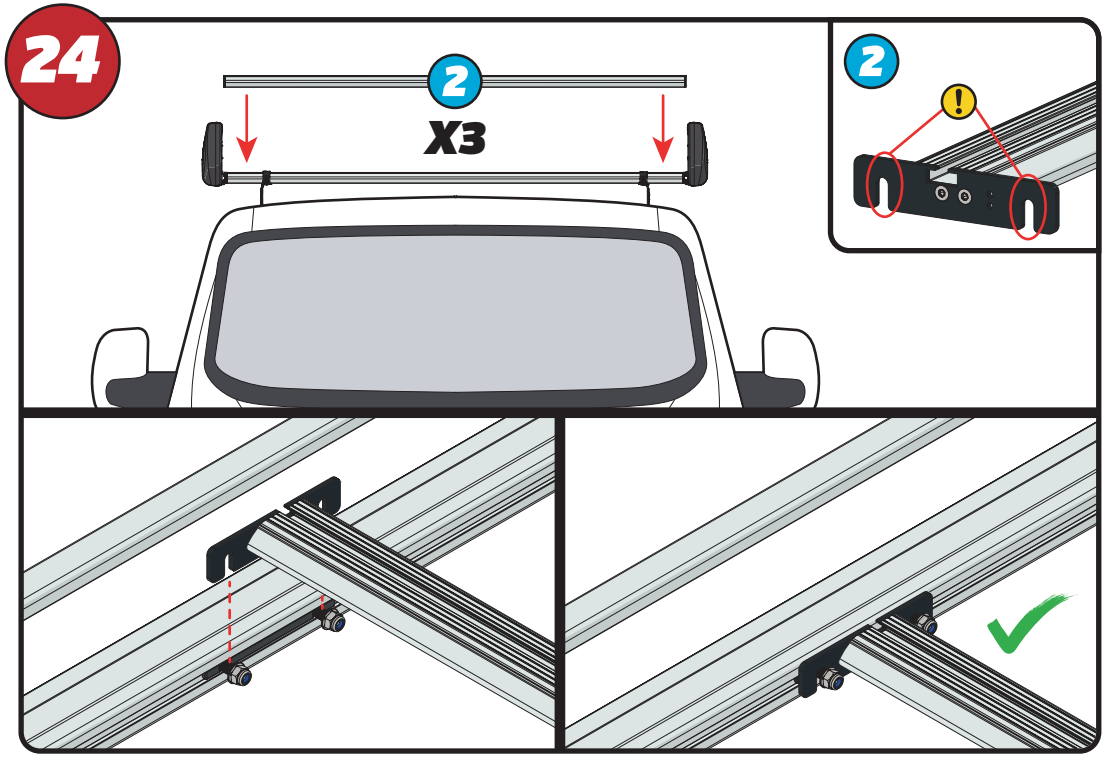


25

XXX =
PAGE 2 OF 14

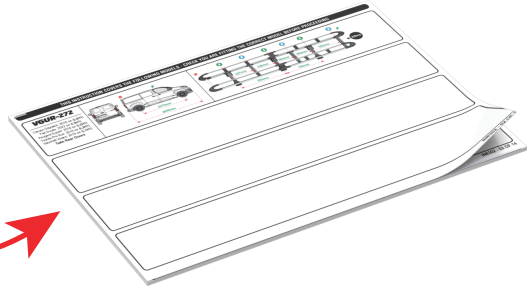

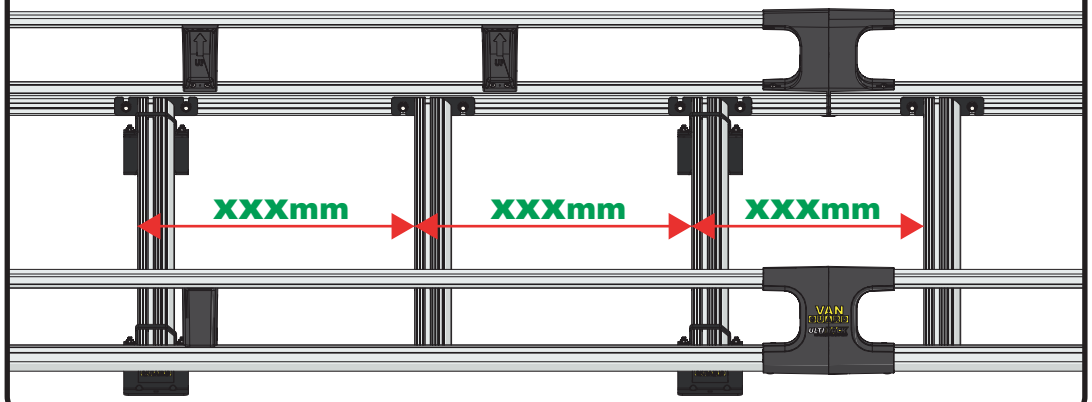


26

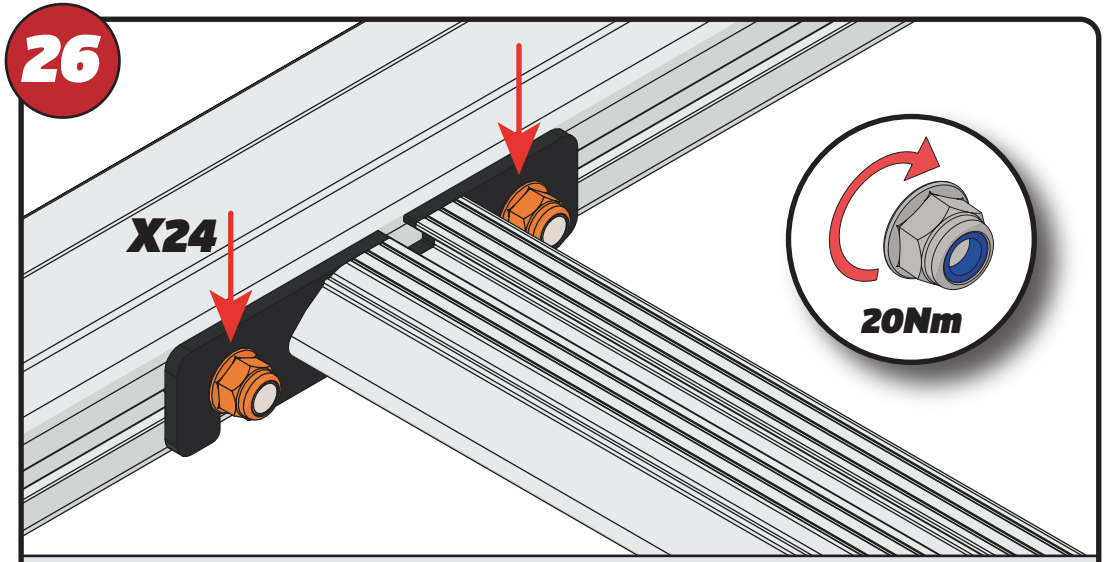



EN - TIGHTEN ALL OF THE CROSS BARS
DE - ALLE QUERSTANGEN FESTZIEHEN
FR - SERREZ TOUTES LES BARRES TRANSVERSALES
NL - DRAAI ALLE DWARSBALK VAN HET DAK AAN
ES - APRIETE TODAS LAS BARRAS TRANSVERSALES
IT - STRINGERE TUTTE LE BARRE TRASVERSALI
SV - SKRU UPP ALLA KORSSTANGAR
DA - SKRU ALLE TAGBØJLER OP
NO - SKRU OPP ALLE TVERRSTENGER
PL - DOKRĘCIĆ WSZYSTKIE POPRZECZKI
CS - VŠECHNY PŘÍČNÉ TYČE SEŠROUJTE

27

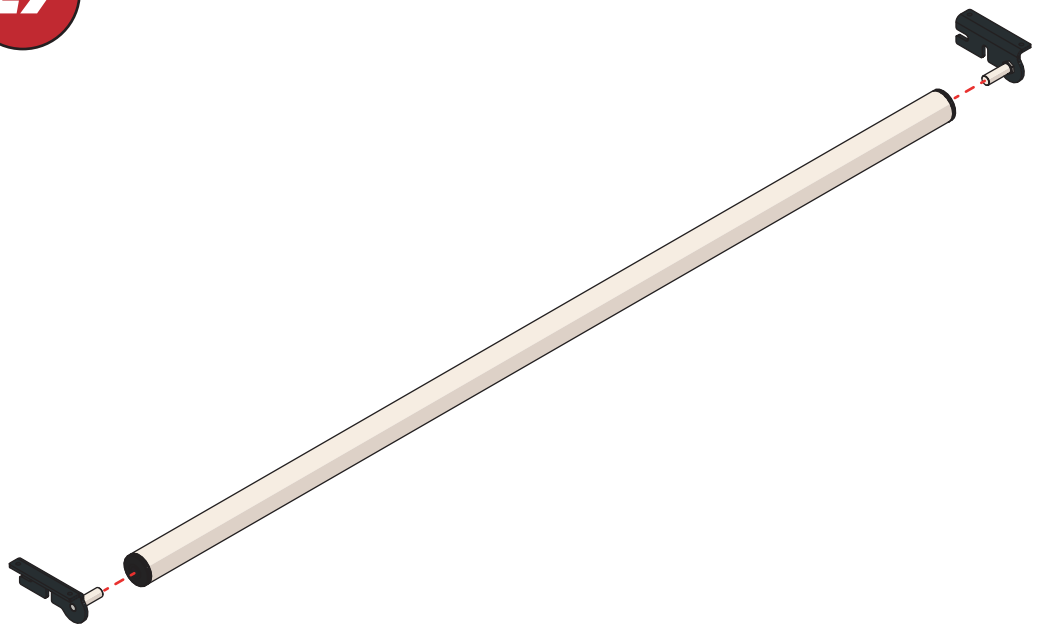


28

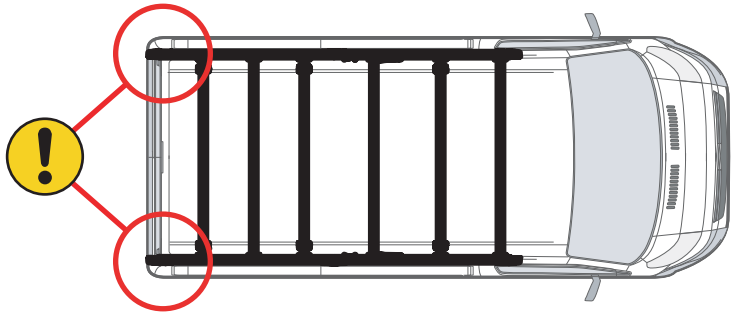


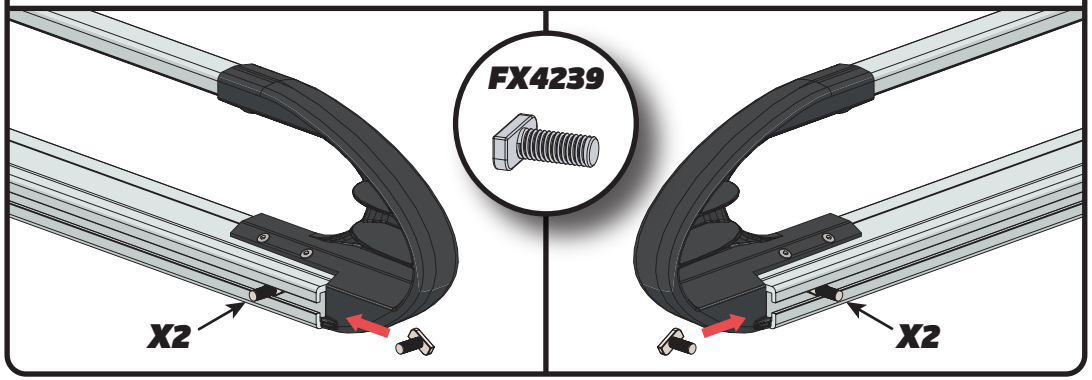


29

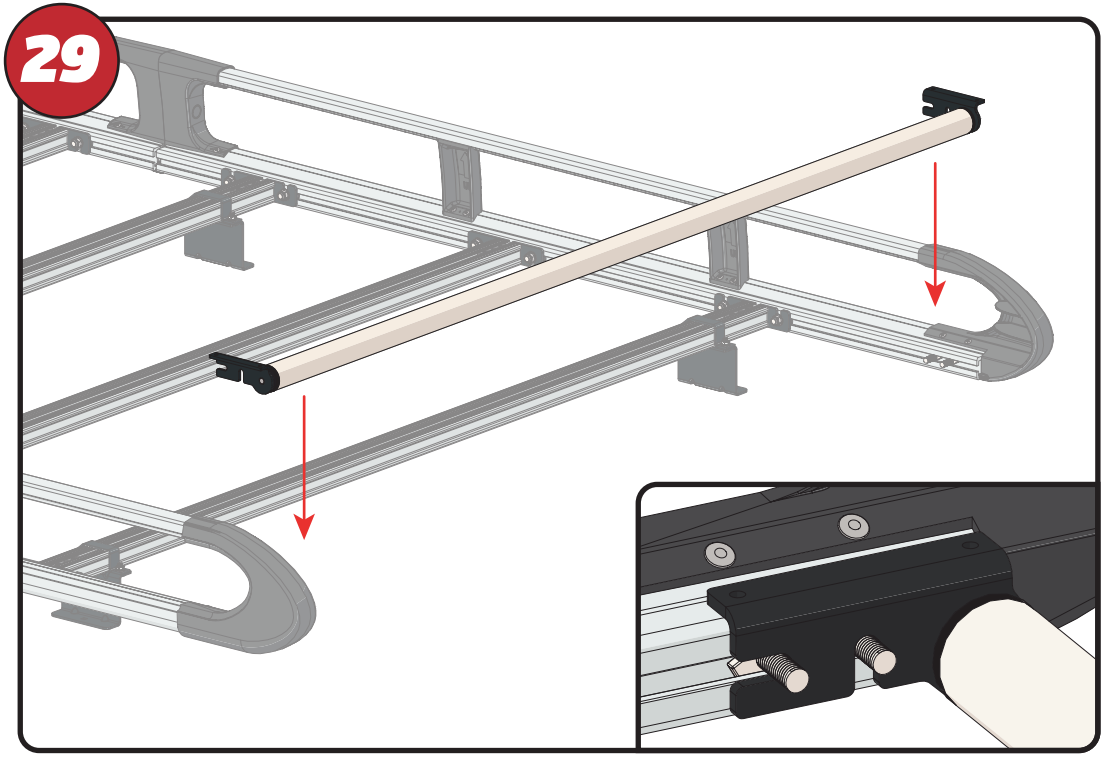


30

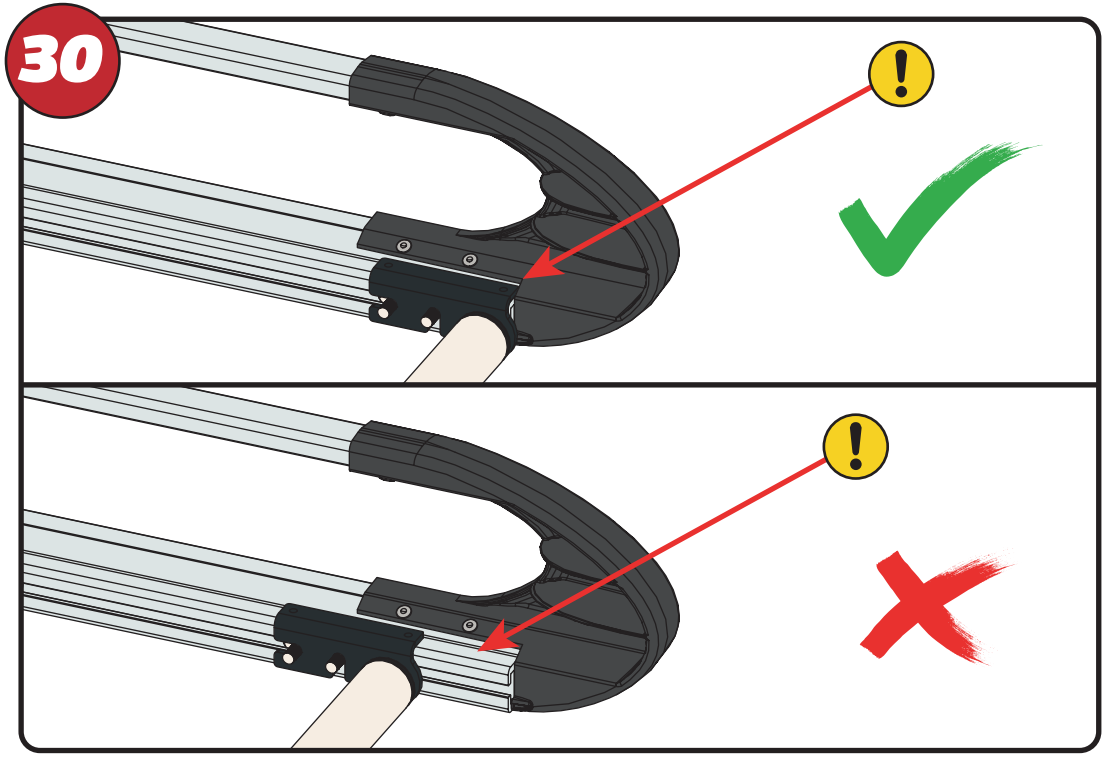

31

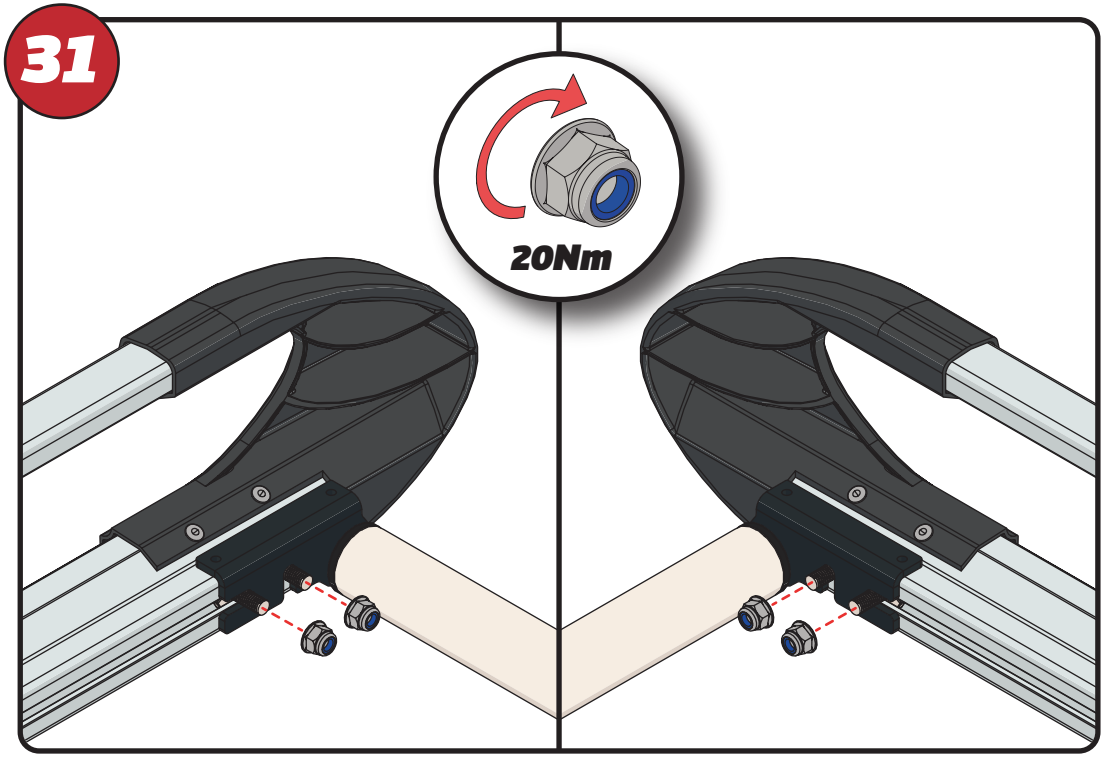


32

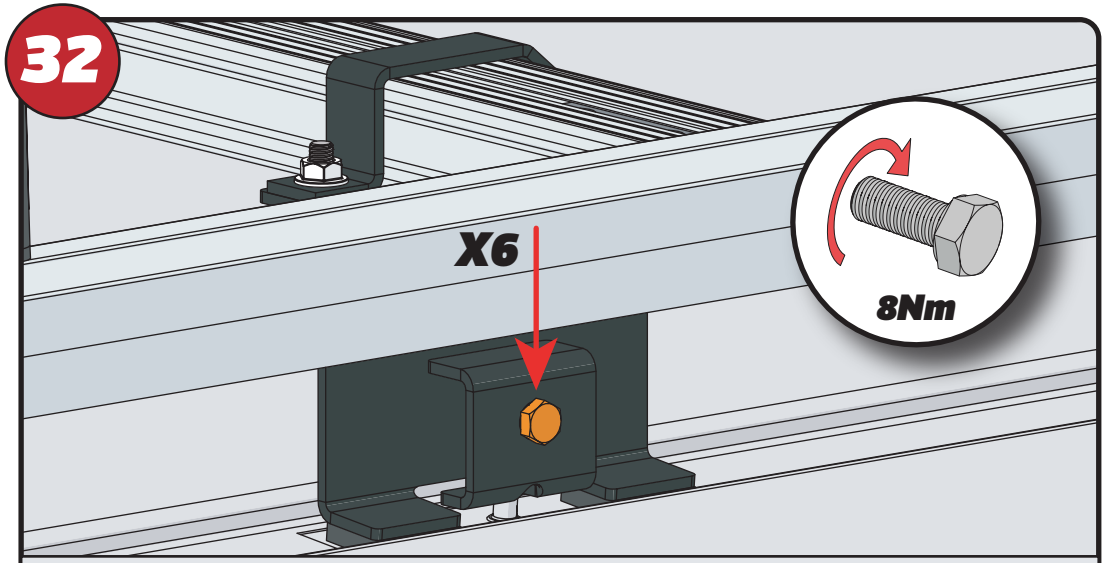


EN - HOLD THE BRACKET STRAIGHT WHILE TIGHTENING
DE - HALTEN SIE DIE HALTERUNG BEIM FESTZIEHEN GERADE
FR - TENIR LE SUPPORT DROITE PENDANT LE SERRAGE
NL - BEUGEL RECHT HOUDEN TIJDENS HET AANDRAAIEN
ES - MANTENGA EL SOPORTE RECTO MIENTRAS APRIETE
IT - TENERE LA STAFFA DIRITTA DURANTE IL SERRAGGIO
SV - HÅLL FÄSTET RAKT MEDAN DU DRAR ÅT
DA - HOLD BESLAGET LIGE, MENS DU STRAMMER
NO - HOLD BRAKETEN RETT MENS DU STRAMMES
PL - TRZYMAJ WSPORNIK PROSTO PODCZAS DOKRĘCANIA
CS - BĚHEM DOTAHOVÁNÍ DRŽTE DRŽÁK ROVNĚ

33

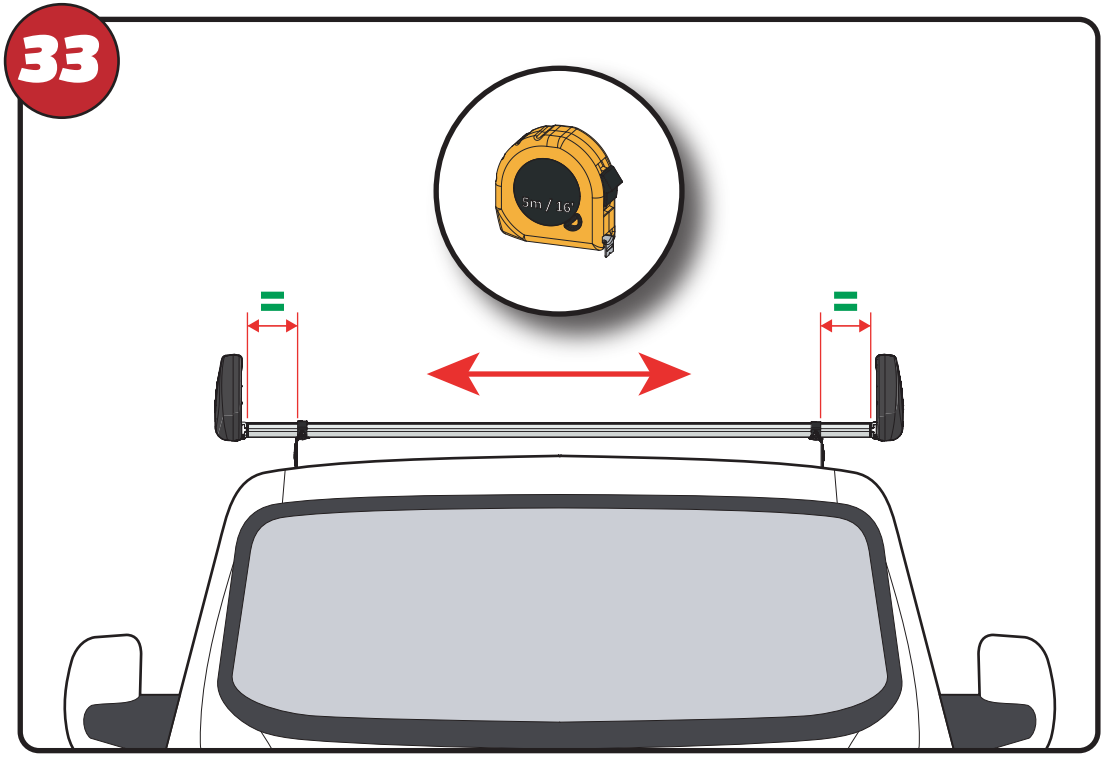


34

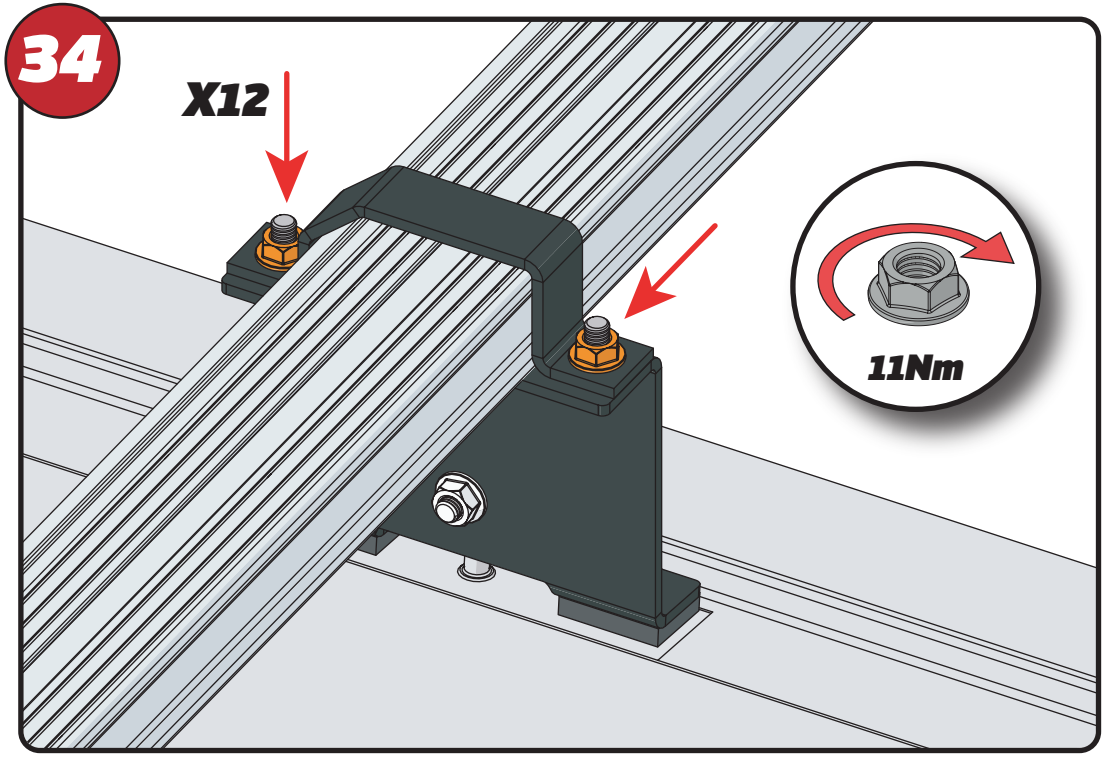


35




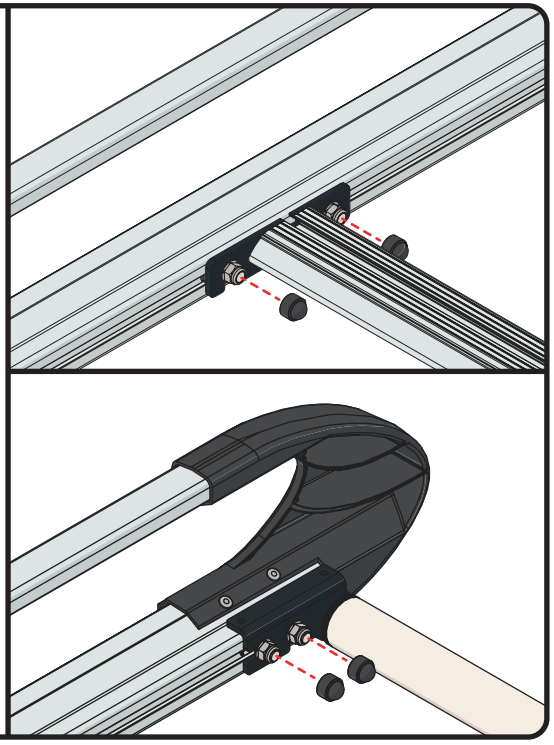

36

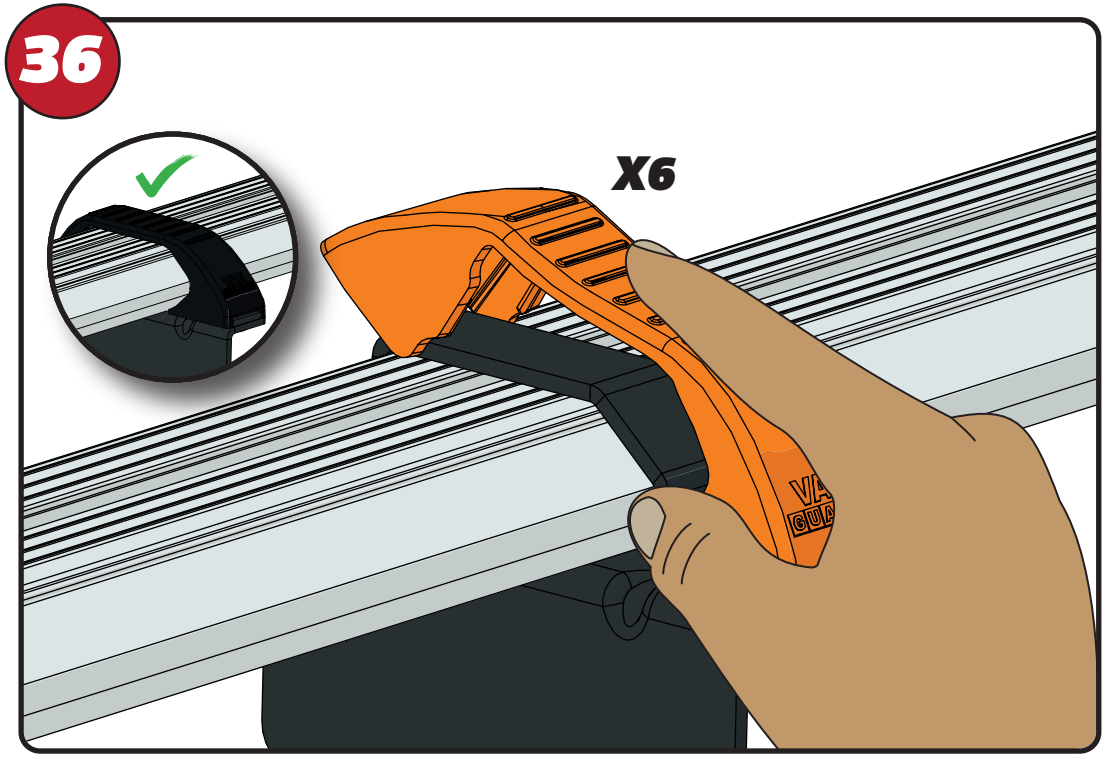

37

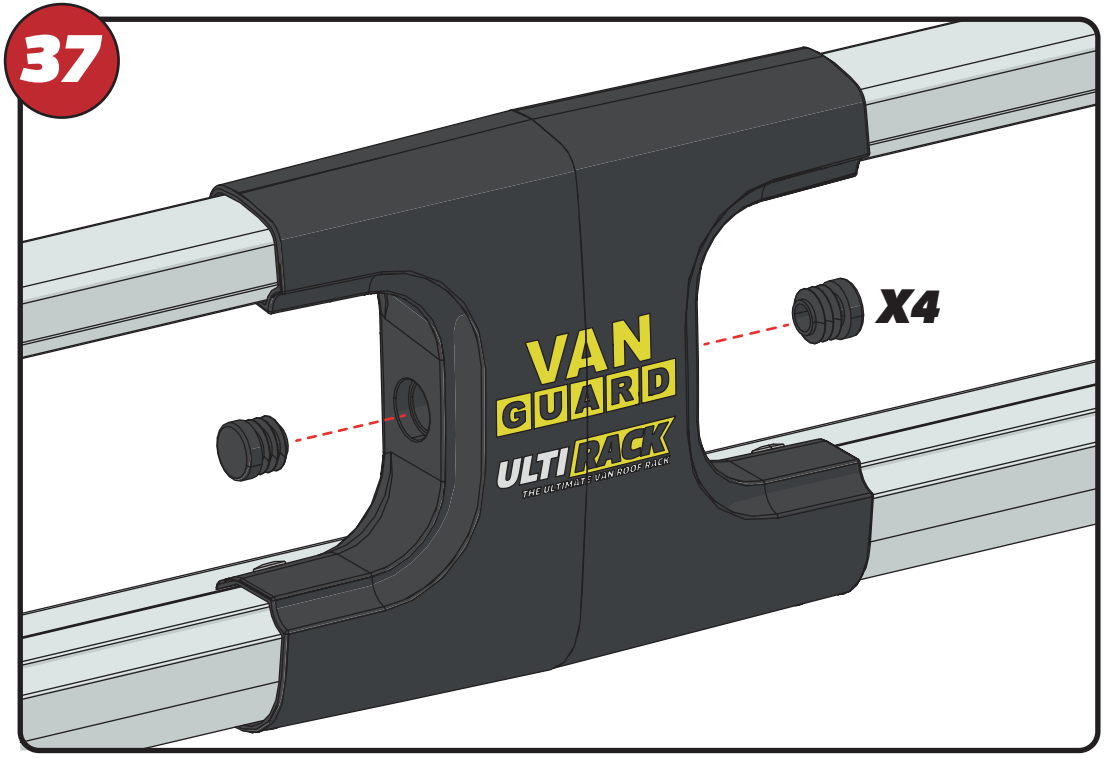

38

