

Fitting Instructions - Read instructions carefully before fitting and follow them for correct use

IN8325 ULTI Rack+

2

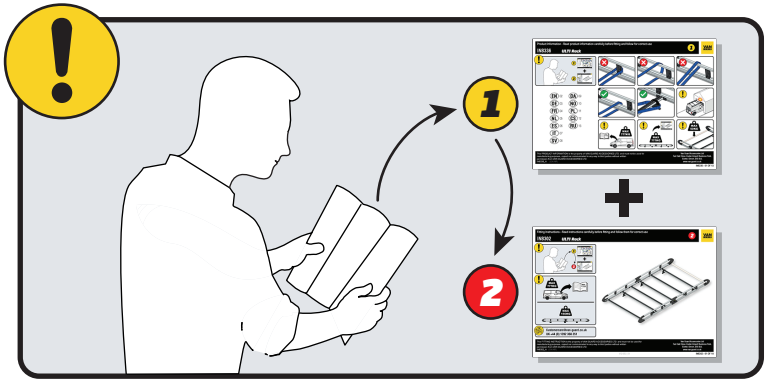

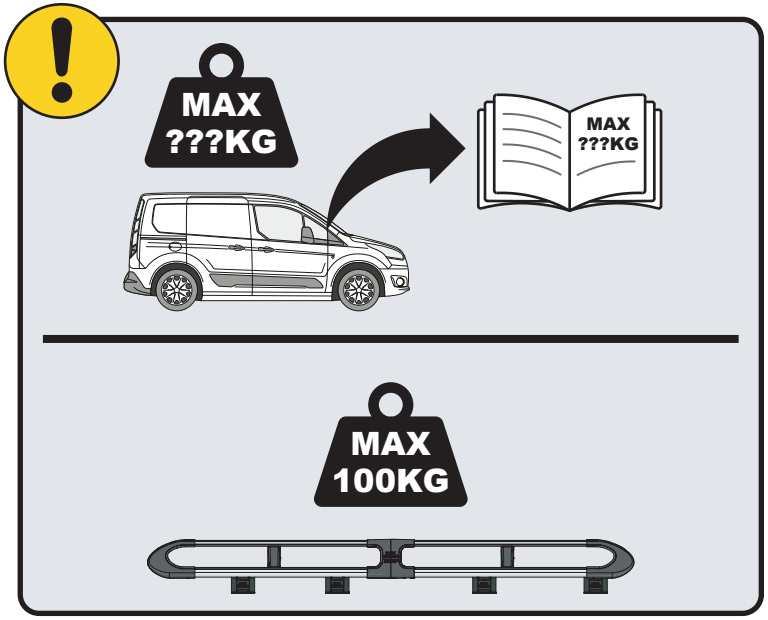



Customercare@van-guard.co.uk
UK +44 (0) 1392 368 351


This FITTING INSTRUCTION is the property of VAN GUARD ACCESSORIES LTD. and must not be used for manufacturing purposes, copied nor communicated in any way to third parties without written permission from VAN GUARD ACCESSORIES LTD.
IN8325_B (CN:00356)


Van Guard Accessories Ltd
Fair Oak Close, Exeter Airport Business Park,
Exeter, Devon, EX5 2UL
www.van-guard.co.uk

THIS INSTRUCTION COVERS THE FOLLOWING MODELS - CHECK YOU ARE FITTING THE CORRECT MODEL BEFORE PROCEEDING

VGUR-254

Ford Transit Connect: 2014 on
L1H1 (SWB)
Twin Rear Doors

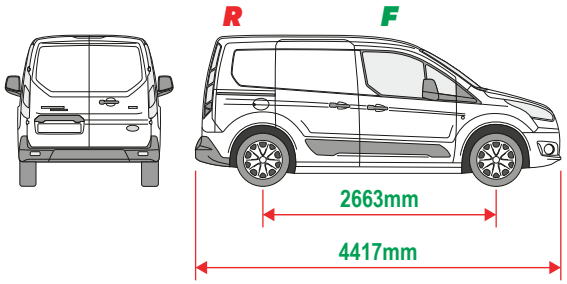

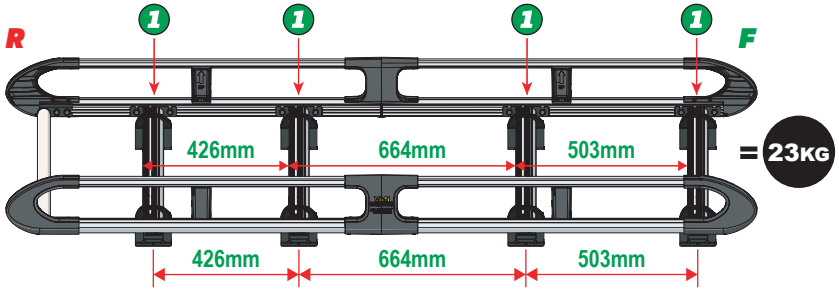

SUPPLIED COMPONENTS - CHECK ALL PARTS ARE PRESENT AND CORRECT BEFORE PROCEEDING (1 OF 2)

TOOLS REQUIRED


10MM X2






13MM X1



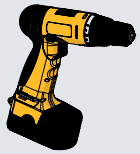


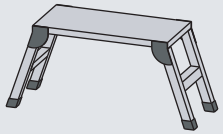






AS3531 X2
(2000 / A)

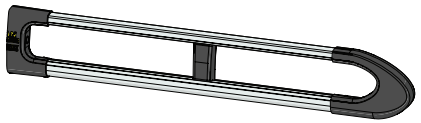


MA6118 X8




FX4241 X20



ME0203 X8




AS3530 X2
(2000 / B)

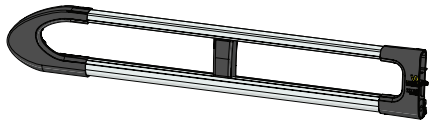


FX4008 X1




MA6145 X1




MA6065 X8

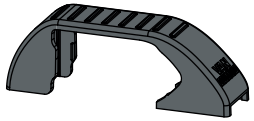

ME1626 X5
(1264mm)



FX4001 X2
(M8X40)




FX4235 X20
(M5X25)



FX4016 X22
(M6)




AS3158 X1
(1250mm)




MA6007 X4




FX4248 X1
(T25)




FX4042 X16
(M6X16)




AS3590 X1

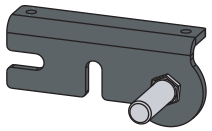


MA6093 X8




FX4239 X20
(M8X20)




ME1620 X4



AS3591 X1




ME0316 X8



FX4240 X20
(M8)




ME1621 X4




SUPPLIED COMPONENTS - CHECK ALL PARTS ARE PRESENT AND CORRECT BEFORE PROCEEDING (2 OF 2)

ME0779 X1

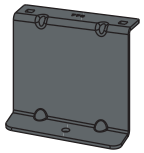


ME1083 X1

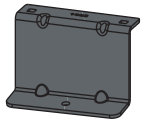


FX4014 X8



ME0780 X1

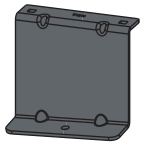


ME1084 X1

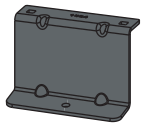

FX4015 X8
(M6X30)




ME0781 X1

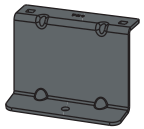


AS3149 X1



FX4037 X6
(M6)

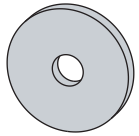

ME0782 X1

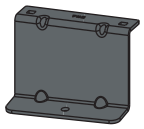


AS3150 X1



MA6018 X8




ME0784 X1

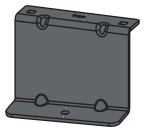


FX4010 X2
(M6)




ME0785 X1

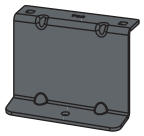


FX4013 X8
(M6)




01

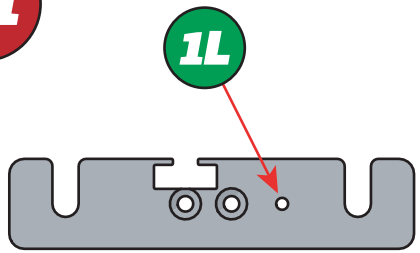

X4

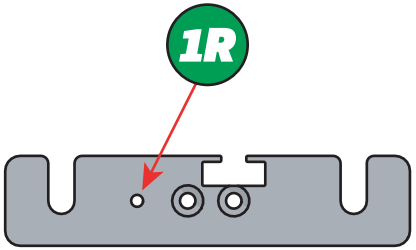


X4

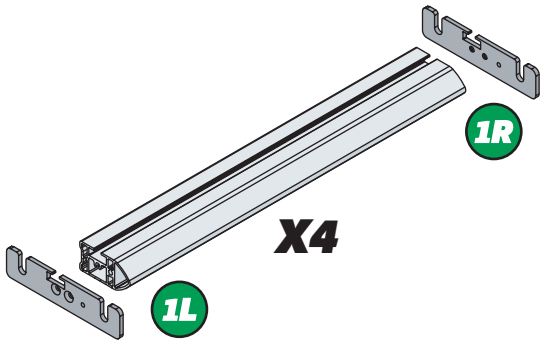

X4


02

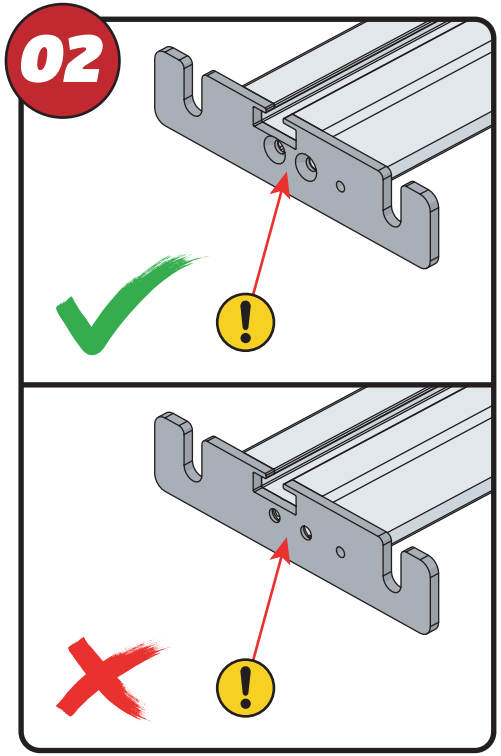


03

01


FX4248

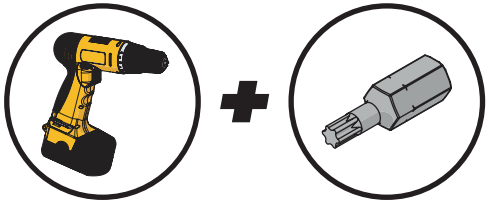

02

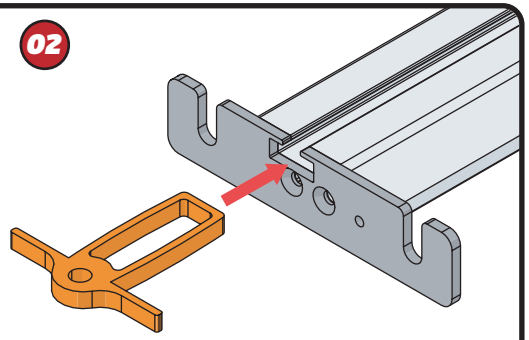


03

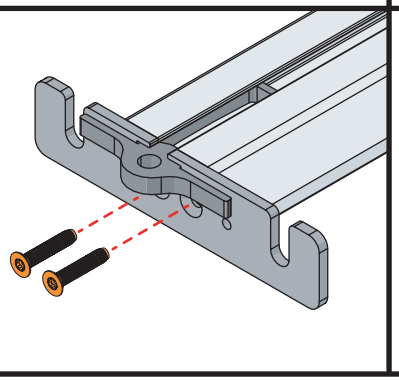


11Nm

04

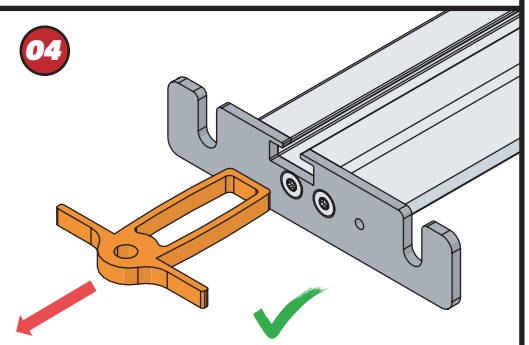



04

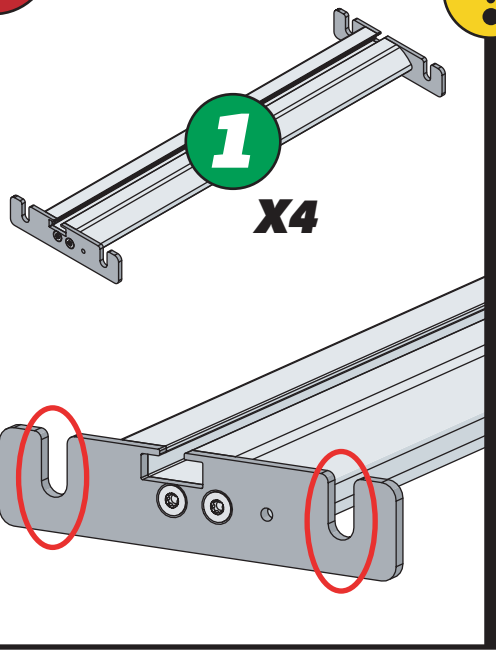


X4


05

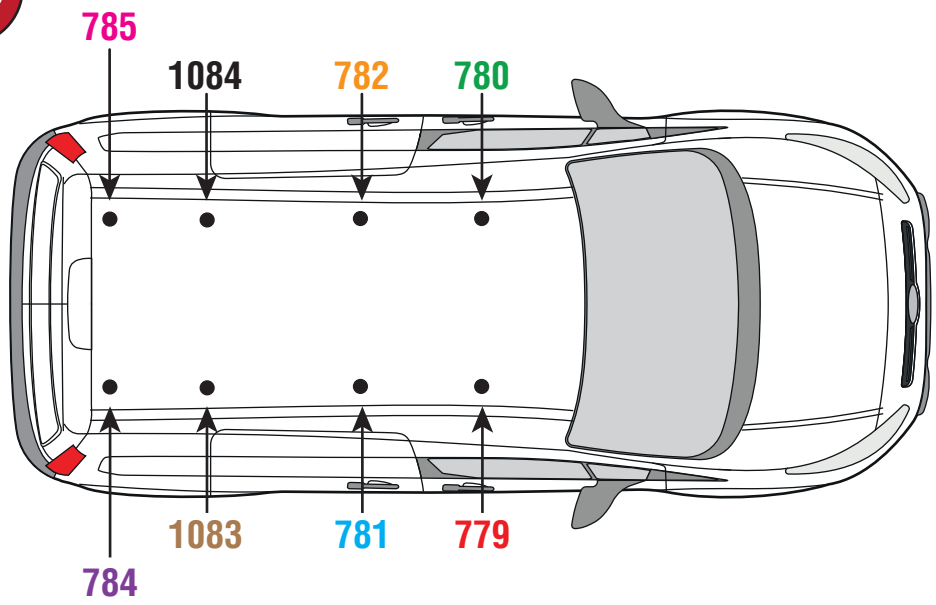

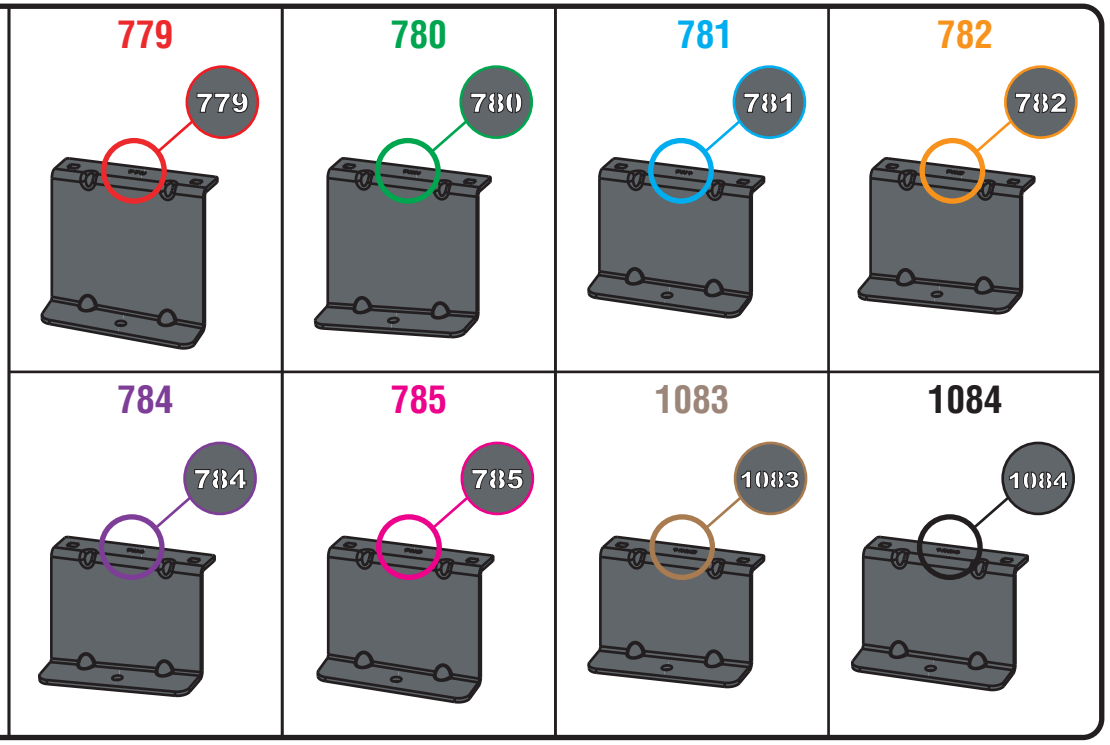


06

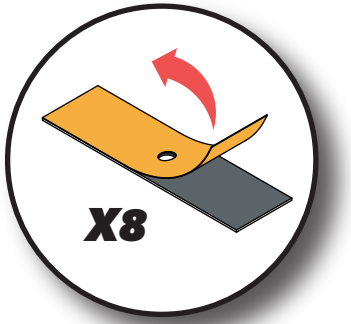

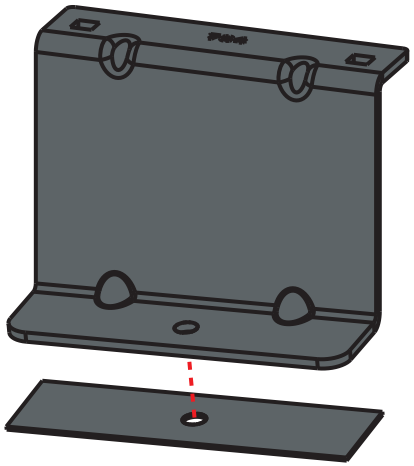


EN - STICK GASKETS TO ALL BRACKETS
DE - KLEBEN SIE DIE DICHTUNG AN ALLEN HALTERUNGEN
FR - COUSSINETS ADHÉSIFS À TOUS LES SUPPORTS
NL - PLAK PAKKING OP ALLE BEUGELS
ES - PEGA LAS ALMOHADILLAS A TODOS LOS SOPORTES
IT - ADESIVI GUARNIZIONI A TUTTE LE STAFFE
SV - FÄST GUMMI PÅ ALLA FÄSTEN
DA - KLÆB GUMMI PÅ ALLE BESLAG
NO - PLIST GUMMI PÅ ALLE BRAKKETTER
PL - NAKLEJ USZCZELKI DO WSZYSTKICH WSPORNIKÓW
CS - PŘILEPTE TĚSNĚNÍ NA VŠECHNY DRŽÁKY


07

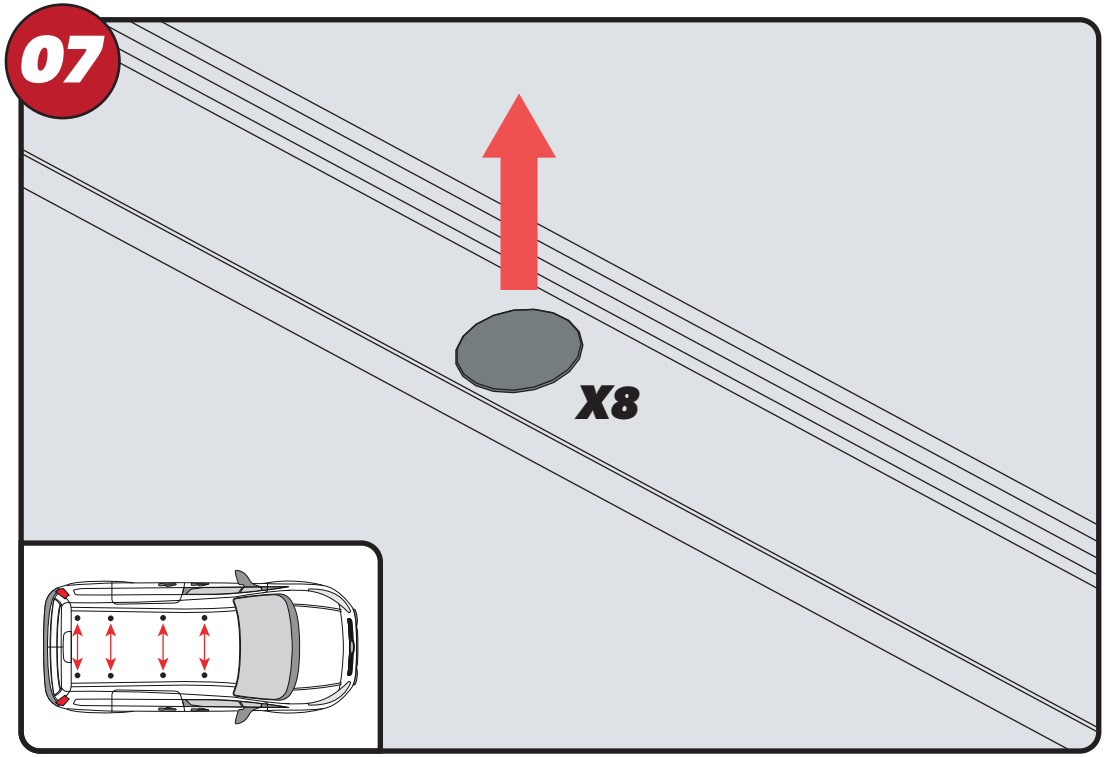

08

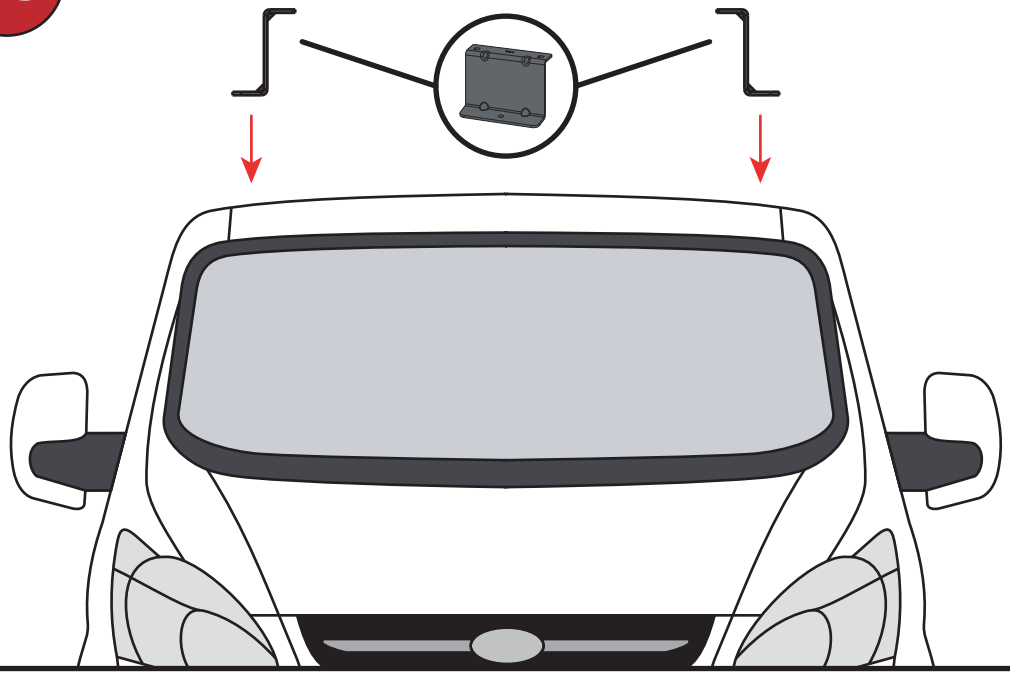


09

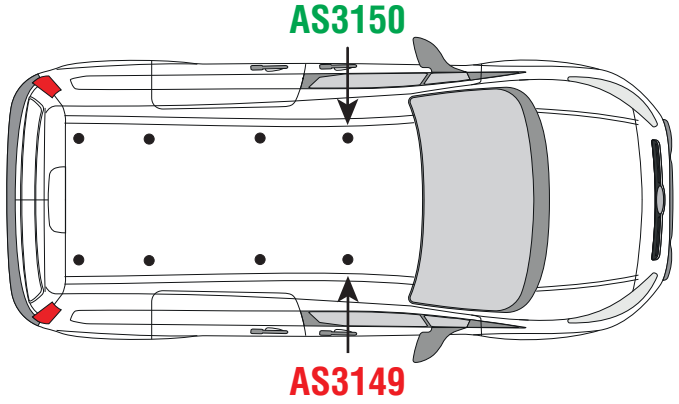


AS3150





AS3149




10

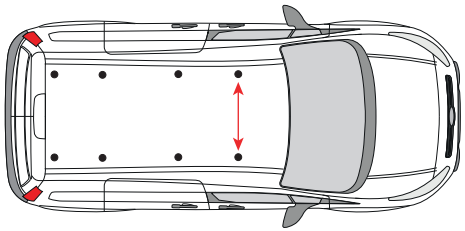

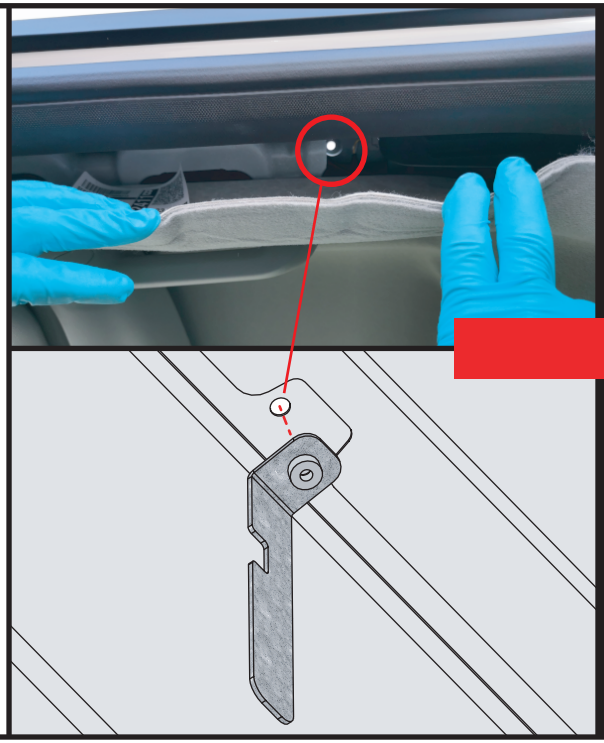


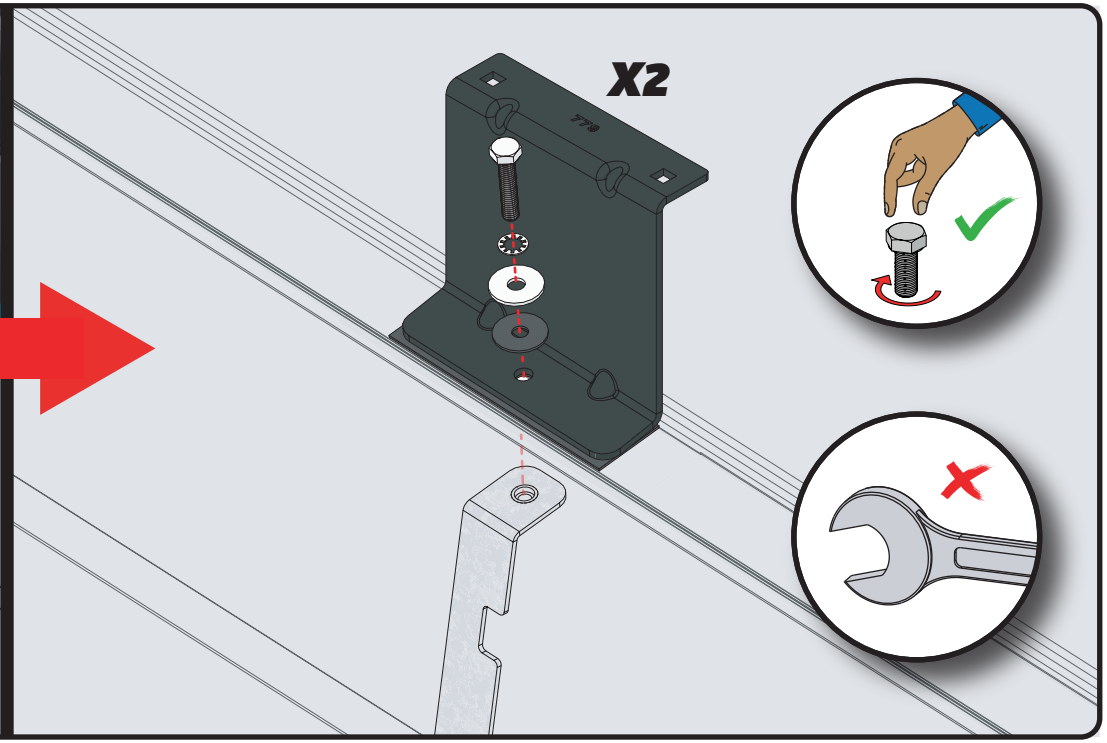


11

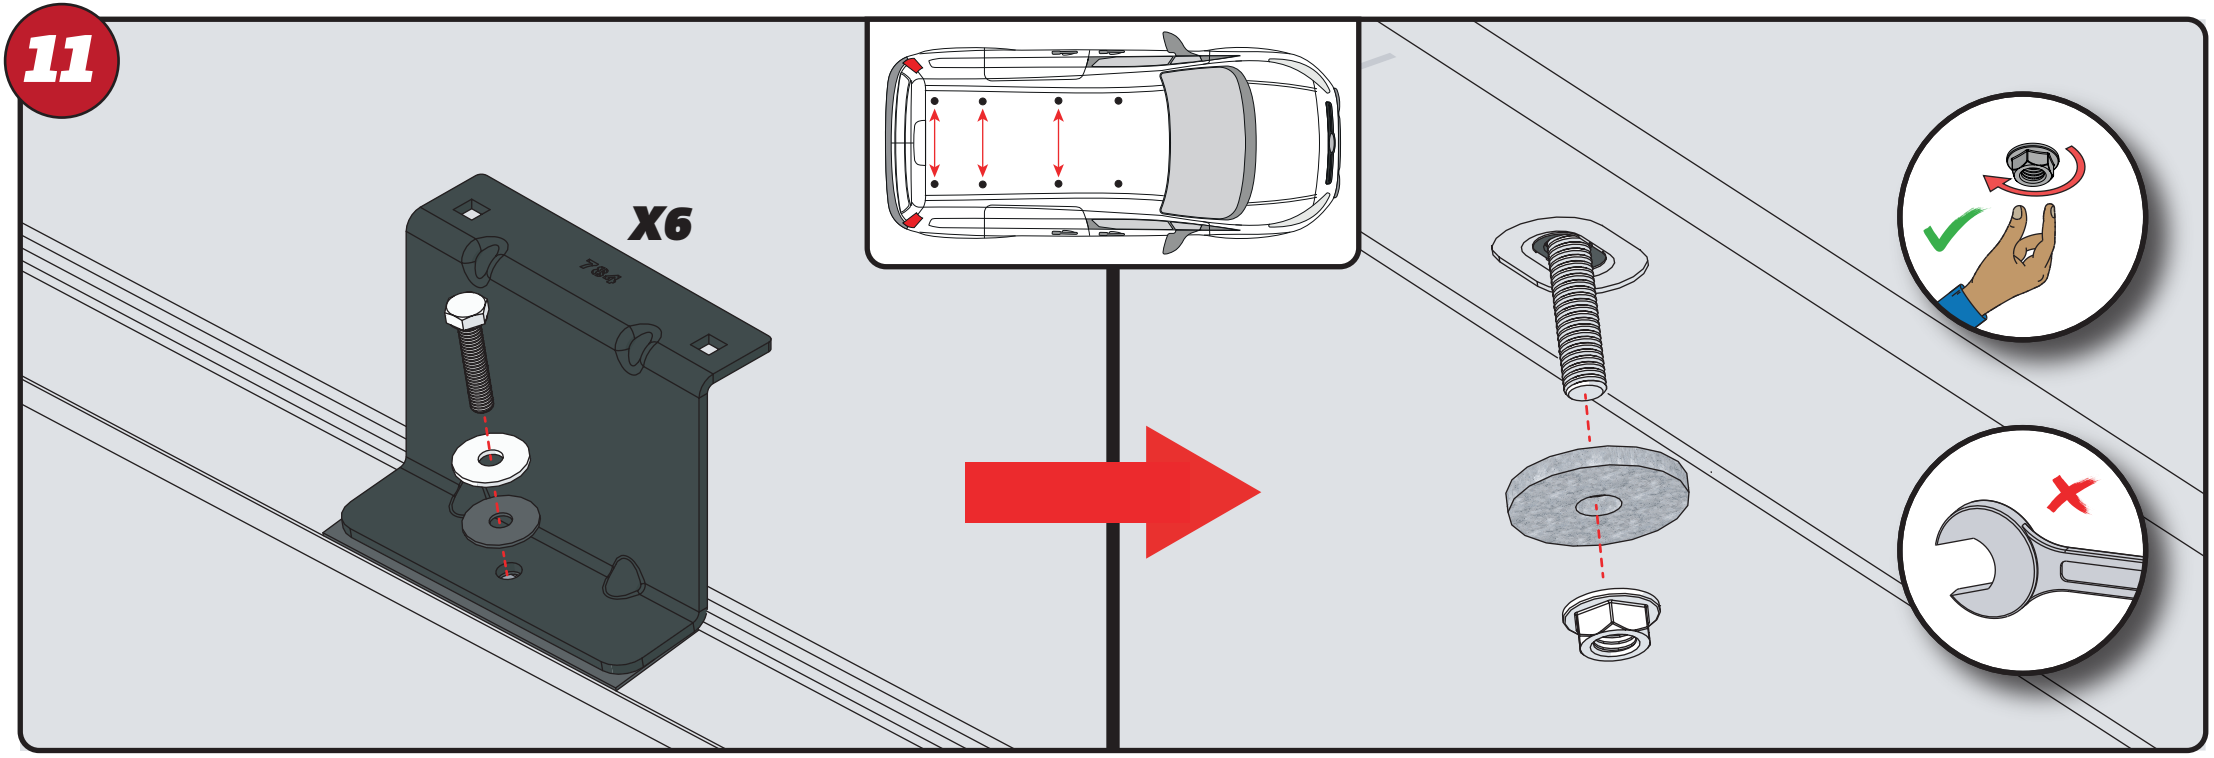

12

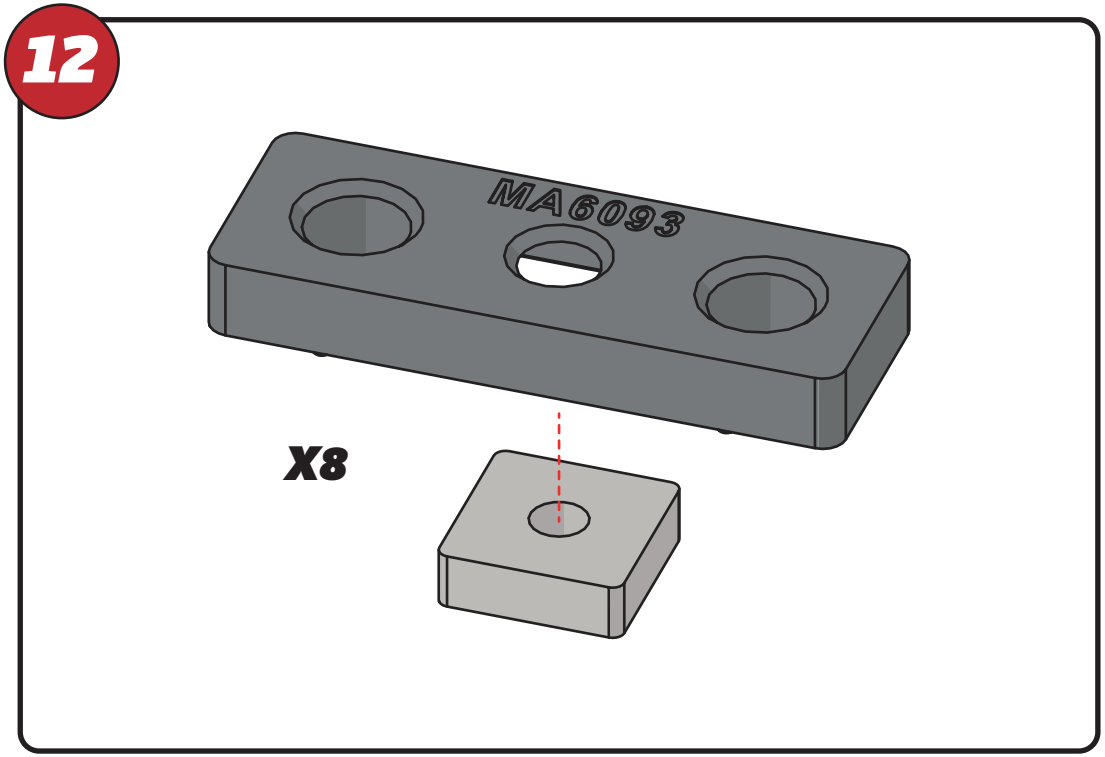


13

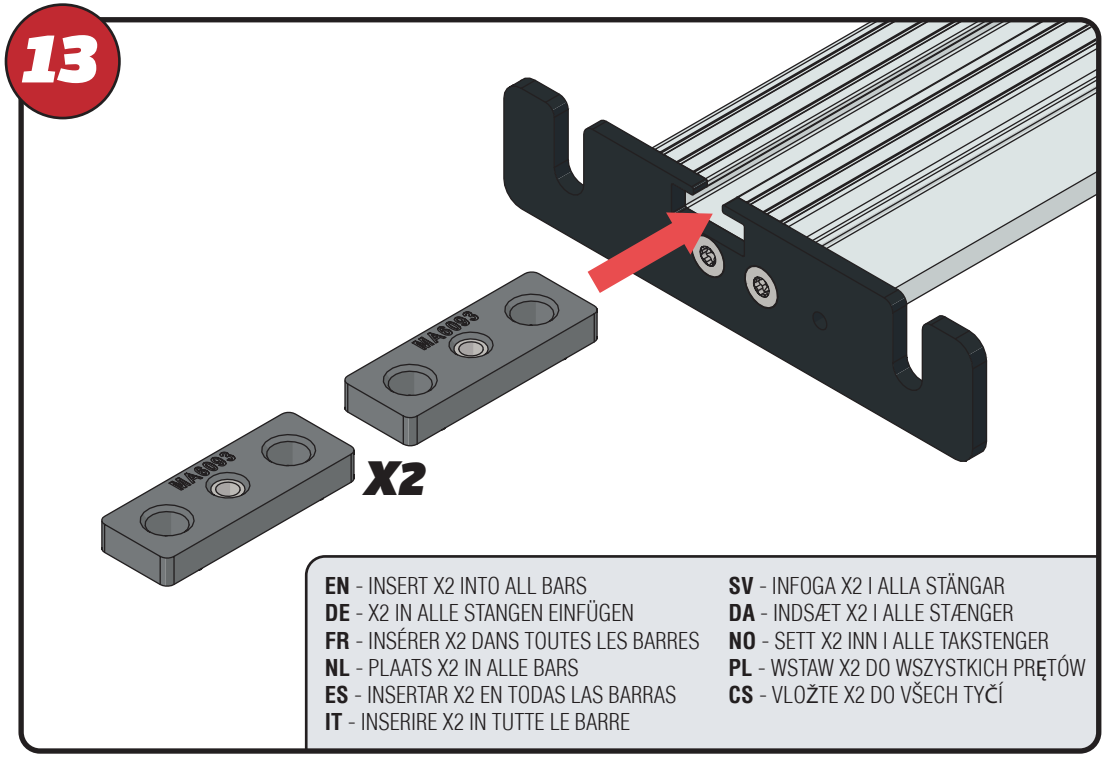


EN - INSERT X2 INTO ALL BARS
DE - X2 IN ALLE STANGEN EINFÜGEN
FR - INSÉRER X2 DANS TOUTES LES BARRES
NL - PLAATS X2 IN ALLE BARS
ES - INSERTAR X2 EN TODAS LAS BARRAS
IT - INSERIRE X2 IN TUTTE LE BARRE
SV - INFOGA X2 I ALLA STÄNGAR
DA - INDSÆT X2 I ALLE STÆNGER
NO - SETT X2 INN I ALLE TAKSTENGER
PL - WSTAW X2 DO WSZYSTKICH PRĘTÓW
CS - VLOŽTE X2 DO VŠECH TYČÍ


14

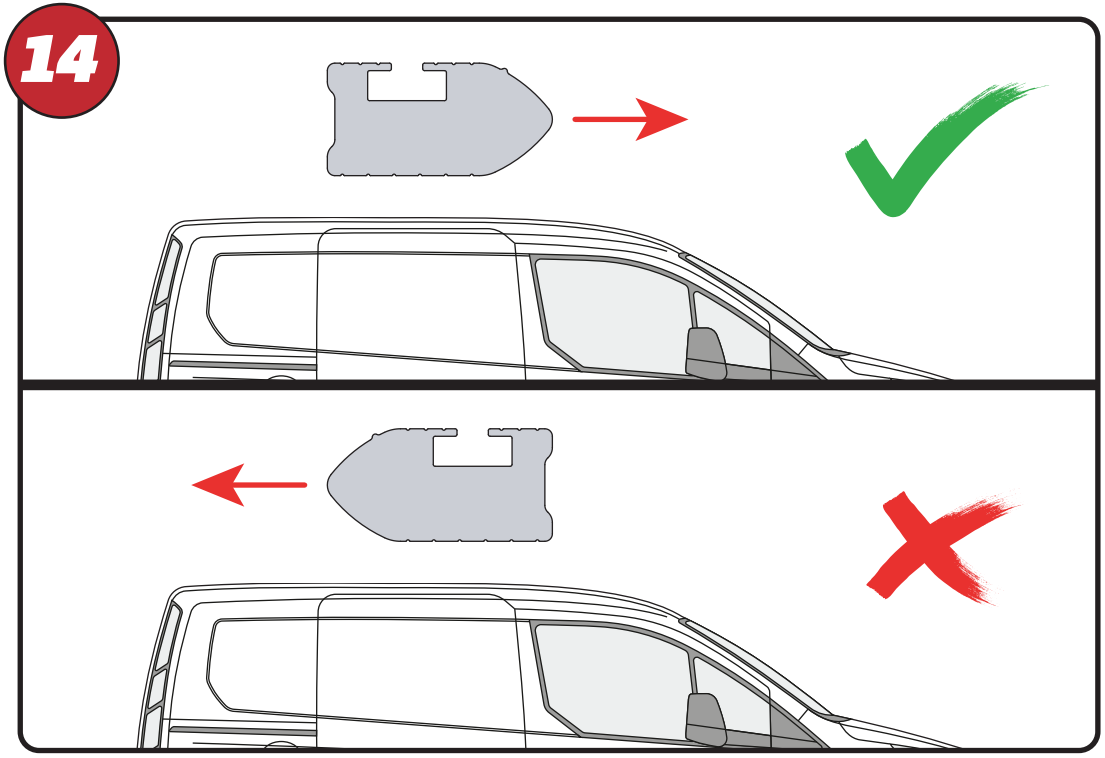


15

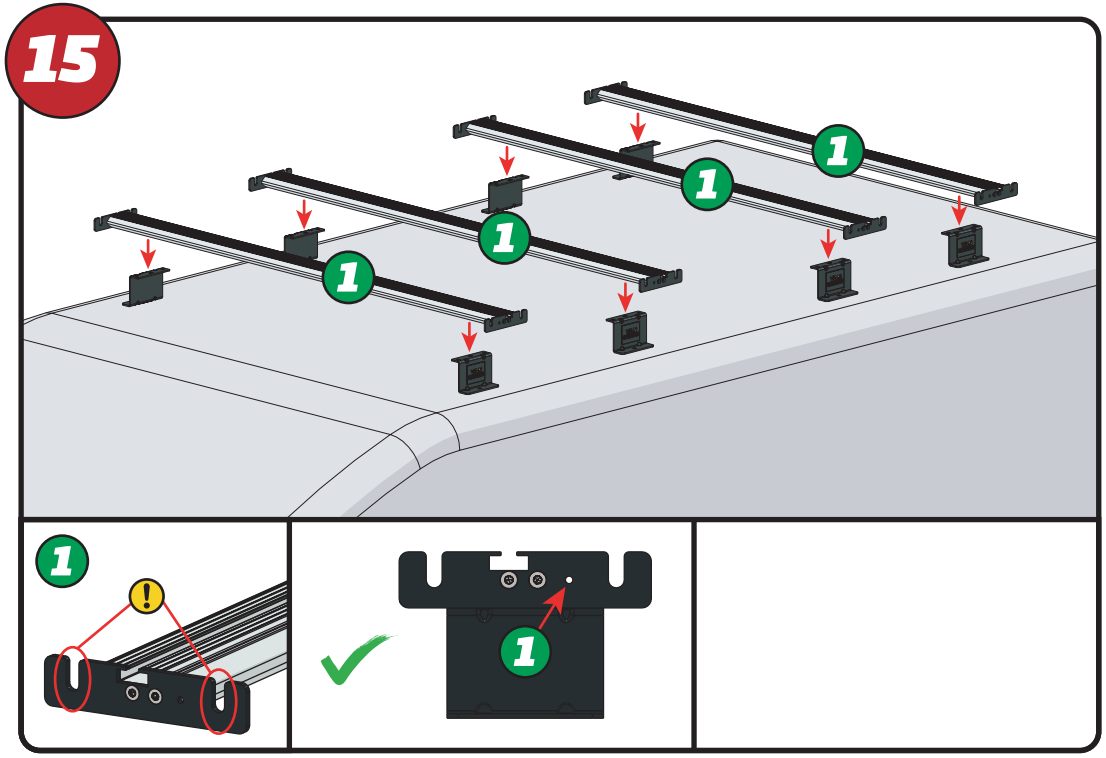


16

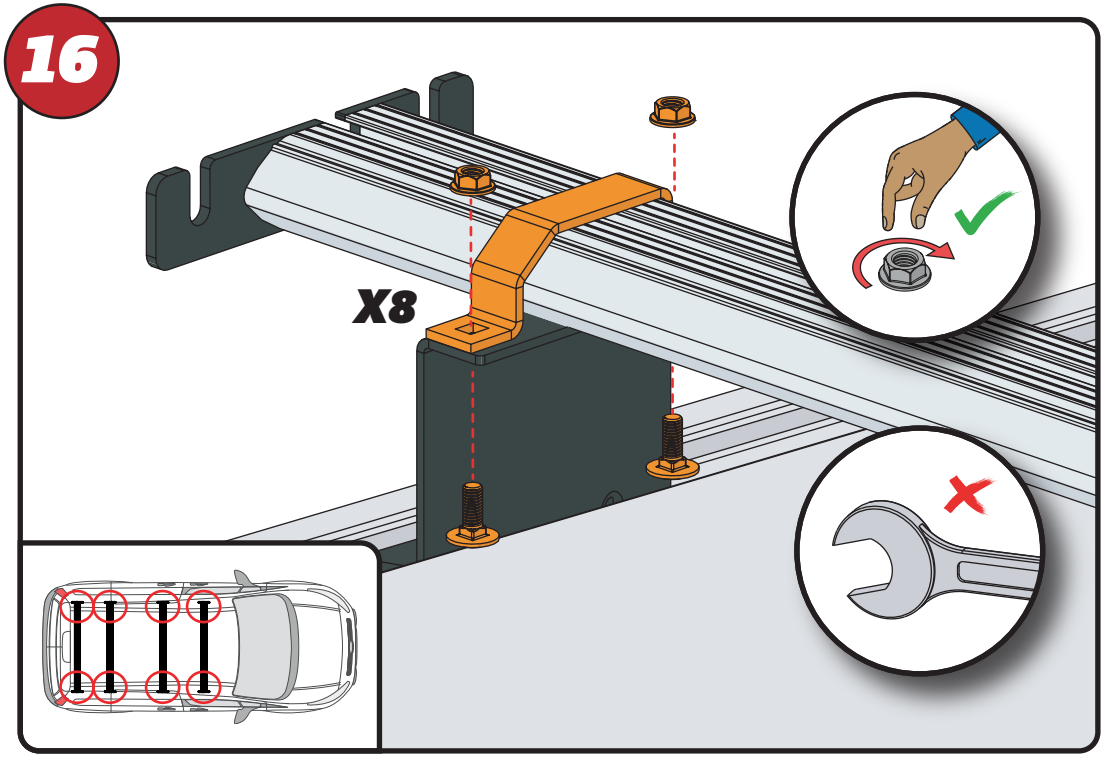


17

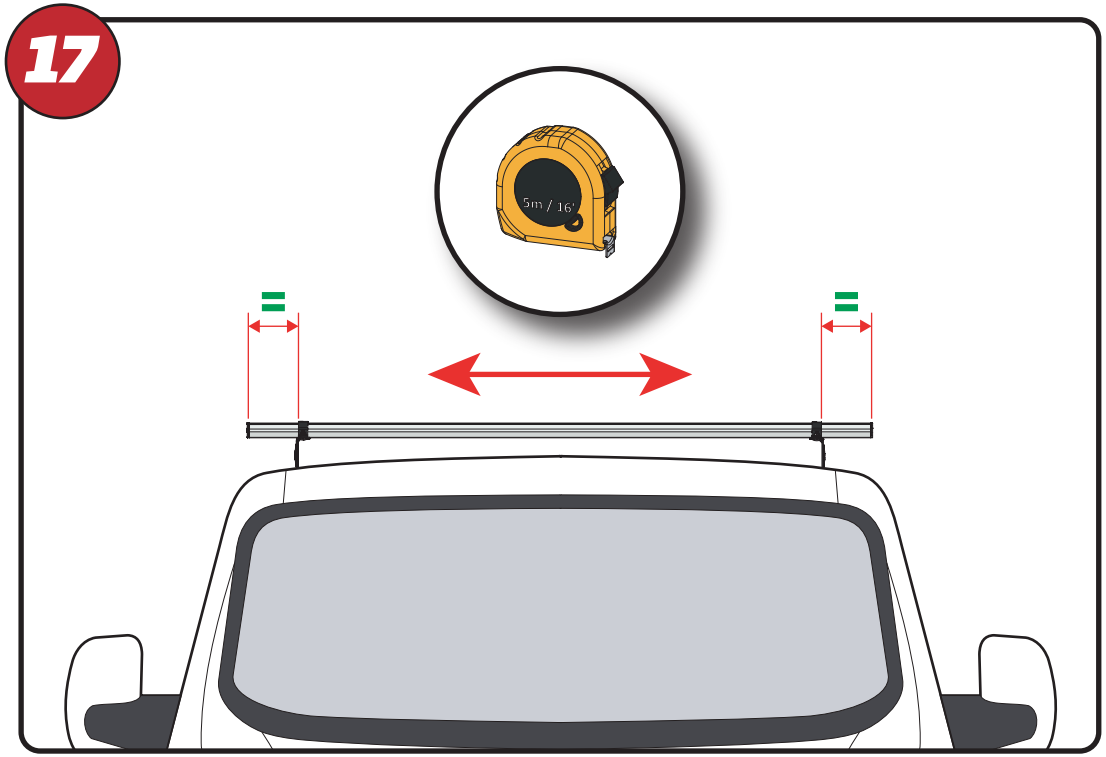


18

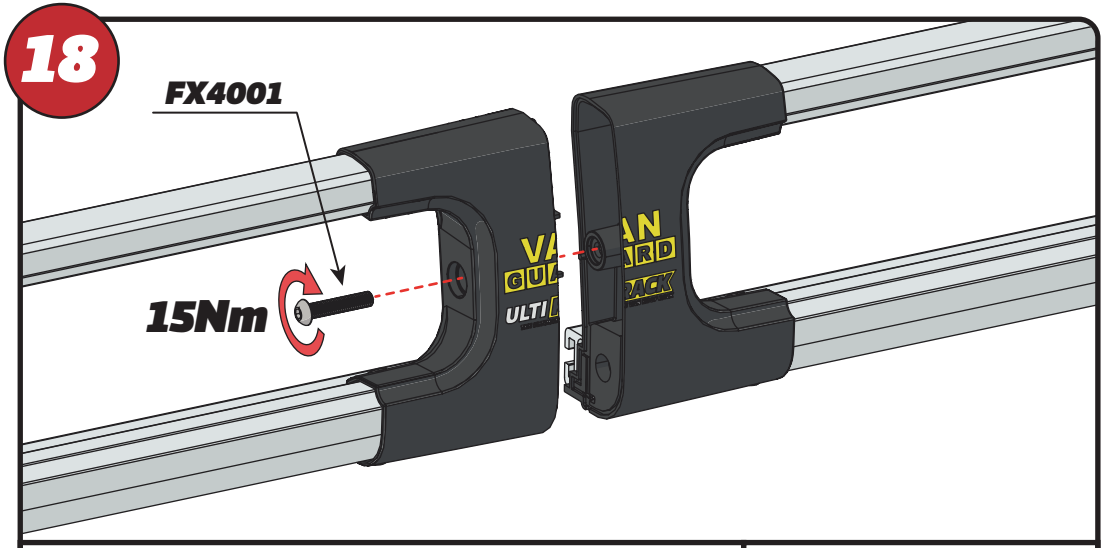


X2

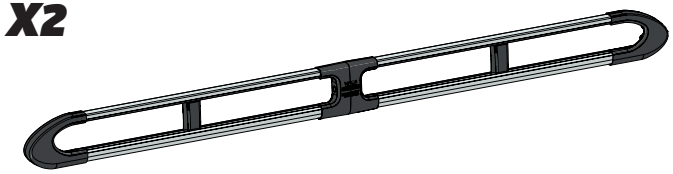



FX4008




19

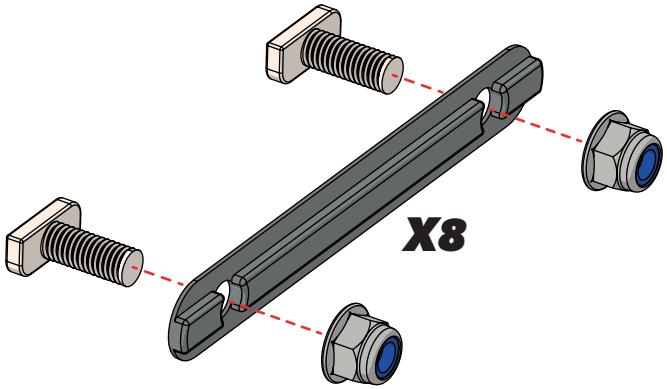

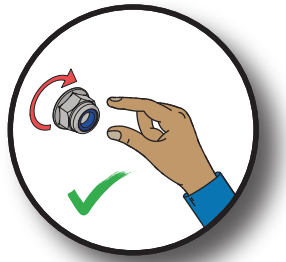

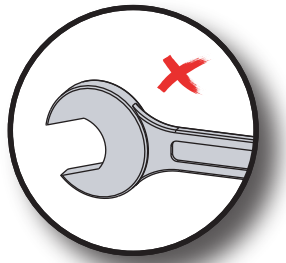


20

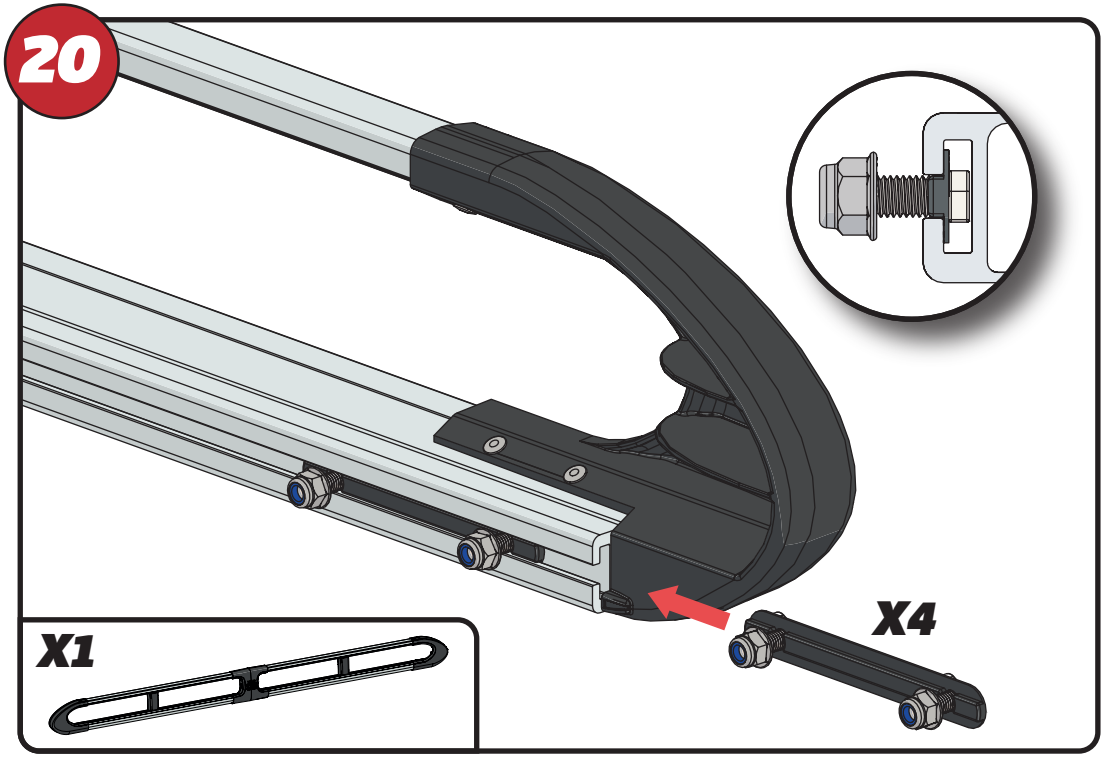


X1


21

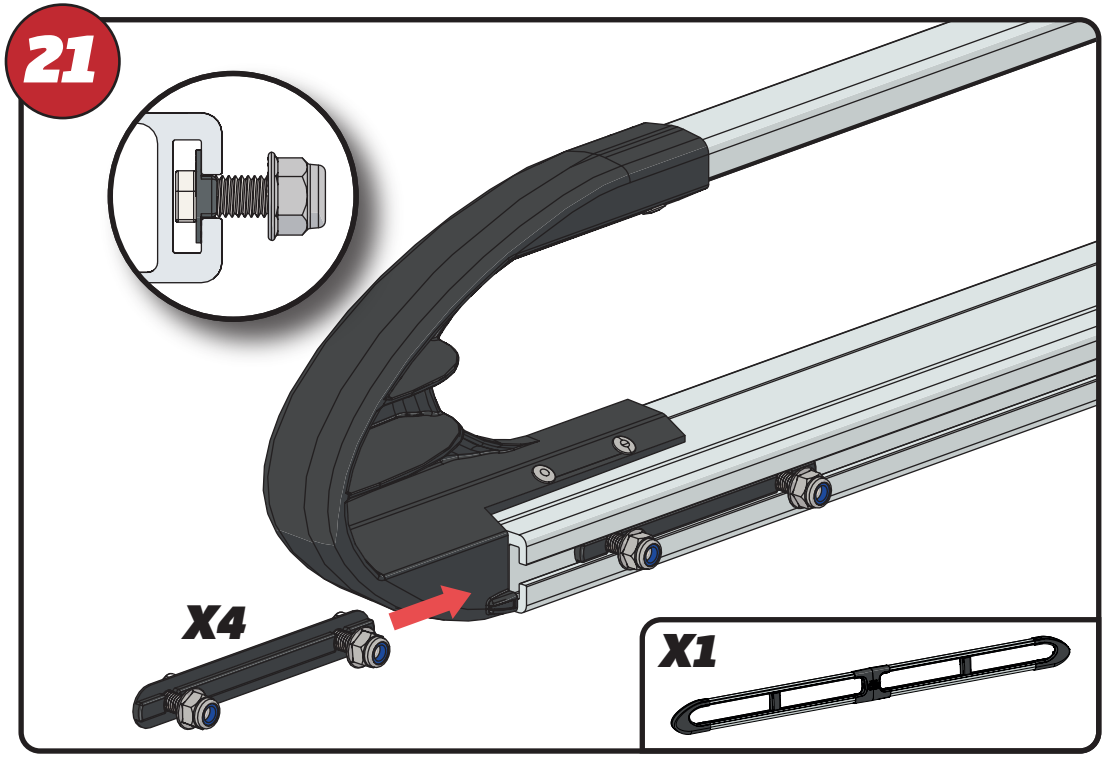


X1


22

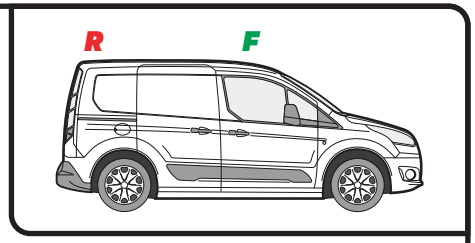

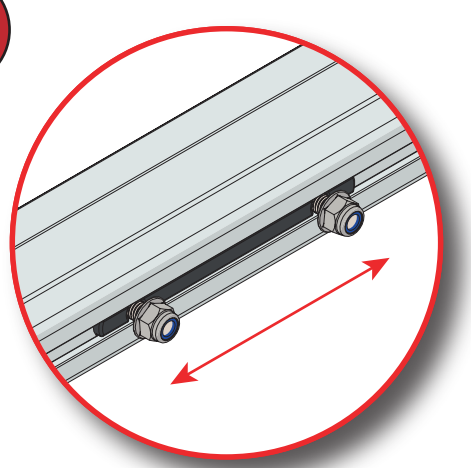


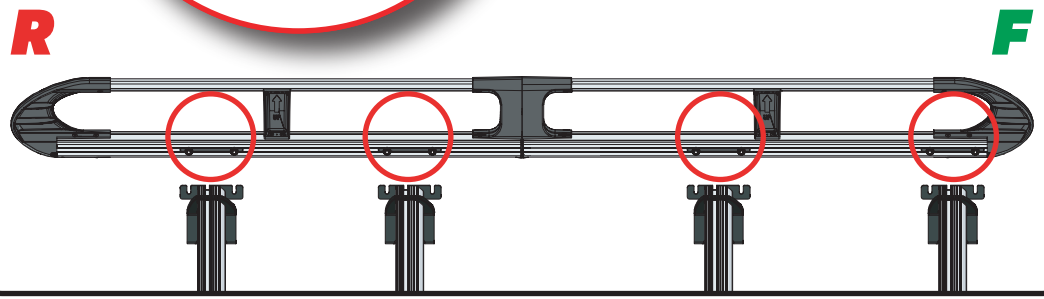


23

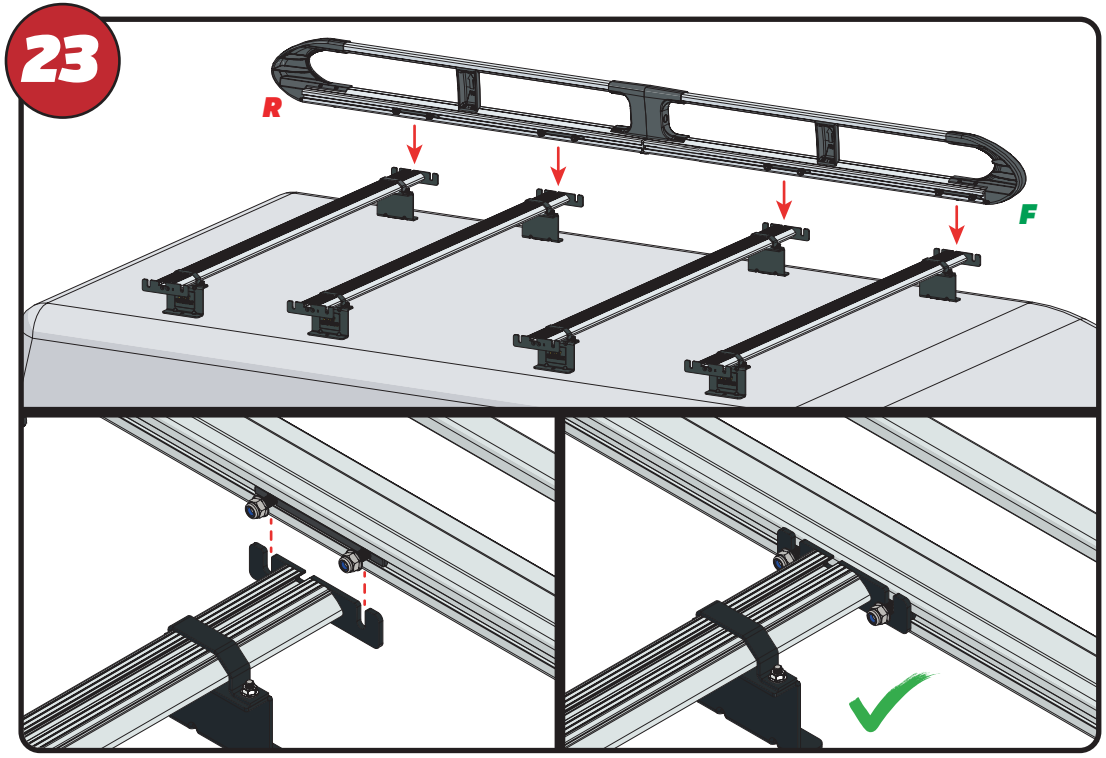


24

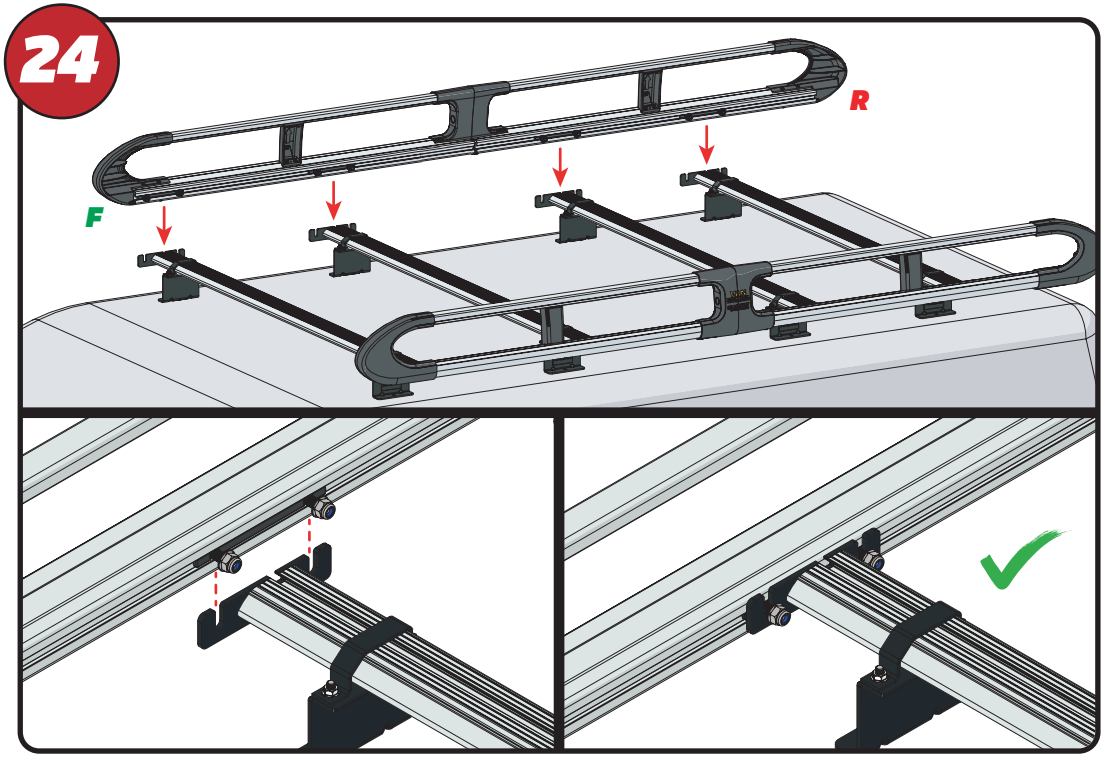


25

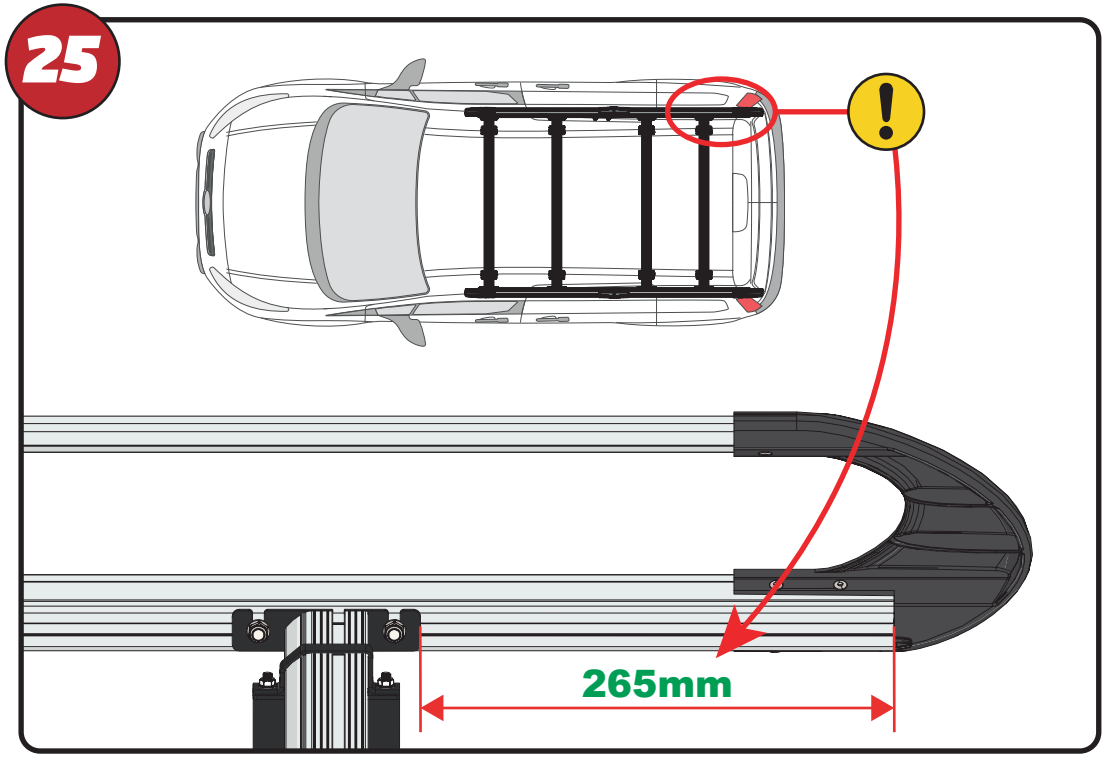

26

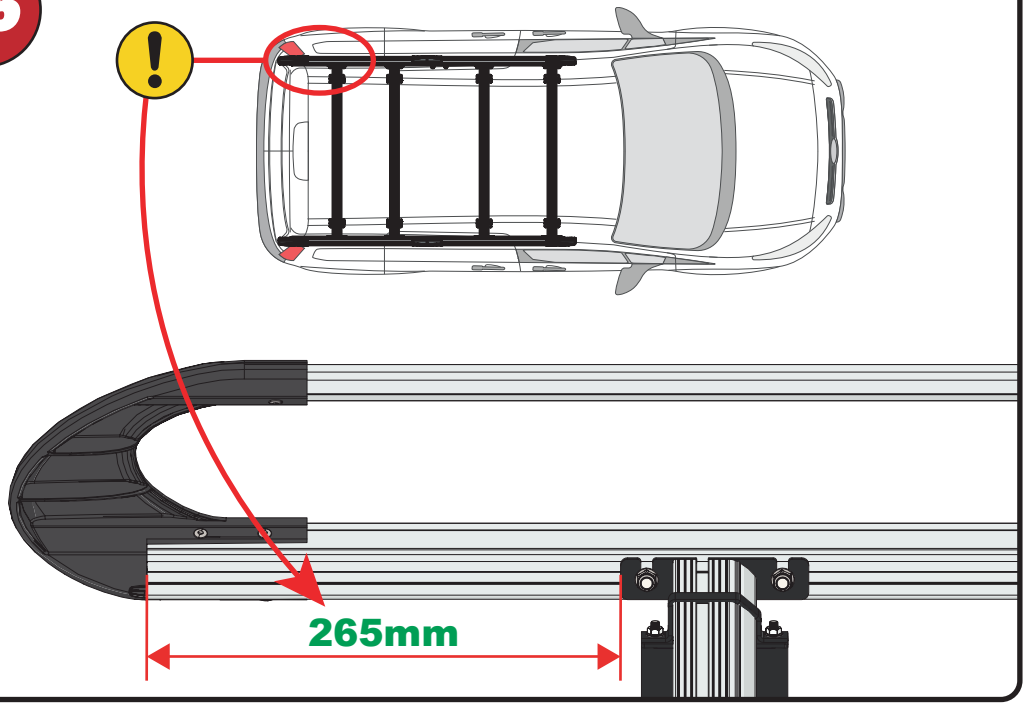


27

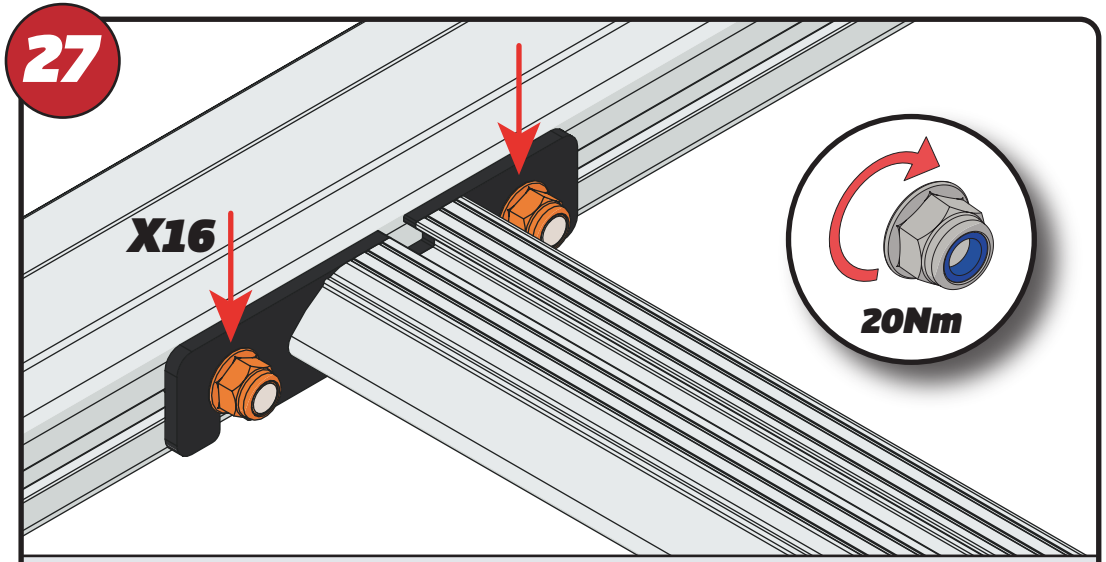


EN - TIGHTEN ALL OF THE CROSS BARS
DE - ALLE QUERSTANGEN FESTZIEHEN
FR - SERREZ TOUTES LES BARRES TRANSVERSALES
NL - DRAAI ALLE DWARSBALK VAN HET DAK AAN
ES - APRIETE TODAS LAS BARRAS TRANSVERSALES
IT - STRINGERE TUTTE LE BARRE TRASVERSALI
SV - SKRU UPP ALLA KORSSTANGAR
DA - SKRU ALLE TAGBØJLER OP
NO - SKRU OPP ALLE TVERRSTENGER
PL - DOKRĘCIĆ WSZYSTKIE POPRZECZKI
CS - VŠECHNY PŘÍČNÉ TYČE SEŠROUJTE


28

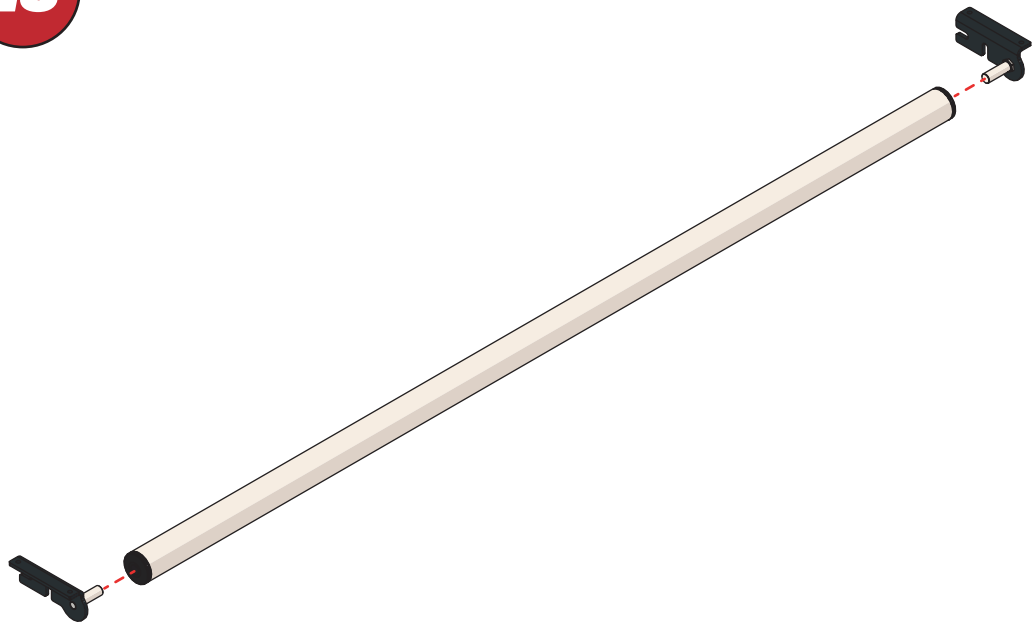


29

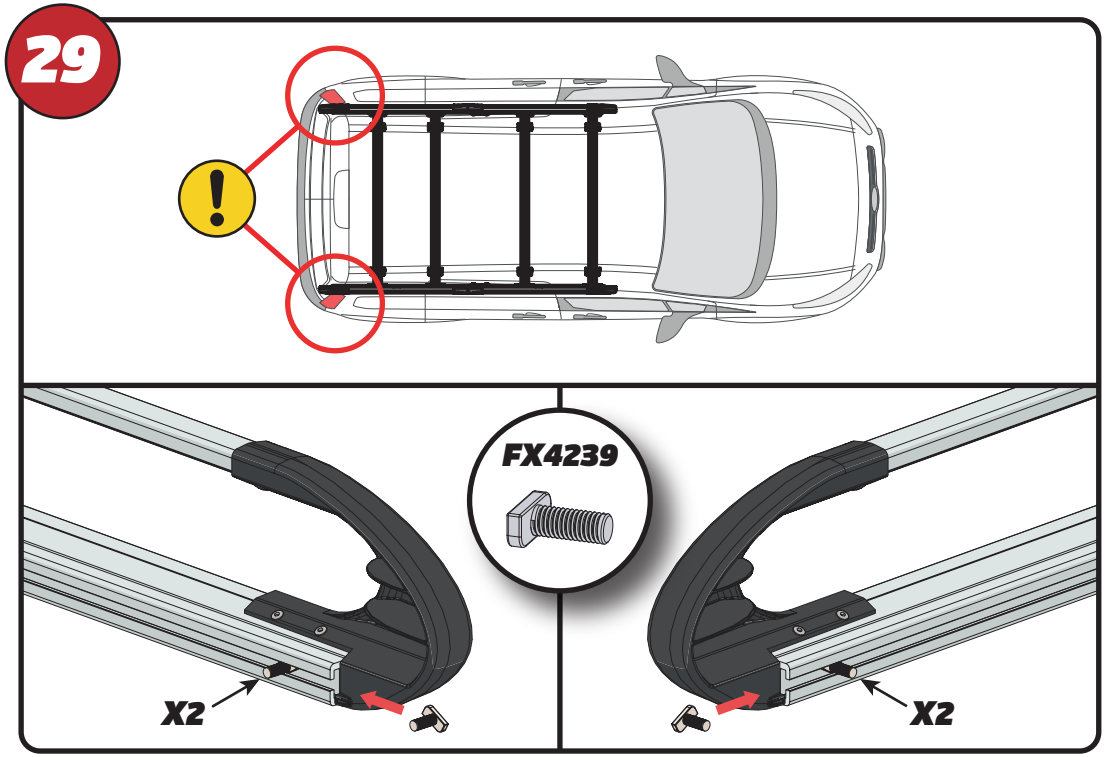


30

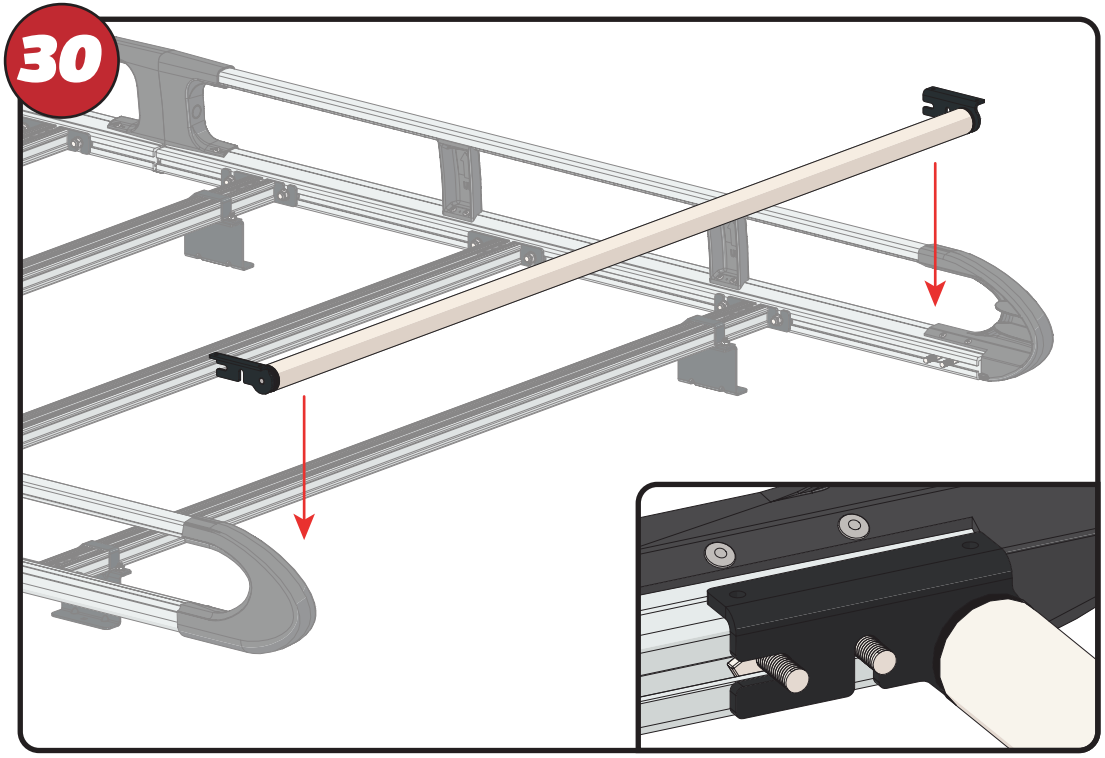


31

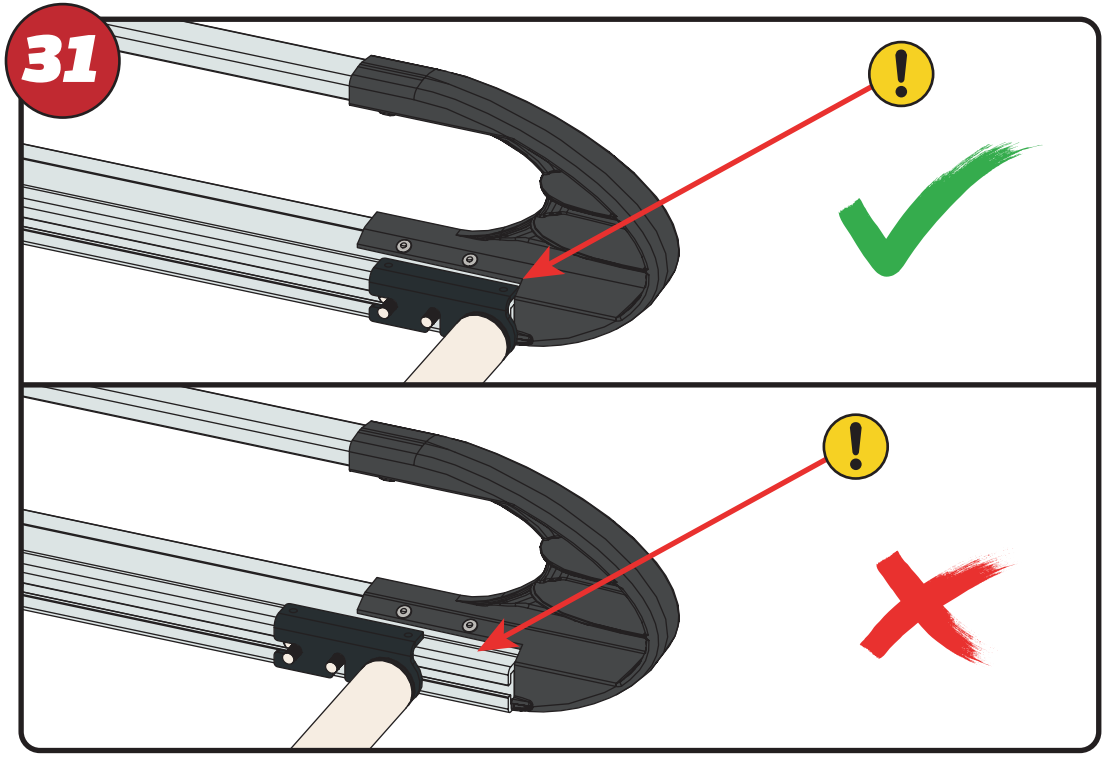


32

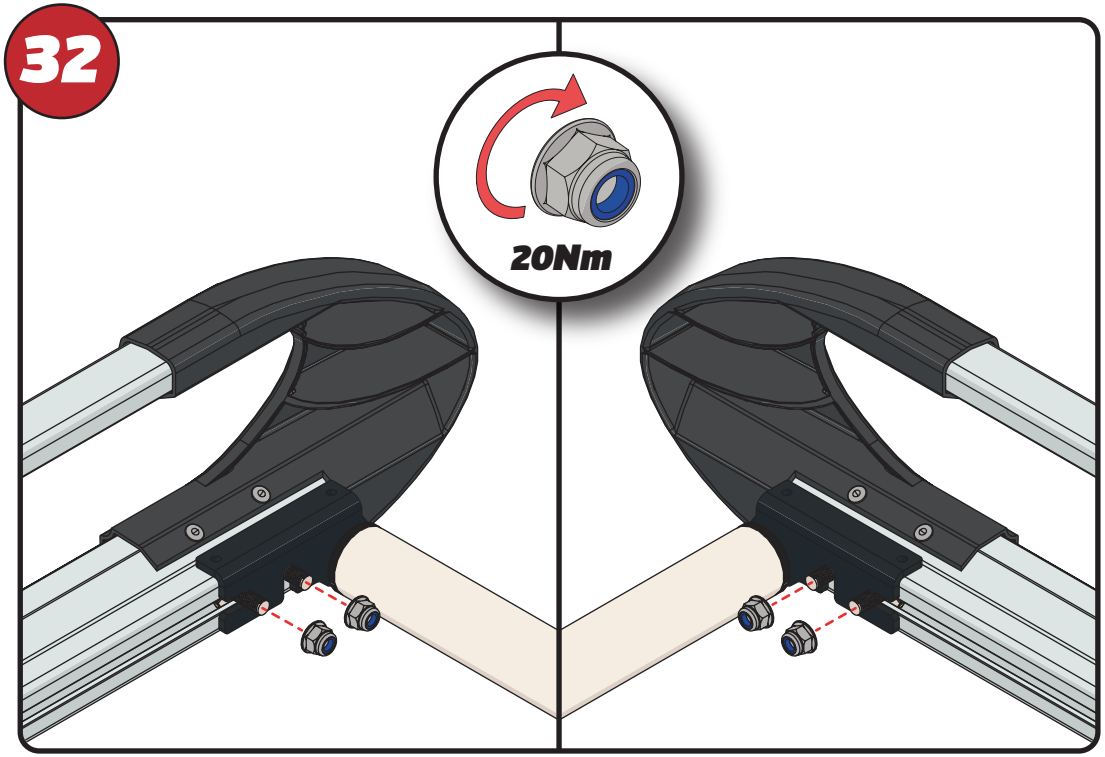


33

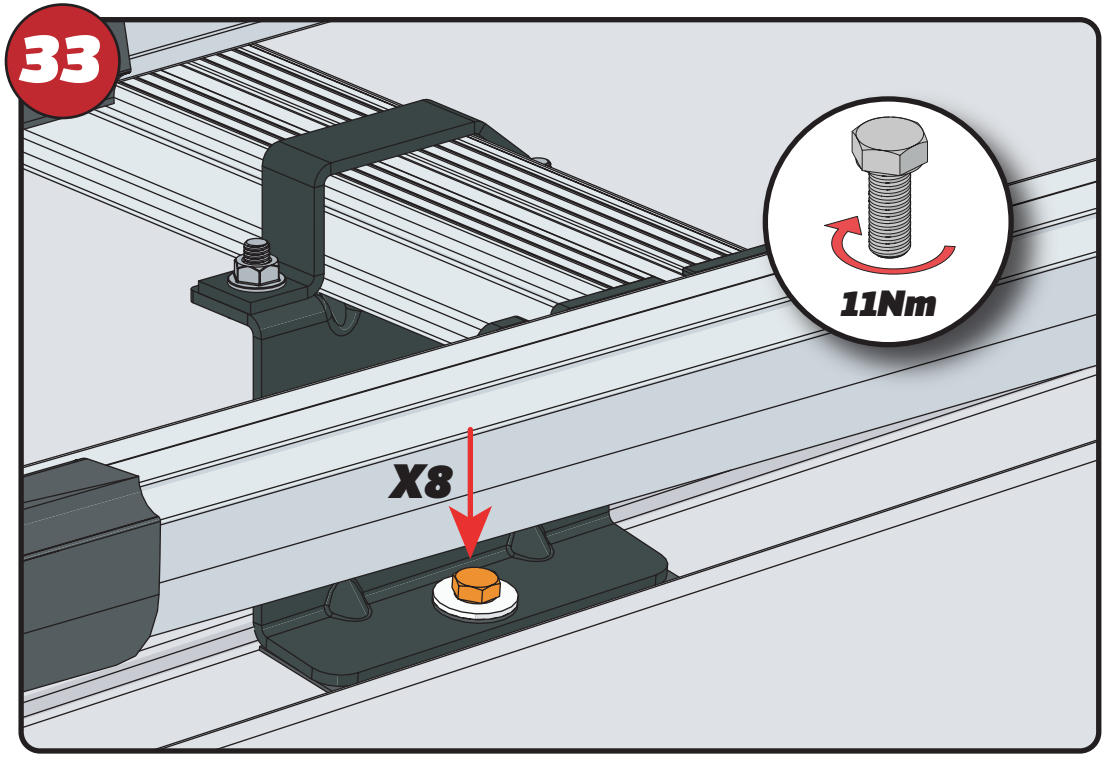

34

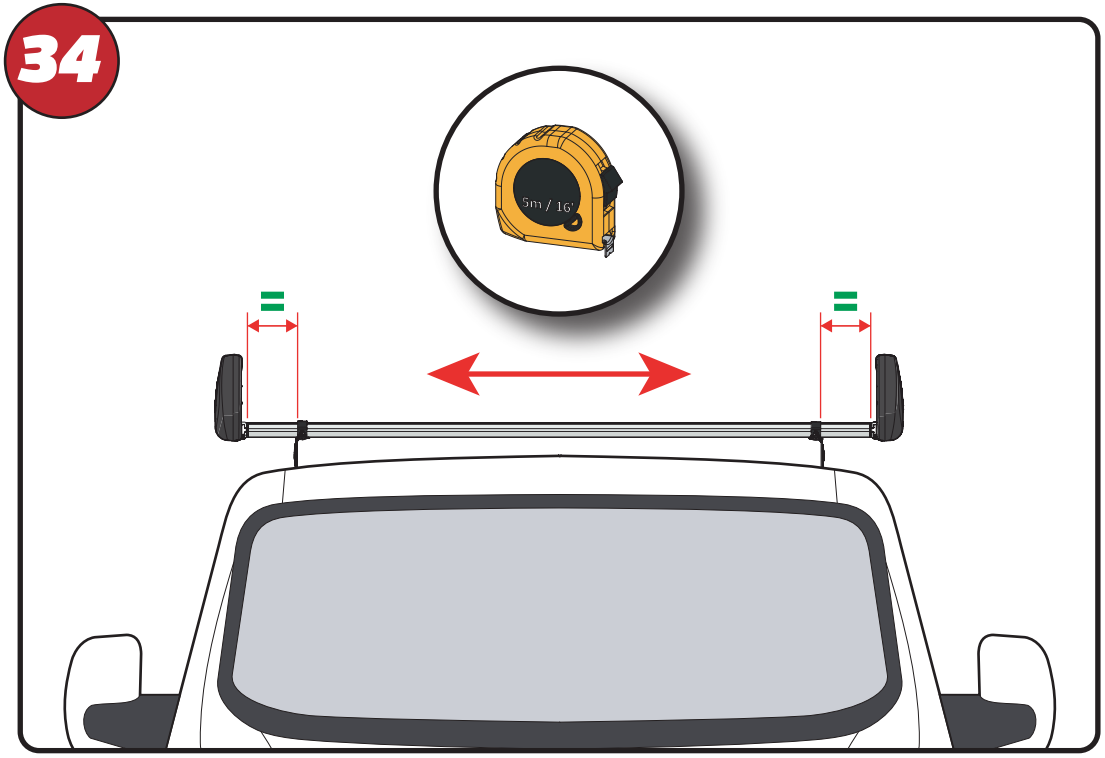


35

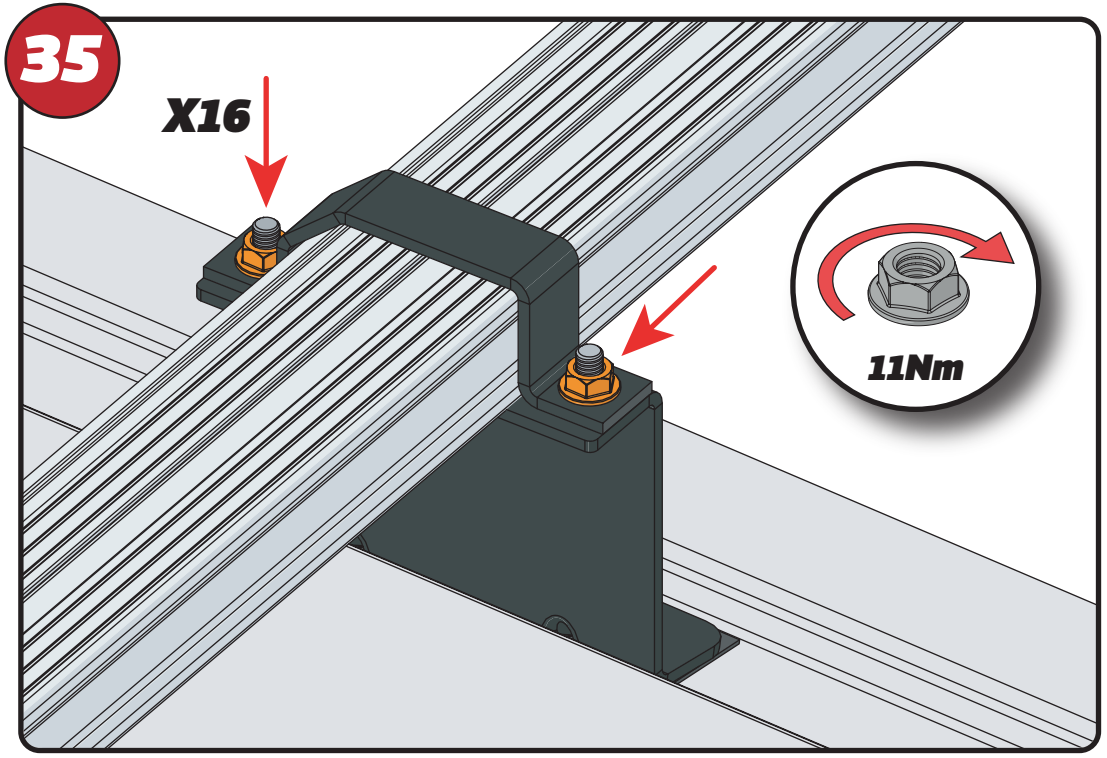


36




X20

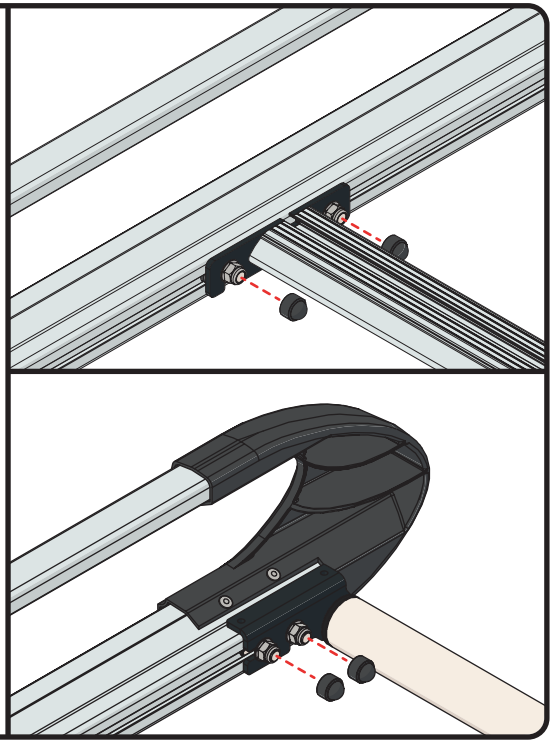

37

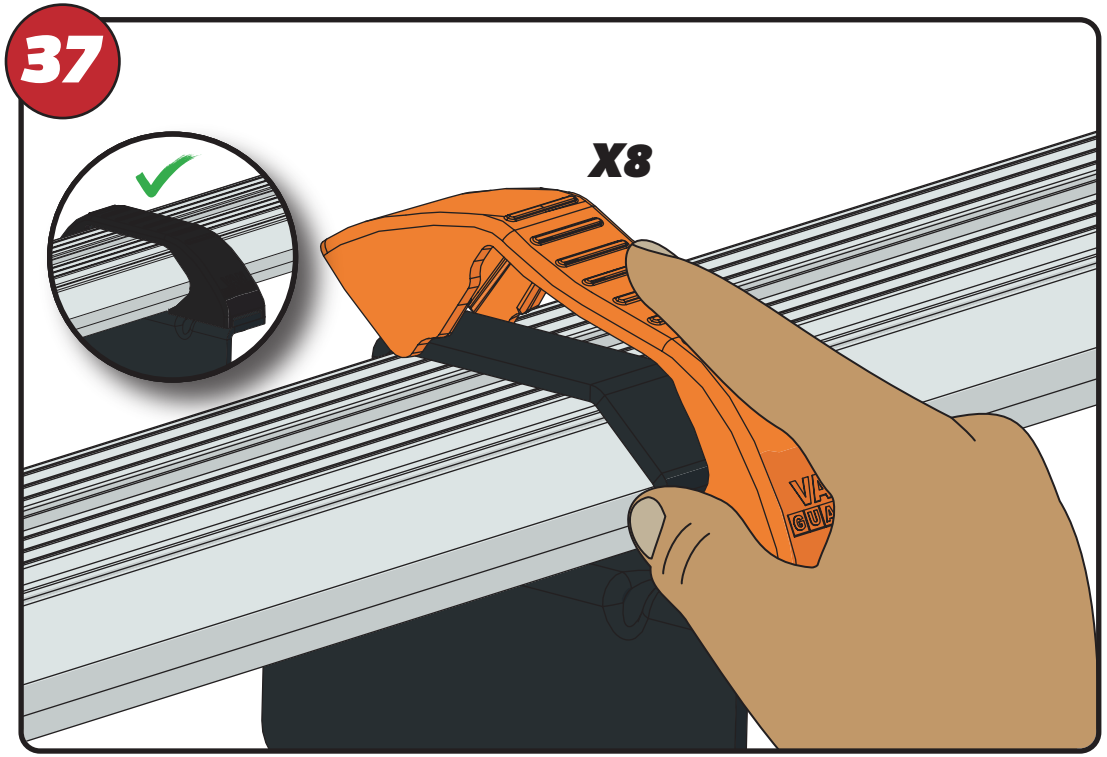

38

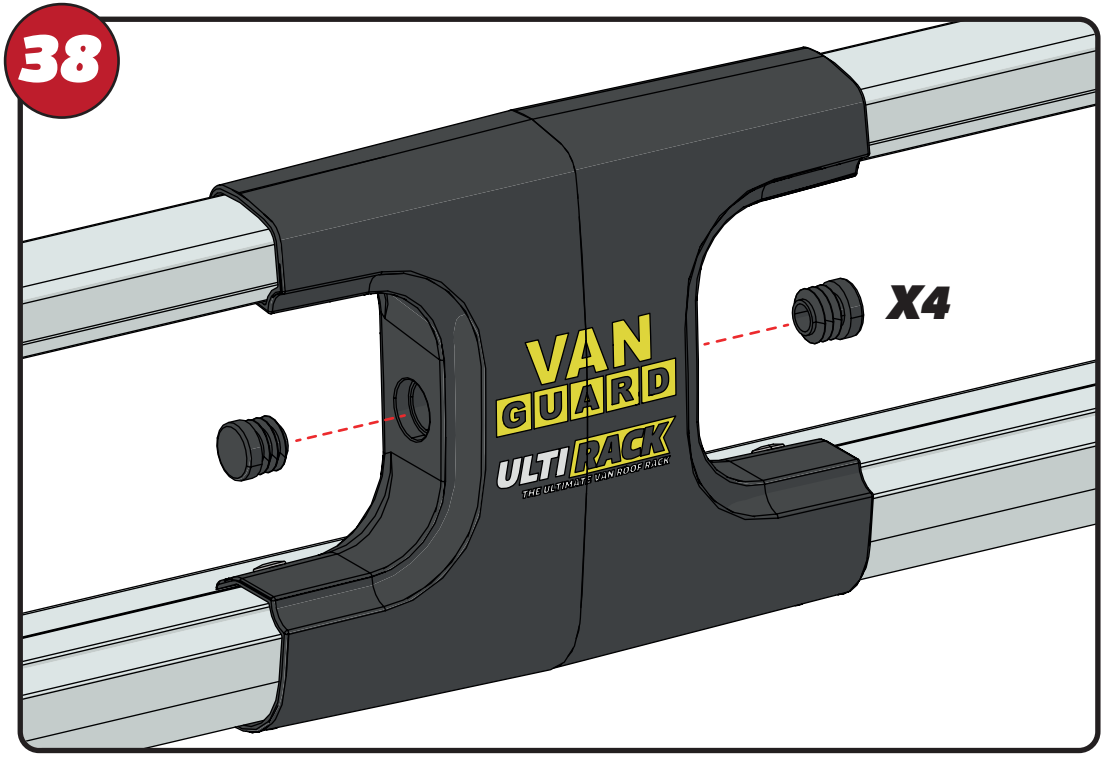

39

